

EZLoad Tank Rack, 30lb. (2), 50lb. (1)

PRODUCT WEIGHT

25.12 LBS

WIDTH x DEPTH x HEIGHT

14.41" x 12.82" x 36.30"

CARRYING CAPABILITY

2-30lb. Tanks, 1-50lb.Tank COLOR

GRAY

CATALOG NUMBER

230150TR

PRODUCT FEATURES

230150TR is designed to fit two thirty pound freon tanks and one fifty pound freon tank.

Mounting Rack on an angle you will need - Mercedes Metris or Transit = HDWTRMMTR

- Sprinter or GM = HDWTRSPGM

- Transit Connect = HDWTRTC

When mounting over an AD Rail kit use provided spacers to level rack above the rail (no additional mounting kits are required).

TRSHELF30 (1" lip) & TR4SHELF30 (4" lip) are accessory shelves that mount to the top of this rack.


If you want to level the shelf so that it doesn't sit on the 10 degree angle you will also need TRSHLFBRKT.

STACKING TANK RACKS - You must use one of the flat topped rack options on the bottom. (130TR, 150TR, 230TR, 250TR. You will also need BAGSTEPRD).

Tank Racks can be stacked on top of one another for mid & high roof vehicles as long as the shelf end panel next to it is 1/2 or more the height of the second rack when stacked. The tank rack must be properly secured to the shelf end panel, tank rack, and wall of vehicle for both racks.

Some drilling may be required.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.

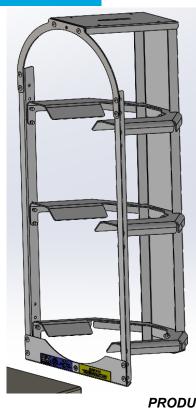

CATALOG NUMBER **230150TR**


PRODUCT APPLICATION

The TR tank racks are designed to fit most all vehicles

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT					
CATALOG NUMBER		DESCRIPTION			
TRSHELF30	TANK RACK 30LB	SHELF - 1" Lip Shelf			
TR4SHELF30	TANK RACK 30LB	4" SHELF - 4" Lip Shelf			
DVTR4SHELF	TANK RACK, 4"SH	ELF DIVIDER - Works with TR4SHELF30			
TRSHLFBRKT	TANK RACK SHEL	F BRACKET			
BAGSTEPRD	To stack tank rack	S			
HDWTRMMTR	ANGLED TANK RAC & Transit	K HARDWARE – Works for Mercedes Metris			
HDWTRSPGM	ANGLED TANK RAC	K HARDWARE – Works for Sprinter & GM			
HDWTRTC	ANGLED TANK RAC	K HARDWARE – Works for Transit Connect			

SPECIAL APPLICATION NOTES

INSTR. NUMBER 65482 PG: 1 REV: D PART NUMBER 130TR 150TR 350TR 130250TR 230TR 230150TR 230TR 250TR 330TR 230150TR 130150TR TANK RACK, 1-30LB TANK				
PART • TANK RACK, 1-50LB TANK DESC. • TANK RACK, 2-30LB TANK TANK RACK, 2-50LB TANK	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
TANK RACK, 3-30LB TANK TANK RACK, 3-50LB TANK	1	430TR	TANK RACK 4-30lb TANKS	1
TANK RACK, 1-30LB 2-50LB TANK TANK RACK, 2-30LB 1-50LB TANK	2	350TR	Tank Rack, 3-50lb Tanks	1
TANK RACK, 4-30LB TANK TANK RACK, 1-30LB 1-50LB TANK	3	130250TR	TANK RACK, 1-30lb 2- 50lb TANKS	1
	4	230150TR	Tank Rack, 2-30lb 50lb Tanks	1
	5	330TR	Tank Rack, 3-30lb Tanks	1
	6	250TR	TANK RACK, 2-50lb TANKS	1
	7	230TR	Tank Rack, 2-30lb Tanks	1
	8	130150TR	TANK RACK, 30LB & 50LB TANK	1
	9	150TR	TANK RACK, 1-50lb TANK	1
	10	130TR	Tank Rack, 1-30lb Tank	1

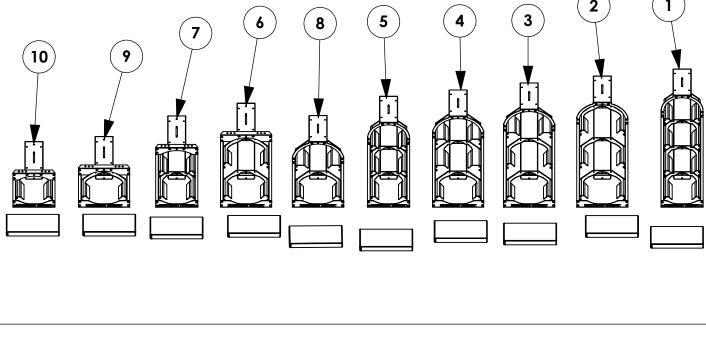

PAGE: **2**

BEST PRACTICES

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).

THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

