


o Management Solutions for Commercial Vehicle

Introduction / Comments:

Note:

It is advised that all fasteners used in this assembly and installation should be checked for tightness at the following intervals: @ 2-weeks and again @ 6weeks of operation. This preventive maintenance step must be completed to ensure your Product gives you long service life.

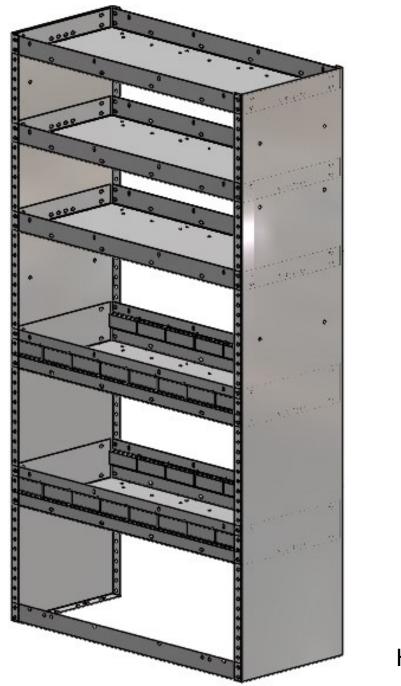

HD-32WP HD-42WP HD-52WP HD-42AWP

2



- PRECAUTIONS -



- 1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
- 2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF -ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
- 3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
- 4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.



ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.




Cargo Management Solutions for Commercial Vehicles

If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting location. Position the product to be installed into the vehicle and once your are satisfied with the mounting locations, mark the mounting locations. Using a 1-3/16" diameter carpet cutter (P/N: 31183-0). Select the appropriate floor spacers as shown in the illustration. Set those aside for use later into the installation process. Using the correct drill bit size for the selected plusnut, drill the mounting holes in the vehicle sheet metal to prepare for installing the plusnuts.

If you are thru-bolting at any of the locations simply drill a hole that is 1/16" larger than the bolt size(s) for those locations.

Once you have drilled the holes into the vehicle, the raw metal edges should be sealed using a self-etching primer to resist corrosion and potential fastener point failure.

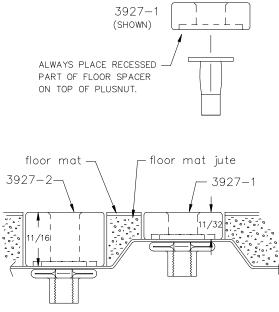

vehicle floor with ribs and valleys


A PLUSNUT (RIVNUT) SETTING TOOL IS REQUIRED FOR PLUSNUT (RIVNUT) INSTALLATION . PLUS NUT SETTING TOOL CAN BE ORDERED THROUGH ADRIAN STEEL, OR USE AN AIR POWERED PLUSNUT SETTING GUN. <u>1/4-20UNC Plusnut (FAS0052) Use 3/8" dia. drill w/stop</u> FAS0080 SCREW, HXHD, 1/4-20UNCx2.00", G8 FAS0067 WASHER, FLAT, 1/4"ID 22200-0 PLUSNUT TOOL <u>5/16-18UNC Plusnut (FAS0091) Use 1/2" dia. drill w/stop</u> FAS0095 SCREW, HXHD, 5/16-18UNCx2.00", G8 FAS0086 WASHER, FLAT, 5/16"ID 22200-0 PLUSNUT TOOL Place barrel of the plusnut body in sheet metal thru hole until flange is flush with sheet metal. Using a 9/16" combination wrench of plusnut tool body and a second hand wrench, ratchet, or air tool, rotate the hex bolt head CW to draw plus nut flanges up (set the plusnut).



argo Management Solutions for Commercial Vehicles

Installation and/or Assembly Fasteners BAGINSTL-A

ITEM NO.	PARTNUMBER	DESCRIPTION	
1	BAG0507-A	5"×7"3 MIL AUTOBAG	
2	FAS 0052	Plusnut, 1/4	
3	FAS0058	Nut, Nylon Insert Lock, 1/4-20	
4	FA50060	Washer, Lock, Split, 1/4	
5	FA50063	Screw, Hex Hd, 1/4-20x0.75 Zn Plate, Grade S	
6	FA50067	Washer, Flat, 1/4	
7	FAS0078	Screw, Hex Hd, 1/4-20×1.00 In Plate, Grade 8	
8	03927-1	FloorSpacerShort	
9	03927-2	Tall Floor Spacer	
10	FAS 0091	Plusnut, 5/16	
11	FA50086	WASHER, FLAT USS 5/16 ZP	
12	FAS 0098	Washer, Lock, Split, S/16, Zinc Plate	
13	FA50092	Screw, Hex Hd, 5/16-18×1.50 Zn Plate, G8	

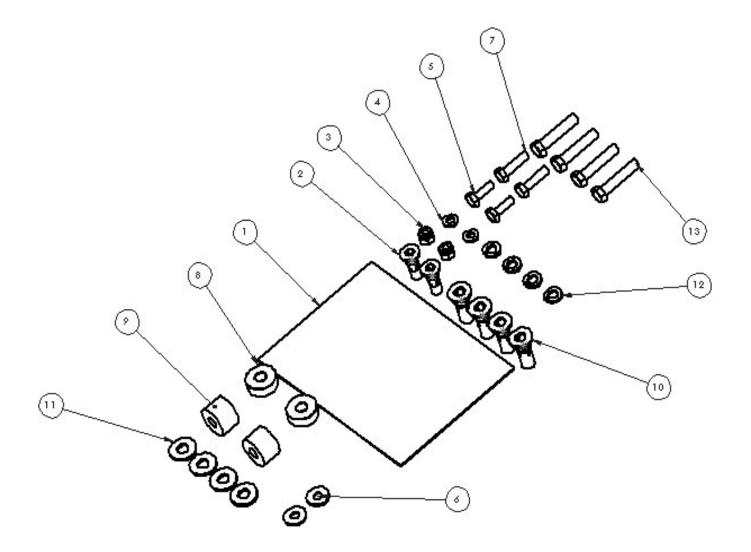



go Management Solutions for Commercial Vehicles

Installation and/or Assembly Fasteners	
BAG00022-0	

ITEM NO.	PART NUMBER	DESCRIPTION	BAG00022-0/QTY.
1	BAG0507-A	5" x 7" 3MIL AUTOBAG	1
2	FAS0055	Nut, Hex Flange,Nylock 1/4-20	52
3	FAS0061	Screw, Truss Hd. Ph, 1/4-20x0.50	52

