



Vehicle Maintenance Guide Info

Service & Mileage

	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000	67,500	75,000	82,500	90,000	97,500	105,000	112,500	120,000	127,500	135,000	142,500	150,000	157,500	165,000	172,500	180,000	187,500	195,000	
Check All Fluid Levels, Tire Pressure & Wear, and ...	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check Brake System (service requires additional au...	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Rotate Tires (no charge when doing brake inspectio...	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Change Cabin Air Filter (if equipped)			X			X			X			X			X			X			X			X			
Change electric drive unit fluid						X						X						X							X		
Change Brake Fluid									X											X							
Coolant Flush																				X							


Customer Instructions for Customer Satisfaction Program N242478720

BrightDrop Zevo 400/Zevo 600 Owner Manual (GMNA-Localizing-U.S./
Canada/Mexico-17092285) - 2024 - Insert - 11/19/24

Insert to the 2024 Brightdrop Zevo 400/600 Owner's Manual

This information is in addition to the information under "Transporting a Disabled Vehicle" found in the Vehicle Care Section of the owner's manual.

Rear Attachment Points

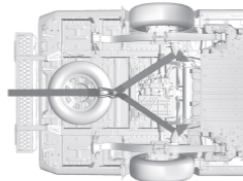

The vehicle has specific attachment points to be used to pull the vehicle onto a flatbed car carrier from a flat road surface. Use soft straps to tow the vehicle. Do not use these attachment points to pull the vehicle from snow, mud, sand, or a ditch.



Litho in U.S.A.
Part No. 24BDPZEVOINS1_ENUS

© 2024 General Motors LLC. All Rights Reserved.

Add this insert to the vehicle's Owner Manual and keep it with your vehicle for future reference.