



# UNITEK GLOBAL SERVICES

## Ford Transit End User Guide



## ADJUSTABLE SHELVES

Your vehicle includes adjustable shelving for you to set at your desired height. These shelving units are installed on a floor rail. To adjust the shelves, first use a Phillips head screw driver to remove the screw from the speed nut clips that come with the shelf. Then, tilt the shelf upwards and move it to your desired location. Insert the rear shelf studs in back and reattach the bolts.



## **CROSSCAR SHELVING**

Your vehicle includes crosscar shelving for you to effectively separate your cargo, and your work. This limits the need to climb into the van and allows you to prep for the dirtier work in the rear of the vehicle, such as digging holes for dish poles, mixing concrete and storing cinder blocks and boxed wire, and to prep for the cleaner work on the curbside of the vehicle, such as dish assembly (plus all of your dishes are right there, on the partition). The crosscar shelf is intended for your DVRs, HD Boxes, etc., while the streetside forward shelf is intended to for your dish components. This keeps all of these components clean and out of harm's way.



## STOWALL FLOOR DRAWER

The stowall floor drawer that comes out the curbside door is intended to store any tools that you may want kept out of site. This drawer comes complete with five dividers and keeps you outside the vehicle during operation. It is also equipped with an anti-slam latch to prevent any injury, especially if on an incline. In order to close the drawer, you must push the button in on front panel all the way.



## INVERTER

Your vehicle is equipped with a 600-watt inverter for charging products. The inverter comes with one power strip. The inverter is located on the partition behind the driver's seat. The power strip is located on the inside of the end panel of the streetside forward shelving unit. The inverter has an ON/OFF switch on the dash marked with a label. When the vehicle is not in use or parked over the weekend, turn this switch to the OFF position. **Failure to turn the inverter OFF when not in use will drain the extra Ford battery and could result in a dead vehicle battery. Do not exceed 600 watts when plugging items into the power strip.**

You can plug the following items into the power strip: 18 volt battery charger, cell phone charger, laptop, GPS system. Do not plug the following items into this inverter: microwaves, heaters, refrigerators, circular saws and like power tools. If you exceed the 600 watts, the inverter will shut down. If this happens, unplug the items, turn the inverter off and then turn the inverter back on.

If you are unsure of the wattage of a particular item, please consult the sticker on the battery charger of that item prior to plugging it in, in order to determine if it will be supported by the inverter.





## LADDER STORAGE - INTERNAL

Your vehicle comes with an interior step ladder storage unit. This unit is capable of storing a 6' A-frame step ladder. Slide the step ladder up the ramp. Push down on the back clamp to secure the ladder.



## LADDER STORAGE – EXTERNAL

Your vehicle comes with a combination LoadsRite (drop-down)/EZ Load (clamp-down) ladder rack. This ladder rack is capable of holding up to (2) 32' extension ladders or 290 lbs. **See addendum for how to adjust and properly care for your ladder rack.**



## **DISH HOLDER**

Your vehicle comes with a dish holder mounted to the partition. This holder is capable of holding 6 satellite dish reflectors. Use the rubber tie down straps to secure the dishes while being transported.





## GRAB HANDLES

Your vehicle comes with a handle on each side of the rear of the van to help assist you getting in your vehicle.



## **ADRIAN STEEL WARRANTY**

Adrian Steel Company warrants its service van interiors and pick up equipment to be free from defects in material and workmanship, under normal use and service for a period of three years or 36,000 miles, whichever first occurs, after the date of delivery to the original retail purchaser, when installed by an authorized Adrian Steel Company distributor. This warranty covers only repairs, or at the option of Adrian Steel Company, replacement to correct any defects related to materials and workmanship.

This warranty does not apply to:

- Defects that are caused by the improper installation of its products, or installation not in accordance with Adrian Steel Company specifications and/or instructions.
- Products, which have been subject to misuse, misapplication, negligent accident, modification or tampering.
- Surface rust or corrosion that has not perforated the product.

All warranty claims must be submitted to the Adrian Steel Company Warranty Administrator. The vehicle must be delivered to the installer of the product, or another company designated by the installer of the product, for inspection and any warranty service. Warranty claims on products of manufacturers other than Adrian Steel Company may be covered by a separate warranty, but are not covered by this limited warranty. Adrian Steel Company reserves the sole right to inspect its products and or installations and decide the best way to handle any and all claims. Adrian Steel Company or an authorized Adrian Steel Company distributor must make all warranty repairs.

## **ADRIAN STEEL CUSTOMER CARE**

**Adrian Steel truly stands by the quality of both our products and installation. Customer satisfaction is very important to us.**

**If you have any problems with your van, please contact Adrian Steel Company at 800.677.2726 and ask for the Customer Care Department. You can also send an email to [customercare@adriansteel.com](mailto:customercare@adriansteel.com).**