


CASE HOLDER DOUBLE

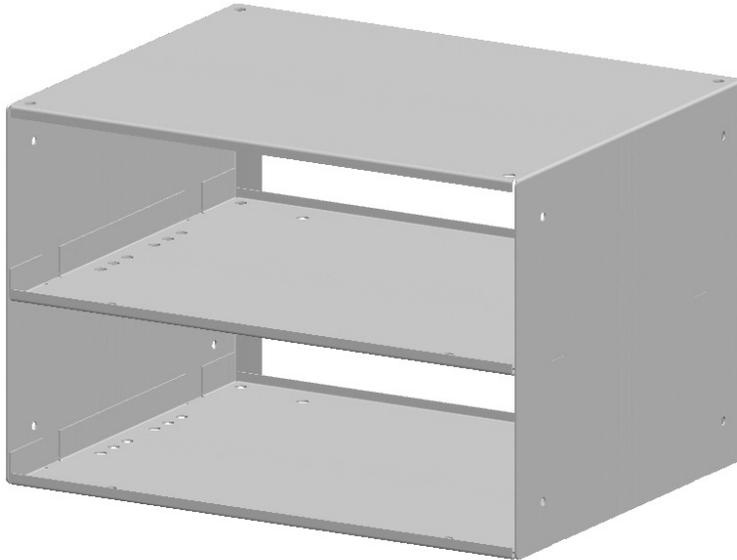

PRODUCT WEIGHT
20LBS

WIDTH x DEPTH x HEIGHT

18" x 14" x 12"

CAPACITY

30 LBS

COLOR

GRAY

CATALOG NUMBER

59460

PRODUCT FEATURES

WELDED CASE HOLDER DESIGNED TO HOLD (2)

TWO CASES WITH MAXIMUM SIZE OF

17.6" WIDTH X 13.7" DEPTH X 5.25" HEIGHT

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.

PAGE 1 of 2

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.



CATALOG NUMBER 59460

PRODUCT APPLICATION

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

| <i>CATALOG NUMBER</i> | <i>DESCRIPTION</i> |
|------------------------------|------------------------------|
| 42035 | TOTE,STANLEY DEEP PRO |

SPECIAL APPLICATION NOTES


Introduction / Comments:

Modular case holder for two Cases (Stanley,Dewalt) Can be stacked vertically, mounted on a shelf, or mounted up against a shelf unit.

Note:

It is advised that all fasteners used in this assembly and installation should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your Product gives you long service life.

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---------------------|------|
| 1 | 59454-G | CASE HOLDER, DOUBLE | 1 |
| 2 | BAGCHPPC4S | FAS BAG CHPPC4S | 1 |
| 3 | 59458 | INSTRUCTIONS 49460 | 1 |

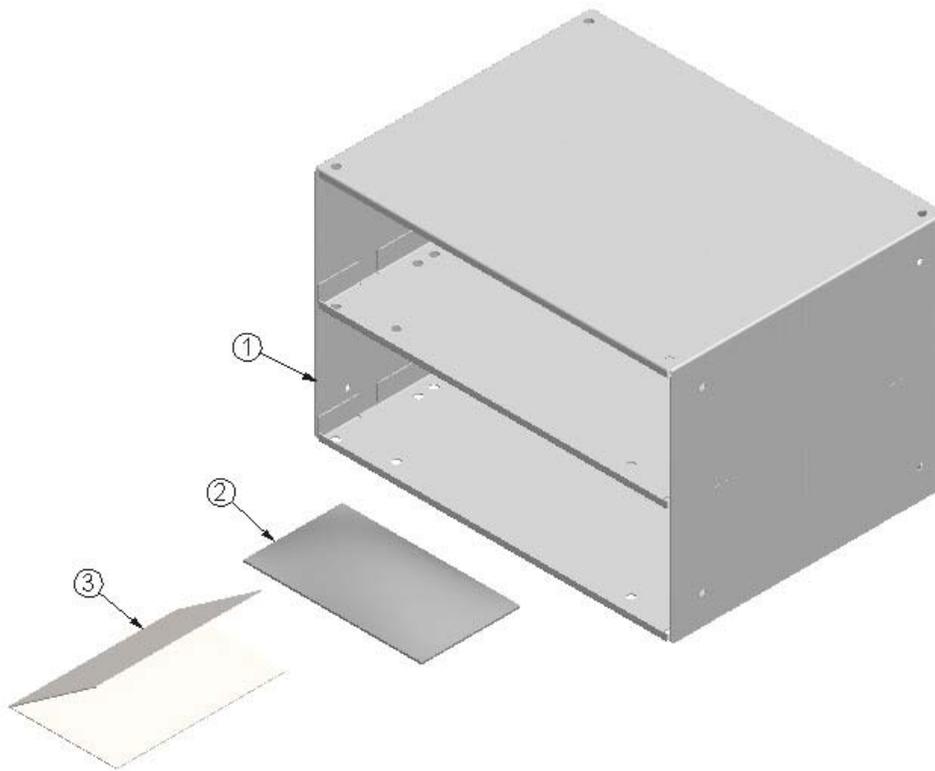

**59460
Case Holder Double**

- PRECAUTIONS -



CAUTION
THE USE OF AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!



CAUTION
ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!



DANGER
INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!



CAUTION
TO AVOID DAMAGING THE VEHICLE ALWAYS USE DRILL
STOPS WHEN DRILLING ANY INSTALLATION HOLES!
ADRIAN AVAILABLE PART #'S 31119-0 (3/8" X 1/2"
DEEP), 31121-0 (1/2" x 1/2" DEEP)



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP



RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS



MEASURING TAPE


ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting location. Position the product to be installed into the vehicle and once you are satisfied with the mounting locations, mark the mounting locations. Using a 1-3/16" diameter carpet cutter (P/N: 31183-0). Select the appropriate floor spacers as shown in the illustration. Set those aside for use later into the installation process.

Using the correct drill bit size for the selected plusnut, drill the mounting holes in the vehicle sheet metal to prepare for installing the plusnuts.

If you are thru-bolting at any of the locations simply drill a hole that is 1/16" larger than the bolt size(s) for those locations.

Once you have drilled the holes into the vehicle, the raw metal edges should be sealed using a self-etching primer to resist corrosion and potential fastener point failure.

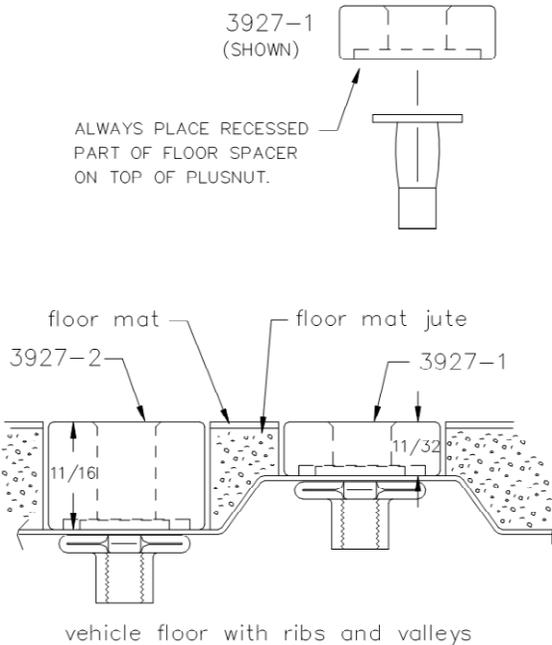

A PLUSNUT (RIVNUT) SETTING TOOL IS REQUIRED FOR PLUSNUT (RIVNUT) INSTALLATION . PLUS NUT SETTING TOOL CAN BE ORDERED THROUGH ADRIAN STEEL, OR USE AN AIR POWERED PLUSNUT SETTING GUN.


1/4-20UNC Plusnut (FAS0052) Use 3/8" dia. drill w/stop
 FAS0080 SCREW, HXHD, 1/4-20UNCx2.00", G8
 FAS0067 WASHER, FLAT, 1/4"ID
 22200-0 PLUSNUT TOOL

5/16-18UNC Plusnut (FAS0091) Use 1/2" dia. drill w/stop
 FAS0095 SCREW, HXHD, 5/16-18UNCx2.00", G8
 FAS0086 WASHER, FLAT, 5/16"ID
 22200-0 PLUSNUT TOOL

Place barrel of the plusnut body in sheet metal thru hole until flange is flush with sheet metal.
 Using a 9/16" combination wrench of plusnut tool body and a second hand wrench, ratchet, or air tool, rotate the hex bolt head CW to draw plus nut flanges up (set the plusnut).


**Installation and/or Assembly Fasteners
BAGCHPPC4S**

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY |
|----------|-------------|--|-----|
| 1 | BAG0509-A | 5"X9" 4MIL AUTOBAG | 1 |
| 2 | FAS0055 | Nut, Hex Flange, Nylock 1/4-20 | 4 |
| 3 | FAS0060 | Washer, Lock, Split, 1/4 | 4 |
| 4 | FAS0061 | Screw, Truss Hd. Ph, 1/4-20x0.50 | 4 |
| 5 | FAS0086 | WASHER, FLAT USS 5/16 ZP | 4 |
| 6 | FAS0091 | Plusnut, 5/16 | 4 |
| 7 | FAS0092 | Screw, Hex Hd, 5/16-18x1.50 Zn Plate, G8 | 4 |
| 8 | FAS0098 | Washer, Lock, Split, 5/16, Zinc Plate | 4 |
| 9 | 03927-1 | Floor Spacer Short | 2 |
| 10 | 03927-2 | Tall Floor Spacer | 2 |

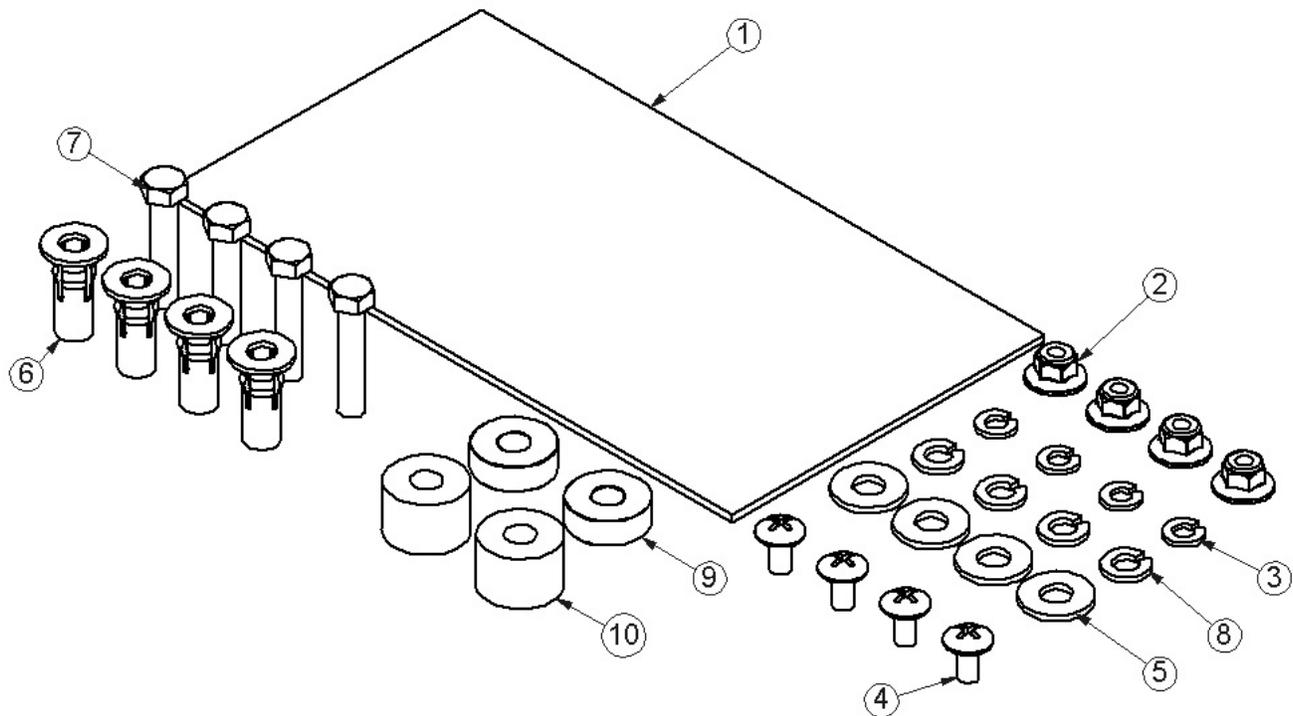


Step 01 Place the Case Holder into vehicle into desired mounting position and mark four (4) floor mounting holes. Also mark holes for bracketing to the van wall or shelving as necessary (no brackets included)

Step 02 Secure to floor using (4) FAS0091 5/16-18 plusnuts, (4) FAS0092 5/16-18 x 1.5 hex head screws, (4) FAS0086 5/16 flat washers, and (4) FAS0098 5/16 split lock washers.
NOTE: Use spacers as necessary.

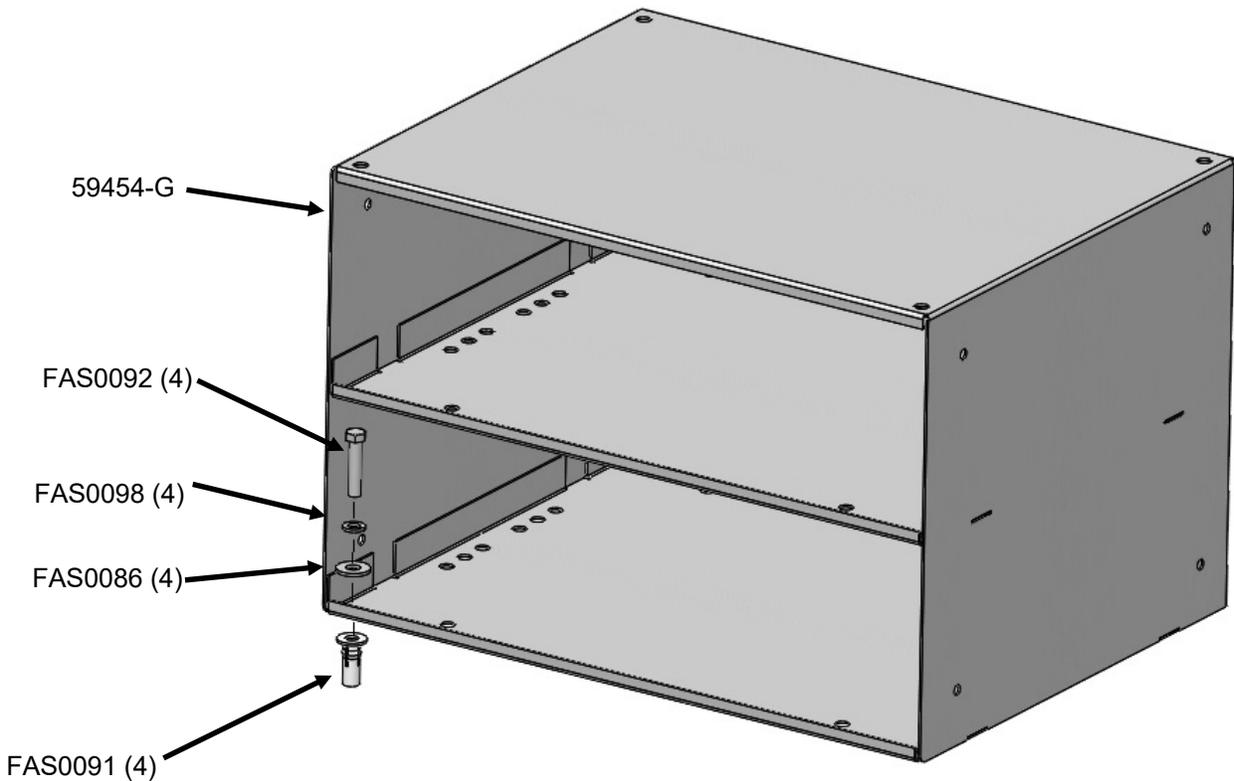

Step 03 Fasten cabinet to Shelving end panel with (4) FAS0061 1/4-20 X .5 screw, and (4) FAS0055 1/4-20 hex nylock flange nut in the four corner holes.

Step 04 Fasten cabinet on top of a second cabinet with (4) FAS0061 1/4-20 X .5 screw, and (4) FAS0055 1/4-20 hex nylock flange nut in the four corner holes.

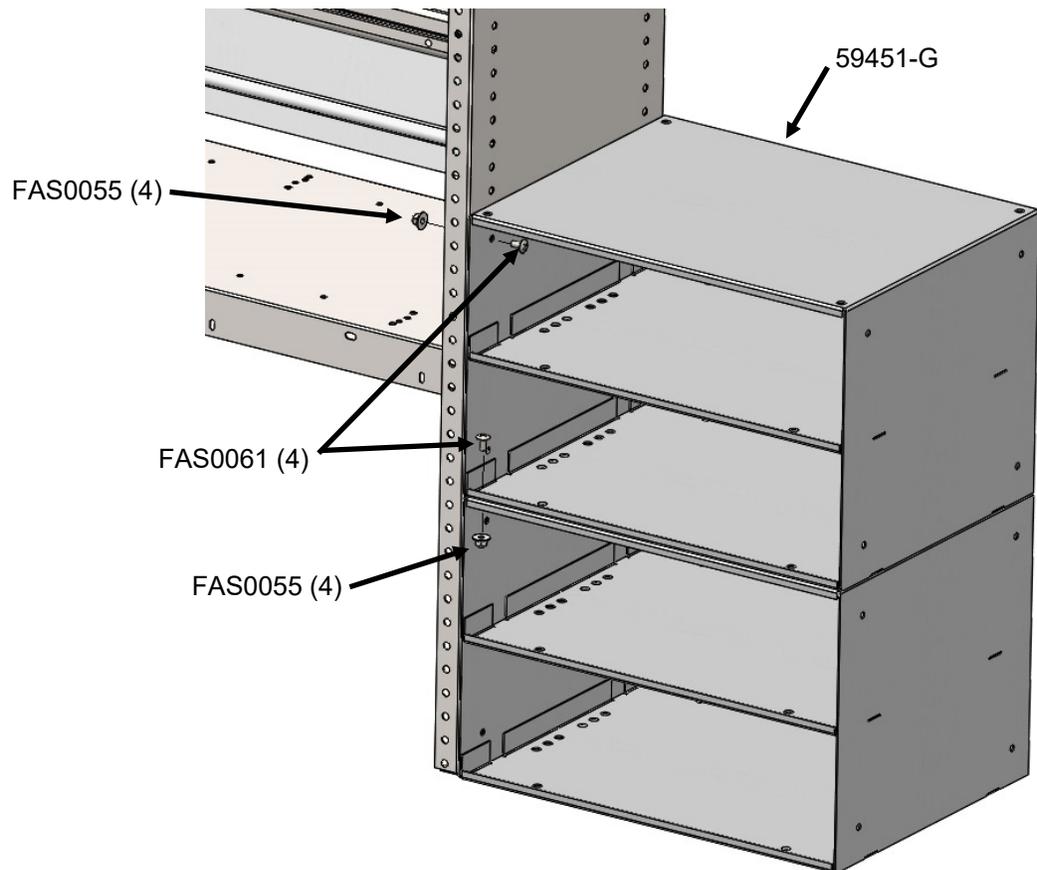

**DOUBLE CHECK ALL FASTENERS LOCATIONS TO BE SURE THAT ALL
FASTENERS ARE TIGHTENED TO SPECIFICATIONS.
YOUR INSTALLATION IS NOW COMPLETE!
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!**