
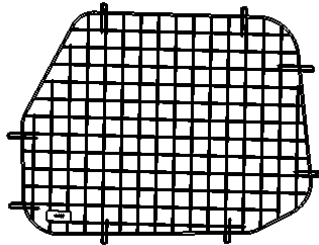


## Introduction / Comments:

THESE WINDOW SCREEN KIT IS DESIGNED TO FIT THE  
FORD TRANSIT LOW ROOF, REAR DOORS, STR/CRB SIDE CARGO DOORS  
(INCLUDES THE LOW ROOF CRBSIDE HINGED 60/40 DOORS)






### **Note:**

It is advised that all fasteners used in this assembly and installation of this Rack should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your package gives you long service life.

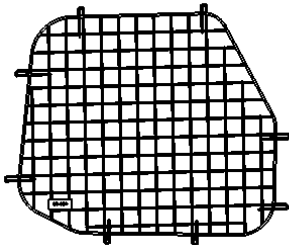


60-TRLRDR  
WDW SCR N KIT,  
FD TR, LOW ROOF,  
REAR DOORS

60-TRLSDR  
WDW SCR N KIT,  
FD TR, LOW ROOF,  
CURB SIDE SLIDING  
AND REAR DOORS

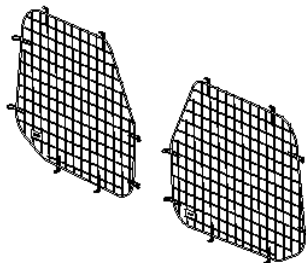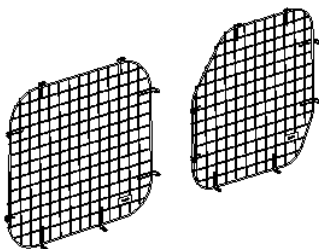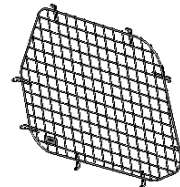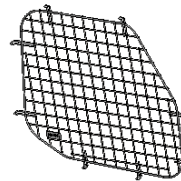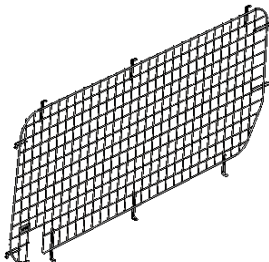

60-TRLHDRD  
WDW SCR N KIT,  
FD TR, LOW ROOF,  
CURB SIDE HINGED 60/40 DRS  
AND REAR DOORS


60-139  
WDW SCR N,  
FD TR, LOW ROOF,  
STREET SIDE SLIDING  
DOOR

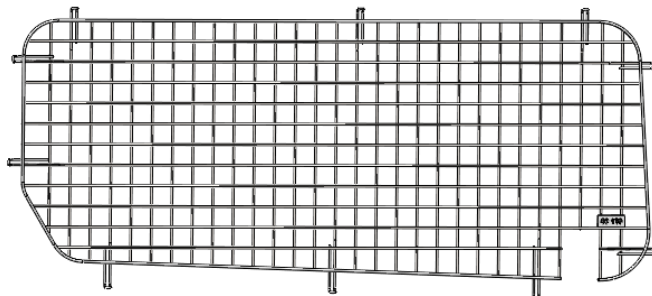

## - PRECAUTIONS -



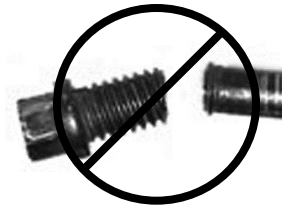

 **CAUTION**   
**THE USE OF AIR IMPACT TOOLS CAN  
OVER-TORQUE FASTENERS AND  
CAUSE FASTENER FAILURE!**



 **CAUTION**   
**ALL INSTALLATION HOLES SHOULD BE SEALED  
WITH SILICON OR BUTYL SEALANT TO PREVENT  
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



 **DANGER**   
**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH  
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO  
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS  
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



 **CAUTION**   
**TO AVOID DAMAGING THE VEHICLE ALWAYS  
USE DRILL STOPS WHEN DRILLING ANY IN-  
STALLATION HOLES!**



## - IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.


### THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH  
STOP

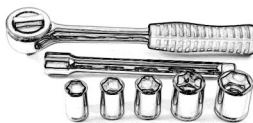

RATCHET, SOCKETS  
AND/OR WRENCHES



SCREWDRIVERS




MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.


**TYPICAL SCREEN MOUNTING:**

THESE CARGO AREA SCREENS ARE DESIGNED TO MOUNT DIRECTLY TO THE BODY METAL AROUND THE WINDOW. USE THE SCREEN AS YOUR INSTALLATION TEMPLATE.


SIMPLY PLACE THE STREET SIDE AND CURB SIDE WINDOW SCREEN OVER THE WINDOWS TO BE GUARDED AS SHOWN BELOW. TAPE WIRE SCREEN TO GLASS TO HOLD IN PLACE. MARK ALL LOOP ATTACHING POINTS. THEN REMOVE SCREEN, CENTER PUNCH AND DRILL ALL THESE ATTACHING POINTS WITH A 3/16" DRILL BIT. DRILL THRU SHEET METAL WITH CARE. DO NOT DRILL THRU TO OUTSIDE OF VAN, OR ANY ELECTRICAL WIRING. SECURE SCREEN IN PLACE WITH THE #14-10 X 3/4" SHEET METAL SCREWS AND EXTERNAL TOOTH LOCK WASHERS PROVIDED.

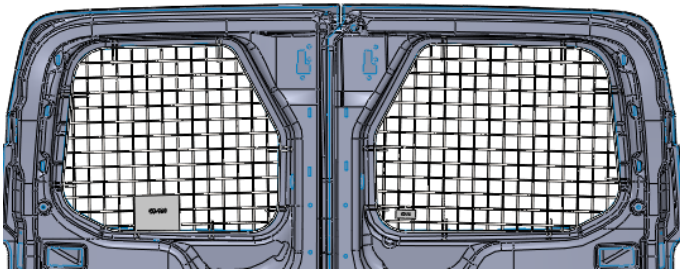


60-134 (60-TRLRDR) 60-135

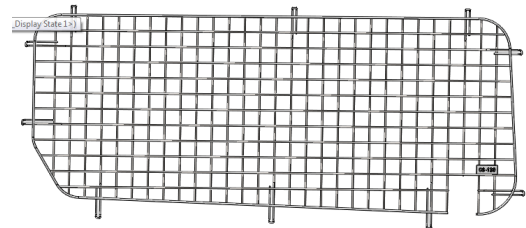


60-139

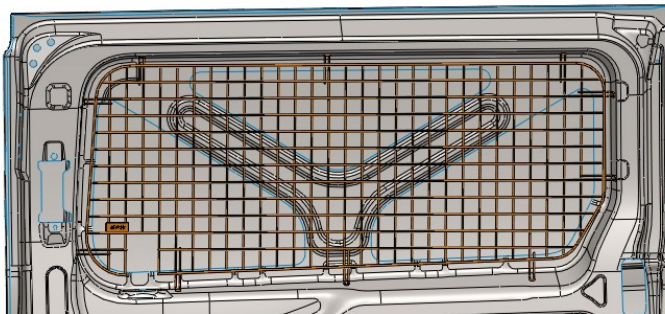

60-138 (60-TRLSDR)

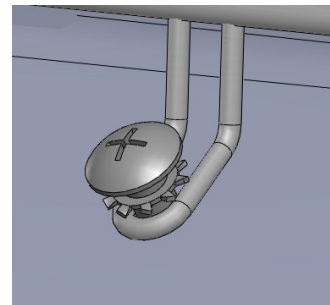

Typical Window Screen  
Wire Loop Fasteners

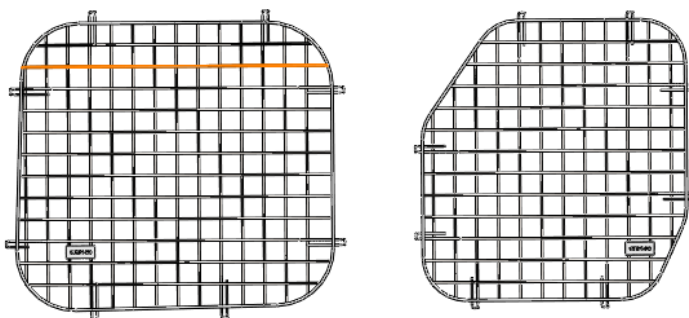


60-140 (60-TRLHDRD) 60-141




**WIRE WINDOW SCREENS ARE DESIGNED TO FIT BASE TRIM LEVEL "CARGO" VAN WINDOWS. IF VEHICLE HAS INTERIOR TRIM, CARPET, ETC. THIS MAY HAVE TO BE REMOVED OR MODIFIED FOR THE SCREENS TO FIT PROPERLY.**

**Fd Transit, Low Roof, CbrSd Sliding Door Window w/optional aux wdw insert requires screen mods**

IF YOUR VEHICLE COMES EQUIPPED WITH A CURB SIDE SLIDING DOOR WINDOW CONFIGURED AS SHOWN BELOW A SECTION OF THE ASCO WINDOW SCREEN MUST BE REMOVED. THE CUT OUT AREA WILL THEN HAVE SOME RUBBER TRIM (44171) INSTALLED TO PROTECT USER FROM THE SHARP EDGES OF THE REMOVED WIRE ENDS.

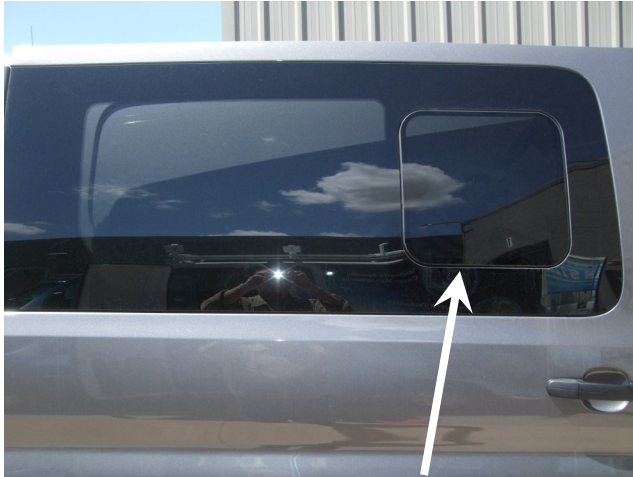

Ford Transit, Low Roof, Curb Side Window w/optional internal side window

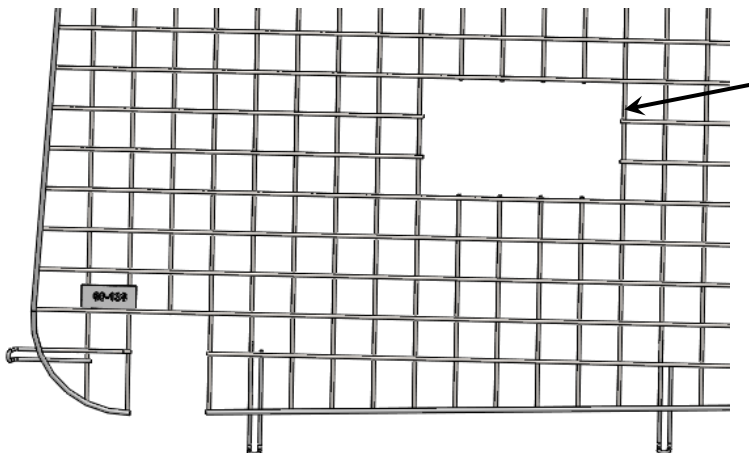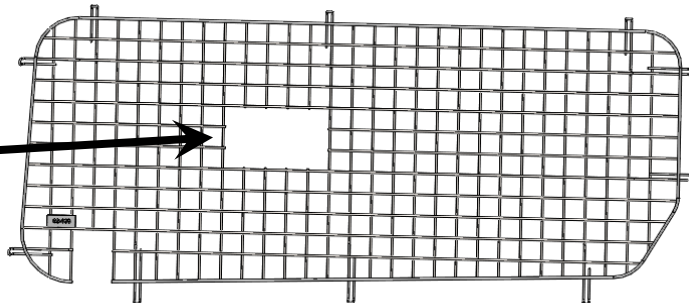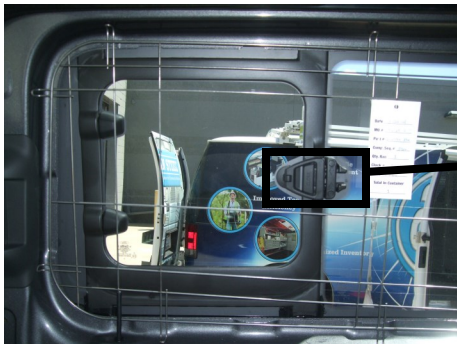

Trim interior horizontal and vertical grid wires and install the pinchweld trim (44171) to protect hands from sharp edges.

**WIRE WINDOW SCREENS ARE DESIGNED TO FIT BASE TRIM LEVEL "CARGO" VAN WINDOWS. IF VEHICLE HAS INTERIOR TRIM, CARPET, ETC. THIS MAY HAVE TO BE REMOVED OR MODIFIED FOR THE SCREENS TO FIT PROPERLY.**