



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

WDW SCRN KIT, 2025 CHEVY EQUINOX

PRODUCT WEIGHT

7.76 LBS

WIDTH X DEPTH X HEIGHT

N/A x N/A x N/A

CAPACITY

N/A


COLOR

BLACK


CATALOG NUMBER

60-EQNX25


60-191

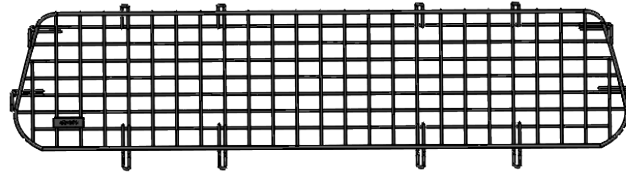


60-190

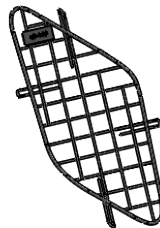


60-187

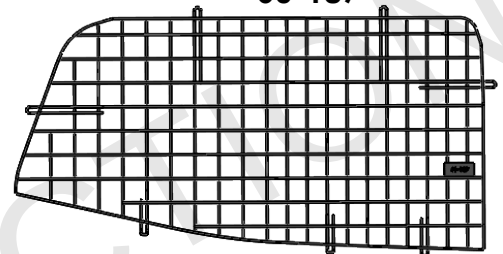

60-188

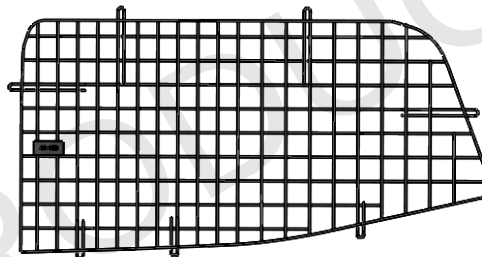

60-189

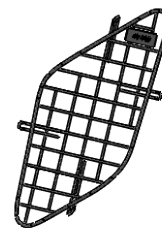

PRODUCT FEATURES

Window screens are contoured to fit the rear driver and passenger side doors, rear cargo area, and the rear hatch door of the 2025-current Chevy Equinox vehicle.

Non-glare black powder coat finish so that it is visible from outside the vehicle to deter theft of cargo contents and to help prevent damage to the window from shifting cargo.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.

**WDW SCR N KIT, 2025 CHEVY EQUINOX****CATALOG NUMBER 60-EQNX25****PRODUCT APPLICATION**


To deter theft of cargo contents and to prevent damage to the window from shifting cargo.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION
N/A	N/A

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

INSTR. NUMBER : 80157	PG: 1	REV: A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART NUMBER : 60-EQNX25			1	60-187	WDW SCREEN DS, REAR DOOR, EQNX25, BLK	1
PART • WINDOW SCREEN KIT, DESC. • EQUINOX 25			2	60-188	WDW SCREEN PS, REAR DOOR, EQNX25, BLK	1
			3	60-189	WDW SCREEN, DS, RRQR, EQNX25, BLK	1
			4	60-190	WDW SCREEN, PS, RRQR, EQNX25, BLK	1
			5	60-191	WDW SCREEN, REAR HATCH, EQNX25, BLK	1

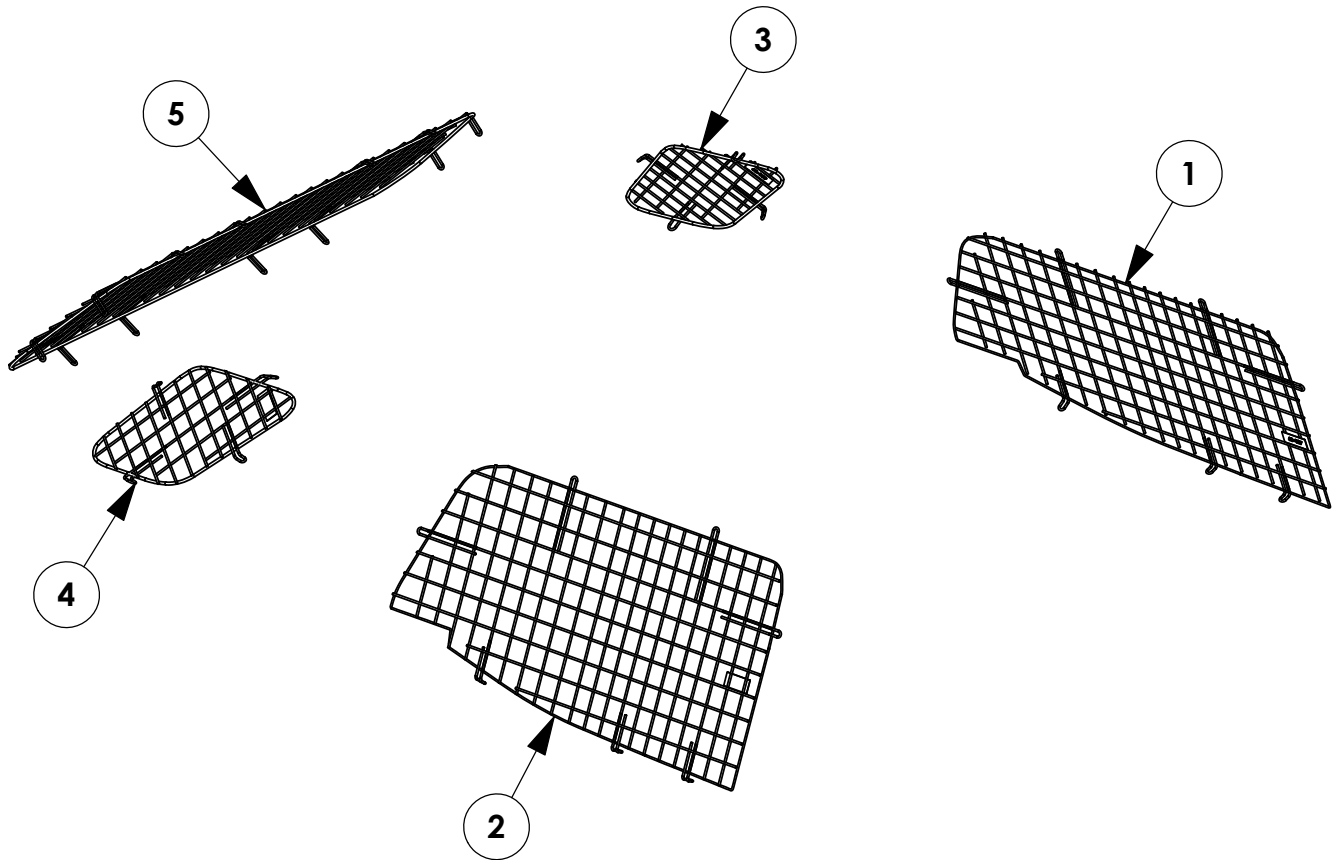

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

FAS0641
SCREW,HH TEK
1/4-20X.7 ZP
QTY: 34

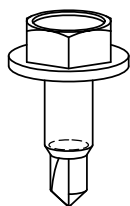


FAS0066
WASHER,LCK EXT
1/4 ZP
QTY: 34



STEP 1 - INSTALL PASSENGER SIDE REAR DOOR WINDOW SCREEN

**DRIVER SIDE WINDOW SCREEN PART#: 60-187
PASSENGER SIDE WINDOW SCREEN PART#: 60-188**

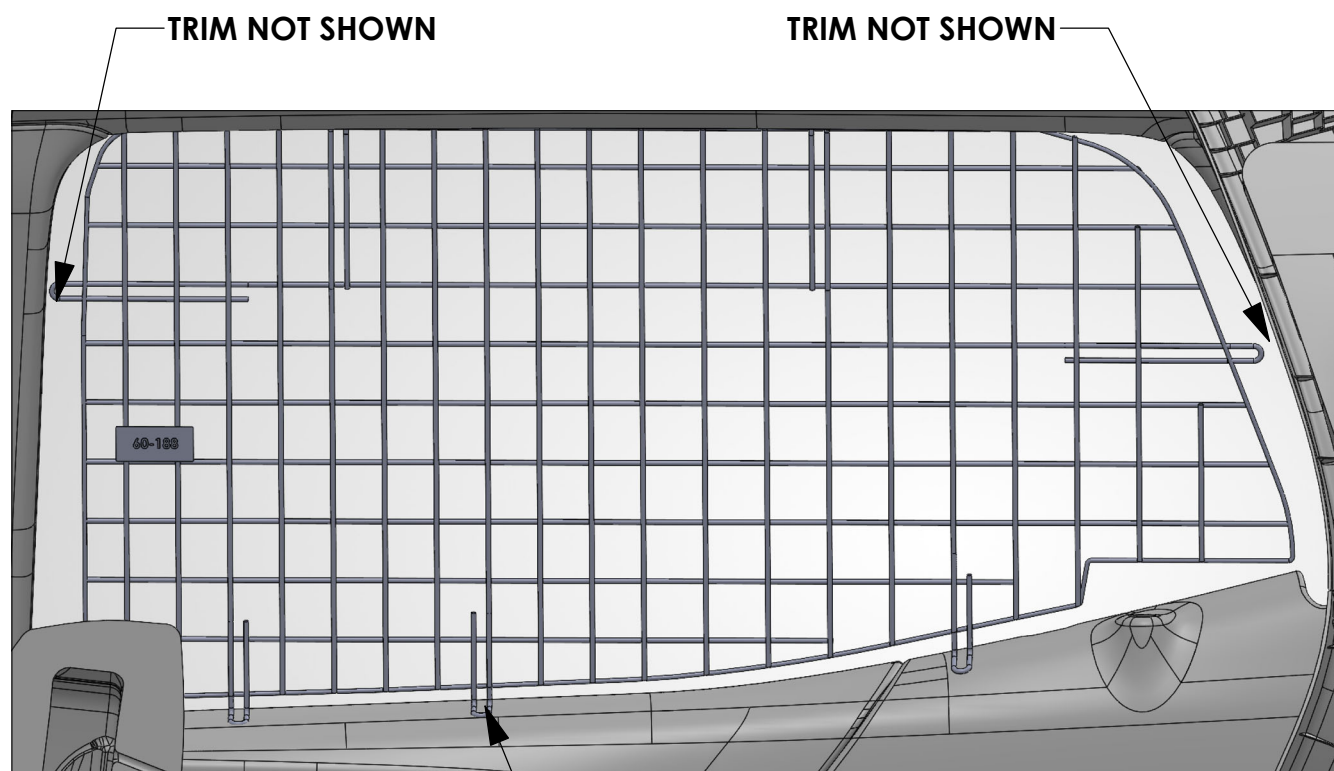


**INSTALL ON DOOR TRIM AROUND WINDOW
USE FAS0641 AND FAS0066
(07 PLACES)
7/16" SOCKET
IMPACT DRIVER**

REPEAT ON DRIVER SIDE

STEP 2 - INSTALL PASSENGER SIDE REAR QUARTER WINDOW SCREEN

DRIVER SIDE WINDOW SCREEN PART#: 60-189
PASSENGER SIDE WINDOW SCREEN PART#: 60-190

INSTALL ON TRIM AROUND WINDOW
USE FAS0641 AND FAS0066
(04 PLACES)
7/16" SOCKET
IMPACT DRIVER

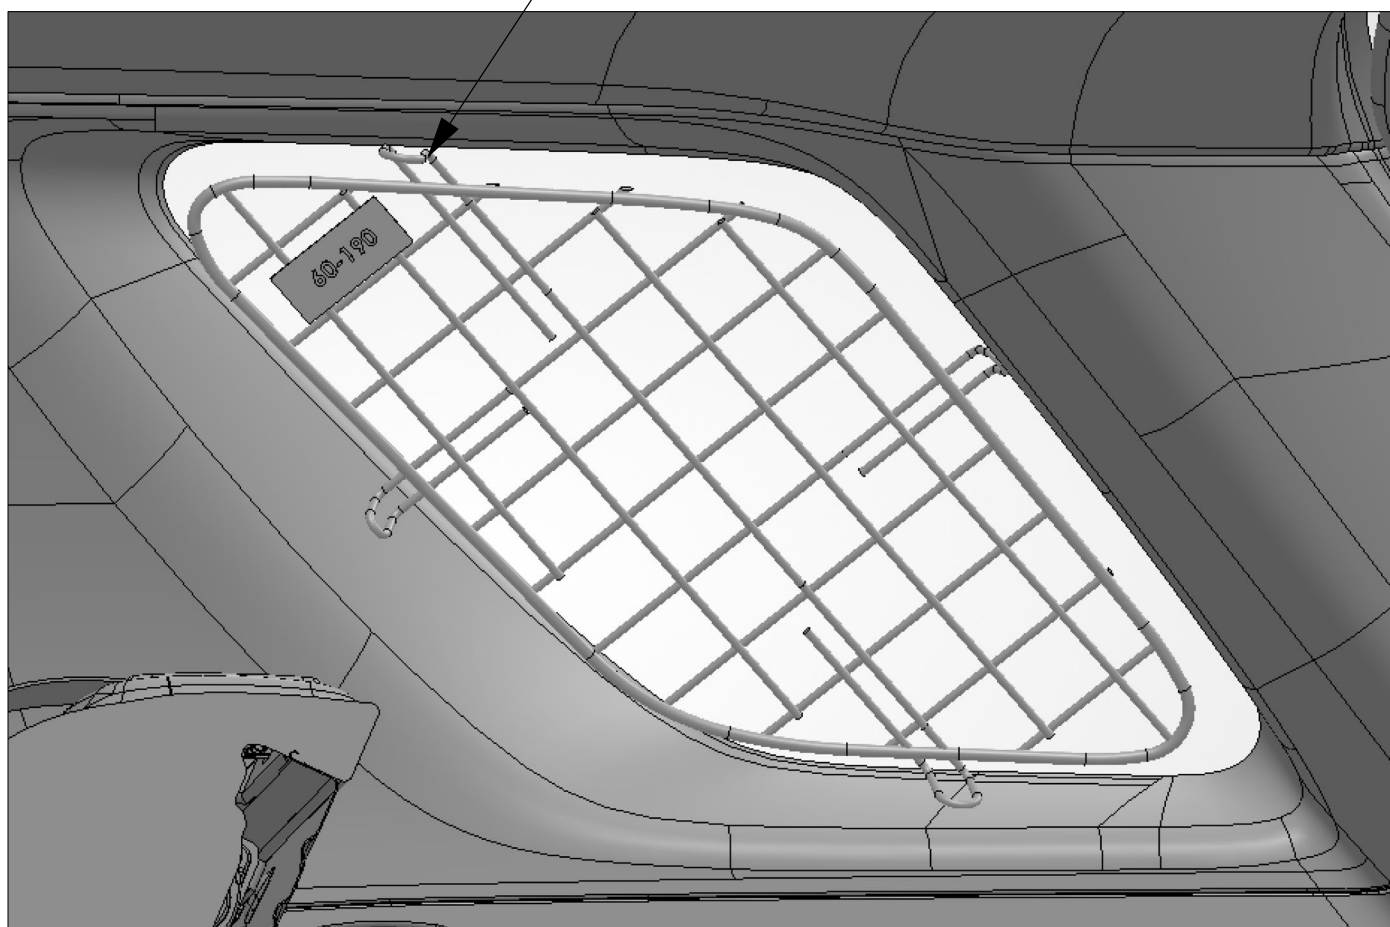


REPEAT ON DRIVER SIDE

STEP 3 - INSTALL REAR HATCH WINDOW SCREEN

REAR HATCH WINDOW SCREEN PART#: 60-191

**INSTALL ON DOOR TRIM AROUND WINDOW
USE FAS0641 AND FAS0066
(12 PLACES)
7/16" SOCKET
IMPACT DRIVER**

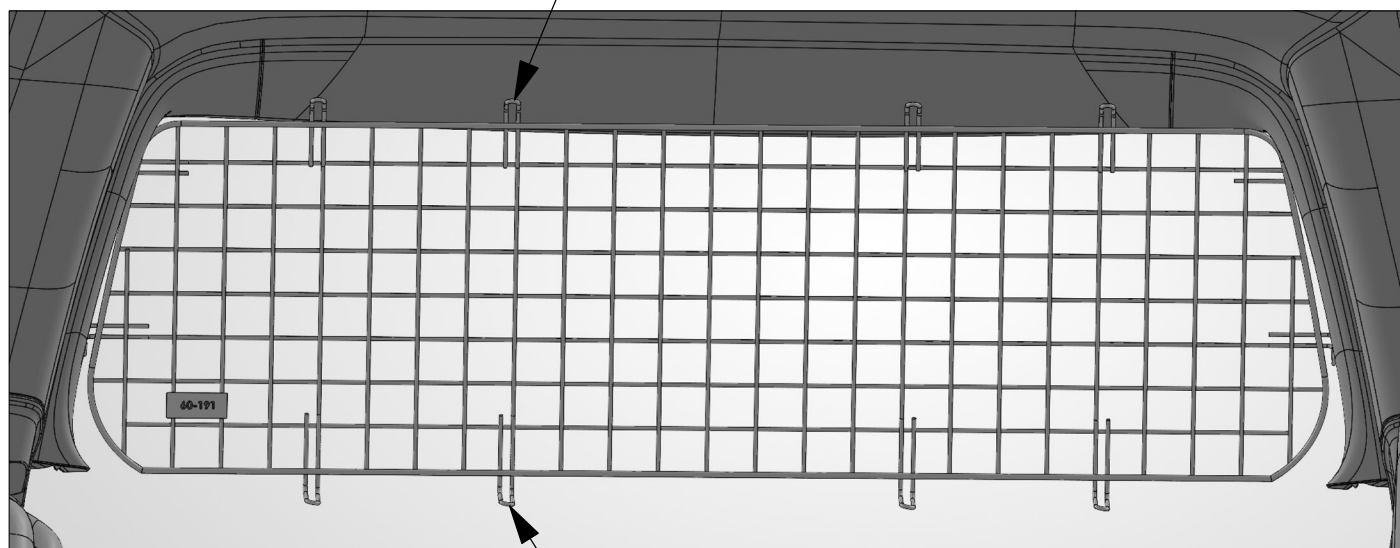

TRIM NOT SHOWN

INSTALLATION IS COMPLETE