


Introduction / Comments:

THESE WINDOW SCREEN KIT IS DESIGNED TO FIT THE
SWB PROMASTER REAR AND CURB SIDE CARGO DOORS.

Note:

It is advised that all fasteners used in this assembly and installation of these Screens should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your package gives you long service life.

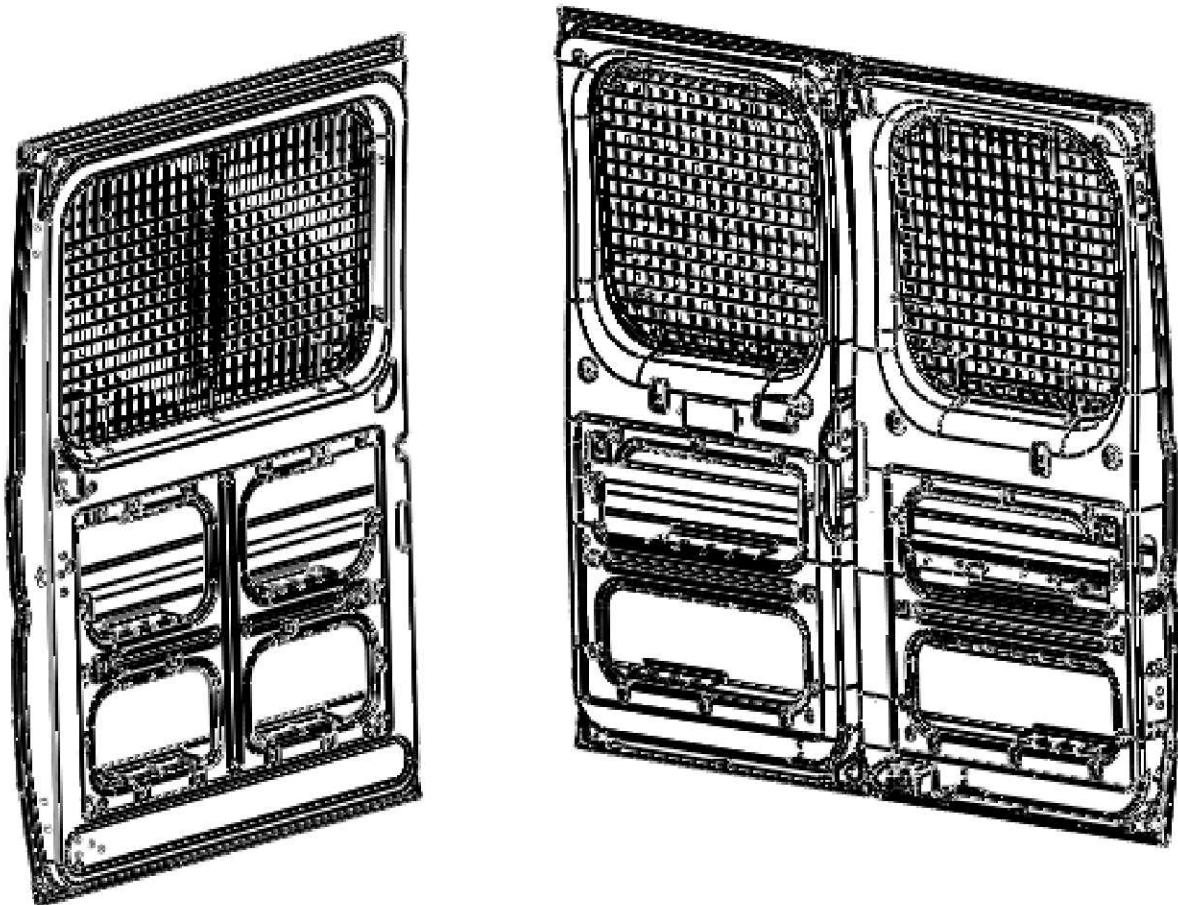

**60-PM SWB
WINDOW SCREEN KIT, FOR SWB PROMASTER,
CURB SIDE SLIDING AND REAR CARGO DOORS**

- PRECAUTIONS -



 **CAUTION** 
**THE USE OF AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!**



 **CAUTION** 
**ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



 **DANGER** 
**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



 **CAUTION** 
**TO AVOID DAMAGING THE VEHICLE ALWAYS
USE DRILL STOPS WHEN DRILLING ANY IN-
STALLATION HOLES!**



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP



RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS



MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

TYPICAL SCREEN MOUNTING:

THESE CARGO AREA SCREENS ARE DESIGNED TO MOUNT DIRECTLY TO THE BODY METAL AROUND THE WINDOW. USE THE SCREEN AS YOUR INSTALLATION TEMPLATE.

SIMPLY PLACE THE STREET SIDE AND CURB SIDE WINDOW SCREEN OVER THE WINDOWS TO BE GUARDED AS SHOWN BELOW. TAPE WIRE SCREEN TO GLASS TO HOLD IN PLACE. MARK ALL LOOP ATTACHING POINTS. THEN REMOVE SCREEN, CENTER PUNCH AND DRILL ALL THESE ATTACHING POINTS WITH A 3/16" DRILL BIT. DRILL THRU SHEET METAL WITH CARE. DO NOT DRILL THRU TO OUTSIDE OF VAN, OR ANY ELECTRICAL WIRING. SECURE SCREEN IN PLACE WITH THE #14-10 X 3/4" SHEET METAL SCREWS AND EXTERNAL TOOTH LOCK WASHERS PROVIDED.

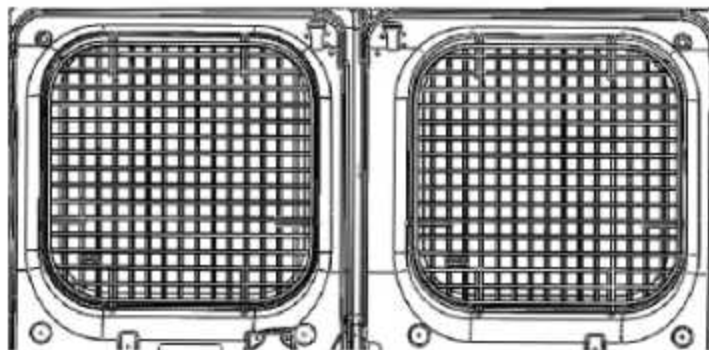


Fig. 1 "60-129"
Wdw Scrn, 'PROMASTER,
SWB & LWB Rear Cargo Doors

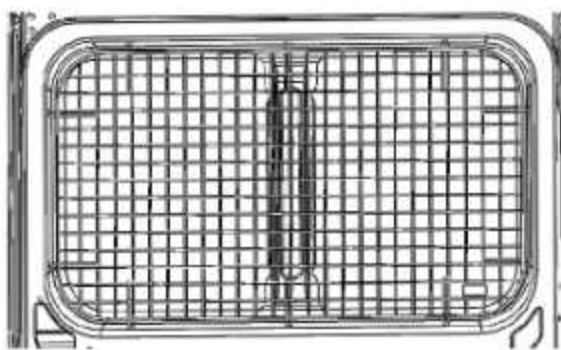


Fig.2 "60-131"
Wdw Scrn, PROMASTER,
LWB, Curb Side Sliding Cargo Door



Fig. 3
Typical Window Screen Fasteners


WIRE WINDOW SCREENS ARE DESIGNED TO FIT BASE TRIM LEVEL "CARGO" VAN WINDOWS. IF VEHICLE HAS INTERIOR TRIM, CARPET, ETC. THIS MAY HAVE TO BE REMOVED OR MODIFIED FOR THE SCREENS TO FIT PROPERLY.

**ADRIAN STEEL**

Cargo Management Solutions for Commercial Vehicles

60-129 "Promaster Rear Cargo Door Screen"

Promaster Rear Cargo
Door Window Screen

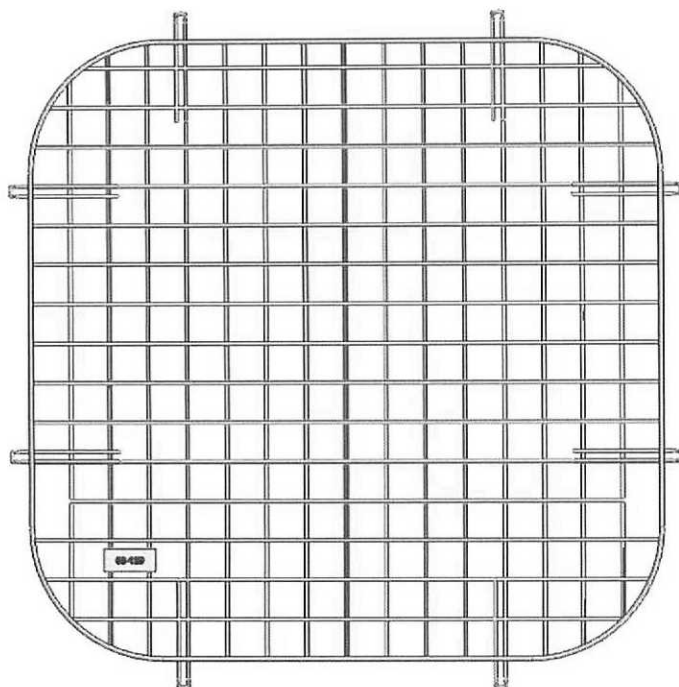**PRODUCT WEIGHT****3.5 lbs****WIDTH x DEPTH x HEIGHT****n/a x n/a x n/a****CAPACITY****n/a****COLOR****GRAY****CATALOG NUMBER****60-129****PRODUCT FEATURES**

Window screens are contoured to fit the street side (driver side) and/or curb side (passenger side) rear cargo doors of the 2014 Promaster.

Non-glare gray powder coat finish so that it is visible from outside the vehicle to deter theft of cargo contents and to prevent damage to the window from shifting cargo.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.

PAGE 1 of 2

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

60-129 "Promaster Rear Cargo Door Screen"

CATALOG NUMBER 60-129

PRODUCT APPLICATION

To deter theft of cargo contents and to prevent damage to the window from shifting cargo.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER

DESCRIPTION

SPECIAL APPLICATION NOTES

n/a

PAGE 2 of 2


The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.

Introduction / Comments:

THESE WINDOW SCREEN KIT IS DESIGNED TO FIT THE
SWB PROMASTER REAR AND CURB SIDE CARGO DOORS.

Note:

It is advised that all fasteners used in this assembly and installation of these Screens should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your package gives you long service life.

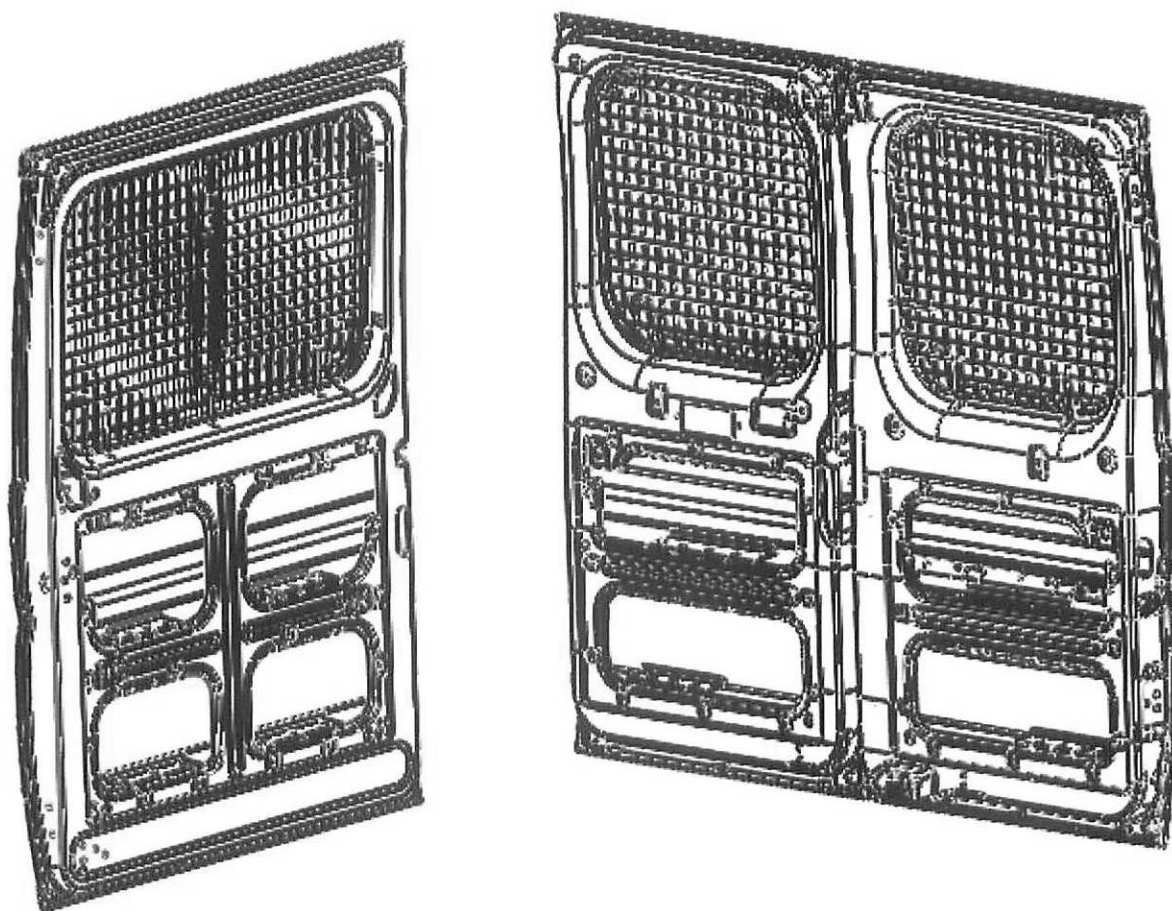

**60-PM SWB
WINDOW SCREEN KIT, FOR SWB PROMASTER,
CURB SIDE SLIDING AND REAR CARGO DOORS**


- PRECAUTIONS -



CAUTION



**THE USE OF AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!**

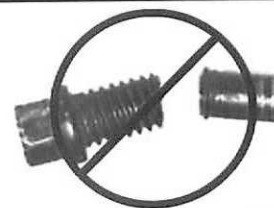

CAUTION



**ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



DANGER



**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



CAUTION



**TO AVOID DAMAGING THE VEHICLE ALWAYS
USE DRILL STOPS WHEN DRILLING ANY IN-
STALLATION HOLES!**



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.


THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP

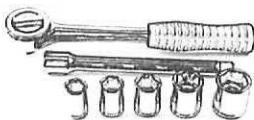

RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS



MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

TYPICAL SCREEN MOUNTING:

THESE CARGO AREA SCREENS ARE DESIGNED TO MOUNT DIRECTLY TO THE BODY METAL AROUND THE WINDOW. USE THE SCREEN AS YOUR INSTALLATION TEMPLATE.

SIMPLY PLACE THE STREET SIDE AND CURB SIDE WINDOW SCREEN OVER THE WINDOWS TO BE GUARDED AS SHOWN BELOW. TAPE WIRE SCREEN TO GLASS TO HOLD IN PLACE. MARK ALL LOOP ATTACHING POINTS. THEN REMOVE SCREEN, CENTER PUNCH AND DRILL ALL THESE ATTACHING POINTS WITH A 3/16" DRILL BIT. DRILL THRU SHEET METAL WITH CARE. DO NOT DRILL THRU TO OUTSIDE OF VAN, OR ANY ELECTRICAL WIRING. SECURE SCREEN IN PLACE WITH THE #14-10 X 3/4" SHEET METAL SCREWS AND EXTERNAL TOOTH LOCK WASHERS PROVIDED.

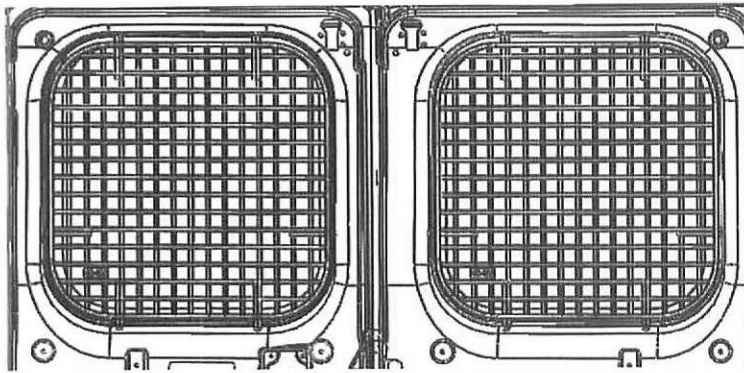


Fig. 1 "60-129"
Wdw Scrn, 'PROMASTER,
SWB & LWB Rear Cargo Doors

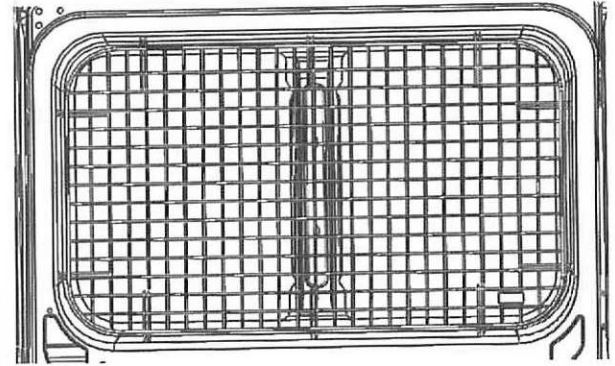


Fig.2 "60-131"
Wdw Scrn, PROMASTER,
LWB, Curb Side Sliding Cargo Door

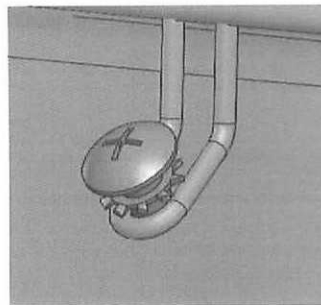


Fig. 3
Typical Window Screen Fasteners

WIRE WINDOW SCREENS ARE DESIGNED TO FIT BASE TRIM LEVEL "CARGO" VAN WINDOWS. IF VEHICLE HAS INTERIOR TRIM, CARPET, ETC. THIS MAY HAVE TO BE REMOVED OR MODIFIED FOR THE SCREENS TO FIT PROPERLY.

**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

60-131 "Promaster Str Side Slidng Dr Wdw Screen"

PRODUCT WEIGHT

5.8 lbsPromaster Street Side Sliding Cargo
Door Window Screen

WIDTH x DEPTH x HEIGHT

n/a x n/a x n/a


CAPACITY

n/a

COLOR

GRAY

CATALOG NUMBER

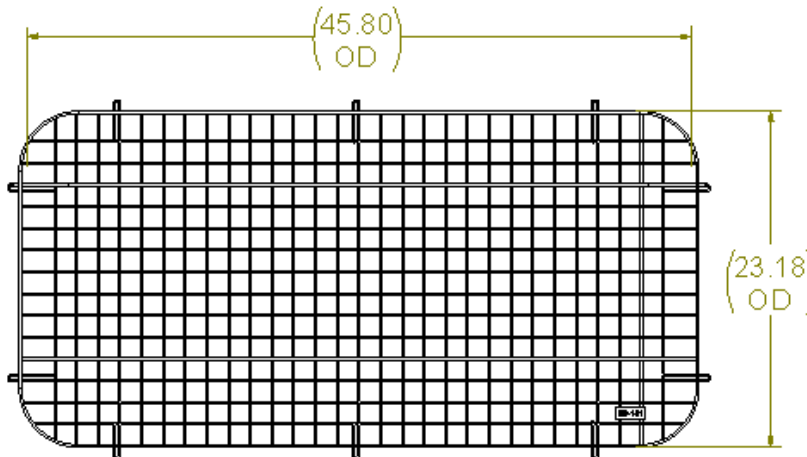60-131**PRODUCT FEATURES**

Window screens are contoured to fit the street side (driver side) and/or the curb side (passenger side) sliding cargo doors of the 2014 Promaster.

Non-glare gray powder coat finish so that it is visible from outside the vehicle to deter theft of cargo contents and to prevent damage to the window from shifting cargo.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.

PAGE 1 of 2

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.

**ADRIAN STEEL®**Cargo Management Solutions for Commercial Vehicles**60-131 “Promaster Str Side Sliding Dr Wdw Screen”****CATALOG NUMBER 60-131*****PRODUCT APPLICATION***

To deter theft of cargo contents and to prevent damage to the window from shifting cargo.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT**CATALOG NUMBER*****DESCRIPTION******SPECIAL APPLICATION NOTES*****n/a****PAGE 2 of 2**

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.