
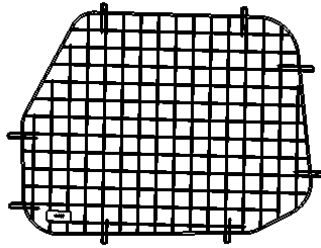


Introduction / Comments:

THESE WINDOW SCREEN KIT IS DESIGNED TO FIT THE
FORD TRANSIT LOW ROOF, REAR DOORS, STR/CRB SIDE CARGO DOORS
(INCLUDES THE LOW ROOF CRBSIDE HINGED 60/40 DOORS)






Note:

It is advised that all fasteners used in this assembly and installation of this Rack should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your package gives you long service life.

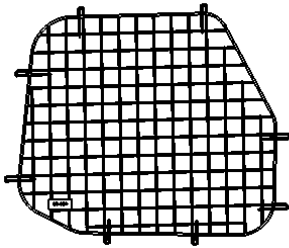


60-TRLRDR
WDW SCR N KIT,
FD TR, LOW ROOF,
REAR DOORS

60-TRLSDR
WDW SCR N KIT,
FD TR, LOW ROOF,
CURB SIDE SLIDING
AND REAR DOORS

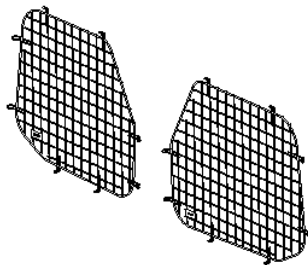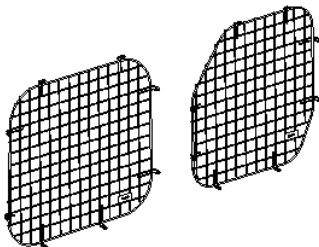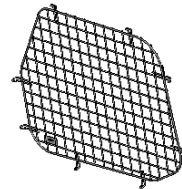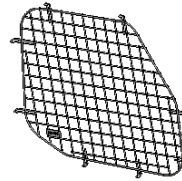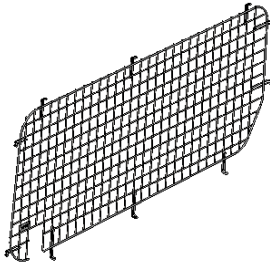

60-TRLHDRD
WDW SCR N KIT,
FD TR, LOW ROOF,
CURB SIDE HINGED 60/40 DRS
AND REAR DOORS


60-139
WDW SCR N,
FD TR, LOW ROOF,
STREET SIDE SLIDING
DOOR

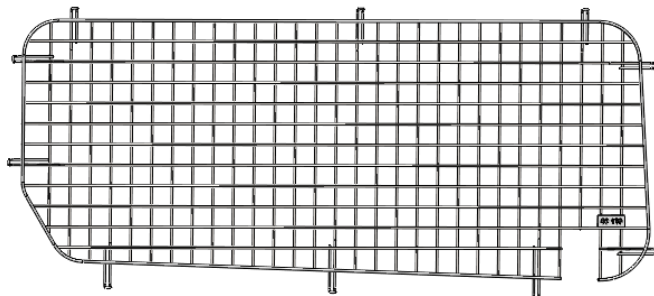

- PRECAUTIONS -



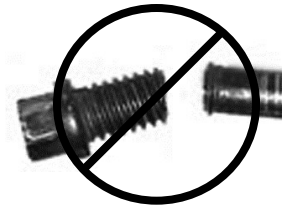

 **CAUTION** 
**THE USE OF AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!**



 **CAUTION** 
**ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



 **DANGER** 
**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



 **CAUTION** 
**TO AVOID DAMAGING THE VEHICLE ALWAYS
USE DRILL STOPS WHEN DRILLING ANY IN-
STALLATION HOLES!**



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.


THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP

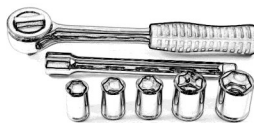

RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS




MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.


TYPICAL SCREEN MOUNTING:

THESE CARGO AREA SCREENS ARE DESIGNED TO MOUNT DIRECTLY TO THE BODY METAL AROUND THE WINDOW. USE THE SCREEN AS YOUR INSTALLATION TEMPLATE.


SIMPLY PLACE THE STREET SIDE AND CURB SIDE WINDOW SCREEN OVER THE WINDOWS TO BE GUARDED AS SHOWN BELOW. TAPE WIRE SCREEN TO GLASS TO HOLD IN PLACE. MARK ALL LOOP ATTACHING POINTS. THEN REMOVE SCREEN, CENTER PUNCH AND DRILL ALL THESE ATTACHING POINTS WITH A 3/16" DRILL BIT. DRILL THRU SHEET METAL WITH CARE. DO NOT DRILL THRU TO OUTSIDE OF VAN, OR ANY ELECTRICAL WIRING. SECURE SCREEN IN PLACE WITH THE #14-10 X 3/4" SHEET METAL SCREWS AND EXTERNAL TOOTH LOCK WASHERS PROVIDED.

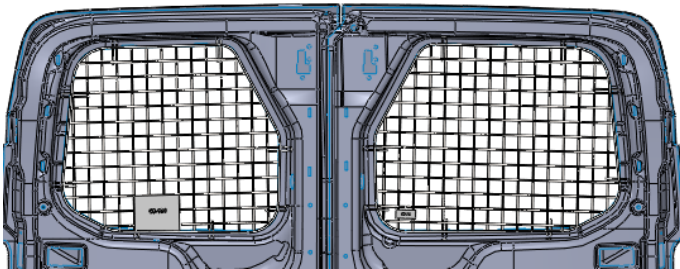


60-134 (60-TRLRDR) 60-135

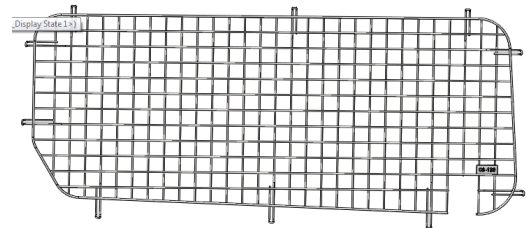


60-139

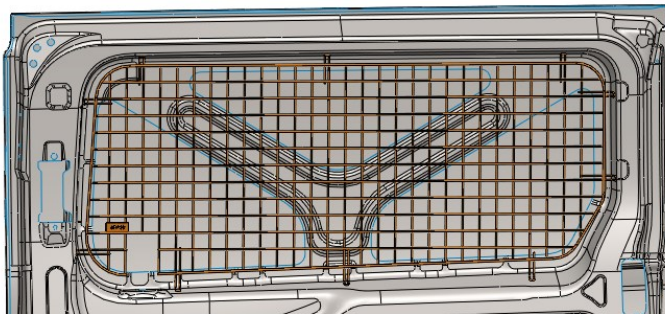

60-138 (60-TRLSDR)

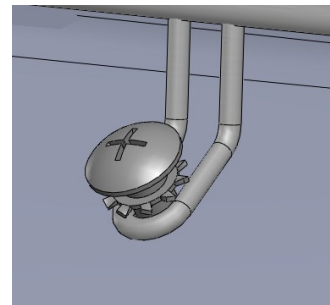

Typical Window Screen
Wire Loop Fasteners

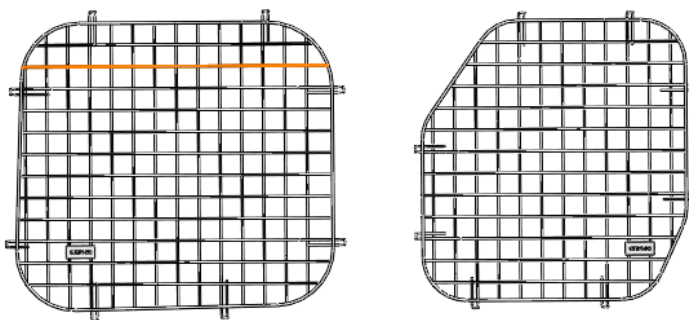


60-140 (60-TRLHDRD) 60-141




WIRE WINDOW SCREENS ARE DESIGNED TO FIT BASE TRIM LEVEL "CARGO" VAN WINDOWS. IF VEHICLE HAS INTERIOR TRIM, CARPET, ETC. THIS MAY HAVE TO BE REMOVED OR MODIFIED FOR THE SCREENS TO FIT PROPERLY.

Fd Transit, Low Roof, CbrSd Sliding Door Window w/optional aux wdw insert requires screen mods

IF YOUR VEHICLE COMES EQUIPPED WITH A CURB SIDE SLIDING DOOR WINDOW CONFIGURED AS SHOWN BELOW A SECTION OF THE ASCO WINDOW SCREEN MUST BE REMOVED. THE CUT OUT AREA WILL THEN HAVE SOME RUBBER TRIM (44171) INSTALLED TO PROTECT USER FROM THE SHARP EDGES OF THE REMOVED WIRE ENDS.

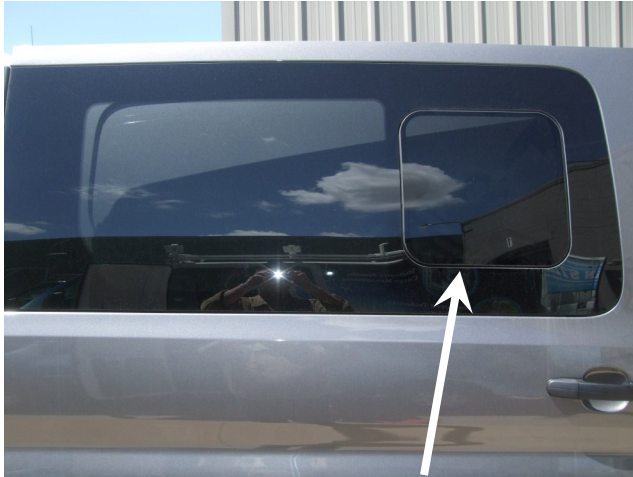

Ford Transit, Low Roof, Curb Side Window w/optional internal side window

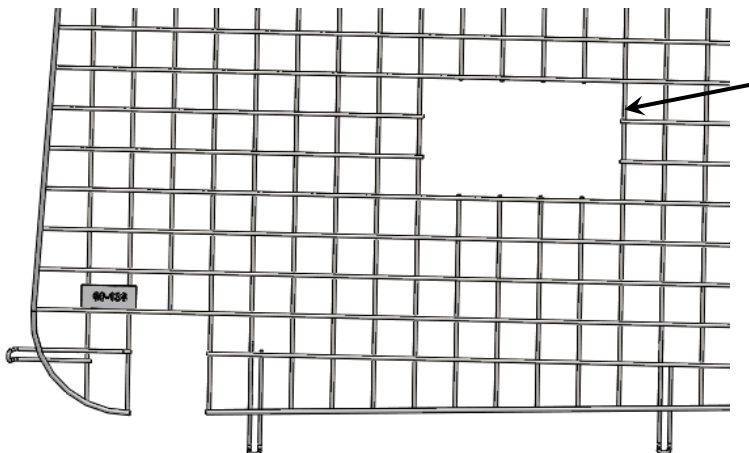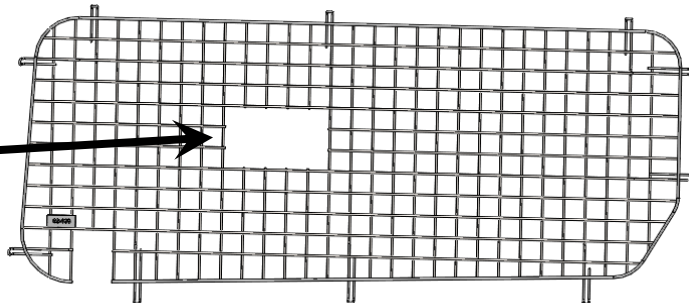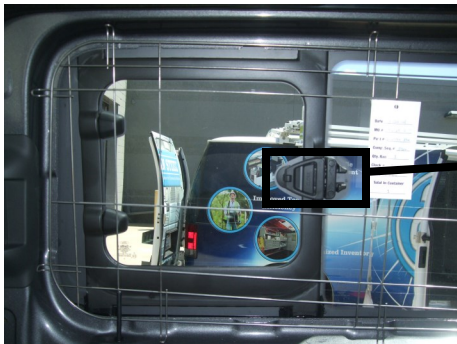

Trim interior horizontal and vertical grid wires and install the pinchweld trim (44171) to protect hands from sharp edges.


WIRE WINDOW SCREENS ARE DESIGNED TO FIT BASE TRIM LEVEL "CARGO" VAN WINDOWS. IF VEHICLE HAS INTERIOR TRIM, CARPET, ETC. THIS MAY HAVE TO BE REMOVED OR MODIFIED FOR THE SCREENS TO FIT PROPERLY.

**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

60-134 "Fd Transit Wdw Screen Kit"

60-134
Window Screen, Ford Transit, Low Roof,
Curb Side Rear Door

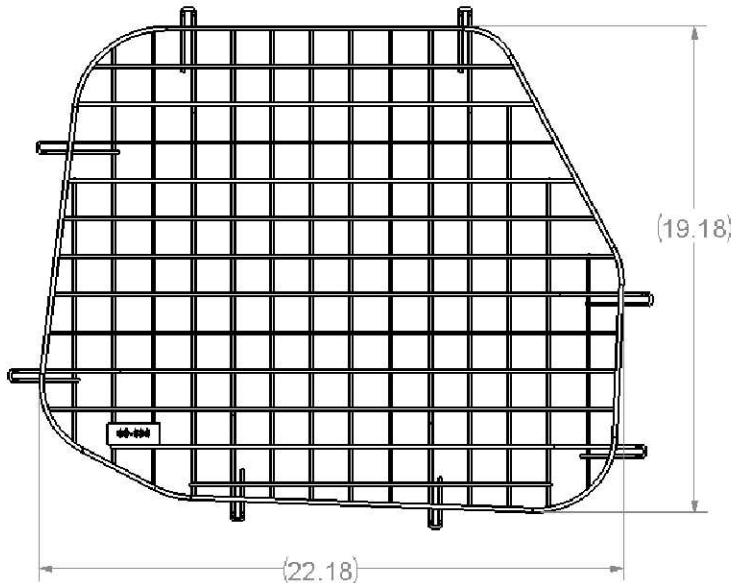**PRODUCT WEIGHT****2.44 lbs****WIDTH x DEPTH x HEIGHT****n/a x n/a x n/a****CAPACITY****n/a****COLOR****GRAY****CATALOG NUMBER****60-134****PRODUCT FEATURES**

Window screens are contoured to fit the rear curb side cargo door of the 2014 Ford Transit Low Roof Cargo Vans

Non-glare gray powder coat finish so that it is visible from outside the vehicle to deter theft of cargo contents and to prevent damage to the window from shifting cargo.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.

PAGE 1 of 2

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.



CATALOG NUMBER 60-134

PRODUCT APPLICATION

To deter theft of cargo contents and to prevent damage to the window from shifting cargo.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER

DESCRIPTION

SPECIAL APPLICATION NOTES


n/a

PAGE 2 of 2

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.

**ADRIAN STEEL**

Cargo Management Solutions for Commercial Vehicles

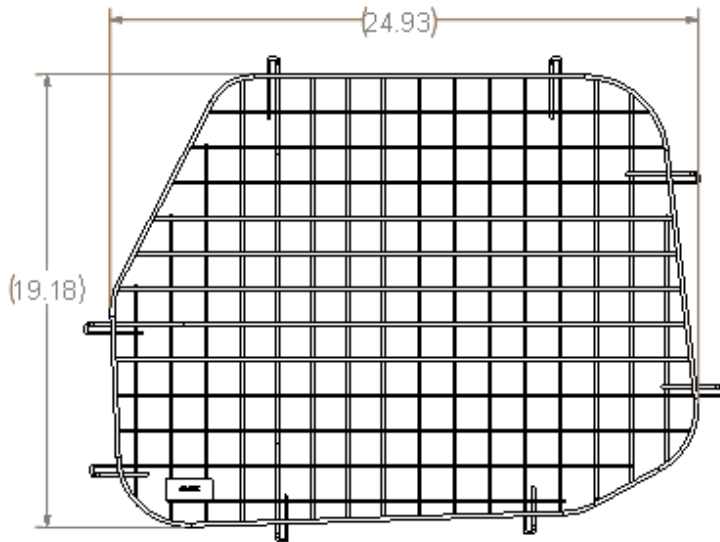60-135 "Fd Transit Wdw Screen Kit"**60-135****Window Screen, Ford Transit, Low Roof,
Street Side Rear Door****PRODUCT WEIGHT****2.67 lbs****WIDTH x DEPTH x HEIGHT****n/a x n/a x n/a****CAPACITY****n/a****COLOR****GRAY****CATALOG NUMBER****60-135****PRODUCT FEATURES**

**Window screens are contoured to fit the rear street side cargo door
of the 2014 Ford Transit Low Roof Cargo Vans**

**Non-glare gray powder coat finish so that it is visible from outside
the vehicle to deter theft of cargo contents and to prevent damage
to the window from shifting cargo.**

**SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER
PRODUCTS THAT WORK WITH THIS UNIT.**

PAGE 1 of 2

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.



CATALOG NUMBER 60-135

PRODUCT APPLICATION

To deter theft of cargo contents and to prevent damage to the window from shifting cargo.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER

DESCRIPTION

SPECIAL APPLICATION NOTES

n/a

PAGE 2 of 2

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.