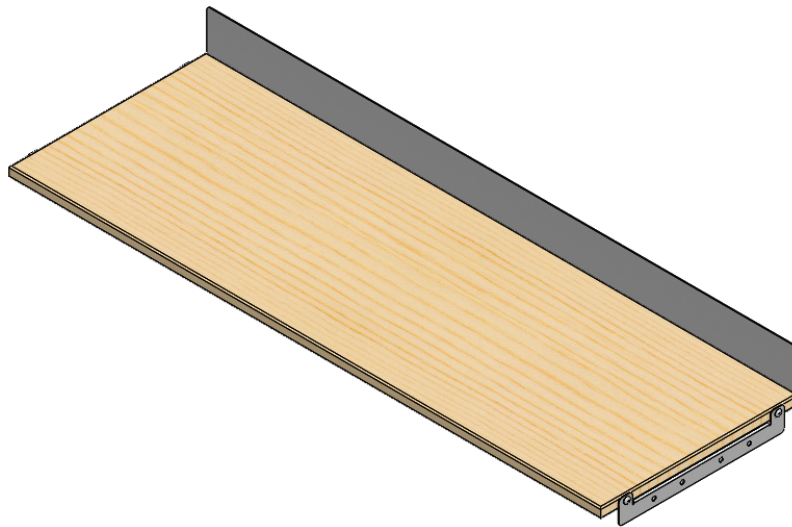


Workbench Top 14" X 42"



PRODUCT WEIGHT

9 lbs

WIDTH x DEPTH x HEIGHT

42" X 14" X 3 5/8"

CAPACITY

N/A

COLOR

BALTIC BIRCH / GRAY

CATALOG NUMBER

60106

PRODUCT FEATURES

This Workbench top is designed to mount atop any 12X42 module arrangement and/or framework of KD parts

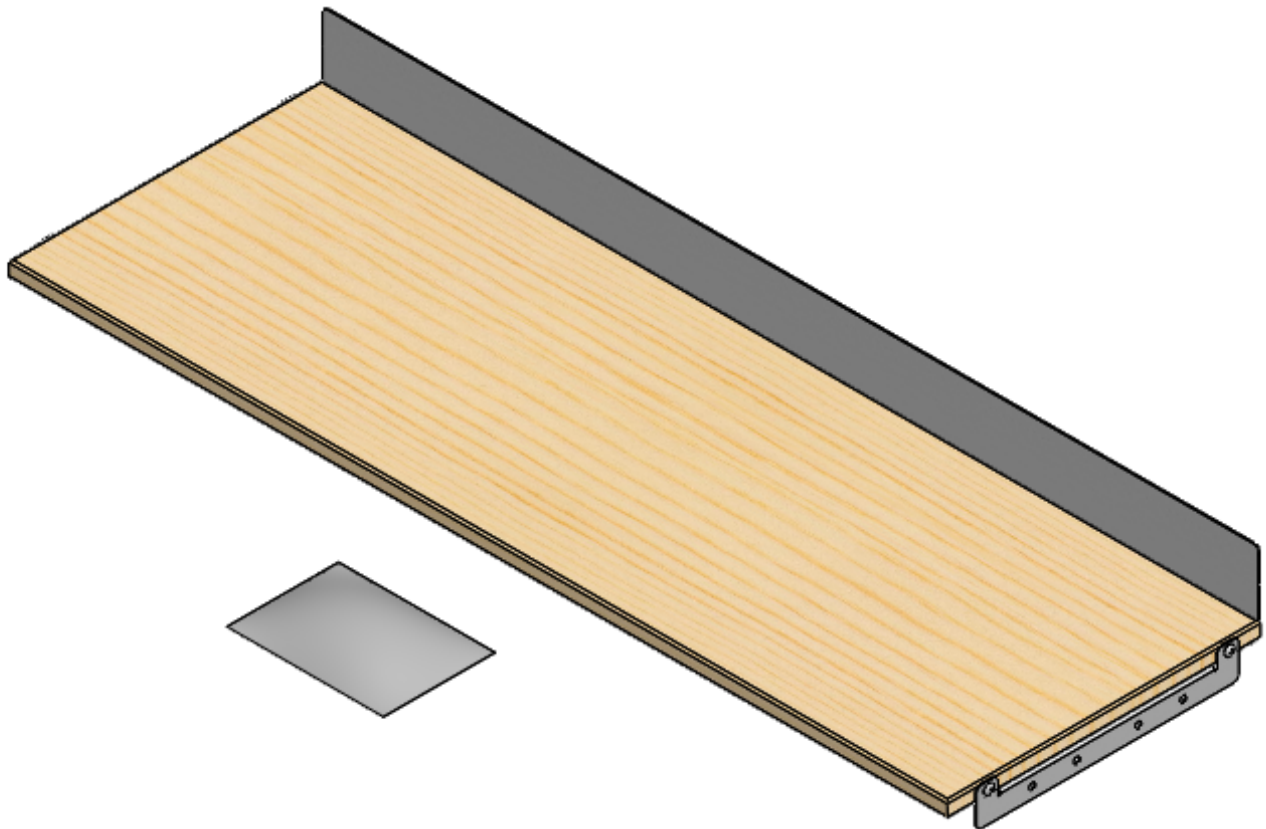
Some drilling may be required.



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual



60106 **WORKBENCH TOP 14" x 42"**

- PRECAUTIONS -





 **CAUTION** 
**THE USE AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!**



 **CAUTION** 
**ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



 **DANGER** 
**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



 **CAUTION** 
**TO AVOID DAMAGING THE VEHICLE ALWAYS
USE DRILL STOPS WHEN DRILLING ANY IN-
STALLATION HOLES!**



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP



RATCHET, SOCKETS
AND/OR WRENCHES



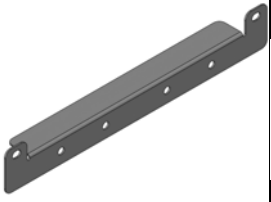
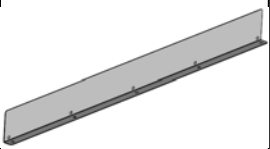



SCREWDRIVERS

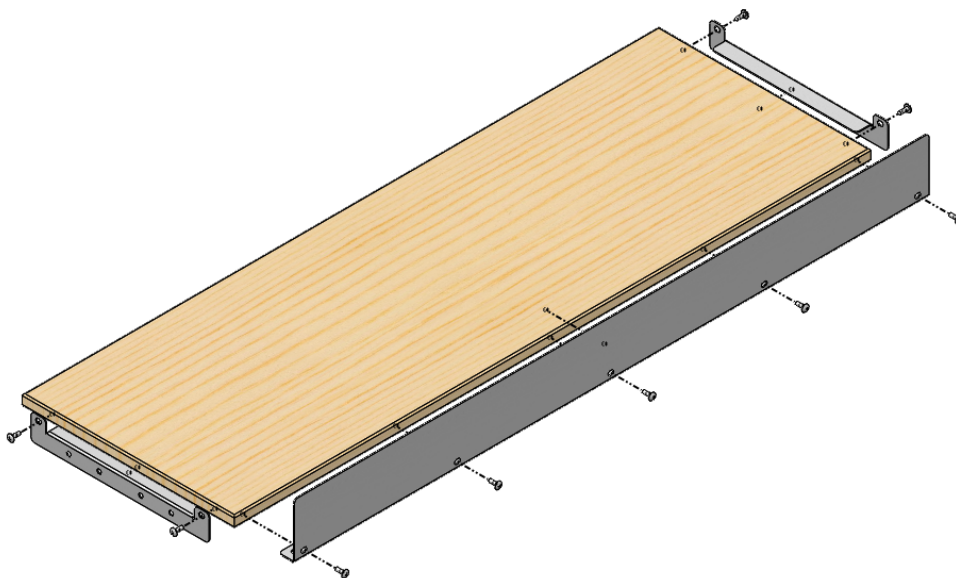


MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

PARTS YOU WILL USE FOR STEP 01	FAS0691, SCREW, THP TEK (13) REQUIRED	PHILLIPS HEAD DRILL	60102-G, WORKBENCH SIDE BRACKET, GRAY	60100-G, WORKBENCH BACK RAIL, GRAY
				
	60103, RUSSIAN BIRCH 14 X 42			
				



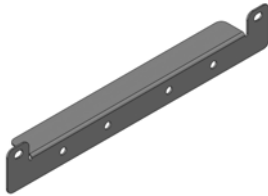
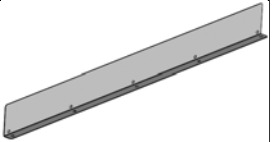

Instructions for Step 01



Install 60100-G back rail to 60103 Russian Birch using FAS0691 (x5).

Install 60102-G side bracket to each end of 60103 Russian Birch using FAS0691 (x4); Install side brackets based upon desired lip length.

There should be four (4) FAS0691 Screw, THP TEK left over in which you may use to install workbench top to supporting structure.

PARTS YOU WILL USE FOR STEP 01	FAS0691, SCREW, THP T(13) REQUIRED	PHILLIPS HEAD DRILL	60102-G, WORKBENCH SIDE BRACKET, GRAY	60100-G, WORKBENCH BACK RAIL, GRAY
				
	60103, RUSSIAN BIRCH 14 X 42			
				

INSTALLATION COMPLETE

