



**ADRIAN STEEL**

*Cargo Management Solutions for Commercial Vehicles*

## Metal Solvent tray 24" x 5.2" x 4.75

*PRODUCT WEIGHT*

**7 lbs**

*WIDTH x DEPTH x HEIGHT*

**24" x 5.2" x 4.75"**

*CAPACITY*


**10 lbs. per tray max  
Evenly distributed**

*COLOR*

**Gray tray, dividers  
galvanized**

*CATALOG NUMBER*

**66246**

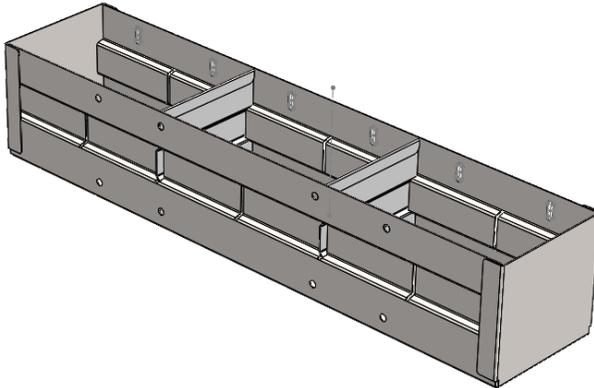


*PRODUCT FEATURES*

**An all metal tray unit stowed pretty much anywhere space is available, usually on the inside of rear doors. In addition this unit incorporates two adjustable dividers that can adjust to sizes that meet the storage size needs for whatever is stored in this solvent tray divider unit.**

*PRODUCT APPLICATION*

**This product is designed for installation into the vehicles including full size vans, box truck, PDV and trailers.**

INSTR. NUMBER : <b>66244</b>		PG: <b>1</b>	REV: <b>B</b>	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART NUMBER : <b>66206</b>				1	66243-G	SOLVENT TRAY, DIVIDED 14in	1
				2	66197	TRAY DIVIDER	2
PART DESC. : SOLVENT TRAY, DIVIDED 14IN				3	BAG65880	BAG FOR 65880	1
				4	BAGPEPACCM NT4	BAG FOR TRUCK END PANEL KITS	1

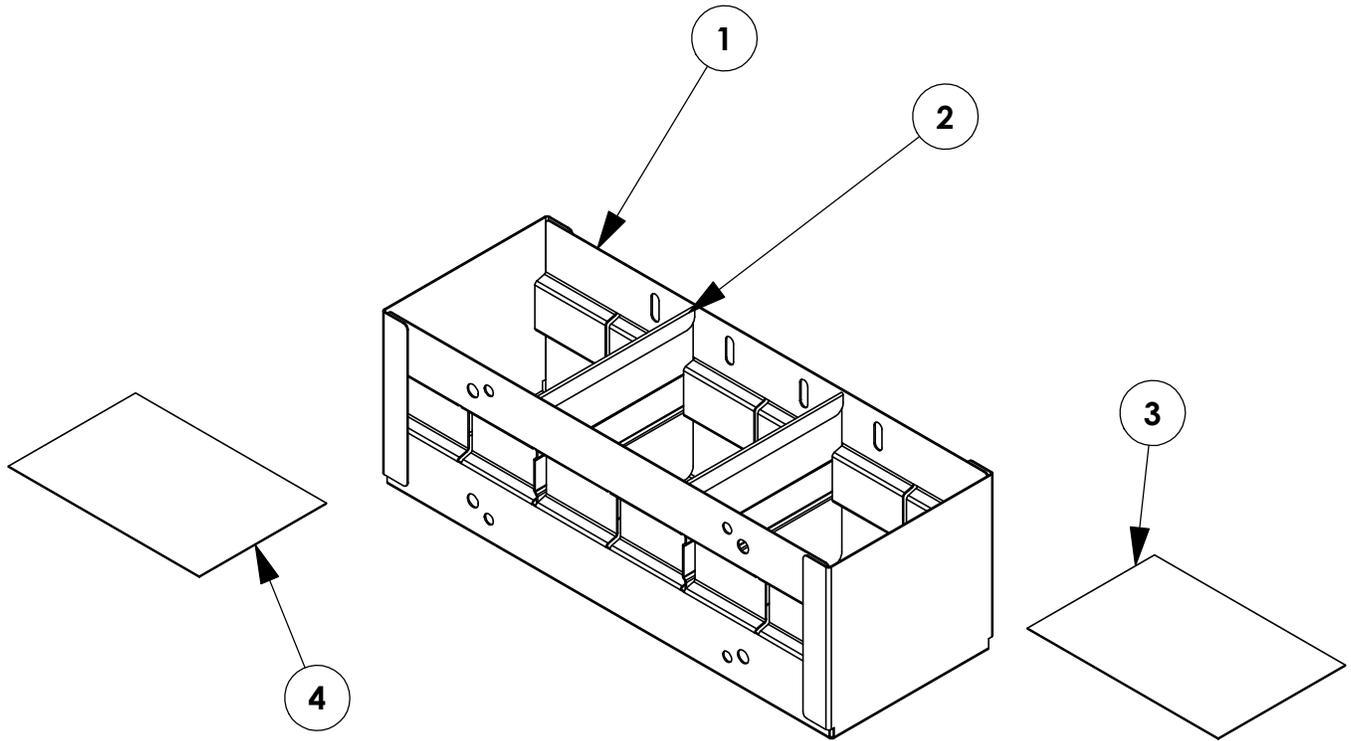

**GET TO KNOW THE VEHICLE** - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

**SEAL ALL EXTERIOR HOLES** - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

**CONTROL DRILL DEPTH** - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

**ALWAYS ADD PRIMER** - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

**MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT** - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

**PROVIDE CLEARANCE FOR SPACERS** - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


**CHECK SPACER ORIENTATION** - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

**PLUSNUT INSTALLATION** - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


**THRU-BOLT CLEARANCE** - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

**FASTENERS USED**


**BAGS REFERENCED: BAG65880 AND BAGPEPACCMNT4**

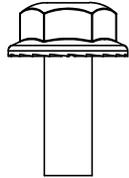


**FAS0018  
SCREW HH SFLNG  
1/4-20X.62 ZP  
QTY: 4**

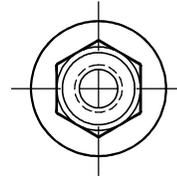

**FAS0055  
NUT,HEX NLK  
FLG 1/4-20 ZP  
QTY:4**

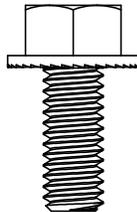


**FAS0438  
SCREW,HFLNG 5/16-  
18X.75ZP  
QTY: 4**

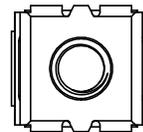

**FAS0915  
SNAP-IN NUT,0.028-  
0.056"  
QTY: 4**

**BEGIN ASSEMBLY**  
**STEP 1 - MOUNT SOLVENT TRAY TO**  
**ANY SURFACE. USE HOLES AS**  
**TEMPLATE FOR DRILLING OUT**  
**HOLES FOR MOUNTING**

**USE FAS0018 AND FAS0055**  
**(4 PLACES)**  
**7/16 WRENCH**  
**7/16 SOCKET**

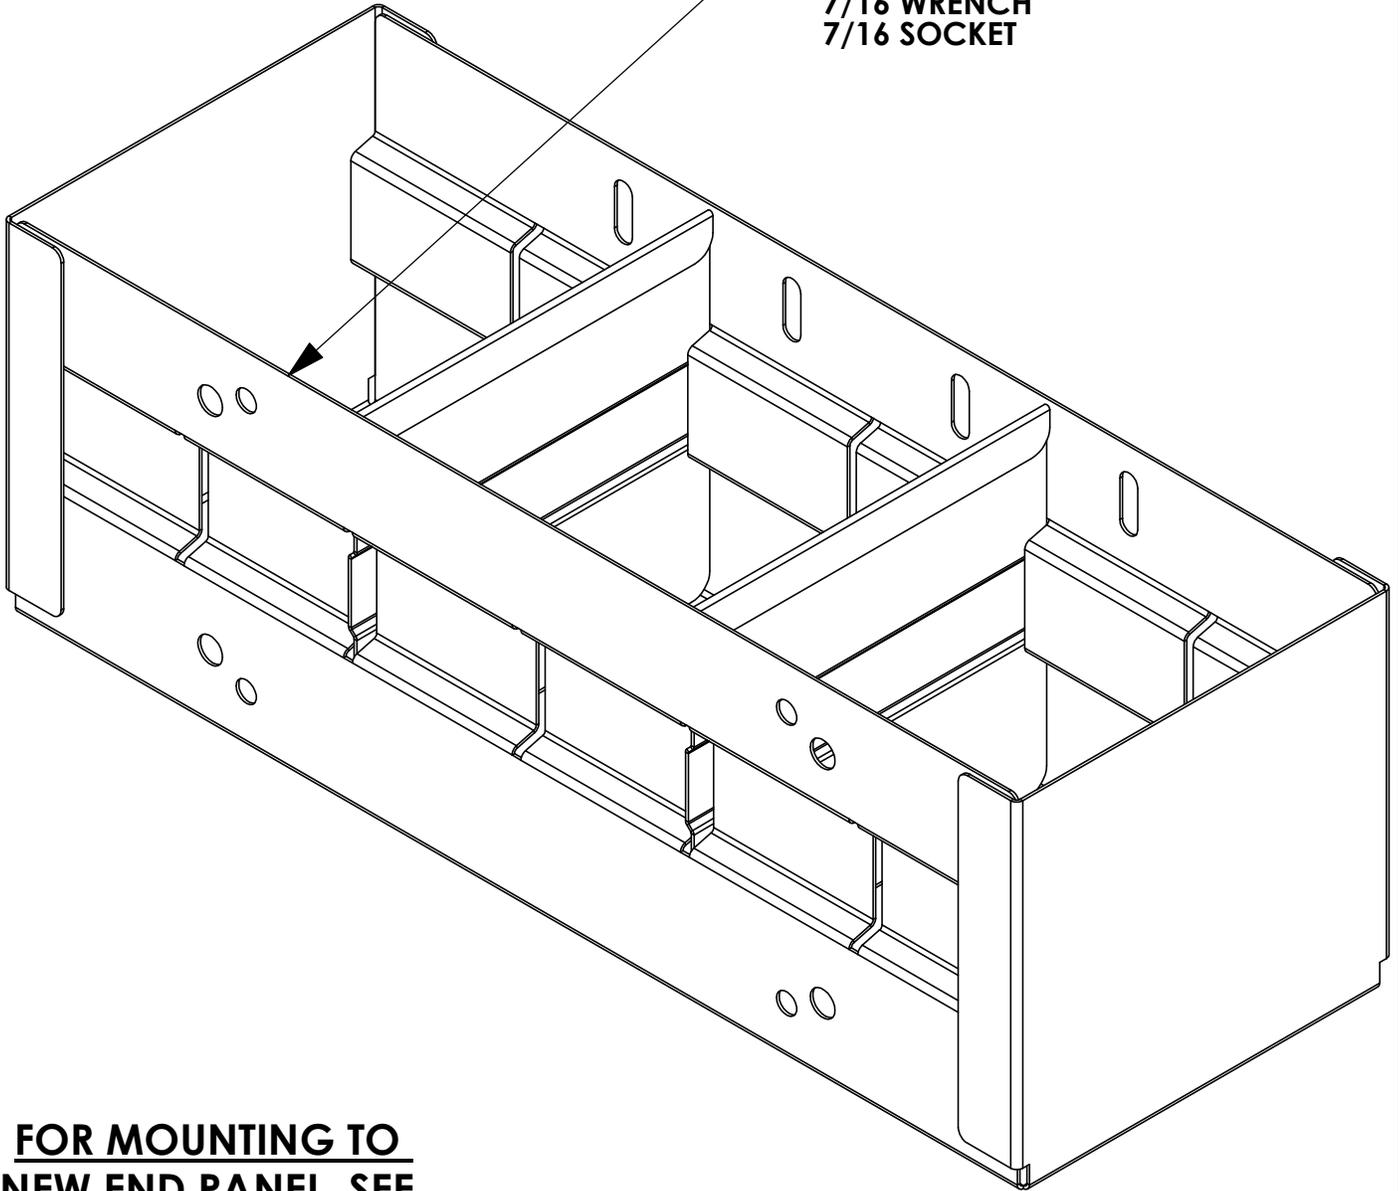


**FOR MOUNTING TO**  
**NEW END PANEL, SEE**  
**NEXT PAGE!**

**NOTE: DRILL SIZE 5/32 FOR MOUNTING HOLES**

# STEP 1: MOUNTING TO NEW END PANEL

**STEP 1: ALIGN 66206 TO DESIRED LOCATION, MARK SQUARE CUTOUTS WHERE LARGER OUTSIDE HOLES ARE PLACED AND INSERT FAS0915 (QTY: 4) IN PROPPER LOCATIONS.**

**STEP 2: ONCE ALL SNAP NUTS ARE IN PLACE, RE-ALIGN 66206 AND FASTEN USING FAS0438 (QTY: 4) AND 1/2" SOCKET OR WRENCH.**

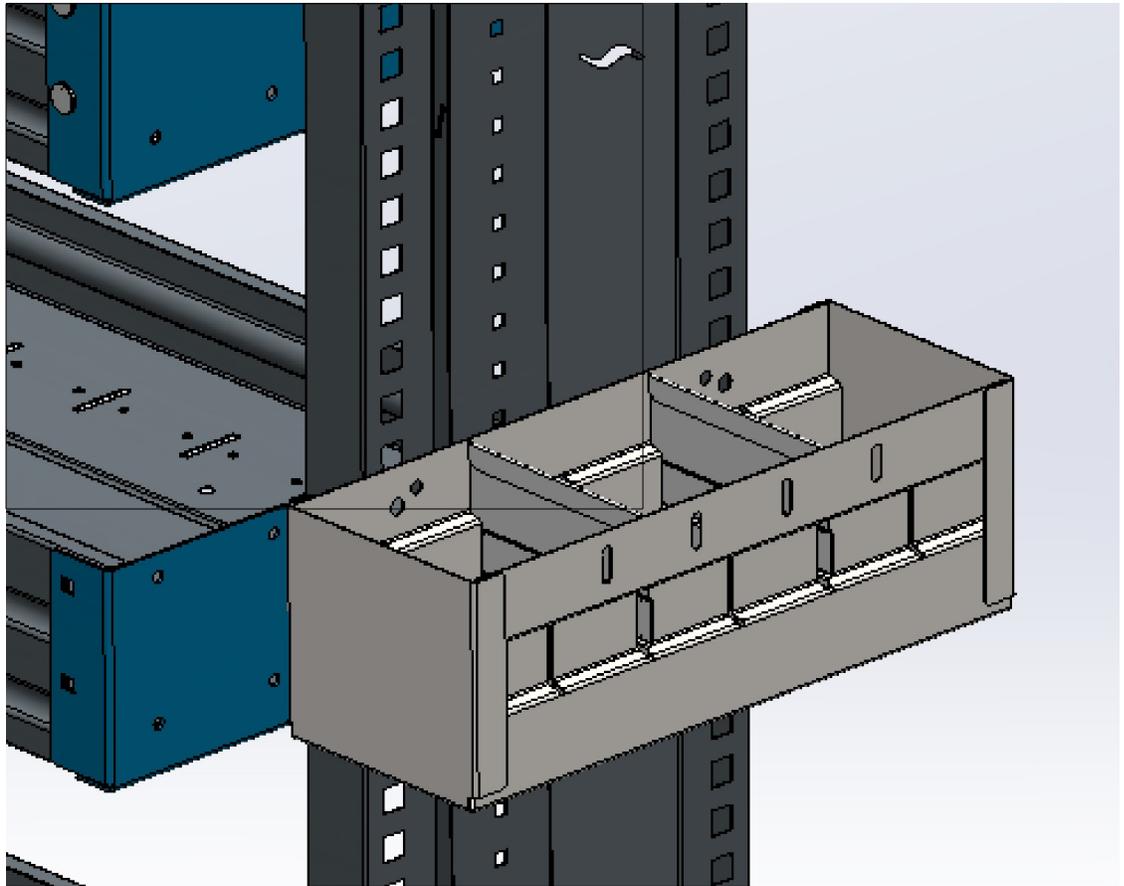

**STEP 3: FULLY TIGHTEN ALL FASTENERS**

**INSTALLATION IS COMPLETE!**