

## Introduction / Comments:

Install Instructions For Exterior Plug & Play Lights For F250+

### **Note:**

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638)** before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.



## Installation Instructions For Exterior Plug And Play Lights For F250+

## Table of Contents:

Torque requirements.....	2
Introduction Statement.....	3
Overall Harness Diagram.....	3
Tools needed.....	3
Harnesses/Components Needed (If Applicable).....	4
Component Placements.....	5
Overall Harness Routing.....	6-7
Beginning Install.....	8
Strobe Installation Instructions.....	10
Beacon/Lightbar Installation Instructions.....	14

**\*\*\*TORQUE\*\*\***  
**Torque all strobe**  
**fasteners to 10 in-lbs.**  
**DO NOT OVER TIGHTEN**  
  
**DO NOT MOUNT ON A**  
**CURVED SURFACE**

**\*\*Please read statement below before moving forward\*\***


**Before installation, disconnect the OEM negative battery cable.**

These plug and play kits are completely modular and can be configured in many different ways. Placement of lights will be determined by sales order drawings/customer ask. Therefore, these instructions are for the most standard configurations, and for reference only.

Please reference the order drawing and spec sheet to see what components are going to be installed on this particular upfit.

**These installation instructions are for most cases and for reference. Not all installs will have strobes, beacons, and lightbars. Reference the instructions for only what you are installing.**

## Overall Harness Diagram

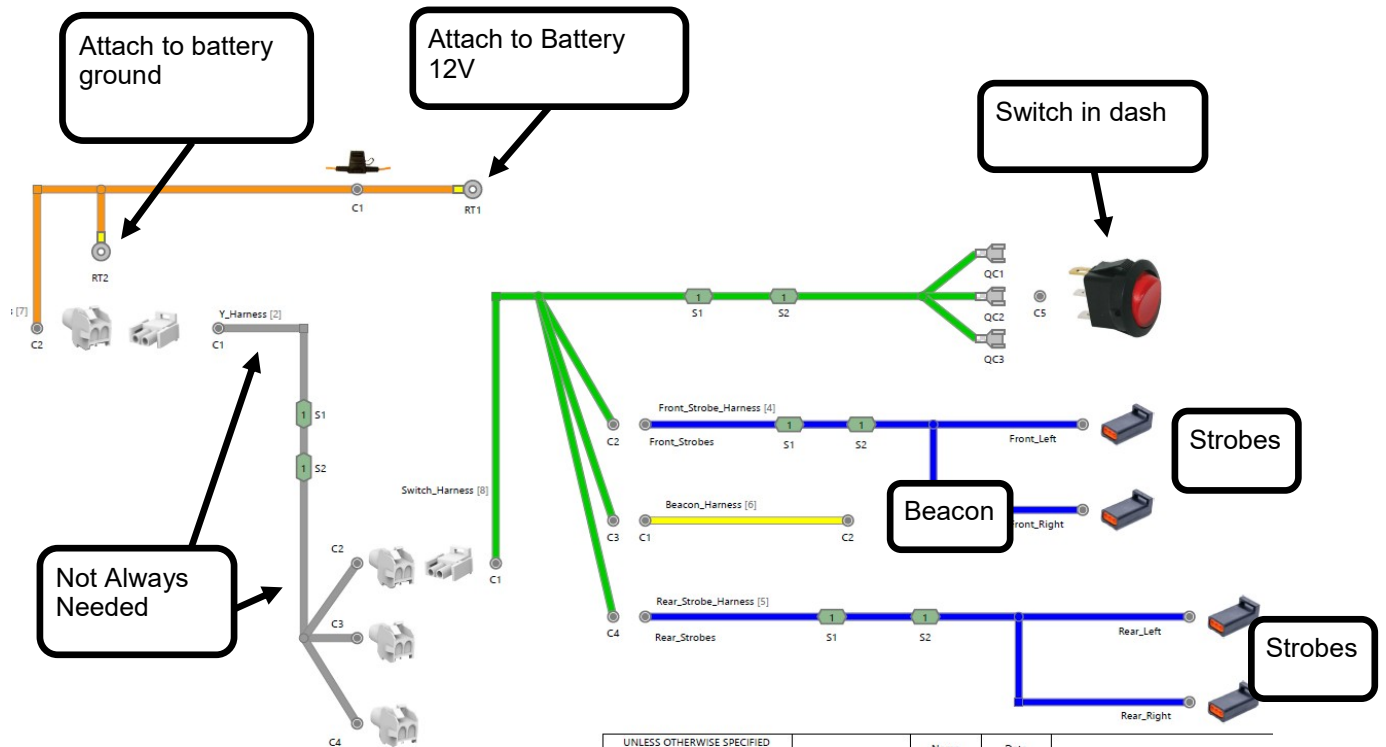


## Tools required:

13 socket and 20 torx bit


Phillips bit and 5/16" step drill bit

Power drill and impact

Torque wrench

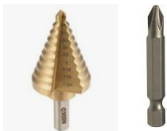

## Components

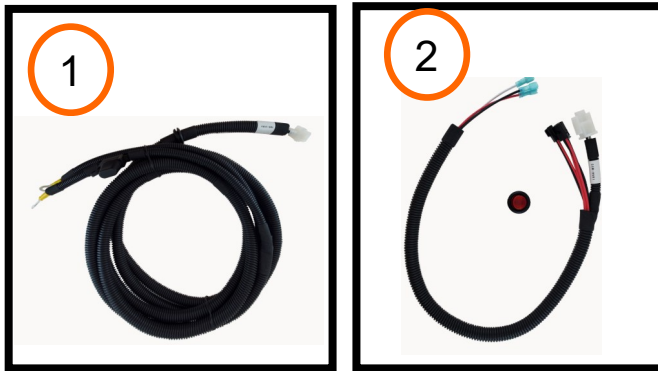

	Part Number	Description
1	67095	Power Harness #4
2	67097	Switch Harness #1
3	67104	Front Strobe Harness #4 (If Applicable)
4	67108	Rear Strobe Harness #3 (If Applicable)
5	67113	Beacon/Lightbar Harness #3 (If Applicable)
6	67686 or 67687	Strobes (If Applicable)
7	67689 or 67690	Beacons (If Applicable)
8	52769 or 56075	Beacon/Lightbar Mount (If Applicable)
9	67691 or 67692 or 96118 or 67693	Lightbars (If Applicable)



The purpose of plug and play lighting is to be completely modular. Due to this feature, refer to the order drawing for all exact lighting placements. These installation instructions are for most cases and for reference. Not all installs will have strobes, beacons, and lightbars. Reference the instructions for only what you are installing.

Harness pictures are for reference only.

## Placements

Switch placement: Dash panel  
under headlight buttons




Front Strobes: Grill  
1.25 In. from top



**\*\*\*TORQUE STROBES TO 10-IN-LB'S  
MAXIMUM\*\*\***



Beacon or Lightbar: On CHMSL  
above 3rd brake light—on some  
sort of mount

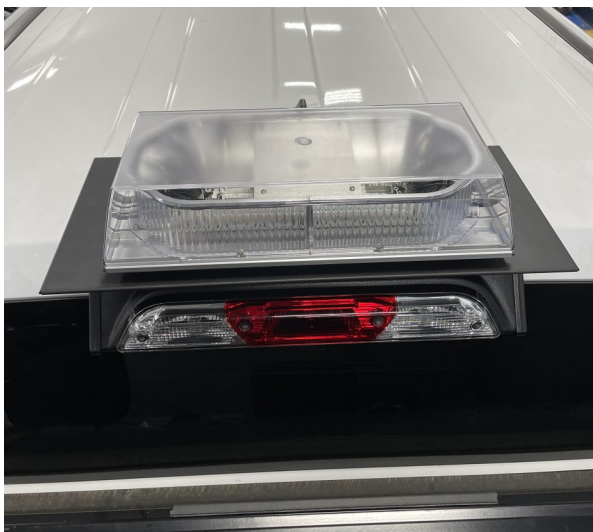

Rear Strobes: Rear Bumper  
5.5 In. from the sensor




## Routing Overview

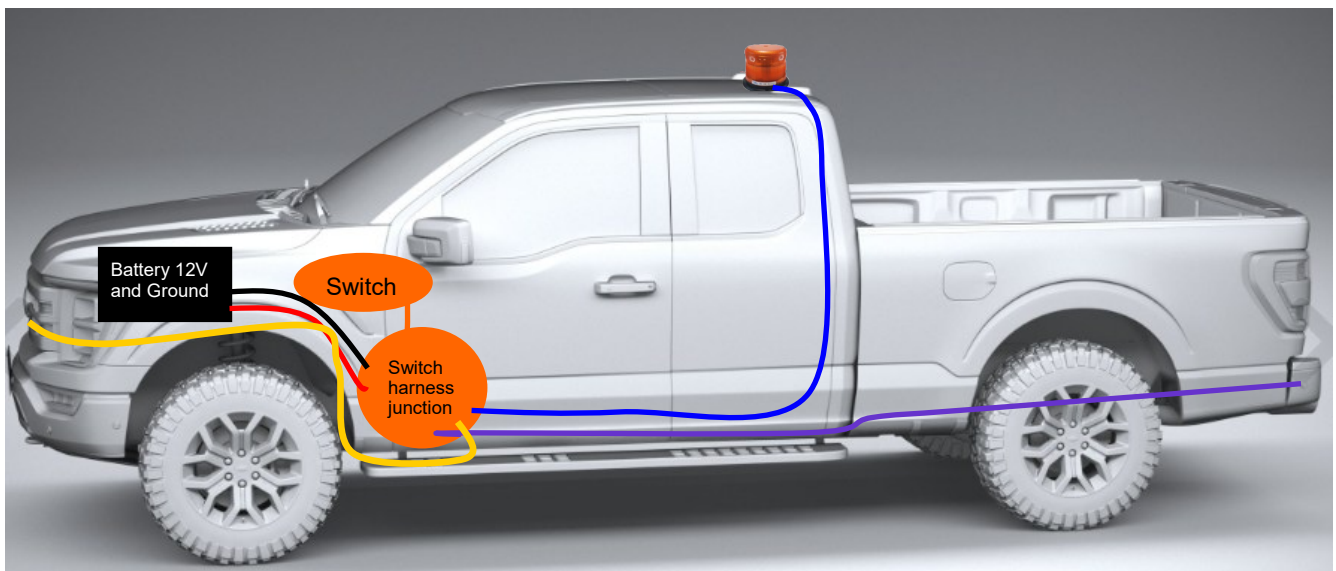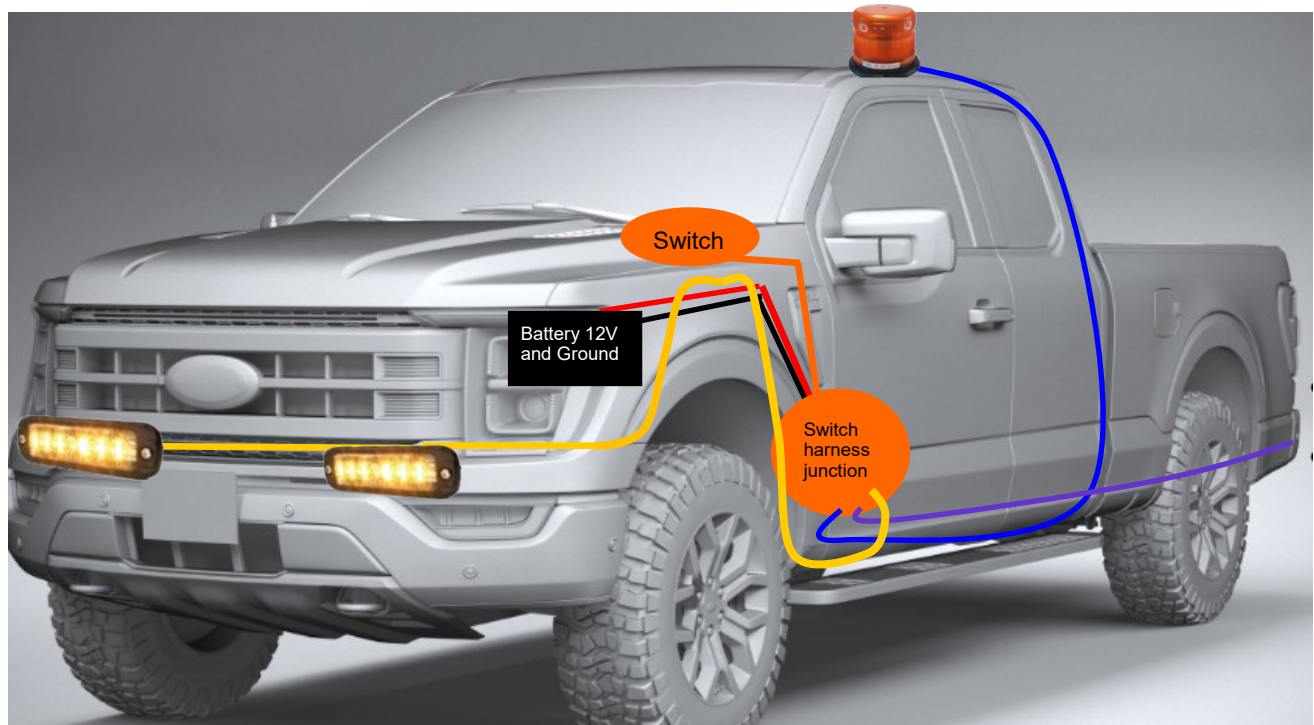

Color	Key - Items
Yellow	Strobes - Front strobe harness #4
Red/Black	Power harness: Battery to kick panel
Orange	Switch harness: Switch in dash
Blue	Beacon harness: Switch to beacon
Purple	Strobes - Rear strobe harness #3



## Overview of Routing-Beacon/Lightbar Wire Harness:

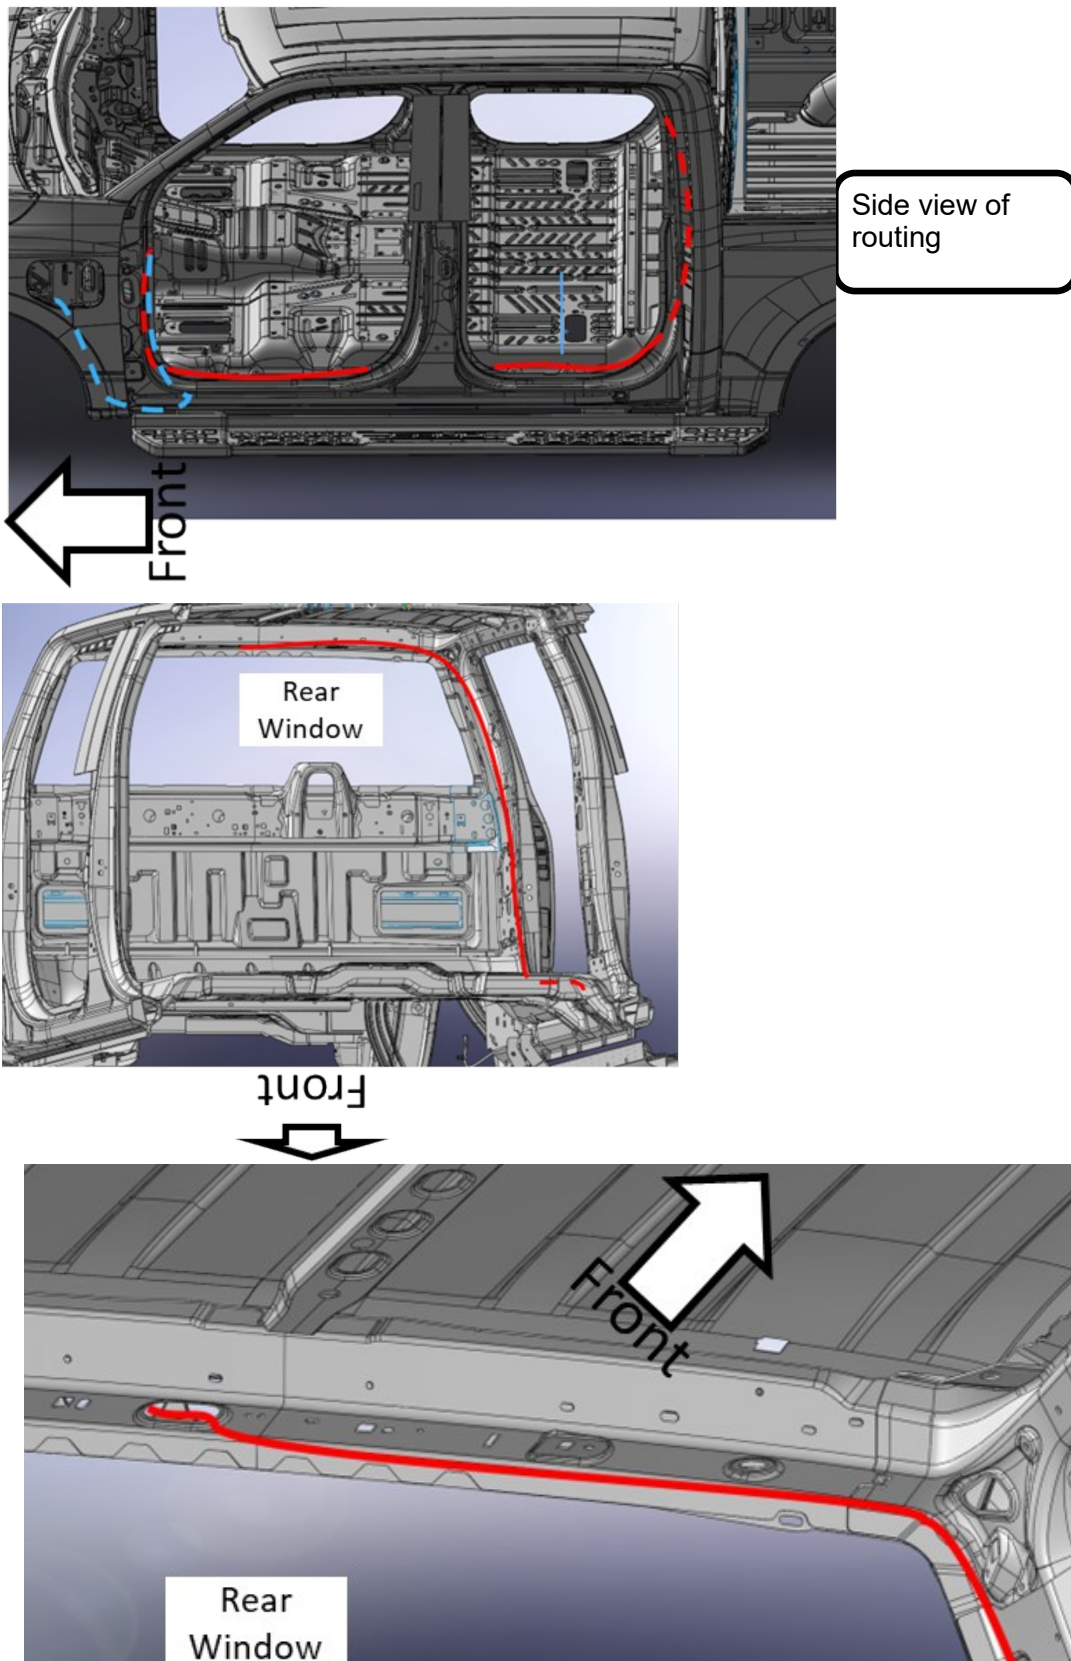

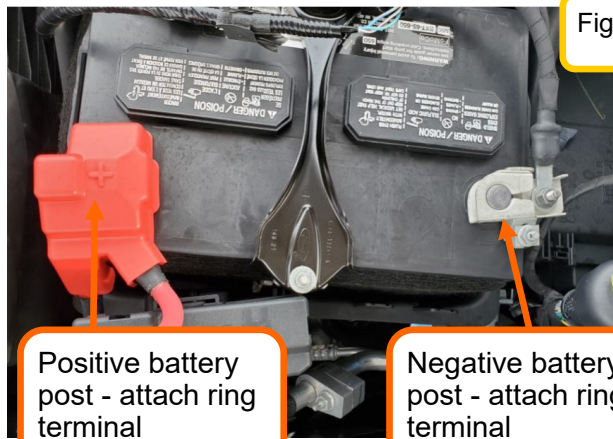


Figure 8.1

**Step 1:** Locate the power harness #67095.

Remove the fuse from the inline fuse holder until the end of the install

Locate the OEM battery under the hood.

**Step 2:**

Attach the red wire with the ring terminal to the battery positive post.

Attach the black wire with the ring terminal to the battery negative post.

Figure 8.1.



Figure 8.2

Route the white connector end along the underside of the cab filter (see figure 8.2 red dotted line) to the firewall. (You can tuck the wiring under the filter and hide it. Figure 8.3.)

**Step3:**

Locate the firewall grommet from underneath the kick panel inside the cab on the driver's side.

Figure 8.4.

Drill a hole (to fit the grommet on the power harness) to the right of BOTH OEM grommets, like shown in figure 8.5.

**\*\*BE SURE TO CHECK THAT THE OPPOSING SIDE OF THE FIREWALL IS CLEAR BEFORE DRILLING.\*\***

Route the white connector end through the firewall and insert the grommet on the sheet metal.



Figure 8.3

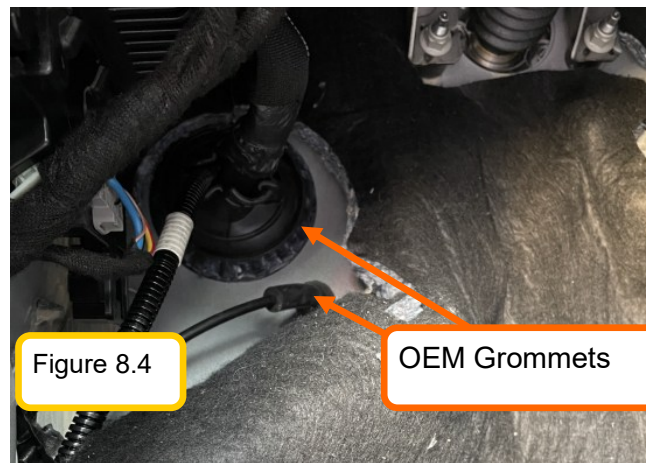


Figure 8.4

OEM Grommets



Figure 8.5

ASCO Harness/Grommet

Power harness

Switch Harness



Figure 9.1


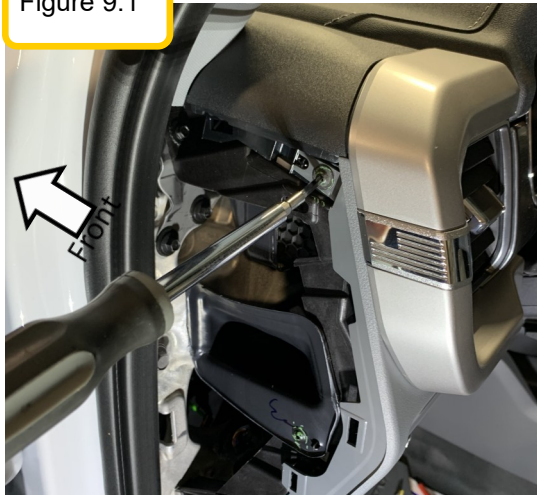


Figure 9.2



Behind the headlight trim panel

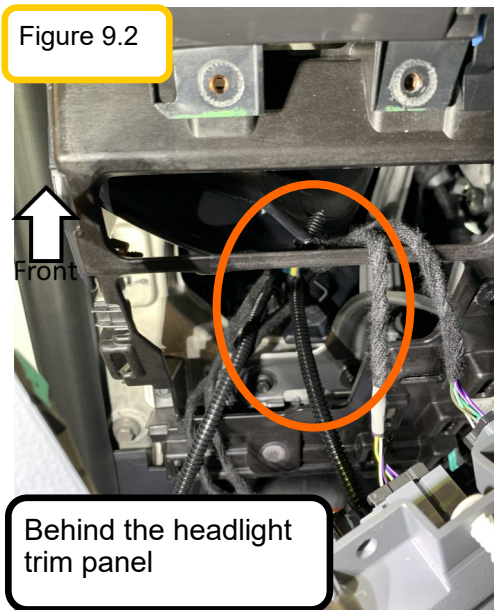

#### Step 4: Locate the switch harness #67097

Connect the switch harness connector to the power harness in the kick panel area.

Disassemble the IP trim to gain access behind the dash. Figure 9.1.

Route the switch end of the switch harness up the dash and through the opening in the IP. Figure 9.2.

Secure to the OEM harnesses behind the IP.

#### Step 5: Drill a hole for the switch, in the trim panel like shown below.

The hole will be centered in the unused square box above the Emergency brake button. If this spot is un-attainable, move the switch to the right, where it can be located. Be sure the back side of the trim panel is open before drilling the hole. Figure 9.3.

Route the harnesses through the hole

#### Step 6: Connect the ground spade to the gold pin on the rocker switch

Connect the white battery power spade to the opposite terminal on the switch.


Connect the red spade to the middle pin

Insert the switch into the hole and place the strobe/beacon decal (if supplied) around the switch. Reassemble all trim and secure wiring.

Figure 9.3

Switch location preferred.

If not attainable, move to the right.

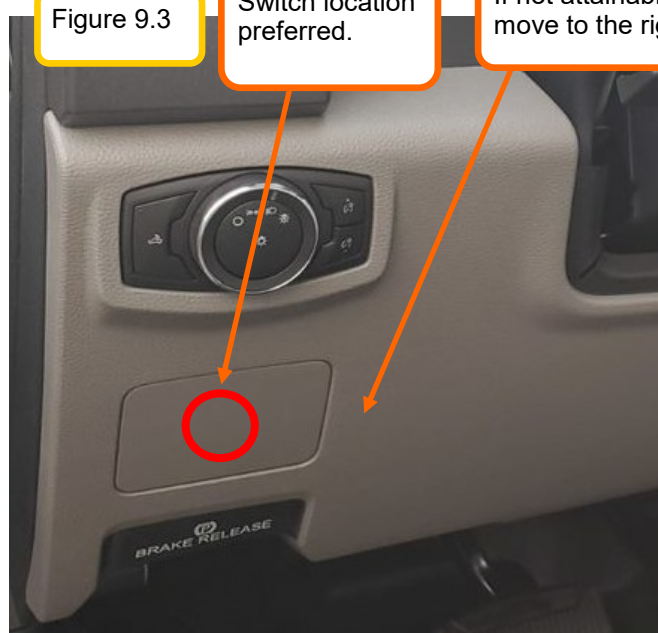

## Strobe Install—If Applicable

Strobe pictures are for reference only. Please refer to product structure/spec sheets for the actual strobes for the install.

Figure 10.1



### Step 1:

Locate the rear strobe harness #67108.

Connect the rear strobe harness to the switch harness (one of the remaining unused connectors) in the driver's foot well. Figure 10.1.

### Step 2:

Locate the driver's side door sill area. Figure 10.2.

Use a trim tool to remove the trim panels in the driver's step well and dash/kick panel.



Locate the OEM grommets under the carpet. There will be one right next to the foot sill area and one to the right closer to the driver's seat.

The front strobes will use the one closest to the foot sill and the rear strobes will use the grommet closest to the driver's seat. Figure 10.3 and 10.4.

Cut an "X" in the grommet. Route the rear strobe harness through the grommet (by the seat) to the underneath of the vehicle.


Silicone the grommet when done.

Figure 10.2

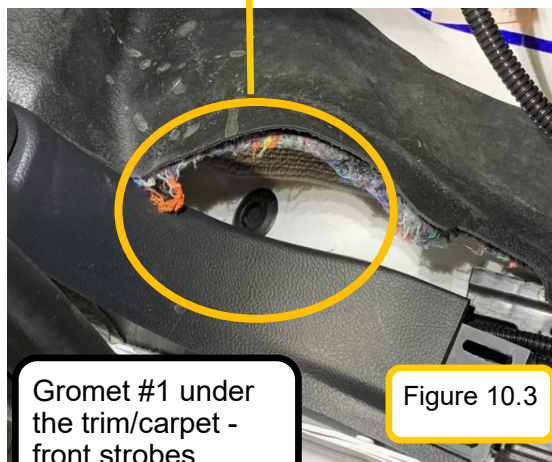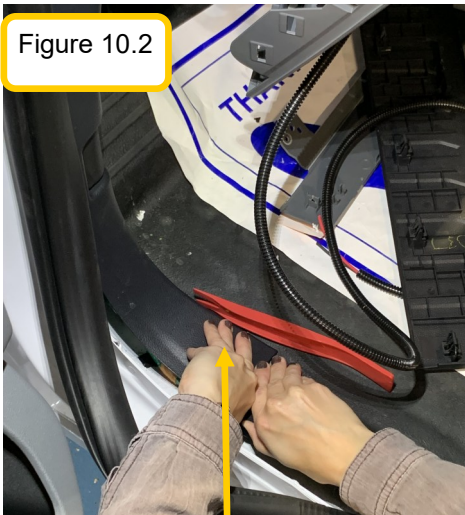

Grommet #1 under the trim/carpet - front strobes


Figure 10.3

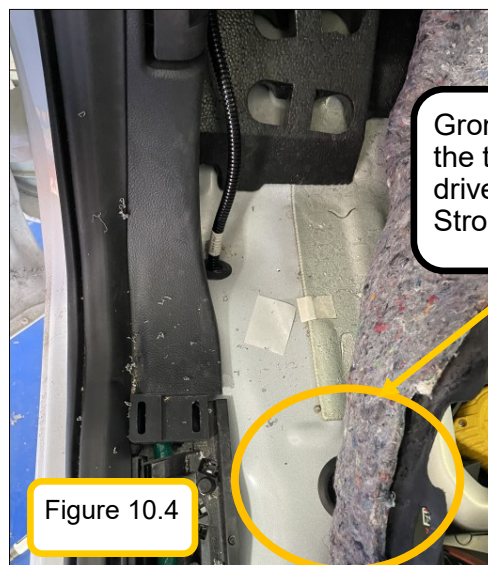

Grommet #2 under the trim/carpet - drivers seat (rear Strobes)

Figure 10.4

Figure 11.1

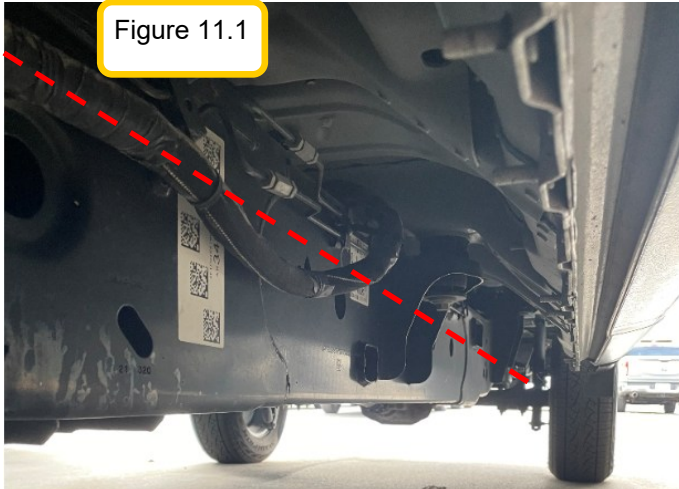

**Step 3: Routing (Refer to routing diagrams at the beginning of the instructions)**

Route the strobe harness rearward following the frame (red dotted line). Secure with zip ties to the OEM harness. Figure 11.1 and 11.2.

**Step 4: Mounting Strobes**

Find the left most reverse sensor.

Place the strobes in line with the sensor horizontally (about 1" down from the bumper crease) and 1" over from the sensor. Figure 11.3.

If truck does not have the sensor, measure from the left most edge of the bumper.

Use the strobe as a template, mark the center hole location on the bumper (for routing the wires through).


Drill a 3/8" hole for the wire pass through of the strobe. Use primer on the hole to prevent rusting. Figure 11.3.

Connect the strobe light to the harness and silicone the hole.

Figure 11.2



Figure 11.3

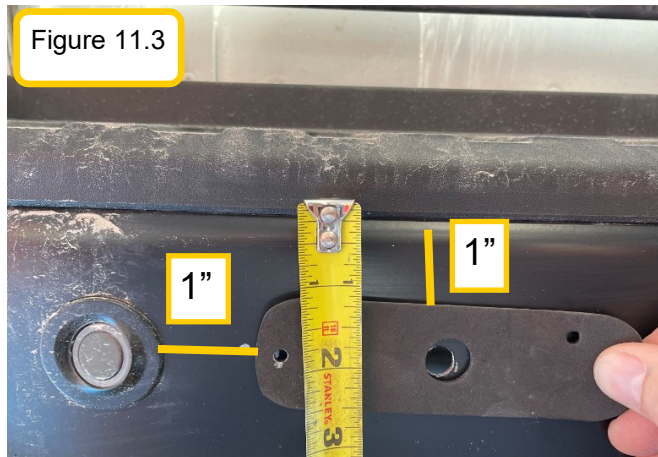

Place the strobes in their desired locations and fasten them onto the bumper with the **ASCO SUPPLIED SCREW AND NUT: FAS0501 and FAS0503 (for rear bumper only—front will use Ecco supplied screws)**

Figure 11.4 is a F150 for reference only. Repeat the F250 as close as possible to this reference.

**\*\*\*TORQUE STROBES TO 10-IN-LB'S MAXIMUM\*\*\***

Repeat for the right side strobe.

Figure 11.4



Figure 12.1



Measure 1" left of here and place along dashed line (the contour).

## Step 7: Mounting Front Strobes


Locate the left front headlight area.

Measure 1" left of the edge of the bumper. Place the right edge of the strobe on the 1" mark and in line the bumper contour. Figure 12.1.

Use the strobe as a template, mark the center hole location on the panel (for routing the wires through).

Drill a 3/8" hole for the wire pass through on the strobe. Figure 12.2.

Figure 12.2

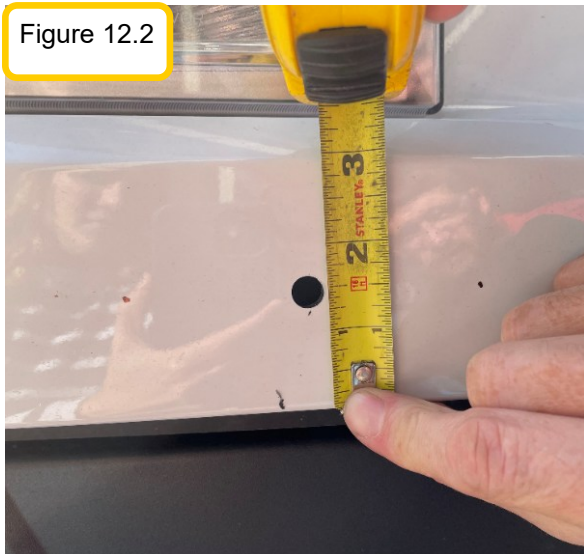

Place the strobes in their desired locations and fasten them onto the grill with the supplied screws. Figure 12.3.

**\*\*\*TORQUE STROBES TO 10-IN-LB'S MAXIMUM\*\*\***


Repeat for the other side strobe.

Note that if the truck comes with running lights, place the strobes below them. Figure 12.4 for reference.

Figure 12.3



Figure 12.4

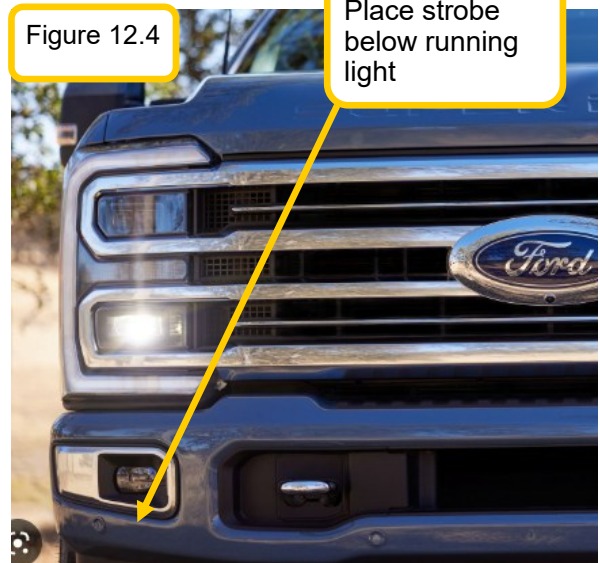

Place strobe below running light

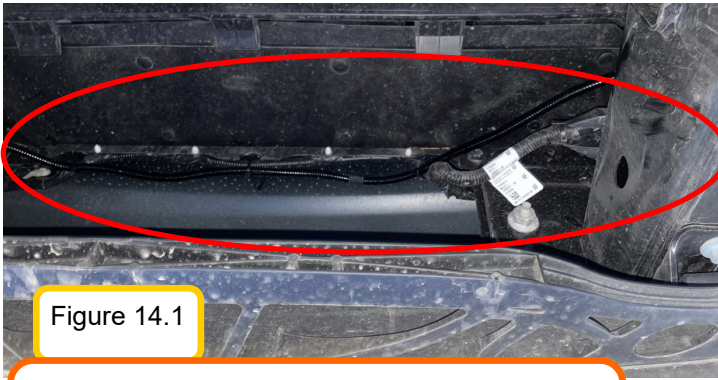


Figure 14.1

Point of view in pictures: Laying under the front bumper looking up toward the backside of the bumper

**Step 5:** Locate the front strobe harness #67104.

Start by placing the harness strobe ends at each strobe location, beneath the vehicle.

Connect the passenger side strobe to the harness. Then follow the OEM harness that runs beneath the grill over the driver's side. Zip tie the harness to the OEM harness. See figure 14.1 for routing.

**Note:** You can best see the OEM harness and routing by laying under the vehicle front the front end.

Be sure not to secure or route the harness anywhere near moving or hot objects.

Connect the second connector to the driver's side strobe.

**Step 6:**

Start by routing the inside connector end of the harness to the firewall. Figure 14.2.

Locate the grommet by the driver's foot sill in the cab area (found previously on page 11)

Route the harness down to the underneath of the vehicle, following the OEM harnesses.

Cut and X in the grommet and route the connector through. Figure 14.3.

Connect the front strobe harness to the switch harness (one of the remaining unused connectors) in the driver's foot well. Figure 14.4.

Secure wiring with zip ties. Silicone the grommet. Figure 14.5.



Figure 14.2

End to route through the OEM grommet—front strobe harness

Grommet: Cab view  
Also, strobe harness connected to switch

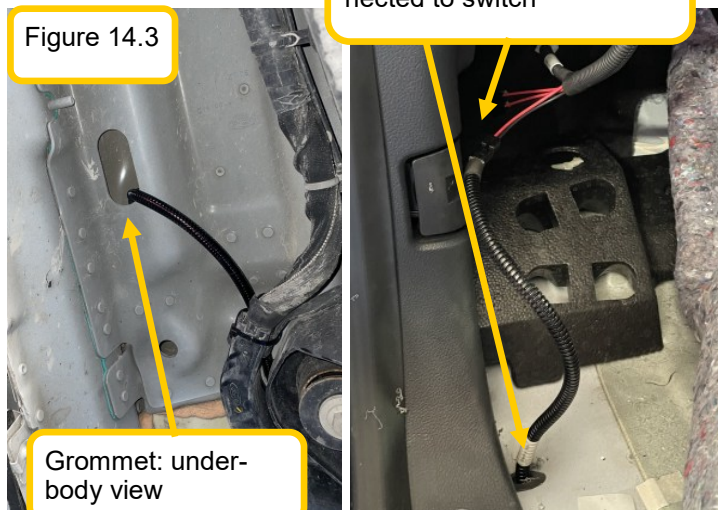


Figure 14.3

Grommet: under-body view

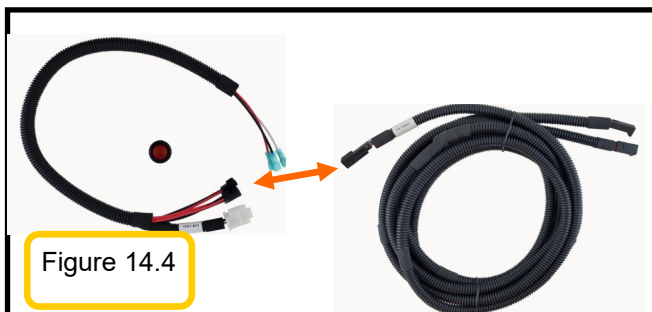


Figure 14.4


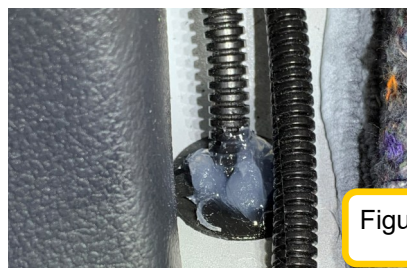


Figure 14.5

## Beacon/Lightbar Install—If Applicable

Lightbar/ beacon/ and mount pictures are for reference only. Please refer to product structure/ spec sheets for the actual beacon/lightbar/mount for the install.

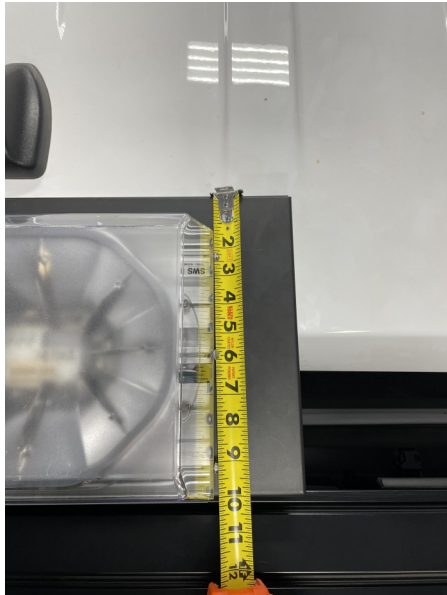


**Step 1: On a table/bench: Assemble the light**  
Assemble the lightbar or beacon to the mount, using the supplied fasteners and rubber spacers with the lightbar.

If installing a Whelen lightbar, use the provided screws (FAS0869), washers (FAS0871), and nuts (FAS0501) in the ASCO kit. They are not provided with the light.  
All other lights will have their own hardware.

**Note: Lightbar (SWS Apollo ) in pictures is for reference only.**

Center the lightbar or beacon onto the mount, side to side, then slide the lightbar to the rear of the mount until it is flush. See pictures for reference.

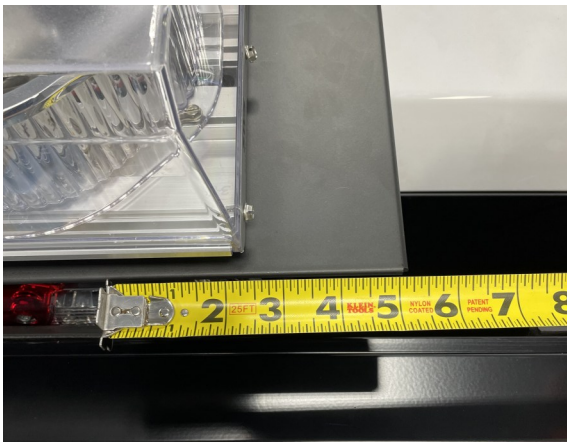

Use the lightbar/beacon as template, mark the needed holes for mounting. Drill the needed holes for mounting.

Drill the hole for the wiring pass through and insert the provided grommet (if applicable).

Silicone the grommet/pass thru wiring.

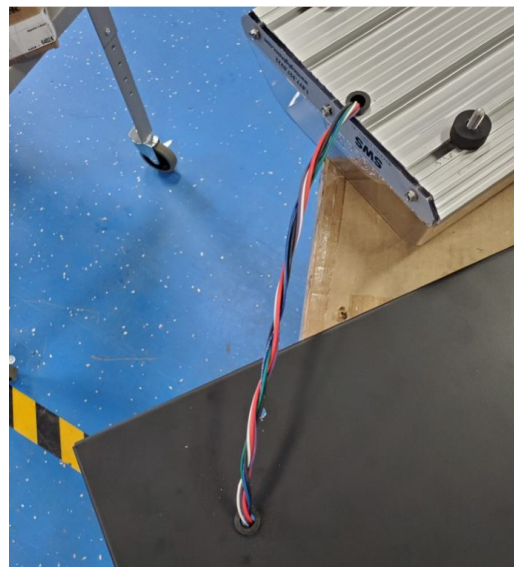
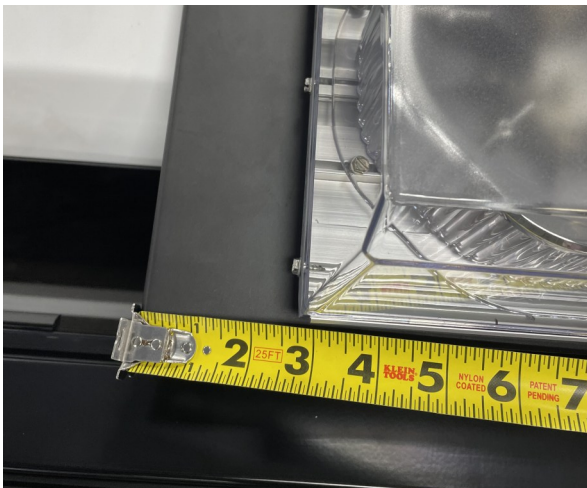




Figure 15.1



Figure 15.2

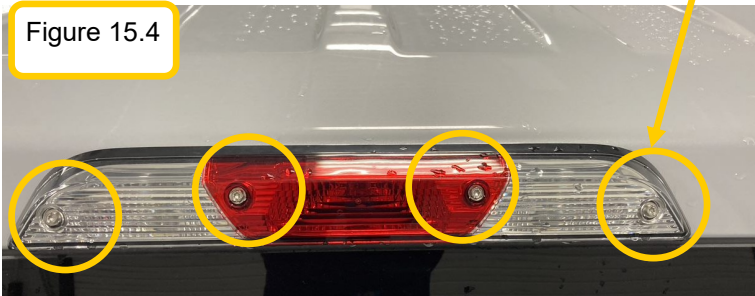


Figure 15.4



Figure 15.5

Pictures to the left are for beacon/lightbar mounting references.  
Figure 15.1, 15.2, and 15.3



Figure 15.3

### Step 2: Disconnect OEM Light

Using a torx T20 bit, remove the 4 screws holding the 3rd brake light to the CHMSL. Figure 15.4.


Remove the OEM light from the CHMSL and disconnect the OEM harness clip. Figure 15.5.

### Step3:

Locate the beacon/lightbar harness (67113).

Remove the cable gland off the beacon/lightbar harness. This will not be needed to the CHMSL mounted light install.

Connect the harness to the switch harness (one of the remaining unused connectors) in the driver's foot well. Figure 15.6.

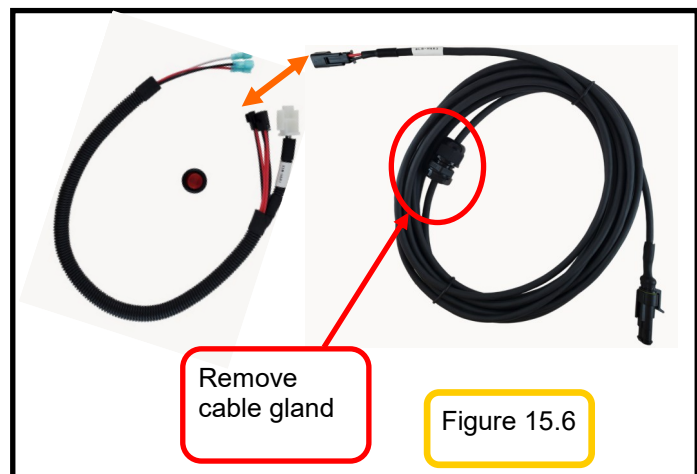

Remove cable gland

Figure 15.6

## Beacon/Lightbar Install—If Applicable

### Step 4: Routing (Refer to routing diagrams at the beginning of the instructions)

Route the beacon harness following the OEM harness rearward along the foot sill and then up the rear C pillar. Figure 16.1 and 16.2.

**\*\*BE SURE TO AVOID ALL SEAT BELT RETENTIONERS\*\***

**Step 5:** Feed the fish tape through the CHMSL opening towards the driver's side C pillar. Tape the harness to the fish tape and pull through the CHMSL opening. Figure 16.3.

Make sure harness is tucked head liner and C pillar trim. Figure 16.4.

See pictures for routing references. Secure all wiring with cable ties and trim panels.



Figure 16.1



Figure 16.2

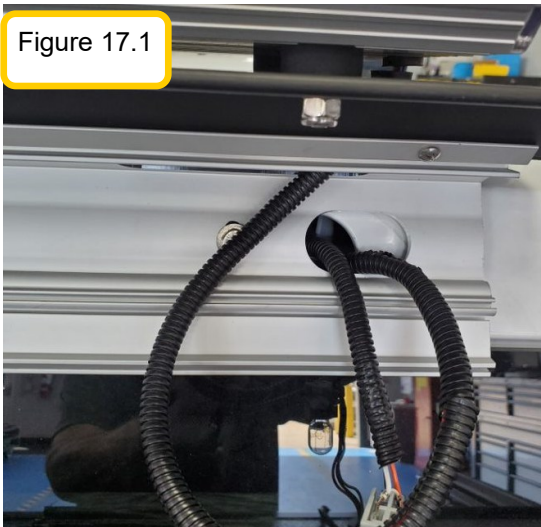


Figure 16.3



Figure 16.4

Figure 17.1



### Step 5: Mounting the light:

Using the mount manufacturer supplied instructions, attach the mount to the vehicle body.

Pull the lightbar harness through the mount opening like seen in the picture to the left—before re-installing the OEM light and black trim plastic piece. Figure 17.1, 17.2, and 17.3.

Connect the beacon/lightbar harness with the beacon/lightbar.

Figure 17.2



Tape up all non-needed wires from the lightbar/beacon.

Assemble the rest of the needed lightbar/beacon mount pieces.

Re-connect all the OEM light wiring and attach the light back to the Acari mount/vehicle. Figure 17.4.

Figure 17.3



Figure 17.4





**Insert the fuse into the inline-fuse holder on the power harness. The install is now complete. Secure all wiring with zip ties. Re-attach all trim. Re-assure all pass through holes have been silicone. Double check the functionality of the lights and switches.**

**ITEM DESCRIPTION: WIRE TIE, NYLON 40Lb, 8.5" BLACK**

MANUFACTURER: WAYTEK, INC. or equivalent  
 MANUFACTURERS PART NUMBER: 21093M or 21093C

SPECIFICATIONS: STANDARD CABLE TIE  
 BLACK, NYLON  
 8-1/2" LONG  
 TENSILE STRENGTH: 40.0 LBS  
 21093M = 1,000 quantity  
 21093C = 100 quantity

SPECIAL NOTES: PART NUMBER IS BLACK.

**SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!**

**PURCHASED PRODUCT DATA SHEET (PPDS)**

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



**ADRIAN STEEL**  
 VAN AND PICKUP EQUIPMENT

906 JAMES STREET  
 ADRIAN, MI 49221  
 517-265-6194  
 WWW.ADRIANSTEEL.COM



**CAUTION**  
 WHEN INSTALLING EQUIPMENT IN OR ON  
 VEHICLES CHECK FOR FUEL TANKS, FUEL  
 LINES, CONTROL LINES AND ELECTRICAL  
 WIRING BEFORE DRILLING! ALWAYS USE  
 DRILL BITS WITH INTEGRAL STOPS  
 WHENEVER POSSIBLE!

DRAWN BY  
 MDG

DATE DRAWN  
 10/26/2006

ECN NUMBER  
 18021

ECN DATE  
 11/13/2015

PART WEIGHT  
 0.01 LBS.

REV. LEVEL  
 D

PART NUMBER  
**13905-0**

PART NUMBER

**26618-0****ITEM DESCRIPTION: SILICONE, 1oz. TUBE**

SPECIFICATIONS: SU5005 RTV SILICONE  
1oz. TUBE  
CLEAR OR EQUIVILENT  
SELF PIERCING CAP

SPECIAL NOTES:

**SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!**

**PURCHASED PRODUCT DATA SHEET (PPDS)**

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



**ADRIAN STEEL**  
VAN AND PICKUP EQUIPMENT

**906 JAMES STREET**  
**ADRIAN, MI 49221**  
**517-265-6194**  
**WWW.ADRIANSTEEL.COM**



**WHEN INSTALLING EQUIPMENT IN OR ON  
VEHICLES CHECK FOR FUEL TANKS, FUEL  
LINES, CONTROL LINES AND ELECTRICAL  
WIRING BEFORE DRILLING! ALWAYS USE  
DRILL BITS WITH INTEGRAL STOPS  
WHENEVER POSSIBLE!**

DRAWN BY  
JLC

DATE DRAWN  
7/21/2001

ECN NUMBER  
16551

ECN DATE  
7/22/2014

PART WEIGHT  
0.02 LBS.

REV. LEVEL  
C

PART NUMBER  
**26618-0**

PART NUMBER

**26618-0****ITEM DESCRIPTION: SILICONE, 1oz. TUBE**

SPECIFICATIONS: SU5005 RTV SILICONE  
1oz. TUBE  
CLEAR OR EQUIVILENT  
SELF PIERCING CAP

SPECIAL NOTES:

**SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!**

**PURCHASED PRODUCT DATA SHEET (PPDS)**

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



**ADRIAN STEEL**  
VAN AND PICKUP EQUIPMENT

**906 JAMES STREET**  
**ADRIAN, MI 49221**  
**517-265-6194**  
**WWW.ADRIANSTEEL.COM**



**WHEN INSTALLING EQUIPMENT IN OR ON  
VEHICLES CHECK FOR FUEL TANKS, FUEL  
LINES, CONTROL LINES AND ELECTRICAL  
WIRING BEFORE DRILLING! ALWAYS USE  
DRILL BITS WITH INTEGRAL STOPS  
WHENEVER POSSIBLE!**

DRAWN BY  
JLC

DATE DRAWN  
7/21/2001

ECN NUMBER  
16551

ECN DATE  
7/22/2014

PART WEIGHT  
0.02 LBS.

REV. LEVEL  
C

PART NUMBER  
**26618-0**

PART NUMBER

**36096-0****ITEM DESCRIPTION: GROMMET,RUBBER,1" ID**

MANUFACTURER: CTW (or equiv.)  
MANUFACTURERS PART NUMBER: G2930

SPECIFICATIONS: 1" I.D.  
1-1/4" PANEL HOLE DIA.  
3/16" MAX PANEL THICKNESS  
1-1/2" O.D.  
7/16" THICKNESS

SPECIAL NOTES: NONE

**SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!****PURCHASED PRODUCT DATA SHEET (PPDS)**

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



**ADRIAN STEEL**  
VAN AND PICKUP EQUIPMENT

906 JAMES STREET  
ADRIAN, MI 49221  
517-265-6194  
WWW.ADRIANSTEEL.COM

**CAUTION**

WHEN INSTALLING EQUIPMENT IN OR ON  
VEHICLES CHECK FOR FUEL TANKS, FUEL  
LINES, CONTROL LINES AND ELECTRICAL  
WIRING BEFORE DRILLING! ALWAYS USE  
DRILL BITS WITH INTEGRAL STOPS  
WHENEVER POSSIBLE!

DRAWN BY  
HJE

DATE DRAWN  
04/01/2008

ECN NUMBER  
19252

ECN DATE  
01/31/2017

PART WEIGHT  
0.01 LBS.

REV. LEVEL  
D

PART NUMBER  
**36096-0**

**ITEM DESCRIPTION: NO DRILL PLATFORM, FORD FSPU, LOW PROFILE**

MANUFACTURER: ACARI

MANUFACTURERS PART NUMBER: RTM-101-LP-FORD

SPECIFICATIONS: 22" Low Profile no drill mount for beacons and lightbars

SPECIAL NOTES: 2015+ Ford F-150 and 2017+ Ford F250/350 Pickups only.

**SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!****PURCHASED PRODUCT DATA SHEET (PPDS)**

Page 1 of 1

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.

**ADRIAN STEEL**Cargo Management Solutions for Commercial Vehicles

906 JAMES STREET  
ADRIAN, MI 49221  
517-265-6194

WWW.ADRIANSTEEL.COM

**CAUTION**

WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY  
RBB

DATE DRAWN  
10/04/2016

ECN NUMBER  
19221

ECN DATE  
01/27/2017


PART WEIGHT  
3.00 LBS.

REV. LEVEL  
C

PART NUMBER

**52769**

## ITEM DESCRIPTION: STROBE SWITCH DECAL SET

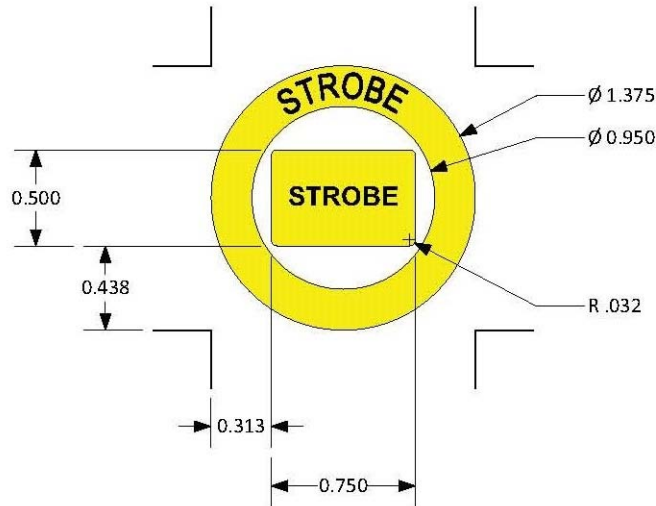

MANUFACTURER: VANNER

MANUFACTURERS PART NUMBER: TBD

SPECIFICATIONS: (1) Circular Yellow Decal (ID=0.950", OD=1.375") with "STROBE" in black letters  
 (1) Rectangular Yellow Decal (H=0.500", L=0.750") with "STROBE" in black letters

SPECIAL NOTES: For round rocker switch (OD=0.780") and Ford Transit Upfitter Switches.

**SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!****PURCHASED PRODUCT DATA SHEET (PPDS)**

Page 1 of 1

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.

**ADRIAN STEEL**

Cargo Management Solutions for Commercial Vehicles

906 JAMES STREET  
 ADRIAN, MI 49221  
 517-265-6194

WWW.ADRIANSTEEL.COM

**CAUTION**

WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY  
 RJB

DATE DRAWN  
 11/15/2017

ECN NUMBER  
 XXXX

ECN DATE  
 XXXXXX


PART WEIGHT  
 0.02 LBS.

REV. LEVEL  
 A

PART NUMBER  
**55073**

REVISIONS			
REV	DESCRIPTION	DATE	RE/ECO

- NOTES:
1. MATERIAL : .002 YELLOW POLYESTER
  2. ARTWORK FROM D91XXXX-A PAGE 1, PMS BLACK
  3. .001 OVERLAMINATE
  4. ADHESIVE BACKED

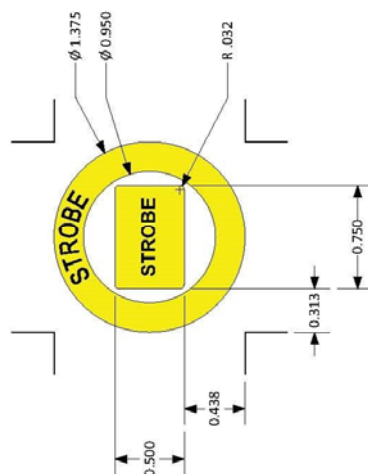

<b>VANNER</b> INCORPORATED HILLIARD, OHIO USA		TOL. .x ± .025		TITLE: LABEL, STROBE TXT, .95ID ROUND SWITCH	SHEET 1 OF 1	REV A
		TOL. CABLES .xx ± .015				
TOL. LABEL/ METAL .xxx ± .005		TOL. CABLES .xxx ± .25		DRAWING/ PART NO.		D01XXXX 1 OF 1
DRNDATE MEO 11/14/17		CHKDATE XXX XXXXX/XX		REV		

SCALE: NONE RE/ECO NO.: XXXX

THIS DRAWING AND ALL INFORMATION CONTAINED HEREIN IS THE PROPERTY OF VANNER INC. AND MAY NOT BE COPIED, REPRODUCED OR DIVULGED TO UNAUTHORIZED PERSONS WITHOUT THE EXPRESS WRITTEN CONSENT OF VANNER INC. IT IS PROVIDED SOLELY FOR THE CONVENIENCE OF THE USER AND SHALL BE RETURNED UPON REQUEST.

Page 2 of 1

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



906 JAMES STREET  
ADRIAN, MI 49221  
517-265-6194  
WWW.ADRIANSTEEL.COM



**CAUTION**

WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY  
RJB

DATE DRAWN  
11/15/2017

ECN NUMBER  
XXXX

ECN DATE  
XXXXXXX


PART WEIGHT  
0.02 LBS.

REV. LEVEL  
A

PART NUMBER  
**55073**

PART NUMBER  
**55073**

LOC | QTY | Part # | Description | Size  
Material: IJ39 | Lamination: 8518  
1 1: 6039597.Strobe Switch-1.52" x 2.07"

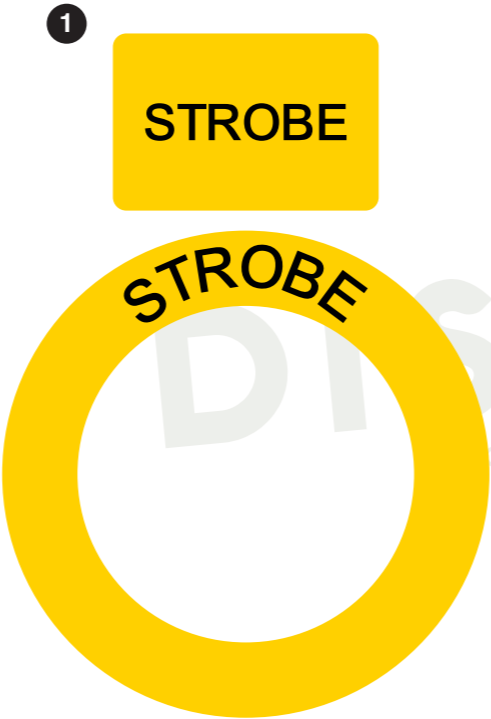

Note: Part will not be weeded, just cut.

Kit# 8001872 | Adrian Steel Part # 55073

06/01/2023 • JY  
© 2022 DISTYLL Graphics Solutions. All rights reserved.

ASCO REV.1 6/14/2023

<div><div>DISTYLL</div><div>GRAPHIC SOLUTIONS</div><div>FINAL DESIGN</div></div>	CLIENT NAME:		Switch Decals		O-ID: O15319-1
	Adrian Steel				Rev #: XXXX
	DATE:	DESIGNER:			Opt #: A
	O5/31/2023	TRN			

Please check information to confirm accurate vehicle specifications.

**CLEANING INSTRUCTIONS** All surfaces must be considered contaminated. Clean the vehicle surface immediately before applying the film. Dust and other contaminates can collect quickly on the surface and prevent the film from adhering properly. Even a freshly painted surface can collect dust before graphics can be applied.

For the best success with the films recommended for vehicle graphics, always apply the graphics when the air and vehicle surface are both above 60°F (16°C) and below 90°F (32°C) before beginning the installation.

PURCHASED  
COMPONENT  
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
<p><b>Note:</b> <b>This is also from HellermannTyton:</b> <b>Their Part Number is 156-00592</b></p>



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER  
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN:	22671
CURRENT ECN:	22671
ECN DESCRIPTION:	
RELEASE TO PRODUCTION	
REVISED BY: EMS	


PURCHASED  
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
Fastenal
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
0787863
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

 <b>ADRIAN STEEL®</b>		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221	REVISION LEVEL  <b>A</b>
MAT'L USED:		DESIGNED BY: <b>EMS</b>	
DESCRIPTION: <b>Clip, Black UV Tie, HellermannTyton</b>			
WEIGHT (Lbs.): <b>0.5</b>	SEGMENT CODE: <b>ELE</b>	PART NUMBER: <b>59713</b>	

PURCHASED COMPONENT KEY FEATURES	
DESCRIPTION OF REQUIREMENTS	
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)	
N/A	
LOAD/RATING REQUIREMENT	
N/A	
MATERIAL REQUIREMENT	
N/A	
PACKAGING REQUIREMENT	
N/A	
OTHER REQUIREMENTS	



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY		PRINTED DOCUMENT IS UNCONTROLLED		Sheet 1 of 1	
TOLERANCES & INSPECTION		PART / PRODUCT IDENTIFICATION			
UNLESS OTHERWISE SPECIFIED ALL BEND ANGLES ARE 90 DEGREES ALL DIMENSIONS ARE IN INCHES. REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		ADRIAN STEEL® ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221		REVISION LEVEL A	
FEATURES 0.0 = ± .125 0.00 = ± .062 0.000 = ± .031		HOLES/SLOTS 0.0 = ± .062 0.00 = ± .031 0.000 = ± .015		ANGLES 0° = ± 2° 0.0° = ± 1°	
Material Thickness: per ASTM Std. Weld Callouts per AWS		PURCHASED DESIGNED BY: E.BURKE			
RELEASE & REVISIONS		DESCRIPTION: POWER HARNESS EXTERIOR 4			
INITIAL ECN: 25378 CURRENT ECN: 25378 ECN DESCRIPTION: RELEASE FOR PRODUCTION REVISED BY:		AAMP GLOBAL REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER 67095 OR PWR-HAR4 COLOR (ONLY LIST IF COLOR SPECIFIC) COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.) NO		WEIGHT (Lbs.): 0.2 SEGMENT CODE: ELE PART NUMBER: 67095	



PURCHASED COMPONENT KEY FEATURES	
DESCRIPTION OF REQUIREMENTS	
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)	
N/A	
LOAD/RATING REQUIREMENT	
N/A	
MATERIAL REQUIREMENT	
N/A	
PACKAGING REQUIREMENT	
N/A	
OTHER REQUIREMENTS	



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY			PRINTED DOCUMENT IS UNCONTROLLED			Sheet 1 of 1		
TOLERANCES & INSPECTION			PART / PRODUCT IDENTIFICATION					
UNLESS OTHERWISE SPECIFIED			<div><div><div>AS</div></div><div>ADRIAN STEEL®</div></div> <div>ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221</div>				REVISION LEVEL	
ALL BEND ANGLES ARE 90 DEGREES							A	
ALL DIMENSIONS ARE IN INCHES.			MAT'L USED: PURCHASED		DESIGNED BY: E.BURKE			
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION			DESCRIPTION: SWITCH HARNESS 1 EXTERIOR LIGHTING					
FEATURES			WEIGHT (Lbs.): 0.2		SEGMENT CODE: ELE		PART NUMBER: 67097	
HOLES/SLOTS								
ANGLES								
0.0 = ± .125								
0.00 = ± .062								
0.000 = ± .031								
0.0 = ± .062								
0.00 = ± .031								
0.0° = ± 2°								
0.0° = ± 1°								
Material Thickness: per ASTM Std. Weld Callouts per AWS								
RELEASE & REVISIONS			PURCHASED COMPONENT					
INITIAL ECN: 25378			REFERENCED SUPPLIER AND/OR MANUFACTURER AAMP GLOBAL					
CURRENT ECN: 25378			REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER SSW-HAR1 OR 67097					
ECN DESCRIPTION: RELEASE FOR PRODUCTION			COLOR (ONLY LIST IF COLOR SPECIFIC) NO					
REVISED BY:			COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)					




PURCHASED COMPONENT KEY FEATURES	
DESCRIPTION OF REQUIREMENTS	
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)	
N/A	
LOAD/RATING REQUIREMENT	
N/A	
MATERIAL REQUIREMENT	
N/A	
PACKAGING REQUIREMENT	
N/A	
OTHER REQUIREMENTS	




THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY			PRINTED DOCUMENT IS UNCONTROLLED			Sheet 1 of 1	
TOLERANCES & INSPECTION			PART / PRODUCT IDENTIFICATION				
UNLESS OTHERWISE SPECIFIED			<div><div><div><div>AS</div></div><div>ADRIAN STEEL®</div></div><div>ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221</div></div> <div>REVISION LEVEL <div>A</div></div>				
ALL BEND ANGLES ARE 90 DEGREES							
ALL DIMENSIONS ARE IN INCHES.			MAT'L USED: PURCHASED		DESIGNED BY: E.BURKE		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION			DESCRIPTION: BEACON/LIGHTBAR HARNESS 3				
FEATURES			WEIGHT (Lbs.): 0.2		SEGMENT CODE: EBE		
HOLES/SLOTS			PART NUMBER: 67113				
ANGLES							
0.0 = ± .125							
0.00 = ± .062							
0.000 = ± .031							
0.0 = ± .062							
0.00 = ± .031							
0.000 = ± .015							
Material Thickness: per ASTM Std. Weld Callouts per AWS							
RELEASE & REVISIONS			PURCHASED COMPONENT				
INITIAL ECN: 25378			REFERENCED SUPPLIER AND/OR MANUFACTURER AAMP GLOBAL				
CURRENT ECN: 25378			REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER BLB-HAR3 OR 67113				
ECN DESCRIPTION: RELEASE FOR PRODUCTION			COLOR (ONLY LIST IF COLOR SPECIFIC) NO				
REVISED BY:			COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.) NO				

Bill of Materials				
Id	Type	Manufacturer	Part Number	Quantity
1	Cable		16AWG 2C FT2 TPU Cable	6300 mm
2	Cord Grip		PG11	1

Notes	
①	Heat shrink cable jacket and wire 20mm behind connector (Heat shrink = 38mm long)
②	Place adhesive lined heat shrink over C2 connector wire cavities and cable jacket (Heat shrink = 38mm long)
③	Install Cable Gland/Cord Grip 300mm behind C2
④	Plug C3 into C2
⑤	C3 Cavities are sealed

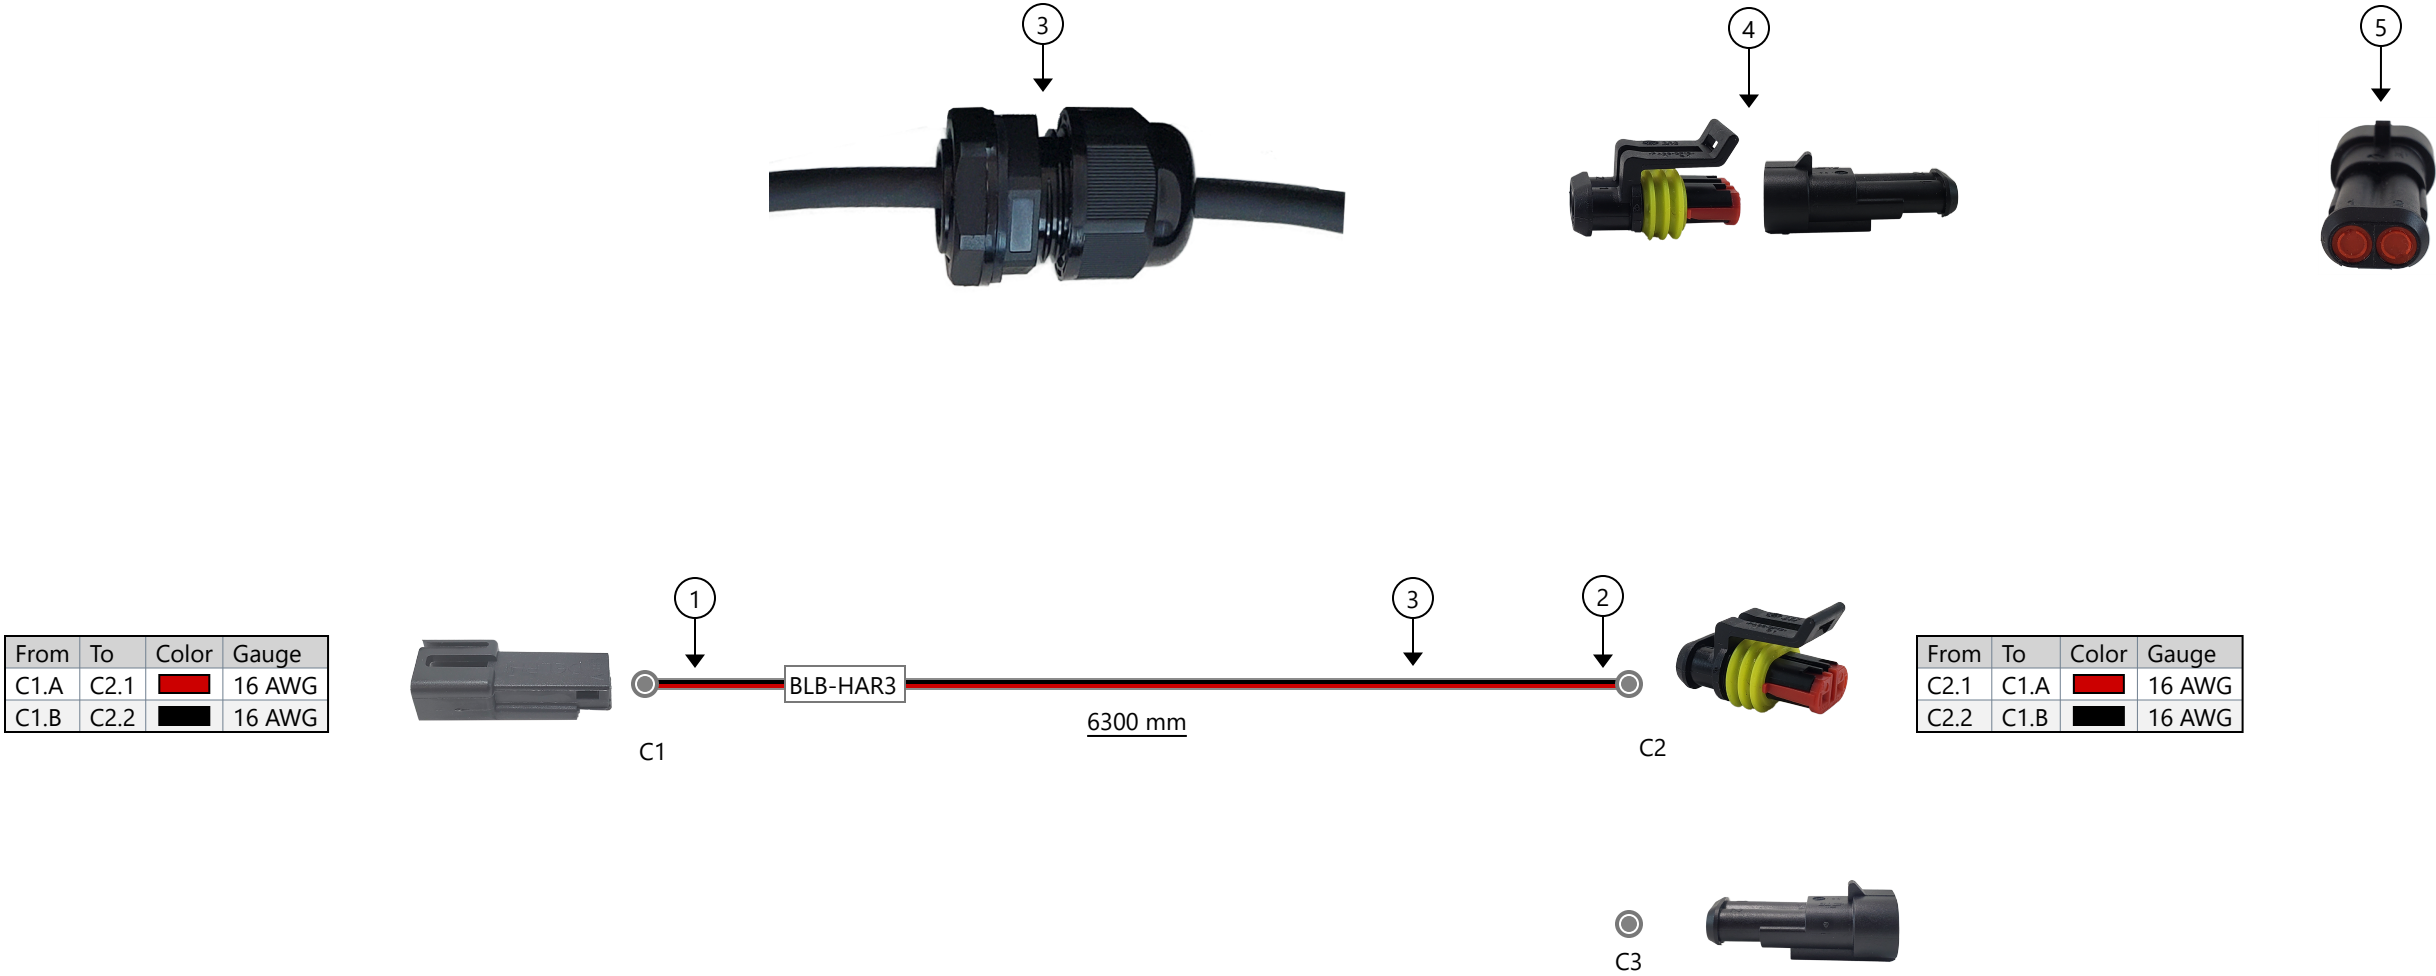

Revisions			
Rev.	Date	Author	Description
	11/5/2021	Bennet Fisher	Initial Drawing
	3/21/2022	Bennet Fisher	Added 300mm to harness; changed female connector
A	4/26/2022	Bennet Fisher	Added adhesive lined heat shrink to C2

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS [INCHES] TOLERANCES: ±5MM  <b>PROPRIETARY AND CONFIDENTIAL</b>  THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AAMP GLOBAL. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AAMP GLOBAL IS PROHIBITED.		Name	Date	<div> — ADVANCING VEHICLE TECHNOLOGY —</div> <div>Part Number: BLB-HAR3_Revision: A</div> <div>Description:Sheet: 1</div> <div>Beacon/Light Bar Harness - 6.3 Meters</div>
	Designed By	Bennet Fisher	04/26/2022	
	Engineering Approval			
	Manufacturing Approval			
	Revision Approval			
	Quality Assurance			

PURCHASED  
COMPONENT  
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
WHELEN LIGHTBAR: R2LPPCA WITH EXTERIOR PLUG AND PLAY CONNECTOR CLEAR LENS AMBER LED'S
CUSTOM R2LPPCA WITH W446, WPF. 2 SOCK CONNECTR KIT AMP WITH LOOM / GROMET / PATTERN WIRE TAPE / SETTING OF THE PATTERN
WHELEN PART NUMBER: R2LPPCA-AS CUSTOM / 01-0689088C1P0



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER  
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 25921
CURRENT ECN: 28678
ECN DESCRIPTION:
Add Updated Part Number to PPDS
REVISED BY: LJK


PURCHASED  
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
WHELEN
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
R2LPPCA-AS CUSTOM / 01-0689088C1P0
COLOR (ONLY LIST IF COLOR SPECIFIC)
CLEAR LENS / AMBER LED'S
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED


Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

		<b>ADRIAN STEEL®</b>		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221		REVISION LEVEL <b>B</b>
MAT'L USED: <b>PURCHASED</b>				DESIGNED BY: <b>EMB</b>		
DESCRIPTION: <b>WHELEN LP LGHTBR AM W/CON</b>						
WEIGHT (Lbs.): <b>1.5</b>		SEGMENT CODE: <b>EBE</b>			PART NUMBER: <b>67692</b>	

PURCHASED  
COMPONENT  
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
<div>RUBBER GROMMET: MCMaster-CARR 9600K33</div> <div>INNER DIAMATER: 3/8" PANEL HOLE DIAMETER: 7/16" PANEL THICKNESS: 3/32"</div>

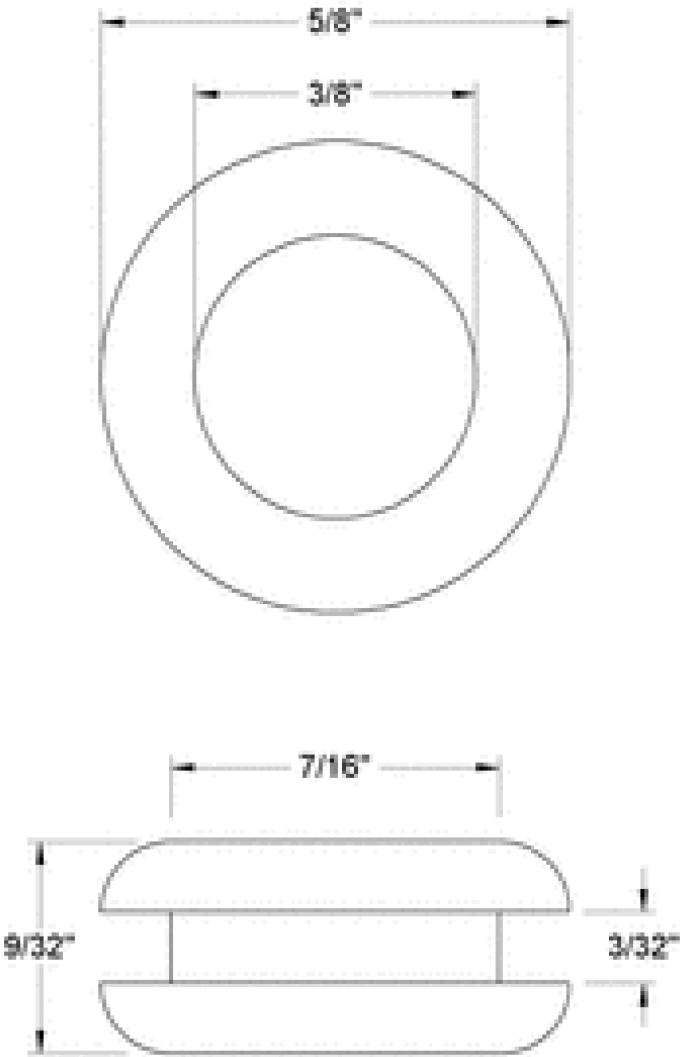

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER  
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 26411
CURRENT ECN: 26411
ECN DESCRIPTION:
RELEASE TO PRODUCTION
REVISED BY: N/A


PURCHASED  
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
MCMaSTR-CARR
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
9600K33
COLOR (ONLY LIST IF COLOR SPECIFIC)
BLACK/RUBBER
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

		<b>ADRIAN STEEL®</b>		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221		REVISION LEVEL <b>A</b>
MAT'L USED: <b>PURCHASED</b>				DESIGNED BY: <b>EMB</b>		
DESCRIPTION: <b>GROMMET,3/8"ID 7/16"OD</b>						
WEIGHT (Lbs.): <b>0.01</b>		SEGMENT CODE: <b>EBE</b>			PART NUMBER: <b>70805</b>	