Integrated Truck Solution Lighting Kit

76222

Part Number

For Maverick Cab-Hi

Driver Side Strip Lights

Passenger Side Strip Lights





PRODUCT FEATURES

- This product is compatible with the Ford Maverick
- Included in this kit is two (2) 36” LED light strip (65347), two (2) Dome LED light (63480), roof bow harness #1 & 2 (63481 & 63482), two (2) power harnesses (76546)(71903), one (1) magnetic switch, and various fasteners.
- There are no OEM options this product is not compatible with and there are no OEM options this product requires.
- This Kit is for our Maverick CAB-HI toppers.

Model Year Validated:
2025

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.

Introduction / Comments:

Install Instructions For Topper Interior Lighting for Maverick

Note:

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638**) before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.





Installation Instructions for Interior Lighting in Topper - Ford Maverick


****Please read statement below before moving forward****

These plug and play kits are completely modular and can be configured in many different ways. Placement of lights will be determined by sales order drawings/customer ask.

Therefore, these instructions are for the most standard configurations, and for reference only.

Overall Harness Diagram

74546 Harness **71902 TLM Harness**

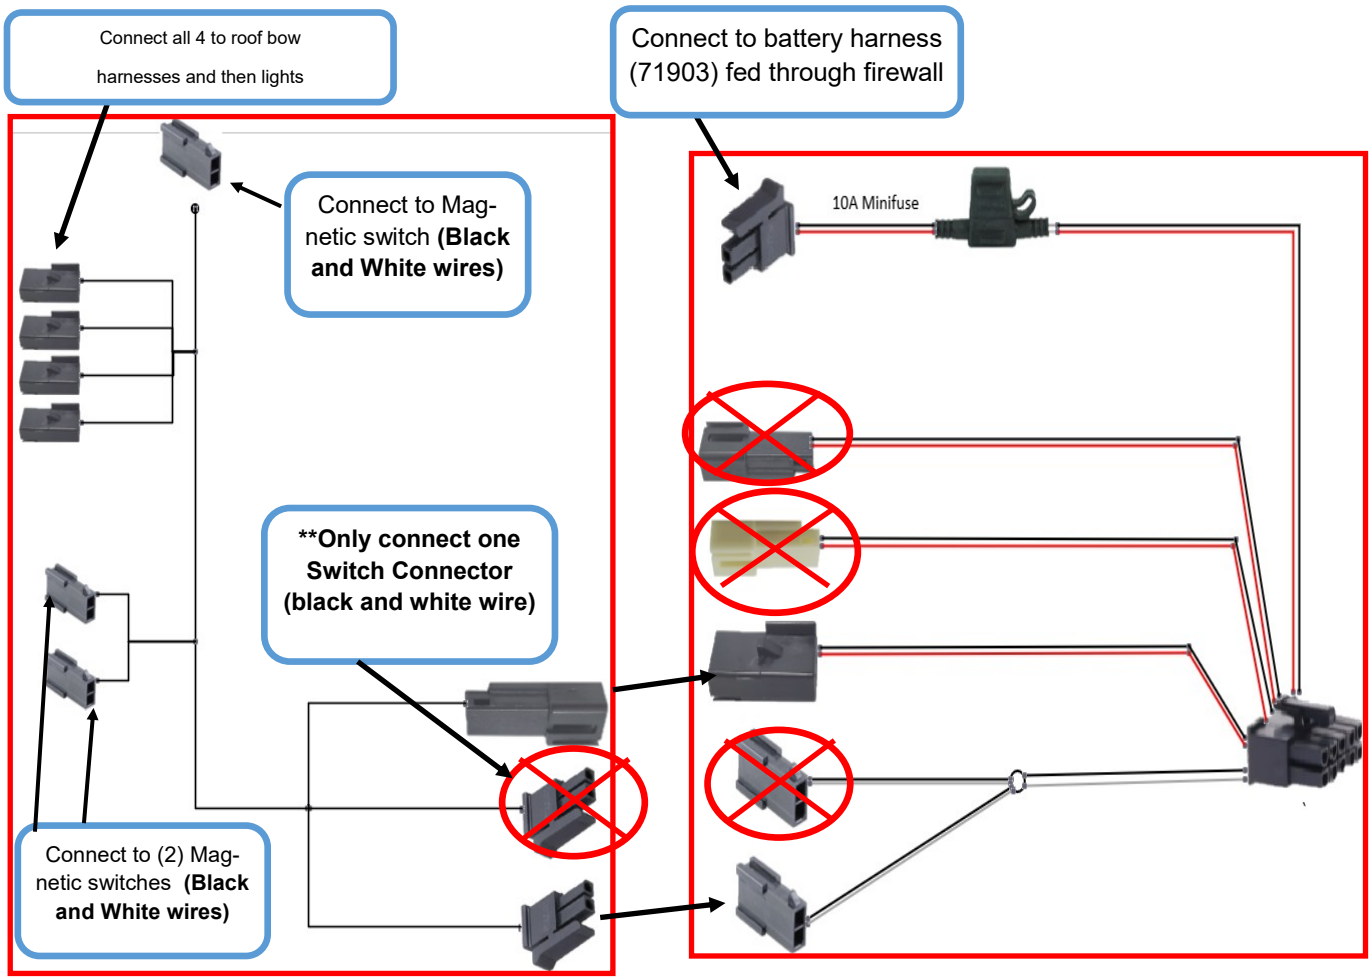

Tools Required:





Screwdriver

Power drill, 3/8” step drill bit



Components:

Please note all these components may not be used in every install.
Only install what you have. Refer to the order drawing.
Integrated Truck Solution Kit 72549 components are denoted with a red star.
















	Part Number	Description	Qty
1	71902	TLM Module/Harness	1
2	71904	TLM To Battery Harness Silverado	1
3	71905	TLM To Lights Harness	1
4	63481	Roof Bow Harness #1	3
5	63482	Roof Bow Harness #2	1
6	65346	24” Strip Light	4
7	65347	36” Strip Light	
8	65348	48” Strip Light	
9	63480	Dome Light	2
10	71907	Magnetic Switches	3
11	81550-W	Magnetic Switch Bracket DS	1
12	81594-W	Magnetic Switch Bracket PS	1
13	81552-B	Magnetic Switch Bracket	3
14	81678-W	Magnetic Switch Bracket Rear	1







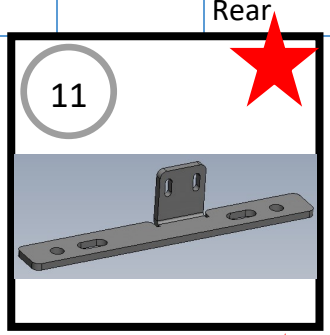


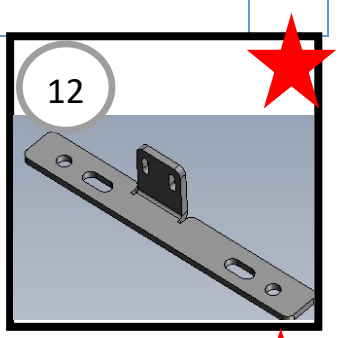

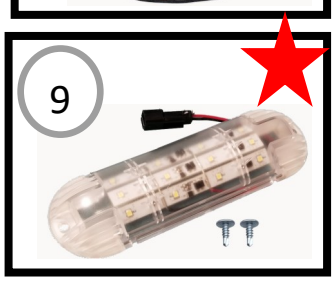

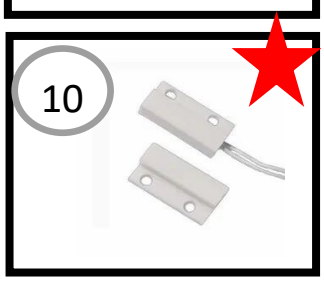

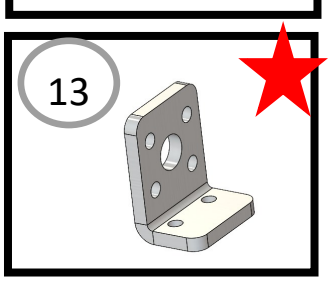


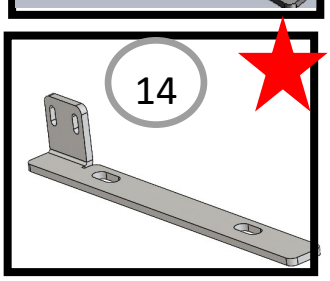


The purpose of plug and play lighting is to be completely modular. Due to this feature, refer to the order drawing for all exact lighting placements. These installation instructions are for most cases and for reference. Not all installs will have strobes, beacons, and lightbars. Reference the instructions for only what you are installing.
Harness pictures are for reference only.

Components CAB-HI only:

Please note all these components may not be used in every install. Only install what you have. Refer to the order drawing. Integrated Truck Solution Kit 74632 components are denoted with a red star.

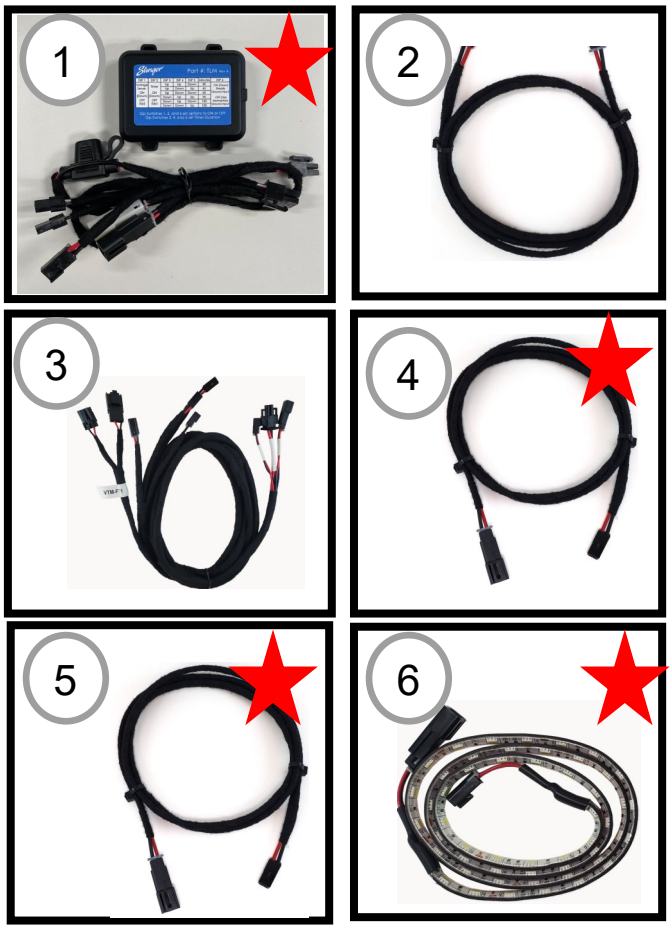

	Part Number	Description	Qty
1	71902	TLM Module/Harness	1
2	71903	TLM To Battery Harness 4 ft	1
3	74546	TLM To Lights Harness	1
4	63481	Roof Bow Harness #1	3
5	63482	Roof Bow Harness #2	1
6	65346	24” Strip Light	
7	65347	36” Strip Light	2
8	65348	48” Strip Light	
9	63480	Dome Light	2
10	71907	Magnetic Switches	3
11	81552-B	Magnetic Switch Bracket	3
12	81678-W	Magnetic Switch Rear Bracket	1
13	81690-W	Magnetic Switch Side Bracket	1
14	81691-W		1

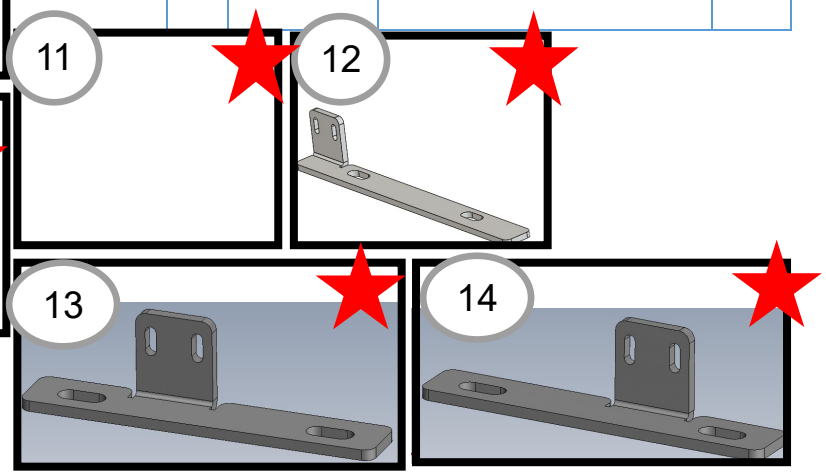


The purpose of plug and play lighting is to be completely modular. Due to this feature, refer to the order drawing for all exact lighting placements. These installation instructions are for most cases and for reference. Reference the instructions for only what you are installing.

Harness pictures are for reference only.

Best Practices to Follow when Routing Through Firewall:

- Create a drip loop with the harness being routed through the firewall as shown so that the water does not flow into the grommet.
- Make sure that the proper grommet for the hole being routed through is used so that there are no openings for water to get through.
- Use silicone after routing and apply around the grommet and wire to seal it. Make sure to let the silicone dry for 30 minutes to an hour.

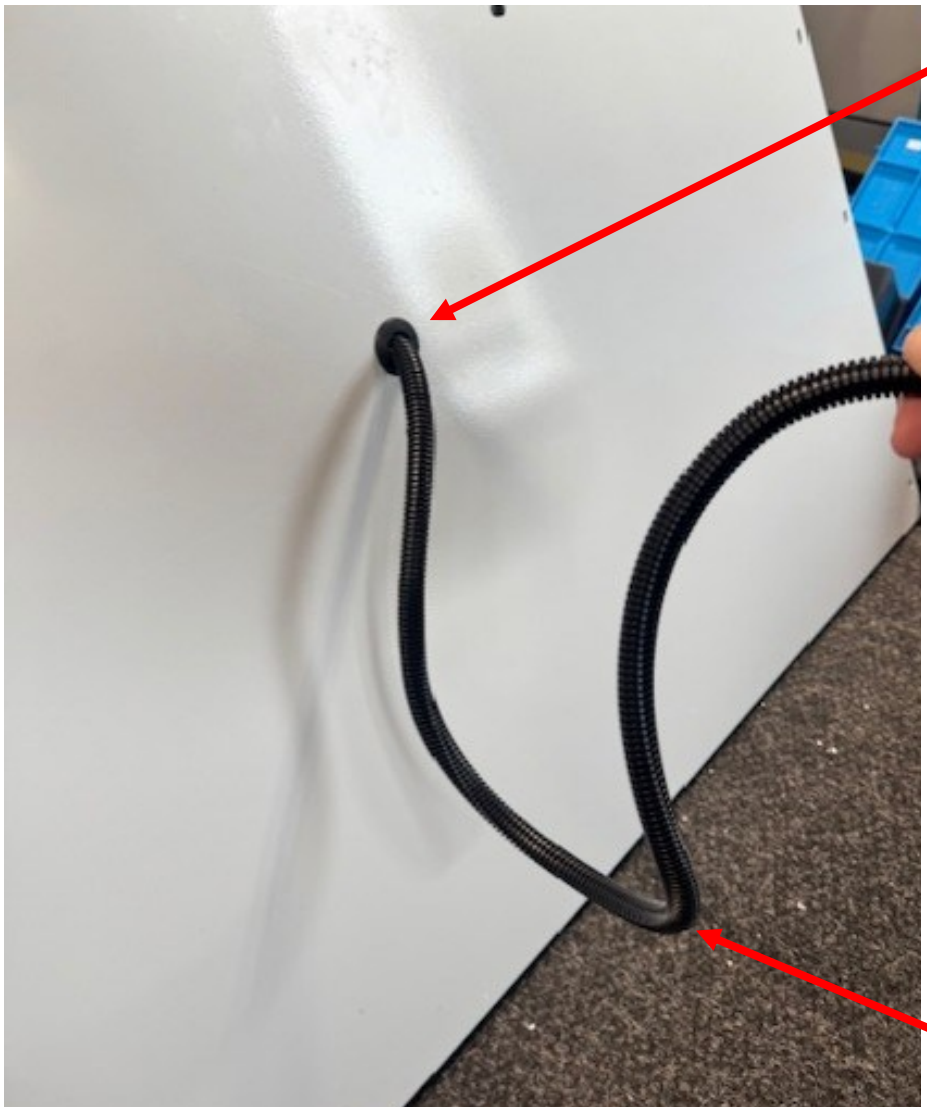

Light Kit's Offered (4.5 & 5 ft):

Part Numbers/Kit Contents:

74632 Integrated Truck Solution: ★

Includes: (1) 36" strip light on each side of the side doors and 2 dome lights in the top, on the roof bows. Refer to all components denoted with a ★ and quantity in the blue parenthesis on page 3

74633 (1) 36" Rear strip light on the back door

Includes: (1) 36" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

74635 (1) 36" Strip light on the driver side only

Includes: (1) 36" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

74634 (1) 36" Strip light on the passenger side only

Includes: (1) 36" strip light, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag


74636 (3) 36" Strip lights—rear, driver, and passenger side

Includes: (3) 36" strip light, (1) roof bow harness #2, (2) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

Driver's Side Strip Lights



Rear Side

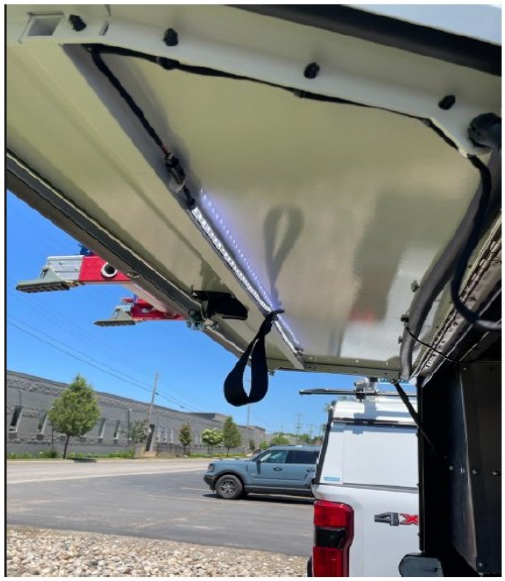

Passenger's Side Strip Lights



Walk-In Topper Interior Lighting Kits Offered:

Part Numbers/Kit Contents:

78956 Integrated Truck Solution:

Includes: (2) 36” strip lights on both sides of the side doors and 2 dome lights in the top, on the roof bows.

78957 (1) 36” Strip Light on Passenger Side Only

Includes: (1) 36” strip light, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

78958 (1) 36” Strip Light on Driver Side Only

Includes: (1) 36” strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

78959 (2) 36” Strip Lights on Driver & Passenger Side

Includes: (2) 36” strip lights, (1) roof bow harness #1, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag


Driver Side




Passenger Side



Routing Overview: Maverick ICE

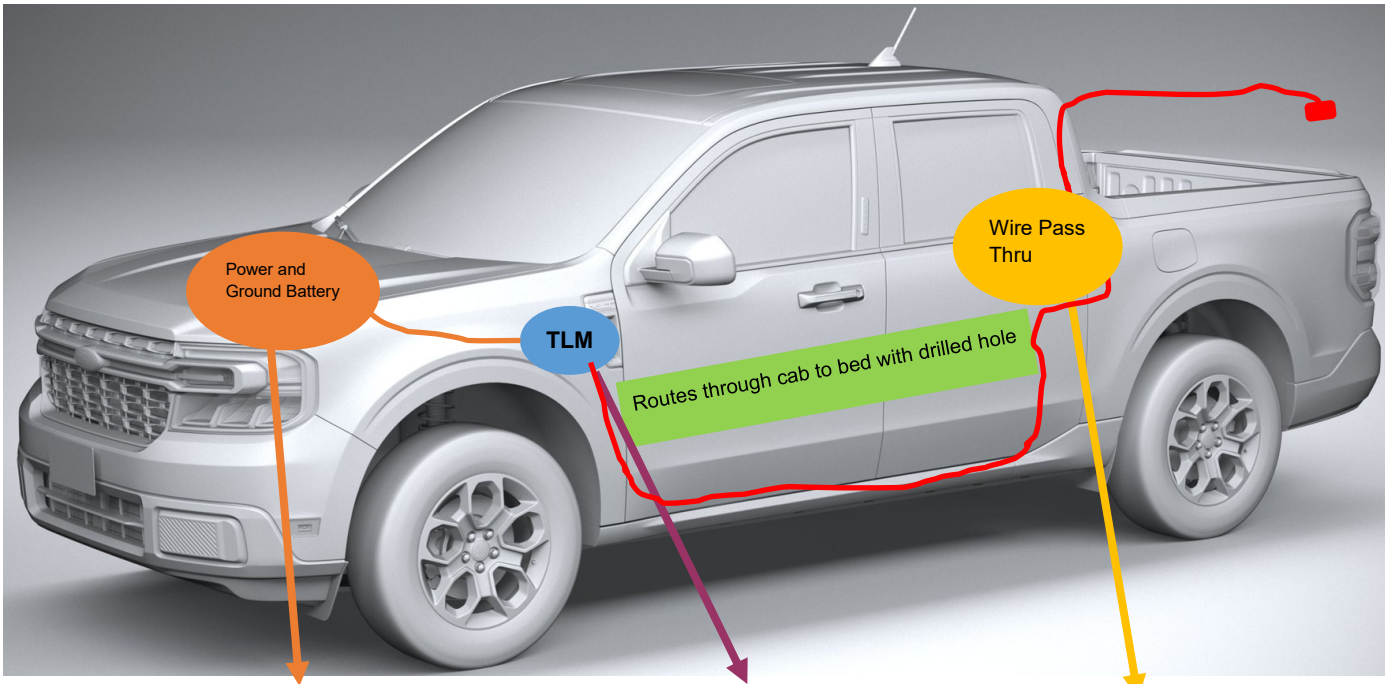


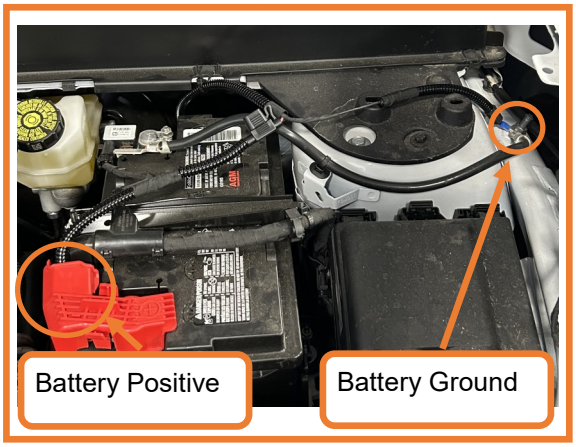








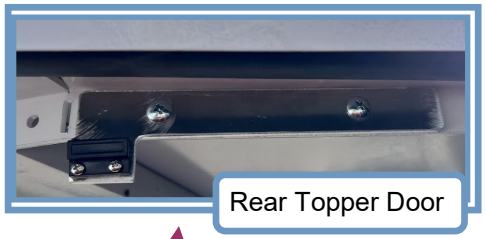





Color	Key - Items
Orange	Power and Ground Location
Blue	Harness Routing From TLM To Topper
Purple	Switches And Switch
Yellow	Bed Wire Pass Thru

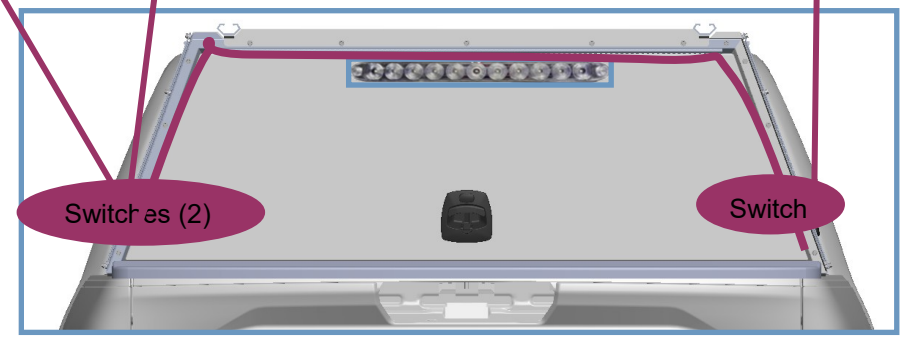



Routing Overview: Maverick Hybrid

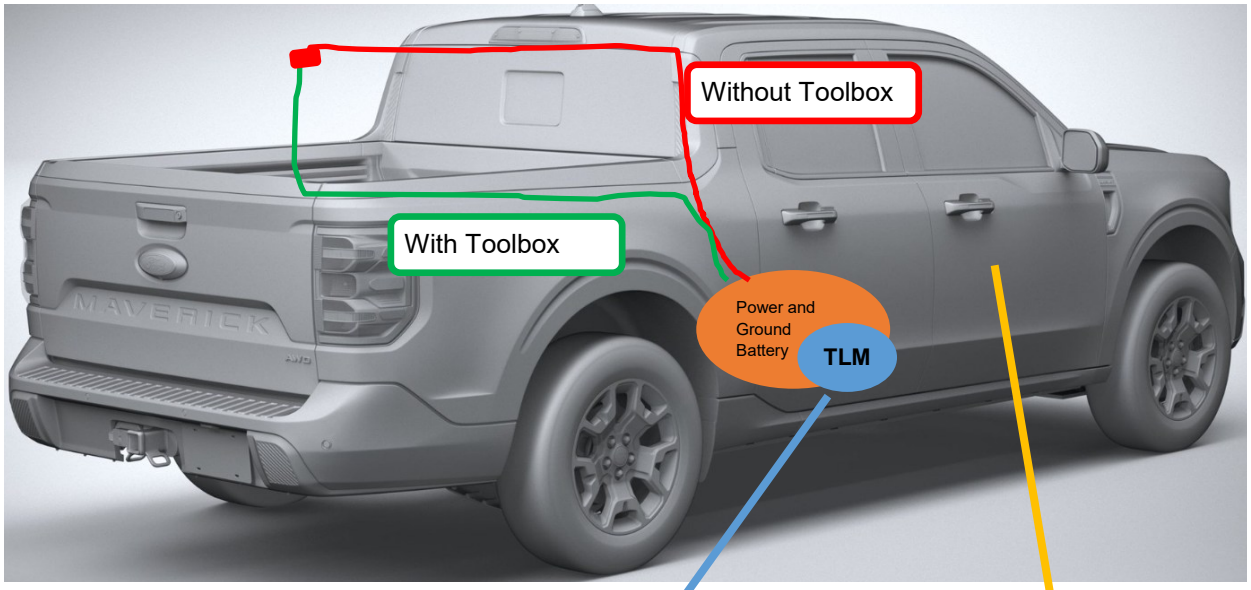


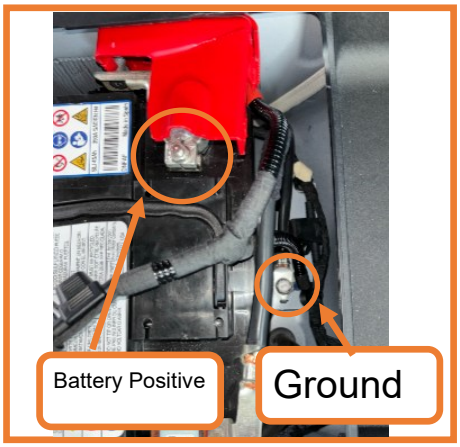



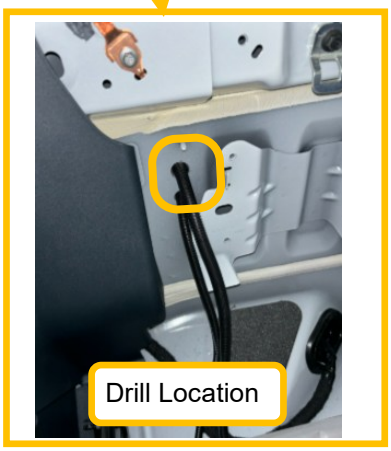


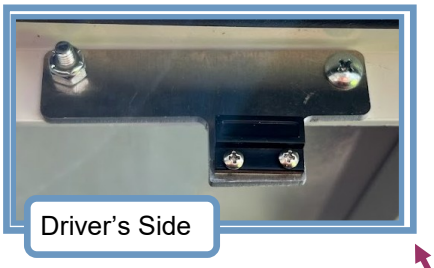

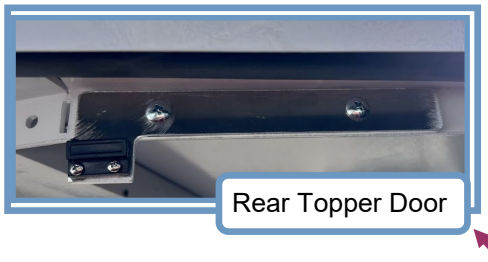



Color	Key - Items
Orange	Power and Ground Location
Blue	Harness Routing From TLM To Topper
Purple	Switches And Switch
Yellow	Bed Wire Pass Thru

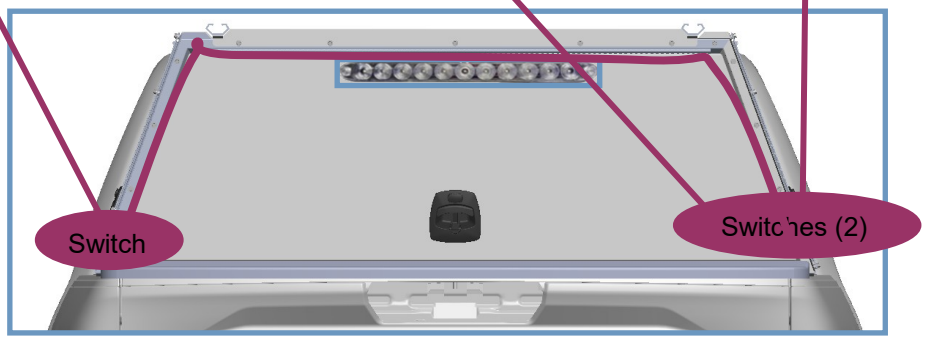

Light Placements


Please refer to the order drawing—not all lights will be used every install. These are modular and created to work depending on customer needs.


Driver's Side



Passenger's Side



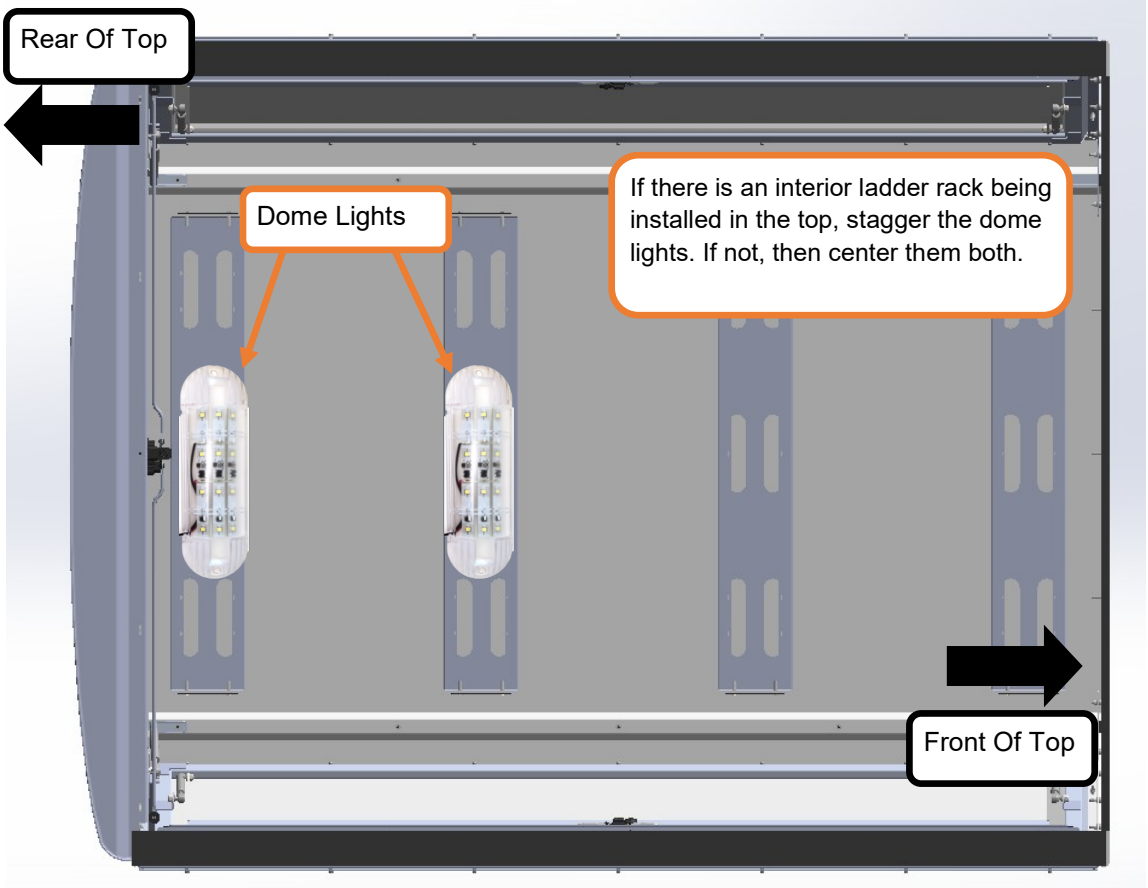

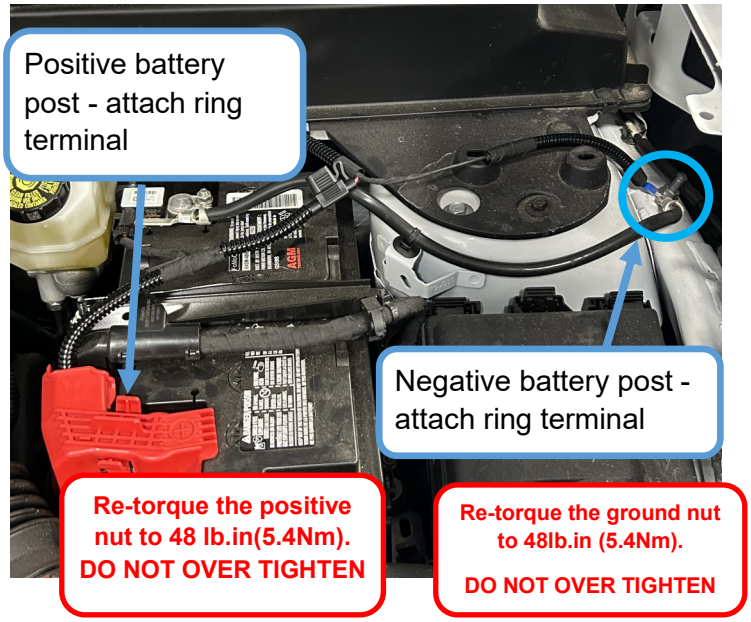

Pull negative ring terminal end some to reach ground stud. This will move the connected loom, as shown in the image. Once you ensure the negative harness is the proper lengths, then wrap the exposed wire in loom, and secure with electrical tape.

Step 1: MAVERICK ICE ONLY

Battery-

Open the hood and locate the battery.

Locate the power harness 71903.

Remove the inline fuse in the fuse holder. Do not place fuse back into holder until after the install is complete.


Connect the red wire ring terminal to the positive battery post shown in the picture to the left. Torque the nut. Do not over tighten.

Connect the black wire ring terminal to the negative battery post shown in the picture to the left. Torque the nut. Do not over tighten.

Do not un-bolt the battery terminal clamps from the battery.





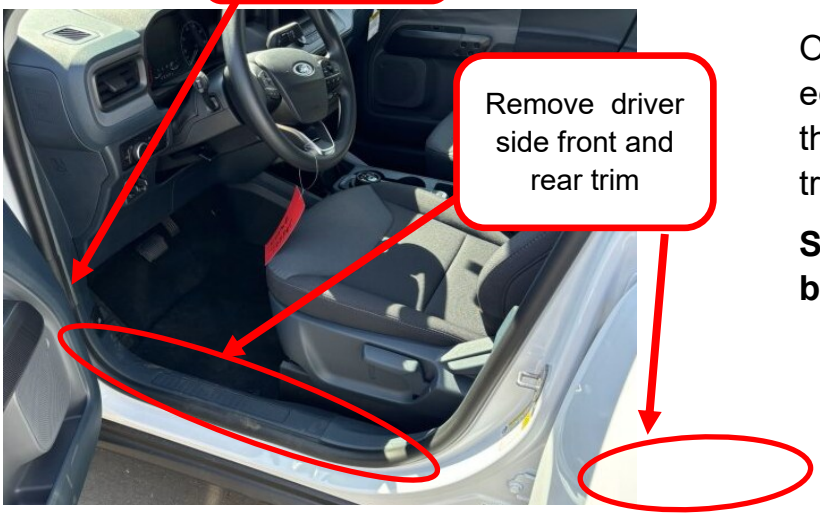

Step 2:

Route the power harness connector end through the engine bay grommet (circled in Green). Make sure to have a drip loop with the harness.

Locate the driver's side door sill area.

Use a trim tool to remove the trim panels in the driver's step well and dash/ kick panel.

Once harness 74546 has been connected to TLM, continue to route towards the backseat underneath the removed trim pieces shown to the left.

Silicone Grommet when harness has been routed to secure.

Reference pg. 5 for routing through the firewall.

TLM Information:

Please note there is currently a REV A TLM and a REV B TLM. Please view the TLM top right corner to confirm which REV you have . Then follow the next instructions.


REV A:



REV A DIP SWITCHES:

1	2	3	4	5	6
Down	Down	Down	Up	Up	Down

REV B:

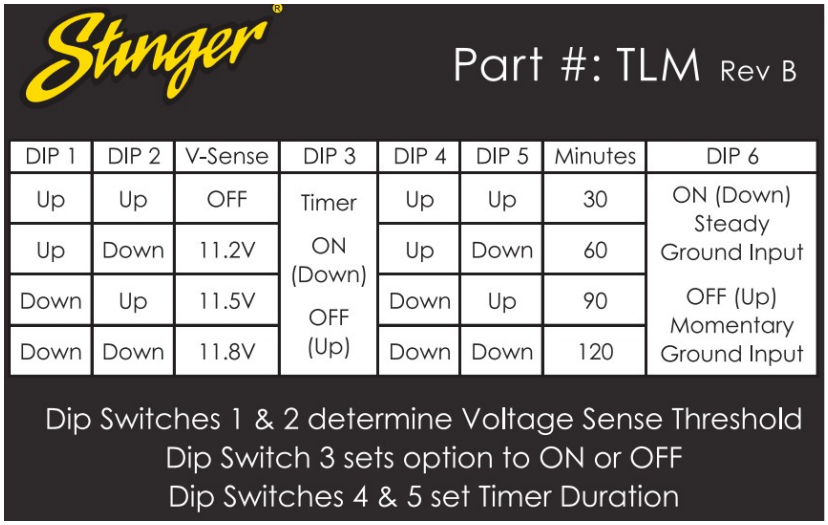

REV B DIP SWITCHES:

1	2	V-Sense	3	4	5	6
Down	Down	11.8	Down	Down	Up	Down

For Rev A follow steps below:



Step 3: Locate the Timer Low-Voltage Module (TLM) and harness — Part number: 71902

First, plug the harness into the module.

Note:

You will NOT use the cream colored connector or the matching black connector. You will be using the smaller black module output connector, one(1) switch harness connectors (black and white wires), and the black power supply connector.

*** Ensure that the fuse from the inline fuse holder has been removed until the end of the install.



74546 fed through firewall, connected to TLM



74546 and 71902 Connections

Bring TLM to driver side, where power harness is fed through.

Please reference page 2 for the following connection information.

Locate the TLM to battery harness (71903) that has been routed through the firewall grommet and TLM power to light harness (74546).

On the 71903 harness, connect the black connector to the blunt red wire on the TLM. (Circled in red in first image, on top).

Plug the red and black connector on the 74546 to the mating connector on the 71902 (TLM), shown in the blue circle. Next, connect one of the switch connections (black and white wires) to one of the mating connections on TLM. Circled in yellow. The rest of the connectors will not be used.


***** You do NOT need to connect both switch connections.** To set the dip switch to 90 minutes (default) follow the chart below:

If customer would like a time different that 90 minutes, use the dip switches to set the time. Chart is as follows:

1	2	3	4	5	6
Down	Down	Down	Up	Up	Down

DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	Minutes	DIP 6
Voltage Sense ON (Down) OFF (Up)	Timer ON (Down) OFF (Up)	Up	Up	Down	30	ON (Down) Steady Ground Input
		Up	Down	Up	45	
		Up	Down	Down	60	
		Down	Up	Up	90	OFF (Up) Momentary Ground Input
		Down	Up	Down	120	
		Down	Down	Up	150	

TLM REV B

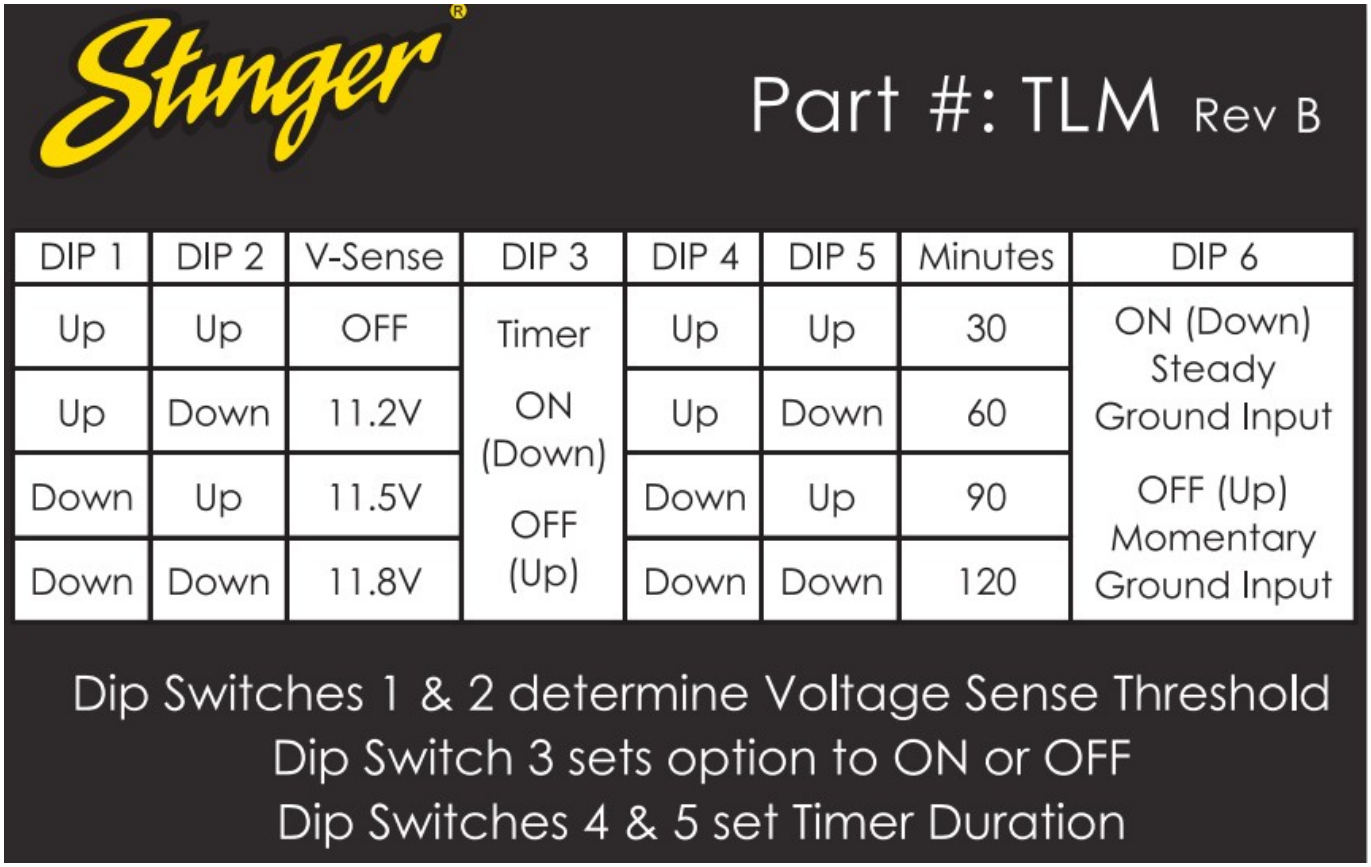

Please set dip switches in the following order:

(This is set for 90 minutes, if customer would like 30,60, or 120 minutes please refer to the chart above to set dip switches accordingly)

1	2	V-Sense	3	4	5	6
Down	Down	11.8	Down	Down	Up	Down




Step 4:

Use the adhesive tape supplied in the kit to stick the TLM to the side of the module up under the kick panel. Refer to the picture to the left for the TLM placement.

Secure the TLM and wires with zip ties.

Be sure the TLM is secured.

*** Picture is for location reference only.

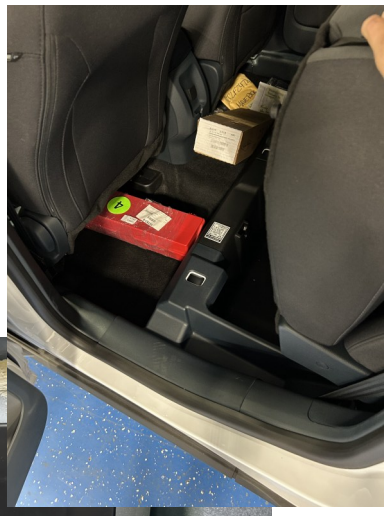





Step 5:

Locate 74546 harness.


To remove backseat trim piece near door, backseat needs to be lifted as shown to the left.

Connect to TLM and route along driver side trim towards back seat of vehicle. Pull taught and secure. Use circuit diagram to ensure proper connection of TLM and 74546.

Pull down back seat bench

Use a step bit and drill a 3/8” hole to reach bed in location marked on picture. **Be sure to silicon seal after everything has been routed, secured, and coiled up**


****CHECK BEHIND ALL DRILL LOCATIONS****

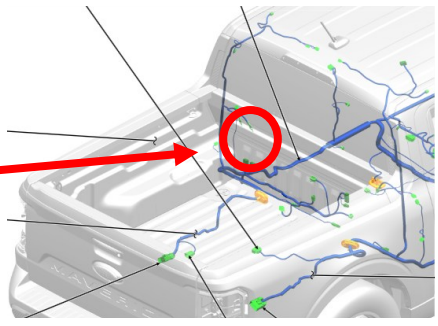

Step 6:

Route connector end through, towards the driver side topper pillar, then towards the driver side rear topper pillar along top of topper

Silicone drill hole to secure harness. Secure with zip ties

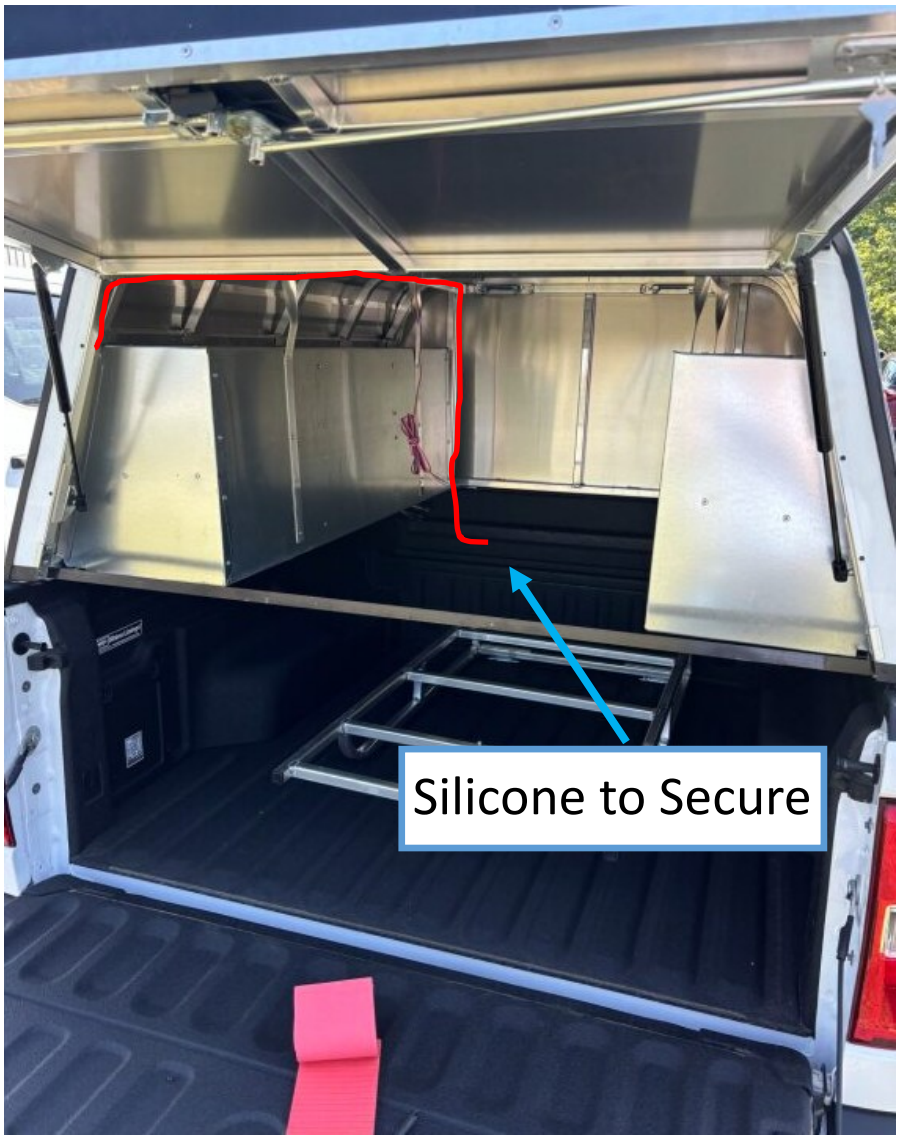

Maverick Hybrid







Step 1:

Locate Battery under rear passenger seat.


Disconnect negative terminal

Connect power harness 71903 to one of 2 terminals of under rubber covering of positive terminal

To do this:

Remove nut to disconnect terminal. Connect positive lug of 71903 onto terminal

Connect negative lug of power harness 71903 to ground next to battery. Refer to picture

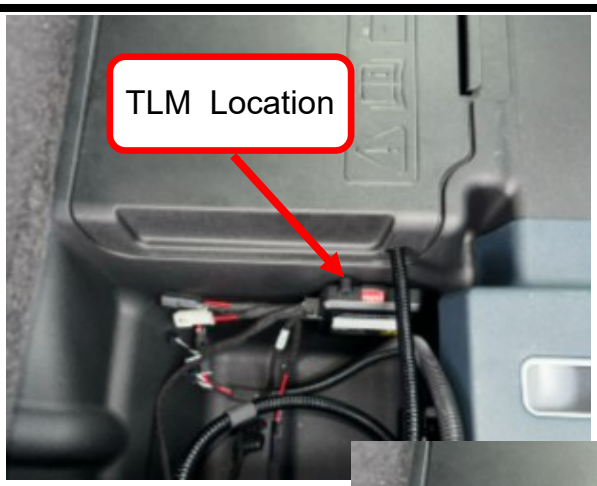





Step 2:

Secure TLM to side of compartment with dip switches up. Connect TLM harness to TLM and power harness 71903

Locate harness 74546 and connect to TLM harness as shown on page 9

Cut a notch where 74546 routes out of the battery storage to prevent damaging wire

Route towards behind seat compartment. Make sure the harness is as close to the side wall as possible

Pull down back seat bench

Use a step bit and drill a single 3/8” hole to reach bed

Maverick Hybrid



Step 3:

Route connector end through, towards the driver side topper pillar, then towards the passenger side rear topper pillar along top of topper

When all wire is pulled taught, coil up wire behind bench seat inside cab.

Silicone when finished





- **Using stud mounted zip ties** continue routing the harnesses in the corner of the topper, to the top front of the first roof bow.

- Identify 4 studs in channel and locate best position on harness. Place stud mounted zip tie on harness first, and secure. Then press stud mounted zip tie on stud between frame on topper.

All Maverick Vehicles

BAG71907 Includes:

FAS0554 X 6

FAS0674 X 6

FAS0942 X 20


FAS0943 X 20

BAG0406-A X 1

Step 7:


Locate BAG71907, magnetic switches PN 71907 and magnetic switch brackets.


71907 will have 3 magnets and 3 magnetic sensors. Use the image as reference.

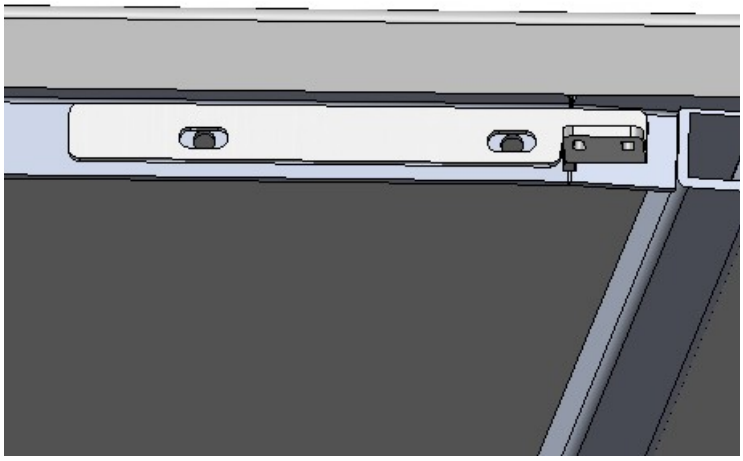


Insert FAS0674 into the topper door brackets and secure all brackets to topper door using FAS0674.

To secure magnetic switches to bracket and gas shock brackets, use FAS0942 on all magnets and magnetic switches. then secure with FAS0943

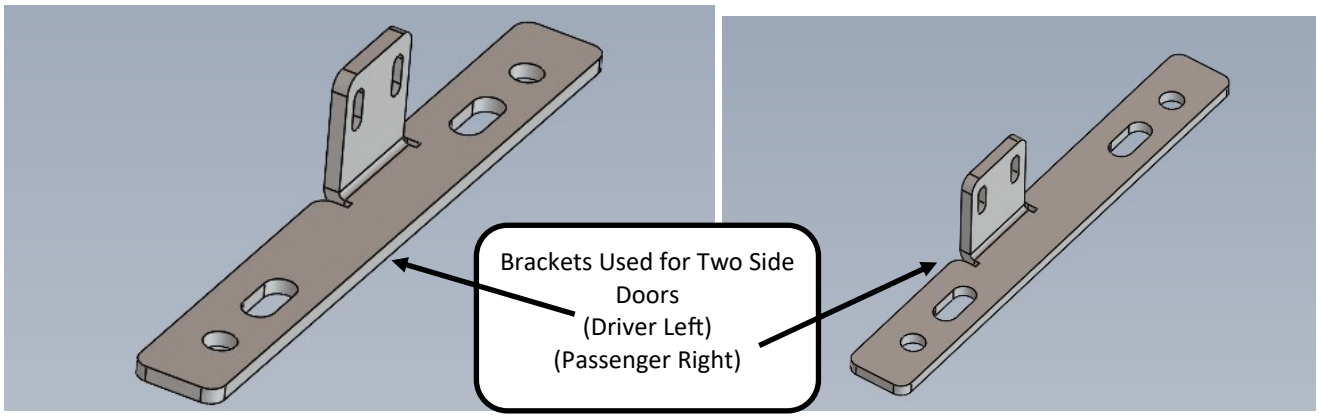

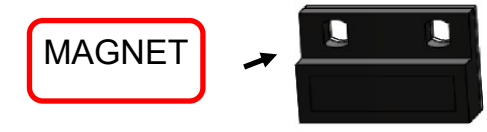




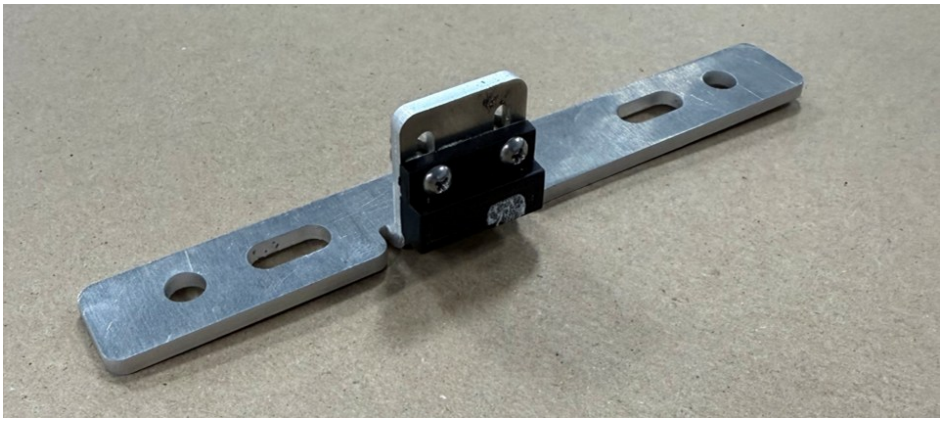


Step 10:

• Place magnet so that it matches the image.

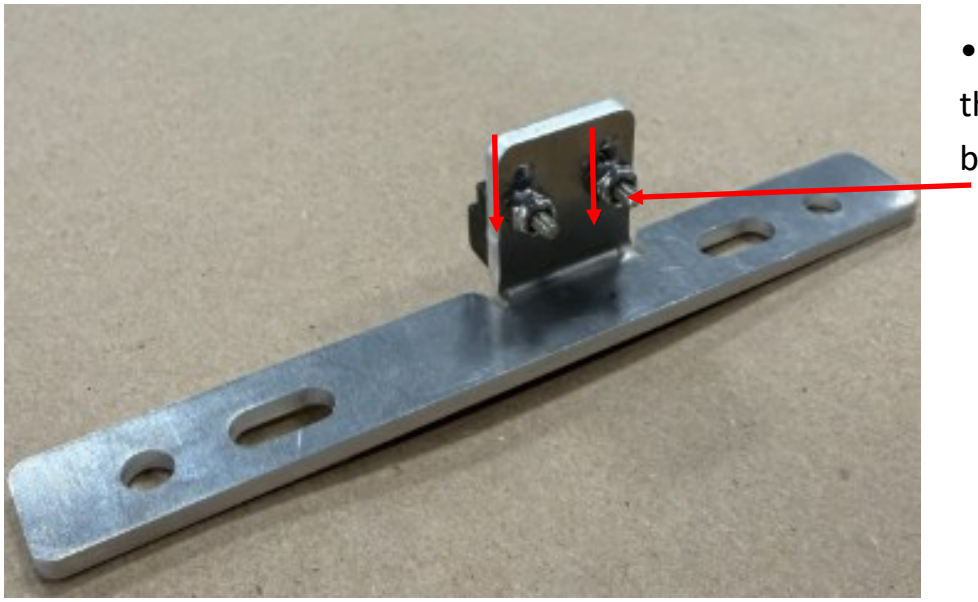

• Mount the bolts so that they are on the bottom edge of the slot.

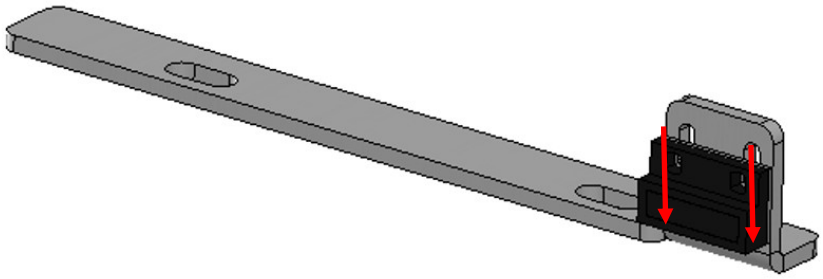

• The rear door is the same mounting as the side doors with the magnet all the way down.



Step 11: Install Magnetic Switch Brackets

Using an alcohol wipe, clean brackets. After they are dry, locate bracket for the driver side door.

For the driver side, mount the bracket so that the slightly shorter side goes towards the tube extrusion/upwards.

Line the bolt heads up to the **middle of the slot** for best alignment.


Use the image to the left as reference.

Secure mount with 10-24x.75 button head cap screws and 10-24 hex nuts.



For the passenger side, the shorter side of the bracket will be closer to the tube extrusion/ away from truck.

Line bracket up with first two holes after metal brace make sure to have the bolts in the **middle of the slot** for best alignment.

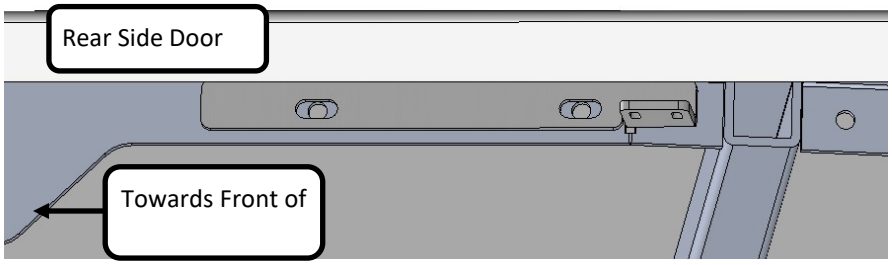

For the rear side, place bracket on the left outermost side of the topper door.


Secure bracket to metal brace with magnet attachment towards the back of the truck or away from the truck.





Step 12:


Identify the door shocks on the topper doors. Both the driver and passenger sides should have pre-existing holes on the shock mounts for placing the magnetic switch.

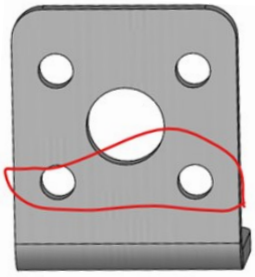

For mounting of switch:

If there is an option of holes use the holes circled in the image.

If there is just two holes use the holes provided.

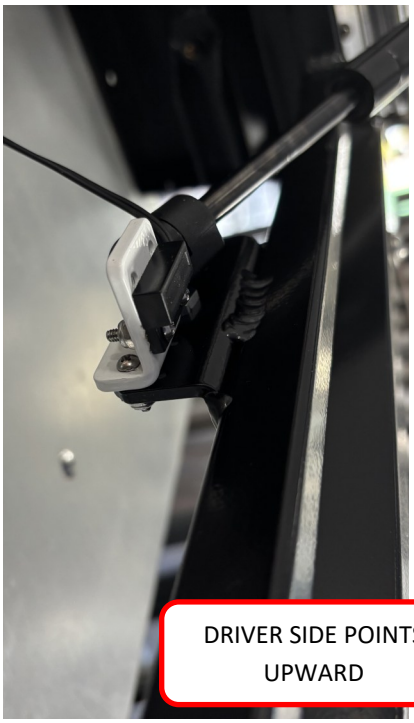

DRIVER SIDE POINTS UPWARD

Step 13:


Locate driver's side door shock mounts. There will be two magnetic switches mounted to each side of the driver's side door shock mount.

Position the magnetic switch along with its wires and connector. To have the wires point upward toward the shocks.

Place switch centered on the mount for easiest alignment.

Using a screw driver secure the magnetic switches in proper position. Make sure to mount the switch to the lower two

PASSENGER SIDE POINTS DOWN

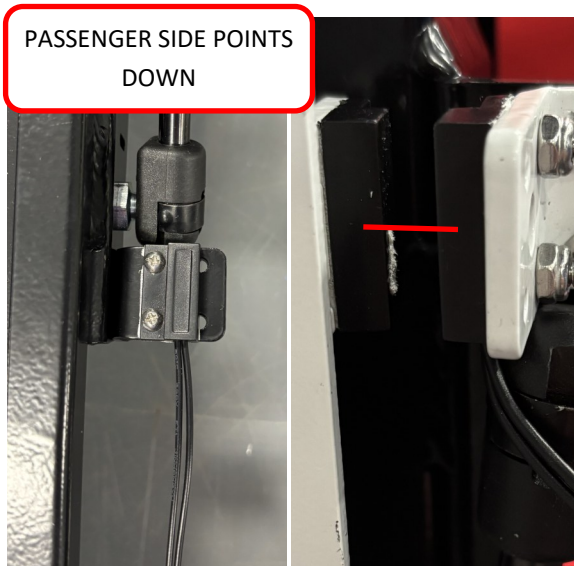

Step 14:

Locate passenger side door shock mount. Secure magnetic switch on passenger side mount with wires facing upward.

Make sure magnetic switches are face to face with one another! If they are not aligned they will not function properly. Refer to image for proper alignment.

Make use of the slots throughout the bracket assembly to adjust the magnets to align as closely as possible.

Walk-In Topper Magnetic Switch Instructions:

Please follow the next two pages for mounting magnetic switches for the walk-in topper.


- BAG0989

- Bracket Part Number 77230





Walk-In Topper Magnet Bracket Install

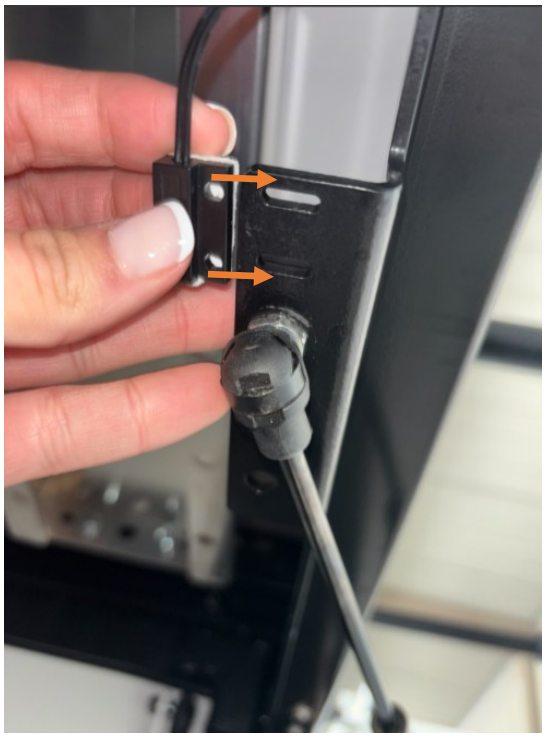


- Install Driver/Passenger side doors the same as the above pages.
- Mount magnetic switch sensor on the top part of door frame on the topper. Use the image to the left as reference.
- Plug in mating connector end to magnetic switch sensor to 71905. Circled in image on the bottom left.
- Place sensor end aligned with the holes.
- Secure sensor in place by removing sticky back paper, and use provided fasteners to mount in place. Be sure to clean the area with alcohol wipe before install.
- Use images below as reference for mounting the magnetic switch sensor.
- Secure harnesses using stud mounted zip ties.

Top part of door frame






Walk-In Topper Magnet Bracket Install

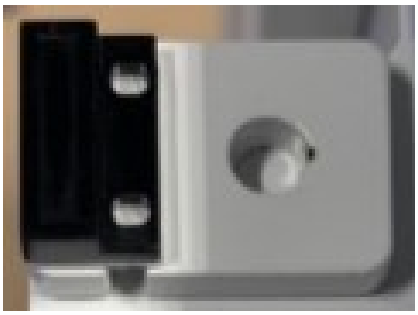

- Use the small bracket for the rear walk-in doors and use BAG0989 to secure it.
- Locate the 77230 bracket spacer and the magnet switch.
- Peel the sticky off the magnet and stick it to the bracket as shown in the images to the left. Make sure the holes in the magnet line up with the ones on the bracket.
- Locate the screws and place the bracket with the magnet switch on it and secure it to the top of the walk-in door as pictured below.
- Make sure the magnet switches line up so that they will properly work.
- Test functionality of magnetic switches.

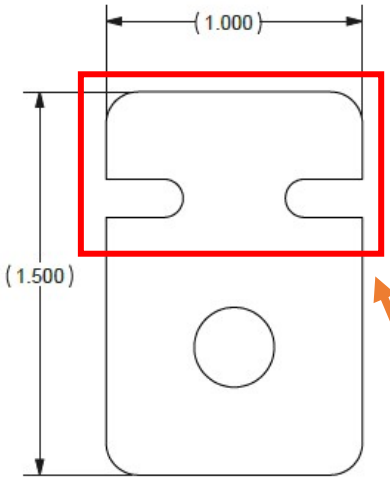

Place the magnet in the location of the red rectangle. Make sure the holes line



NOTE: The hole in the small bracket is not for mounting. This hole was designed for paint line purposes.


After install check:
Shut the topper door and ensure the magnetic switches are aligned. The two magnets must meet, face-to-face when the door is shut.

Line the bracket with the magnet switch with these



Walk-In Topper Magnet Bracket Install Cont.

Note: The brackets should be lined up as shown below. They should also be spaced apart as shown on the measuring tape in the photo.

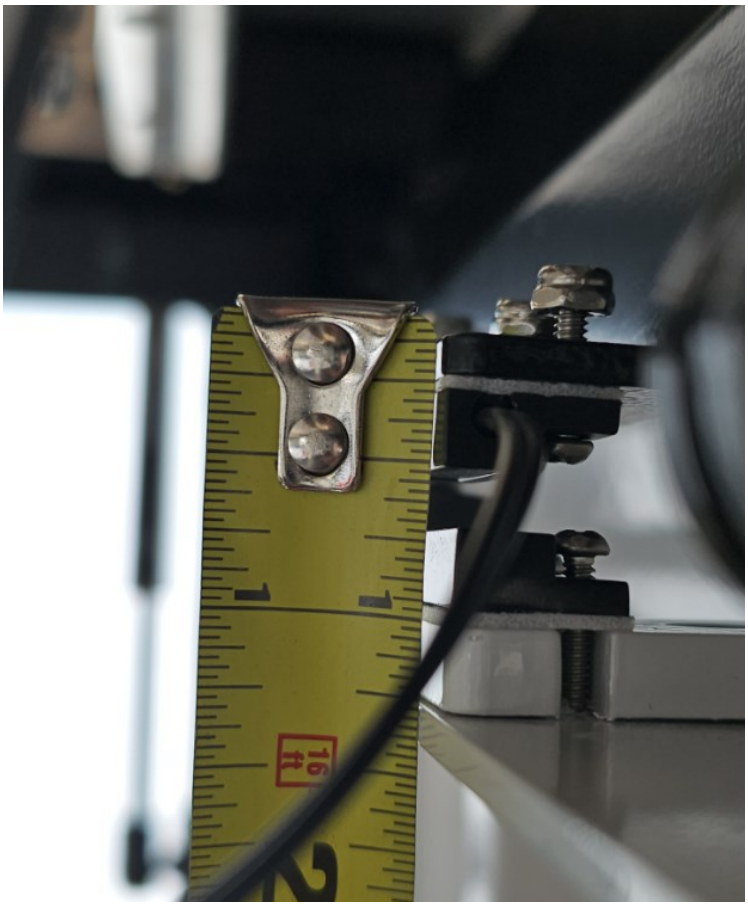





Step 10:

Identify the door shocks on the topper doors. Both the driver and passenger sides should have pre-existing holes on the shock mounts for placing the magnetic switch.

Start by cleaning the shock mount using an alcohol pad and remove any plastic film covering the back of switch.



Step 11:


Locate driver's side door shock mounts. There will be two magnetic switches mounted to each side of the driver's side door shock mount.

Position the magnetic switch along with its wires and connector.

Place switch flush with edge of door shock mount as shown in the image. The driver side switch will have wires facing downward. The rear side switch will have wires facing upward.

Using a screw driver secure the magnetic switches are in proper position.

Use the provided image as reference.

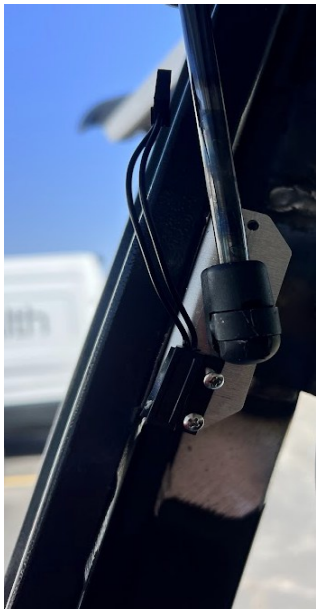



Step 12:

Locate passenger side door shock mount. Secure magnetic switch on passenger side mount with wires facing upward.

Make sure magnetic switches are face to face with one another! If they are not aligned they will not function properly. Refer to image for proper alignment.



Step 13:

After mounting magnetic switches, begin to pull harness through grommet in truck bed. Connect magnetic switches to harness.

Pull the wiring upward to secure along the inside with zip ties.

Using zip-tie sticky backs, secure harness along inside of topper. Continue routing the harnesses in the corner of the topper, to the top front of the first roof bow. (Shown in red)

Use stud mounted zip ties to secure harness 71905 from door shock upward.


Step 14:

The harness end with connectors should end up between the first roof bow and the door frame on the driver side. See picture below for reference. Use the holes in the roof bows to secure wiring with zip ties.

Be sure to not route any wires through holes in roof bows.

Be sure to clean all surfaces with alcohol wipes before placing sticky backs.

Can use stud mounted zip ties on inner channel near door shocks to secure harness.

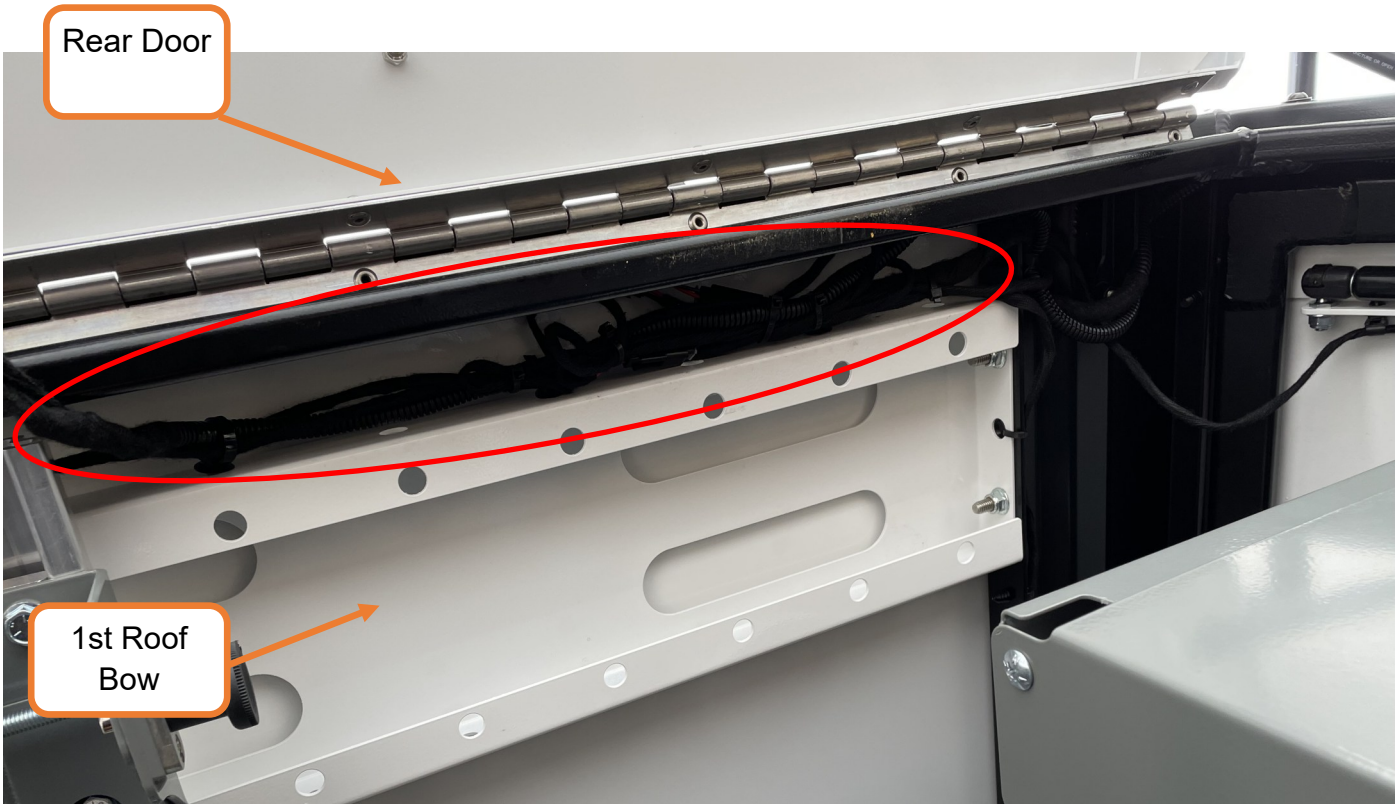







Step 16:

A) After routing 71905 underneath the vehicle, towards the rear, secure the bundle in the middle of the roof bows closest to the doors.

Route the longest lead of magnetic switch harness to the **driver side** switch mount. Image to the left.

When routing keep the harness tucked up into the area with the harness. Use stud mounts to secure harness, if there is no stud mounts to connect to, use sticky back mounting.

Connect end of magnetic switch to matting connector end on harness. (Shown in Red)



B) With the two short leads plug one end into the rear magnetic sensor, the other add 80371 extension harness to it to reach the passenger side magnetic sensor.

(Shown in Red)



80371






Step 15:

Install the lights.

Driver's Side: Integrated Truck Solution Kit

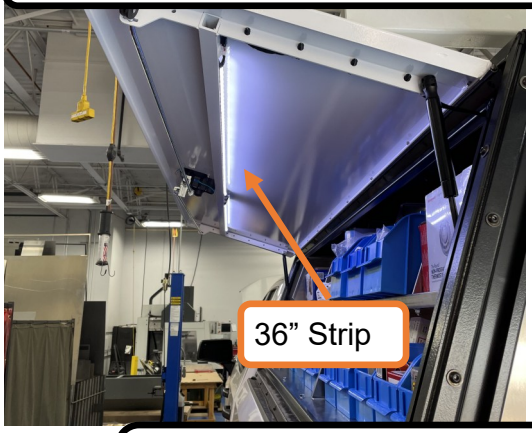

Open the topper doors that are requiring lights.

Locate the square tube running horizontal across the door. The side facing the interior of the top will be the side you will secure the lights to.

Using the alcohol pads provided in the boxes, clean the entire inside wall of the square tube where the lights will stick to before installing. Be sure to let the tube dry.

Passenger's Side: Integrated Truck Solution Kit




Be sure to have the larger connector end of the lights towards the rear for connecting into the roof bow harnesses.

On the drivers side, install (1) 36" strip lights as center as possible between the front and rear sides of the door.

For the passenger side, install (1) 36" strips, following the same instructions as above.

Driver's, Passenger, or Rear Door: Other Interior Light Kits

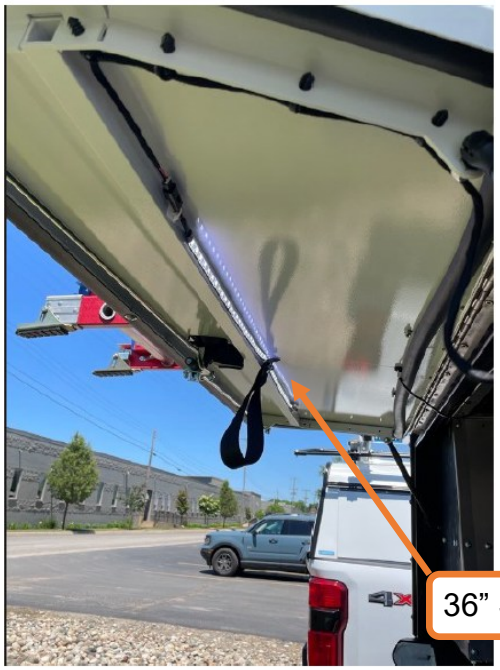

Only install the lights on the sides that are needed. Not every door will always have lights. These will vary on customer asks. Refer to page 4 for kit part numbers and components.

Be sure to have the larger connector end of the lights towards the rear for connecting into the roof bow harnesses.

Place a small sticky back square zip tie mount at each end of the strips to secure the connector to the topper.

Step 16:

Locate the (2) dome lights.

Be sure to clean the area that the lights will stick to carefully before installing. Use the alcohol pad provided in the boxes and let it dry before installing.


If there will be an interior ladder rack installed, stagger the dome lights on the roof bows like shown. If not then please center the lights.


Note: Don't use the self tapper screws. Drill 2 holes and use nuts and bolts to secure Dome lights.




Please secure dome lights with (FAS-0022 10-24X0.75) screw, (FAS-0029 10-24) nut, and (FAS-0027) washer on roof bow.



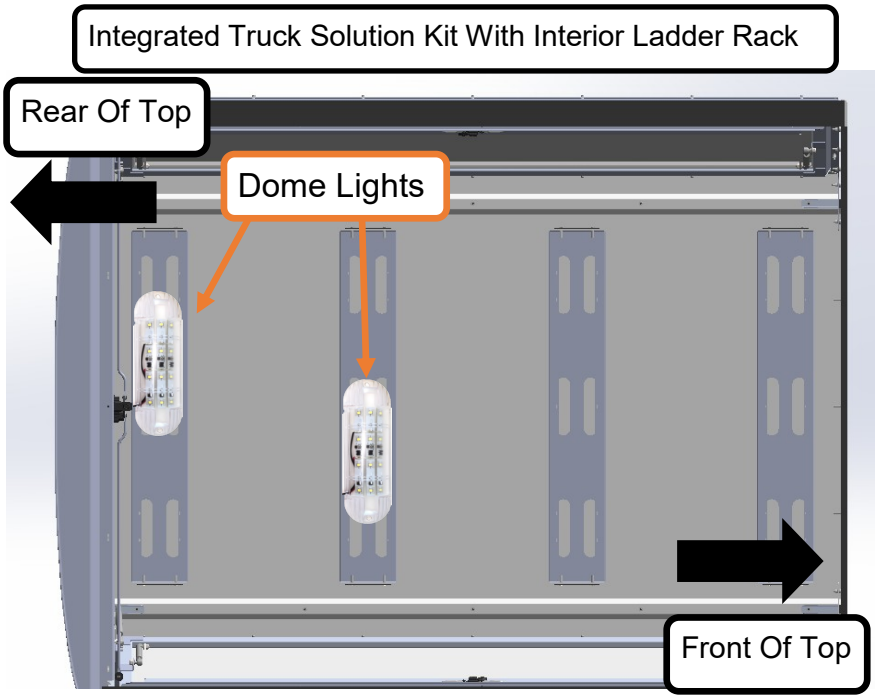

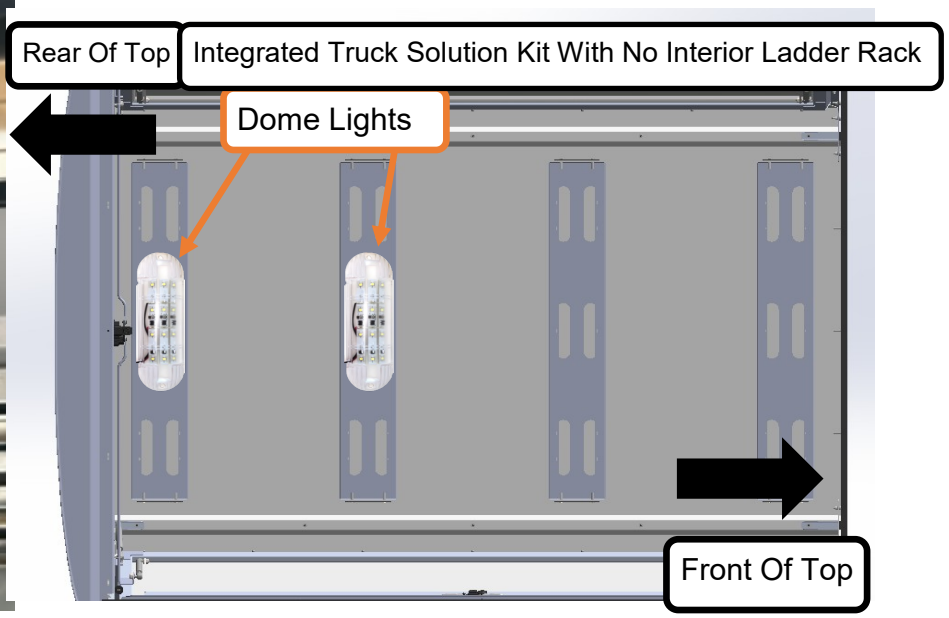

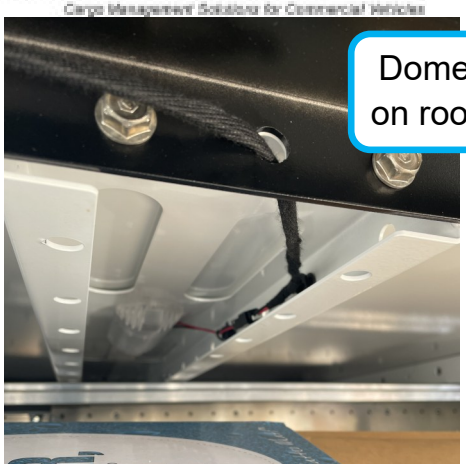







Step 17: Roof Bow Harness Routing

Use roof bow harness #1 (63481) for routing the 1 of the 2 dome lights and the strip lights on the driver, passenger, and rear side door.

Use roof bow harness #2 (63482) for routing to 1 of the 2 dome lights

Utilize the existing holes in the doors and roof bows for securing the zip ties to. Clean topper surface in corner areas with alcohol pads. Begin to secure the harness using provided self adhesive tie mounts where necessary.

***IMPORTANT:

Ensure while securing wiring to avoid all sharp edges. (Shown in image 3, circled in red). When wiring from the light strips to the roof bow, avoid sharp edges at the ends.

When both side doors are open, allow very little slack on the wire, ensuring it is taut. However, while pulling wiring taut on the strip lights ensure the doors open and close without damaging the wires.

Route the harnesses to the TLM harness (74546) and plug them in.

Secure all the wires with zip ties and tuck neatly as possible between the first roof bow and the rear door edge.

Be sure all wiring is secured with zip ties.



Step 18:


Continue to route power to light harness PN 74546 to magnetic switches mounted on door shock mounts.

After plugging in the magnetic switches, be sure to secure the excess wiring using provided cable ties.

Once magnetic switches and all lights are plugged in, lights should be on.

To test and see if the magnetic switches are close enough to one another, open the tailgate of the truck and shut all of the topper doors.

Once all of the topper doors are shut, all of the lights should be off. If one topper door is open, the lights will remain on. In order for the lights to turn off, all of the topper doors must be shut.

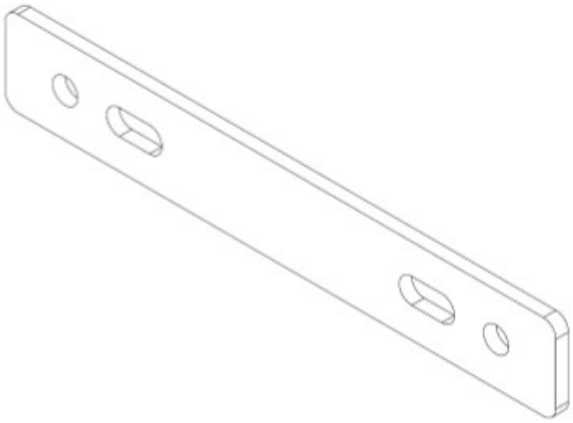

Magnetic switches should be no more than 1/4” of an inch away from one another.

*** If the lights do NOT turn off when all of the doors are shut, preform next step below.

Locate magnetic switch bracket spacer PN 73414-W.

Place one or **two bracket(s)** behind the pre-existing bracket on the topper door. This can be placed behind one bracket and then tested again.

Utilizing hardware provided, secure bracket behind magnetic switch bracket. This is ensure the mag-netic switches are close enough for connectivity.



A spacer may be placed behind all magnetic switch brackets on the rear door and two side doors if deemed necessary.

Magnetic switches mounted on topper door must be **NO MORE** than 0.3” apart from each when the door is shut.



Step 19:

Once all harnesses are connected, pull taught and secure from rear of topper towards cab

Coil up harness behind rear seat of cab where drill location was



Insert the fuse into the inline-fuse holder on the power harness. The install is now complete. Secure all wiring with zip ties. Re-attach all trim. Re-assure all pass through holes have been silicone. Double check the functionality of the lights and switches.

Be sure the lights turn on with the switch.



PART NUMBER
13905-0

ITEM DESCRIPTION: WIRE TIE, NYLON 40Lb, 8.5” BLACK



MANUFACTURER: WAYTEK, INC. or equivalent
MANUFACTURERS PART NUMBER: 21093M or 21093C

SPECIFICATIONS: STANDARD CABLE TIE
BLACK, NYLON
8-1/2” LONG
TENSILE STRENGTH: 40.0 LBS
21093M = 1,000 quanity
21093C = 100 quanity

SPECIAL NOTES: PART NUMBER IS BLACK.

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.

ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM

⚠ CAUTION ⚠

WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY	DATE DRAWN
MDG	10/26/2006
ECN NUMBER	ECN DATE
18021	11/13/2015
PART WEIGHT	REV. LEVEL
0.01 LBS.	D

PART NUMBER
13905-0

PART NUMBER
16347-0

ITEM DESCRIPTION: WIRE LOOM,1/4 ID /FT



MANUFACTURER:
MANUFACTURERS PART NUMBER:

SPECIFICATIONS: CONVELUTED SPLIT LOOM, 1/4" ID /FT
NYLON OR POLYETHYLENE

SPECIAL NOTES:

SUPPLIED BY: THIS ITEM IS INSTALLER SUPPLIED!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.

ADRIAN STEEL
VAN AND PICKUP EQUIPMENT
906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM

⚠ CAUTION ⚠

WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY	DATE DRAWN
JLG	05/02/2006
ECN NUMBER	ECN DATE
2957	05/01/1992
PART WEIGHT	REV. LEVEL
0.01 LBS.	A

PART NUMBER
16347-0

PART NUMBER
26618-0

ITEM DESCRIPTION: SILICONE, 1oz. TUBE



SPECIFICATIONS:
SU5005 RTV SILICONE
1oz. TUBE
CLEAR OR EQUIVILENT
SELF PIERCING CAP

SPECIAL NOTES:

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.

ADRIAN STEEL
VAN AND PICKUP EQUIPMENT
906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM

⚠ CAUTION ⚠

WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY	DATE DRAWN
JLC	7/21/2001
ECN NUMBER	ECN DATE
16551	7/22/2014
PART WEIGHT	REV. LEVEL
0.02 LBS.	C

PART NUMBER
26618-0

PART NUMBER
26618-0

ITEM DESCRIPTION: SILICONE, 1oz. TUBE



SPECIFICATIONS:
SU5005 RTV SILICONE
1oz. TUBE
CLEAR OR EQUIVILENT
SELF PIERCING CAP

SPECIAL NOTES:

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.

ADRIAN STEEL
VAN AND PICKUP EQUIPMENT
906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM

⚠ CAUTION ⚠


WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY	DATE DRAWN
JLC	7/21/2001
ECN NUMBER	ECN DATE
16551	7/22/2014
PART WEIGHT	REV. LEVEL
0.02 LBS.	C

PART NUMBER
26618-0

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING) **N/A**
LOAD/RATING REQUIREMENT **N/A**
MATERIAL REQUIREMENT **N/A**
PACKAGING REQUIREMENT **N/A**
OTHER REQUIREMENTS **(1) LED LIGHT WITH 12 LED GROUPED IN THREE ROWS** **(2) TEK SCREWS INCLUDED**

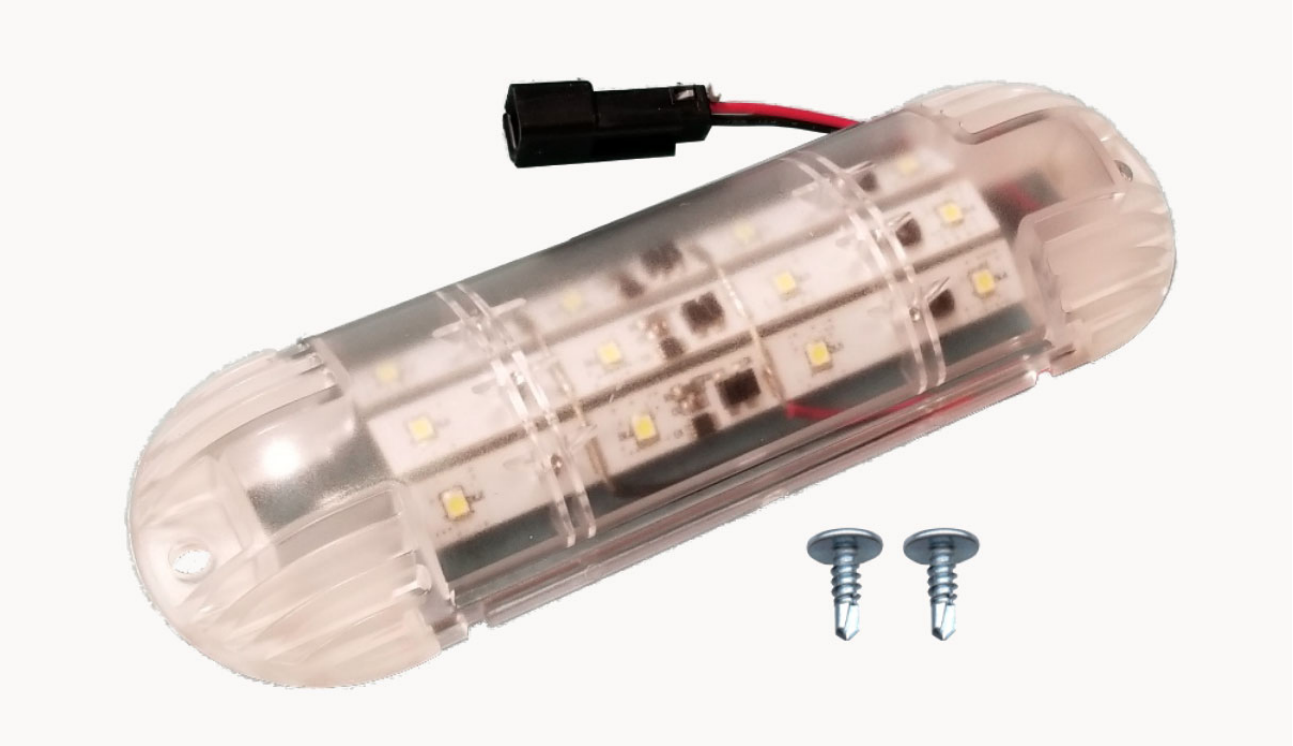

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std. Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: **24359**

CURRENT ECN: **25886**

ECN DESCRIPTION:

UPDATE SUPPLIER PART #

REVISED BY: **A. ELLISON**

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER

OBERTON ELECTRONICS / ECHOMASTER FLEET SOLUTIONS

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER

8018-6000 / STL40489-3

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL®

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL: **B**

MAT'L USED: **PURCHASED**

DESIGNED BY: **A. ELLISON**

DESCRIPTION: **MODULE DOME LED LIGHT**

WEIGHT (Lbs.): **.50**


SEGMENT CODE: **EAU**

PART NUMBER: **63480**


PURCHASED COMPONENT KEY FEATURES


DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING) **N/A**
LOAD/RATING REQUIREMENT **N/A**
MATERIAL REQUIREMENT **N/A**
PACKAGING REQUIREMENT **N/A**
OTHER REQUIREMENTS • **Roof Bow #1** ***(Cargo area, first Roof bow after partition)*** • ***(5x) WIRE TIE W/CHRISTMAS TREE*** • ***1100mm Length***



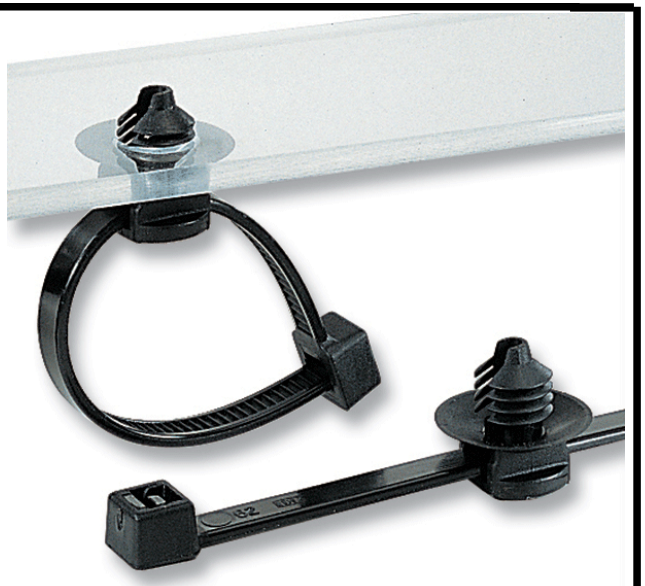

(5x)

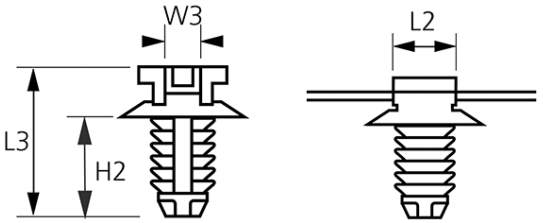

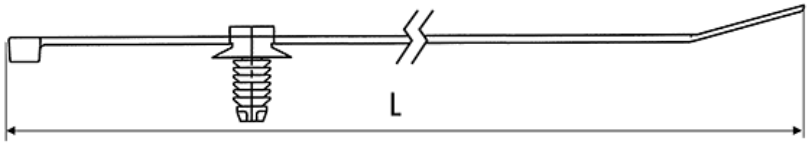

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std.
Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: 24359

CURRENT ECN: 24359

ECN DESCRIPTION:

QE8539 RELEASE MODULAR DOME LIGHTING

REVISED BY: **MJF**

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
ECHOMASTER FLEET SOLUTIONS

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
P-HARRB1

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
YES

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL **A**

MAT'L USED: **PURCHASED**

DESIGNED BY: **MJF**

DESCRIPTION: **ROOF BOW HARNESS #1**

WEIGHT (Lbs.): **.50**

SEGMENT CODE: **EAU**

PART NUMBER: **63481**

PURCHASED COMPONENT KEY FEATURES


DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS


- **Roof Bow #2**
- **(5x) WIRE TIE W/CHRISTMAS TREE**
- **1570mm Length**



P-HARRB2

(5x)

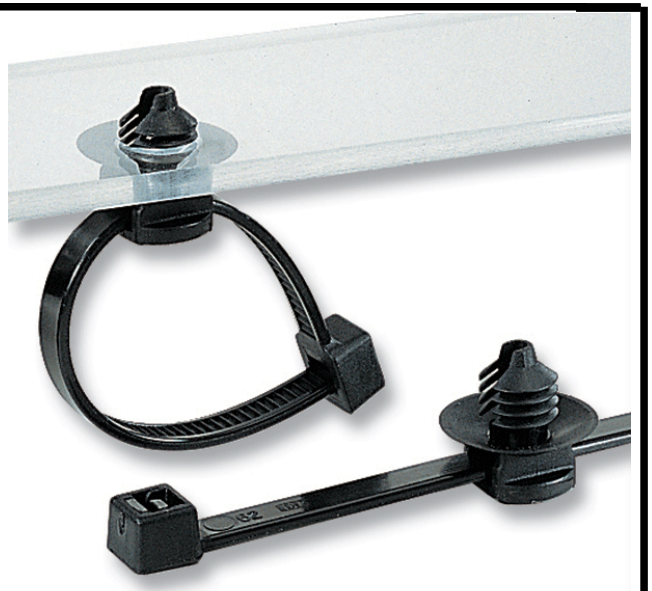

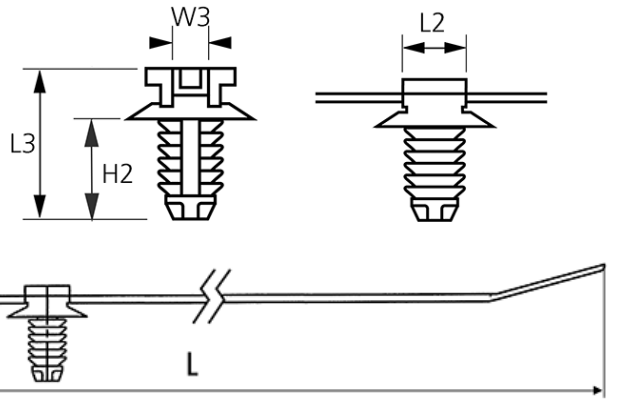

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std. Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: 24359

CURRENT ECN: 24359

ECN DESCRIPTION:

QE8539 RELEASE MODULAR DOME LIGHTING

REVISED BY: **MJF**

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
ECHOMASTER FLEET SOLUTIONS

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
P-HARRB2

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
YES

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL **A**

MAT'L USED: **PURCHASED**

DESIGNED BY: **MJF**

DESCRIPTION: **ROOF BOW HARNESS #2**

WEIGHT (Lbs.): **.50**

SEGMENT CODE: **EAU**

PART NUMBER: **63482**

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING) **N/A**
LOAD/RATING REQUIREMENT **N/A**
MATERIAL REQUIREMENT **N/A**
PACKAGING REQUIREMENT **N/A**
OTHER REQUIREMENTS

Note:

Connector / Terminal Configuration:

- **MALE 2 PIN ON ONE END**
- **FEMALE 2 PIN ON THE OPPOSITE END.**

BOM:

Item	Qty.	Description
1	1	36" WHITE LED STRIP LIGHT W/ADHESIVE
2	2	4" ZIP TIE
3	2	CABLE TIE MOUNT
4	1	ALCOHOL PAD



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std.
Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: 24697

CURRENT ECN: 25778

ECN DESCRIPTION:
Revise Modular Lights With New 3M Adhesive

REVISED BY: JLT

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
CL-36BLED rev.B

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
YES

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL®

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL **B**

MAT'L USED:

DESIGNED BY: **J. TYNER**


DESCRIPTION: **MODULE DOME LED STRIP 36"**

WEIGHT (Lbs.): **0.3**


SEGMENT CODE: **EAU**

PART NUMBER: **65347**

Notes	
1	3:1 Adhesive Heat Shrink to be placed over LED Solder Joints
2	5925 Adhesive Liner Edges to be exposed next to heat shrink

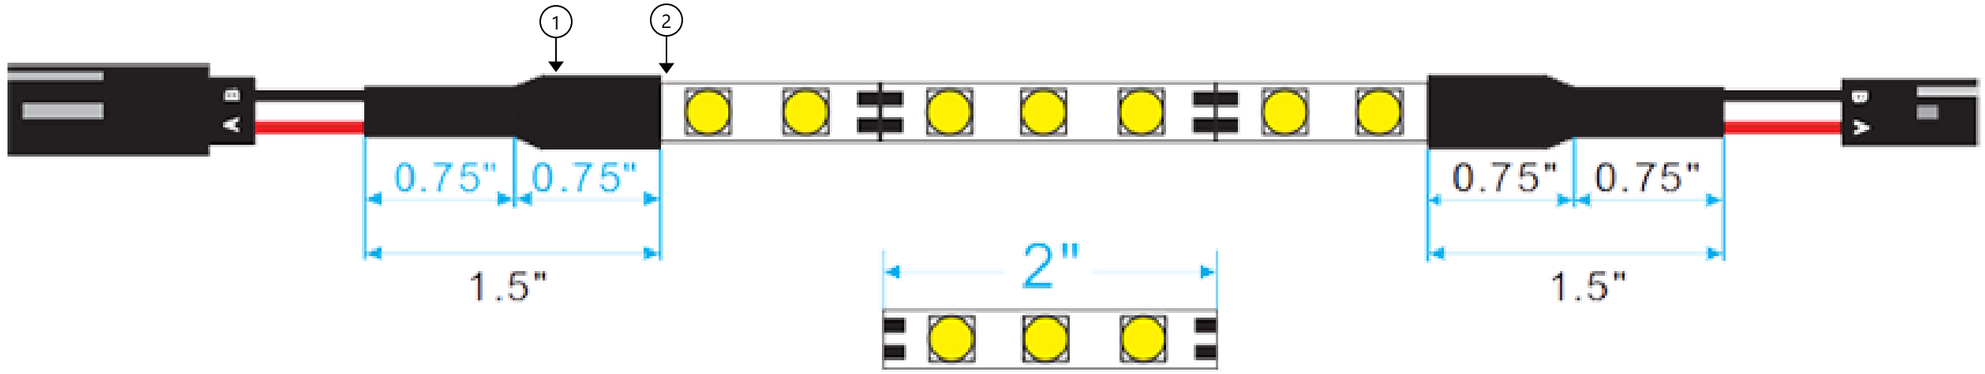

12"=6X
24"=12X
36"=18X
48"=24X

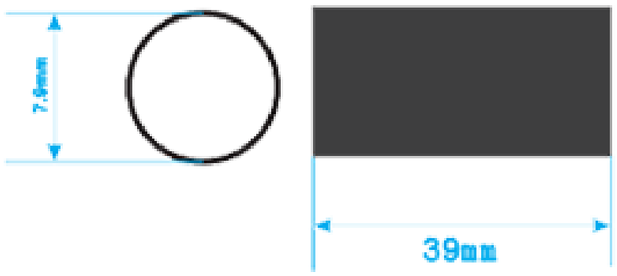

Revisions			
Rev.	Date	Author	Description
A	11/1/21	Bennet Fisher	Initial Drawing
B	7/27/2022	Bennet Fisher	Adhesive changed to VHB 5925

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN MILLIMETERS [INCHES]
TOLERANCES: ±5MM

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AAMP GLOBAL. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AAMP GLOBAL IS PROHIBITED.


	Name	Date
Designed By	Bennet Fisher	11/1/21
Engineering Approval		
Manufacturing Approval		
Revision Approval		
Quality Assurance		


AAMP
ADVANCING VEHICLE TECHNOLOGY


Part Number: CL-36BLED	Revision: B
Description: 36" LED Strip	Sheet: 1

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING) **N/A**
LOAD/RATING REQUIREMENT **N/A**
MATERIAL REQUIREMENT **N/A**
PACKAGING REQUIREMENT **N/A**
OTHER REQUIREMENTS **N/A**

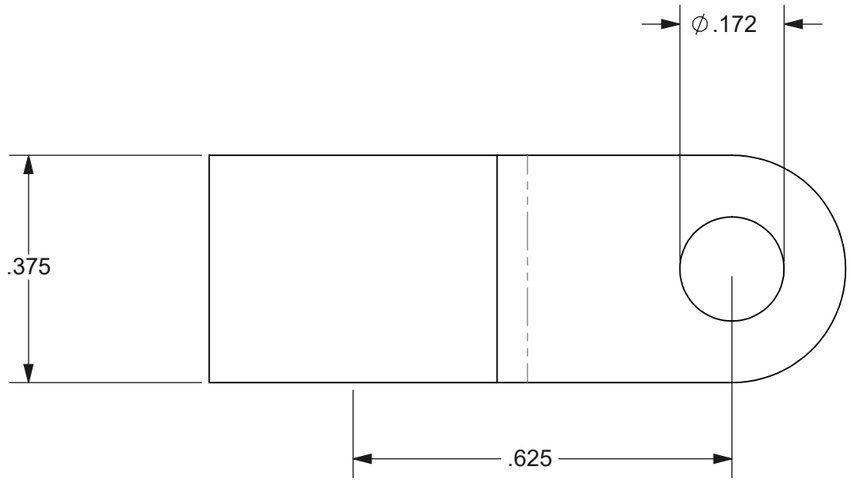

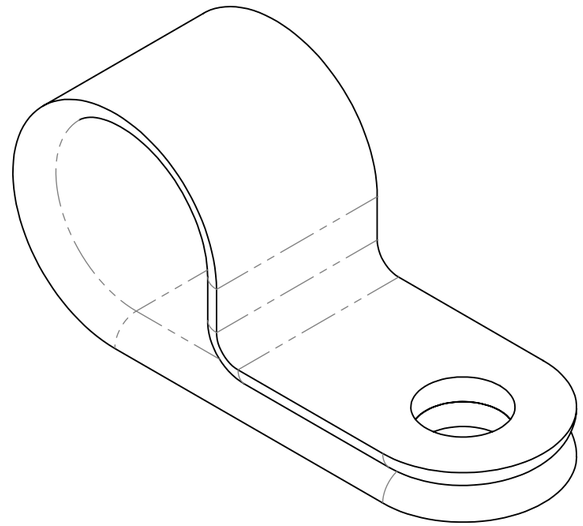

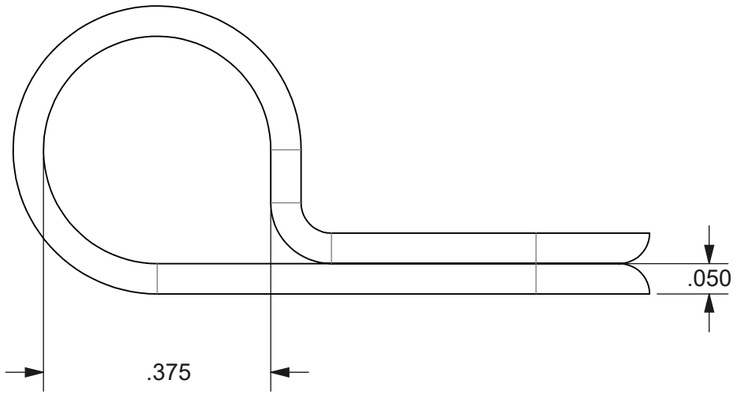

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std.
Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: **25297**

CURRENT ECN: **25334**

ECN DESCRIPTION:

UPDATE SUPPLIER TO SAY EQUIVALENT

REVISED BY:

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
MCMASTER-CARR OR EQUIVALENT

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
8876T38 OR EQUIVALENT

COLOR (ONLY LIST IF COLOR SPECIFIC)
BLACK

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL®

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL **B**

MAT'L USED:

DESIGNED BY: **E.BURKE**

DESCRIPTION: **Nylon Plastic Loop Clamp**

WEIGHT (Lbs.): **0.001**

SEGMENT CODE: **HDW**

PART NUMBER: **66843**

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING) **N/A**
LOAD/RATING REQUIREMENT **N/A**
MATERIAL REQUIREMENT **N/A**
PACKAGING REQUIREMENT **N/A**
OTHER REQUIREMENTS **TIMER LIGHTING MODULE FOR INTERIOR PLUG AND PLAY LIGHTING ON TOPPERS**





THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std.
Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: **26830**

CURRENT ECN: **27950**

ECN DESCRIPTION:

Update to REV B

REVISED BY: **JJC**

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
Stinger

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
71902

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL®

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL **B**

MAT'L USED: **PURCHASED**

DESIGNED BY: **E.BURKE**

DESCRIPTION: **TIMER LIGHTING MODULE**

WEIGHT (Lbs.): **0.2**

SEGMENT CODE: **ELE**

PART NUMBER: **71902**







TLM

Timer/Low Voltage Module

INSTALLATION MANUAL

Thank you for purchasing the TLM

WHAT'S INCLUDED:

- Timer/Low Voltage Module
- Module Harness
- Cable Ties

COMPATIBLE ACCESSORIES:

- Vehicle-specific harness (P-VTM-xxx)
- Switch harness (VTM-SWx)
- High current harness (VTM-RLY)

FEATURES:

- Selectable timer durations - 30, 60, 90, and 120 minutes
- Selectable Low Voltage Sense shut off - 11.8V, 11.5V, and 11.2V
- Timer and Low Voltage sense work independently of each other
- Inputs for 2 momentary switches or a steady ground input
- 10A max current output

OPERATING INSTRUCTIONS:

DIP 1	DIP 2	V-Sense	DIP 3	DIP 4	DIP 5	Minutes	DIP 6
Up	Up	OFF	Timer	Up	Up	30	ON (Down) Steady Ground Input
Up	Down	11.2V	ON (Down)	Up	Down	60	
Down	Up	11.5V	OFF (Up)	Down	Up	90	OFF (Up) Momentary Ground Input
Down	Down	11.8V		Down	Down	120	

DIP 1-2
If Voltage Sense feature is turned ON, low voltage shut down will occur when the input voltage to the TLM module drops below the V-Sense setting. To eliminate false triggers, there is a 20 second delay before shut down.
If Voltage Sense is turned OFF, input voltage level will not be monitored.

NOTE: Voltage Sense takes precedence over Timer.

DIP 3
If the Timer feature is turned ON and switch input is activated, output voltage will be provided for specified timer duration.

DIP 4-5
Switch settings will determine how long output will be active after the switch input is activated.

NOTE: If an invalid time is selected (e.g. Up, Up, Up or Down, Down, Down) the output will turn off 10 seconds after the switch input is activated.

DIP 6
Steady Ground Input Applications:
Applying ground to the switch input will activate the output, removing ground from switch input will disable the output. If ground is applied once again, the output will be re-activated, and the timer will reset/start over.

Momentary Ground Input Applications:
Applying a pulsed ground to the switch input will activate the output, a seond pulsed ground to the switch input will disable the output. If a pulsed ground is applied once again, the output will be re-activated, and the timer will reset/start over.

Steady Ground Input Applications

Trigger Input	Switch Input	Output	Voltage Sense (ON)	Timer (ON)
Active	N/A	ON	Monitoring Input Voltage	N/A
Not Active	N/A	OFF	N/A	N/A
Not Active	Activated (Input Grounded)	ON	Monitoring Input Voltage	Timer Starts
Not Active	Deactivated (Ground Removed)	OFF	N/A	Timer Off
Not Active	Activated (Input Grounded)	ON	Monitoring Input Voltage	Timer Starts

Momentary Ground Input Applications


Trigger Input	Switch Input	Output	Voltage Sense (ON)	Timer (ON)
Active	N/A	ON	Monitoring Input Voltage	N/A
Not Active	N/A	OFF	N/A	N/A
Not Active	Activated (Pulsed)	ON	Monitoring Input Voltage	Timer Starts
Not Active	Activated (Pulsed)	OFF	N/A	Timer Off
Not Active	Activated (Pulsed)	ON	Monitoring Input Voltage	Timer Starts

In the tables above "Trigger Input" refers to the Positive Trigger Input and Negative Trigger Input of the module.

If a Trigger Input is active, its function takes precedence. Attempting to activate the Switch Input while a Trigger Input is active will have no effect on the modules output.

WIRING DIAGRAMS:

TLM Harness

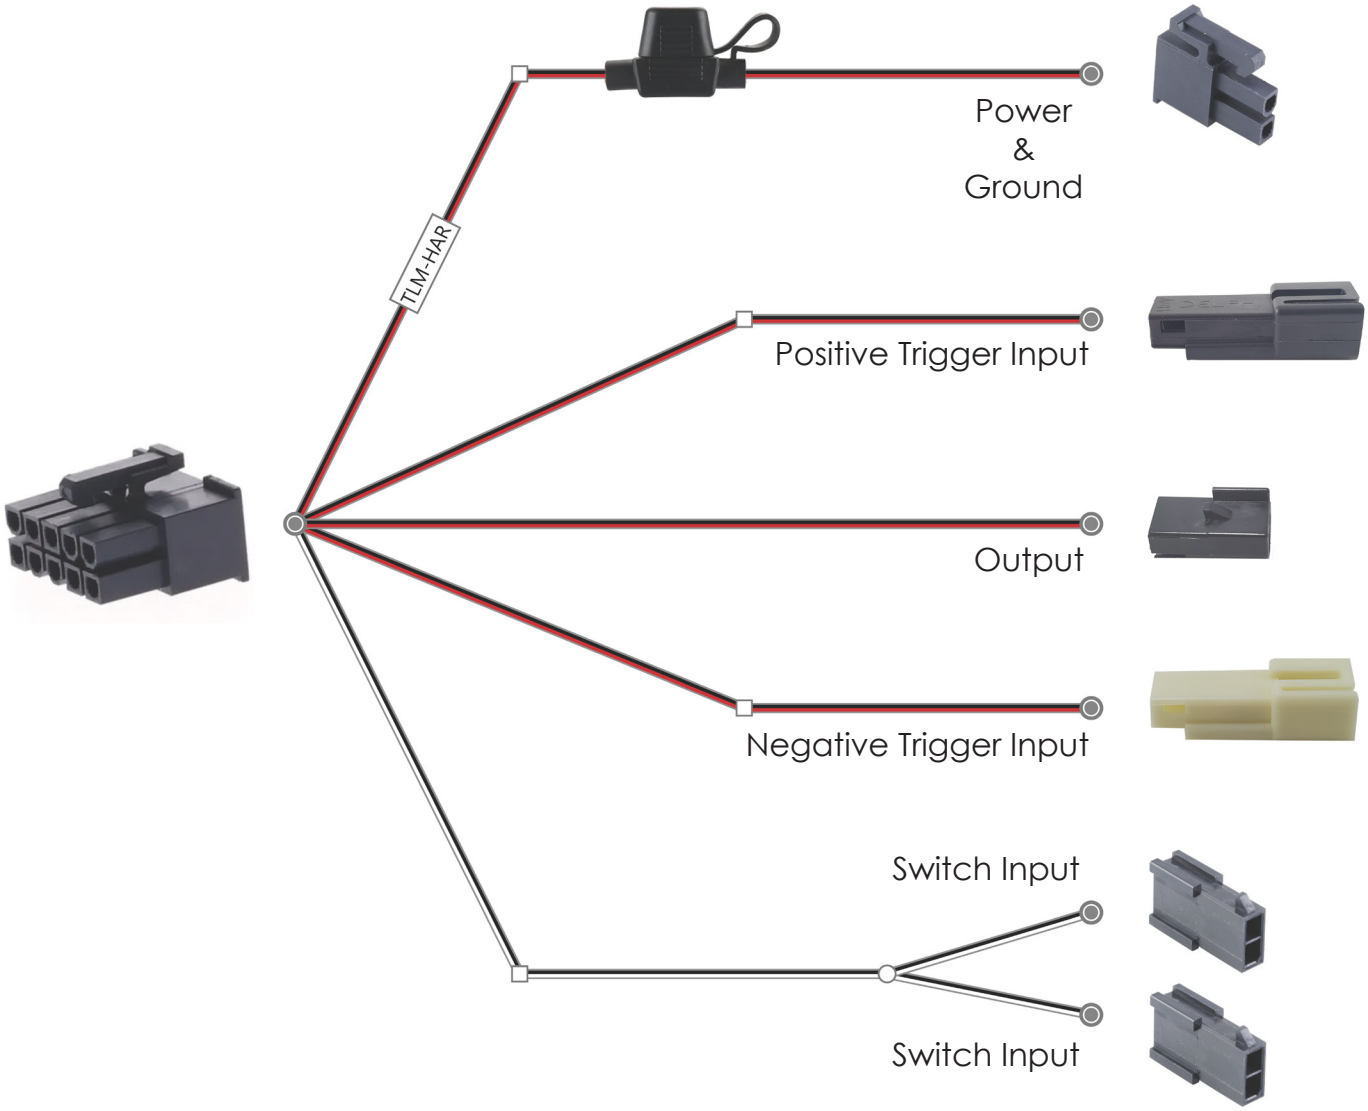


If necessary, connectors may be removed for hardwire applications.

Positive Trigger Input: Applying 12V to Red wire will activate output
Negative Trigger Input: Applying ground to Black wire will activate output
Switch Input: Closing loop between switch input wire leads will activate output

VTM-RLY (Optional Harness)

For larger current demands, use the optional VTM-RLY and connect to power and ground, along with the TLM harness. VTM-RLY supports up to 15A.

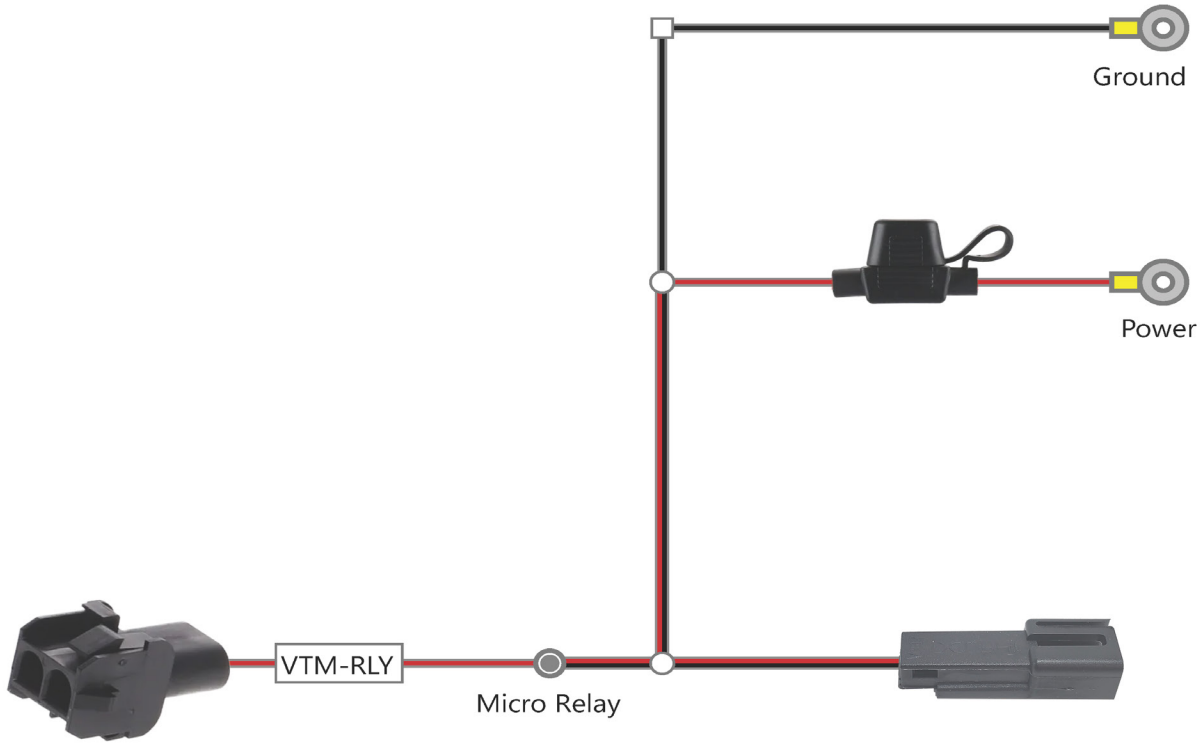

VTM-RLY Output connects to P-VTMxxx harness for vehicle lighting

VTM-RLY Input connects to the output from the TLM harness

Troubleshooting Table:

Output does not activate when Positive or Negative Trigger Input is activated	Check fuse on TLM harness	Replace fuse if it is bad
	Check power and ground connections	Fix loose or bad wire connection
	Confirm module has power and ground at its input	Replace module or damaged harness if necessary
Output does not activate when Switch Input is activated	Confirm DIP 6 on module matches switch type being used	Change DIP 6 setting to match switch type
	Confirm switch being used is not defective	Replace bad switch if necessary
Switch Input - Irregular behavior	Output does not turn off with switch	Check DIP 6 and confirm it matches switch type
		Confirm switch is not damaged or defective; replace if necessary
	Output activates for 5 seconds then turns off	Input voltage to module is below Voltage Sense setting



Phone – 866-931-8021 (option 3)

E-Mail – support@stingersolutions.com

StingerSolutions.com

REV. B

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING) **N/A**
LOAD/RATING REQUIREMENT **N/A**
MATERIAL REQUIREMENT **N/A**
PACKAGING REQUIREMENT **N/A**
OTHER REQUIREMENTS **PLUG AND PLAY POWER HARNESS FOR TOPPER SILVERADO AND RAM KITS** **POWER FROM BATTERY TO TLM MODULE**



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std.
Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: **26830**

CURRENT ECN: **26830**

ECN DESCRIPTION:

RELEASE FOR MARKET FILL

REVISED BY: **EMB**

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
71903

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL®

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL **A**

MAT'L USED: **PURCHASED**

DESIGNED BY: **E.BURKE**

DESCRIPTION: **HARN,POWER TLM BATTERY 4'**

WEIGHT (Lbs.): **0.2**

SEGMENT CODE: **ELE**

PART NUMBER: **71903**

Bill of Materials


Id	Type	Manufacturer	Part Number	Quantity
1	Wire		16 AWG Red GXL	1220 mm
2	Wire		16 AWG Black GXL	1220 mm
3	Ring Terminal	Molex	19164-0027	2
4	Connector	Molex	46993-0211	1
5	Contact	Molex	39-00-0081	2
6	Splice		ATM Fuse Holder	1
7	Corrugated Tubing		0.25" Nylon Split Wall	1370 mm
8	Fuse	Littelfuse	297010.WXNV	1
9	Cable Tie	Hellerman nTyton	T30LL0M4	5
10	Label		Heat Shrink Style Label	1


Coverings

Id	Assembly
[7]	

Notes

1. Lock tape loom behind connector with Tesa 51036
2. Tape knuckle with Tesa 51036
3. Install 10A Mini Fuse

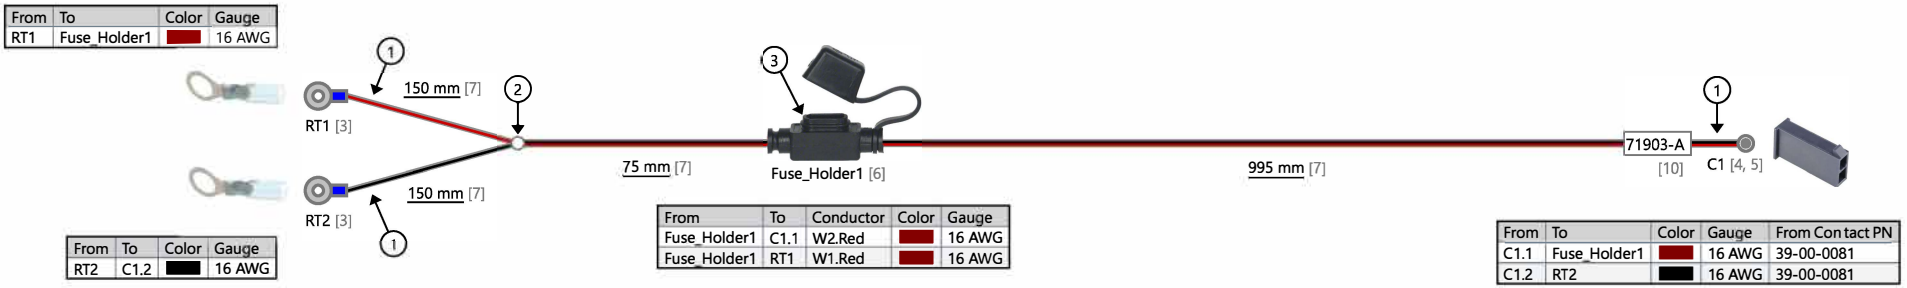

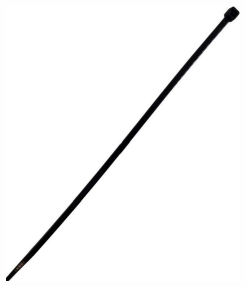

[9]

Revisions

Rev.	Date	Author	Description
A	10/29/2023	Bennet Fisher	Initial Drawing

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN MILLIMETERS [INCHES]
TOLERANCES: ±5MM

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AAMP GLOBAL. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AAMP GLOBAL IS PROHIBITED.

	Name	Date
Designed By	Bennet Fisher	10/29/2023
Engineering Approval		
Manufacturing Approval		
Revision Approval		
Quality Assurance		

AAMP
ADVANCING VEHICLE TECHNOLOGY

Part Number: 71903-A	Revision: A
Description: HARN, PWR TLM BATTERY 4'	Sheet: 1

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING) **N/A**
LOAD/RATING REQUIREMENT **N/A**
MATERIAL REQUIREMENT **N/A**
PACKAGING REQUIREMENT **N/A**
OTHER REQUIREMENTS **PLUG AND PLAY MAGNETIC SWITCHES FOR TOPPER INTERIOR LIGHTING** **BAG INCLUDES:** **3 MAGNETIC SWITCH SETS WITH WIRE LEADS AND CONNECTORS**



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std.
Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: 26830

CURRENT ECN: 26830

ECN DESCRIPTION:

RELEASE FOR MARKET FILL

REVISED BY: EMB

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
71907

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL®

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL
A

MAT'L USED: PURCHASED


DESIGNED BY: E.BURKE

DESCRIPTION: TLM MAGNETIC SWITCH P&P

WEIGHT (Lbs.): 0.02

SEGMENT CODE: ELE

PART NUMBER: 71907

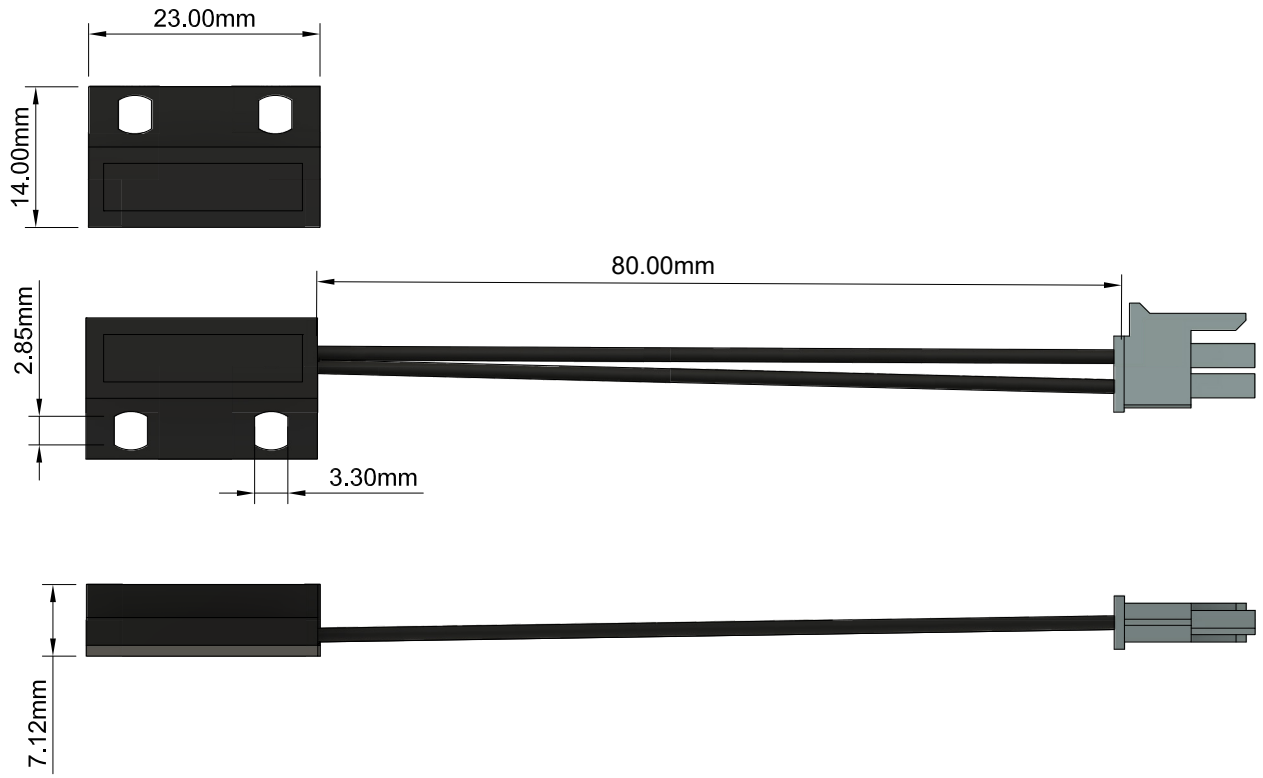

Magnetic Switch Type: N.O. (Normally Open)
Housing: Black ABS 15E1
Wire: 22AWG Black
Operating Distance: 15-20mm
Working Current: 0.5A
Operating Voltage: 0-110Vdc
IP Rating: IP67
Operating Temperature: -40 ~ 110°C
Reed Operating Temperature: -40 ~ 125°C
ABS Operating Temperature: -40 ~ 110°C
Package: 3pcs/kitted set

Dept.	Technical reference	Created by Bennet Fisher 4/12/2024	Approved by
		Document type	Document status
		Title: Magnetic Switch Part # 71907	DWG No.
			Rev. / Date of Issue / Sheet 1/1

OKI Open up your dreams

Reed Switch

Issue Date: Mar. 25, 2008

ORD324

■Features

- In order to achieve high electrical capacity and long, uses iridium with high harness and high melting point.
- When power is turned on maximum voltage can reach 200V.
- To maintain the contact stability of the contacts, the contacts are sealed in a glass tube filled with inert gas.

■Applications

- Position detection machine
- Rotation detection machine
- Vehicle electrical equipment
- Civil products


■Appearance




■Features

Contact material / contact form	Iridium / 1A	Unit
Pull in value (PI)	10 ~ 40	AT
Disconnect value (DO)	5 min	AT
Contact resistance value (CR)	100max	mΩ
Withstand voltage between contacts	250min	Vdc
Insulation resistance	1×10^{10} min	Ω
Electrostatic capacity between contacts	0.3max	pF
Contact rating	10	W
Maximum switching voltage	200	Vdc
Maximum switching current	0.5	A
Maximum power current	1	A
Release time	0.4max	ms
Bounce time	0.3max	ms
Recovery time	0.05max	ms
Shock proof	100G-6ms	---
Vibration resistance	50G (10 ~ 2kHz)	---
Operating temperature range	-40 ~ +125	°C
Life (5Vdc-1mA, impedance load)	1×10^{8}	---


■Dimensions (unit: mm)

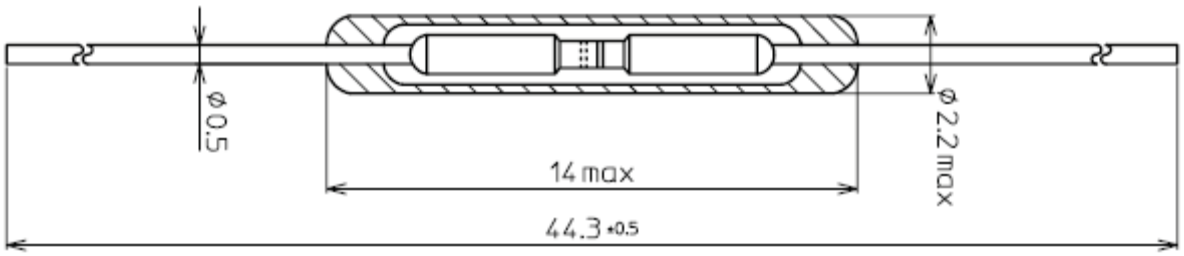


■Withstand voltage between contacts

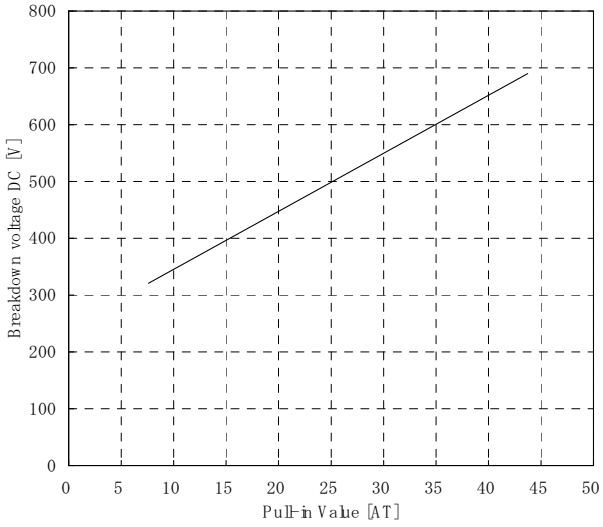



■Maximum switching voltage

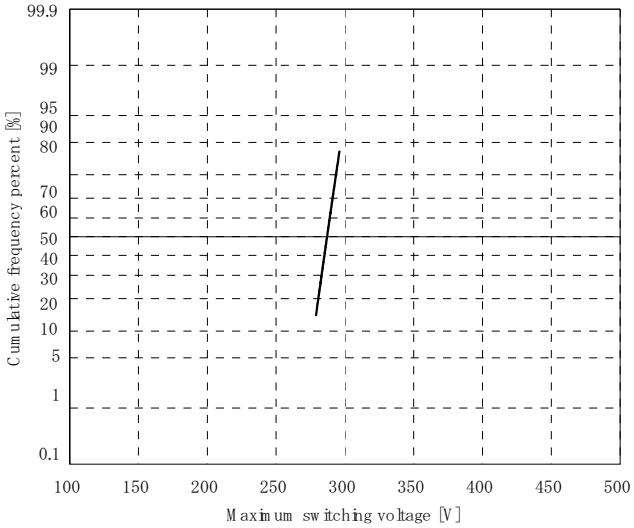

■Life test data: 5Vdc-1mA

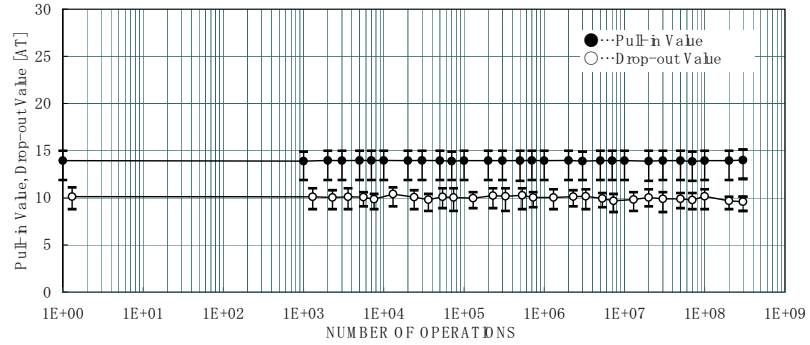


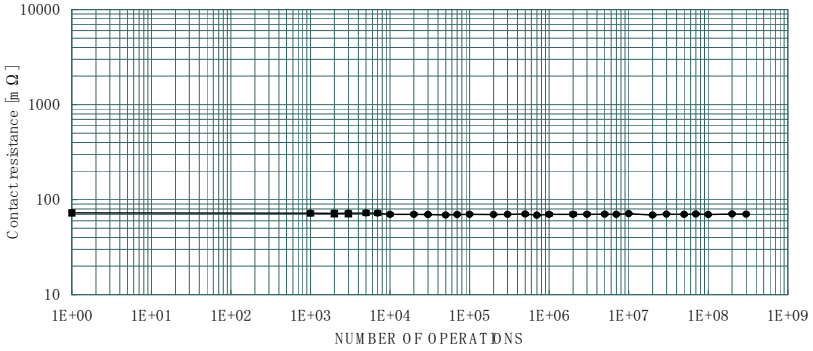

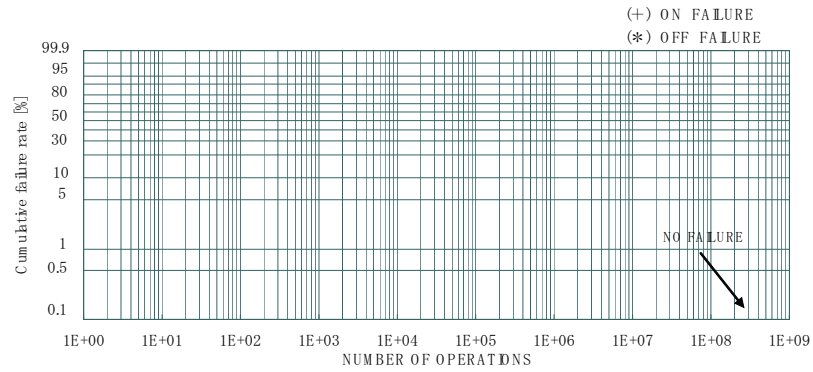

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING) **N/A**
LOAD/RATING REQUIREMENT **N/A**
MATERIAL REQUIREMENT **N/A**
PACKAGING REQUIREMENT **N/A**
OTHER REQUIREMENTS **N/A**

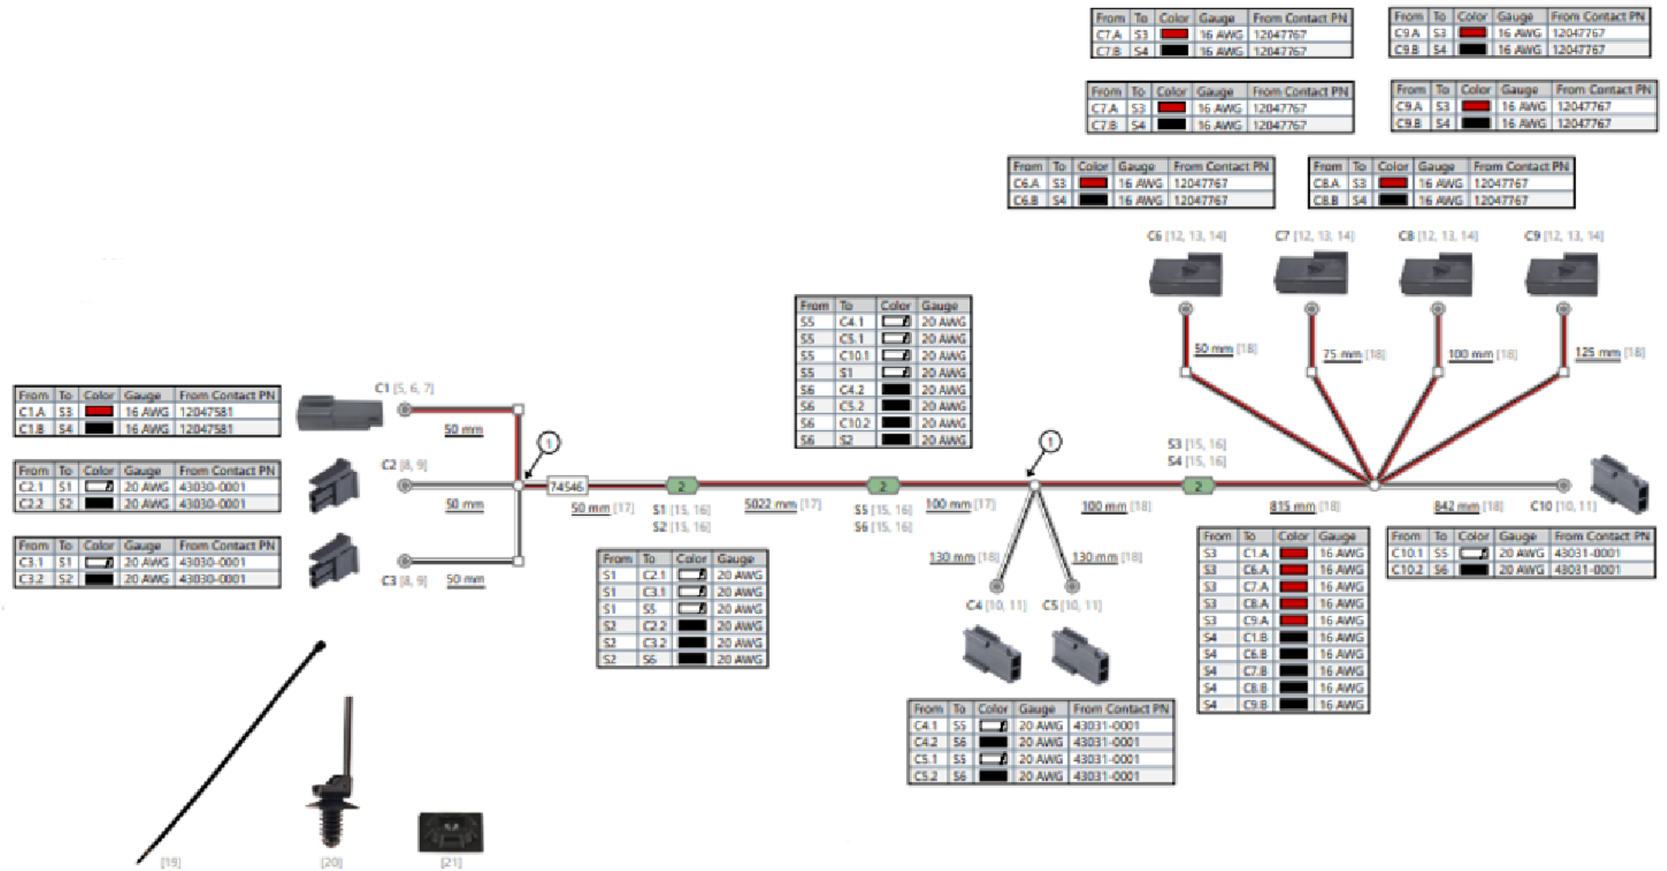

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

PRINTED DOCUMENT IS UNCONTROLLED

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std.
Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: 27529

CURRENT ECN: 27529

ECN DESCRIPTION:

RELEASE.

REVISED BY: **N/A**

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
STINGER

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL®

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL **A**

MAT'L USED: **$PRPSHEET:{Mat'l Used}**

DESIGNED BY: **JJC**

DESCRIPTION: **POWER FROM TLM TO LIGHTS HARNESS4.5 & 5 FT BEDS**

WEIGHT (Lbs.): **0.2**

SEGMENT CODE: **ELE**

PART NUMBER: **74546**

Bill of Materials

Id	Type	Manufacturer	Part Number	Quantity
1	Wire		20 AWG White-Black	7539 mm
2	Wire		20 AWG Black	7539 mm
3	Wire		16 AWG Red GXL	8932 mm
4	Wire		16 AWG Black GXL	8932 mm
5	Connector	Aptiv	12047663	1
6	Contact	Aptiv	12047581	2
7	Lock	Aptiv	12047665	1
8	Connector	Molex	43025-0210	2
9	Contact	Molex	43030-0001	4
10	Connector	Molex	43020-0201	3
11	Contact	Molex	43031-0001	6
12	Connector	Aptiv	12047662	4
13	Contact	Aptiv	12047767	8
14	Lock	Aptiv	12047664	4
15	Splice		Generic Splice	6
16	Heat Shrink	CYG	CB-DWT-3/16	6
17	Corrugated Tubing		0.375" Nylon Loom	5172 mm
18	Tape	Tesa	51608	
19	Cable Tie	HellermannTyton	T30LL0M4	35
20	Cable Tie with Mount	Hellermann Tyton	T50RTM250HSM4	10
21	Cable Tie Mount	Panduit	SGABM25-AV-C300	10
22	Label		Heat Shrink Style Label	1

Coverings

Id	Assembly
[17]	
[18]	

Notes

1. Lock tape end of loom with 51608


From	To	Color	Gauge	From Contact PN
C7.A	S3		16 AWG	12047767
C7.B	S4		16 AWG	12047767

From	To	Color	Gauge	From Contact PN
C9.A	S3		16 AWG	12047767
C9.B	S4		16 AWG	12047767

From	To	Color	Gauge	From Contact PN
C6.A	S3		16 AWG	12047767
C6.B	S4		16 AWG	12047767

From	To	Color	Gauge	From Contact PN
C8.A	S3		16 AWG	12047767
C8.B	S4		16 AWG	12047767

From	To	Color	Gauge
S5	C4.1		20 AWG
S5	C5.1		20 AWG
S5	C10.1		20 AWG
S5	S1		20 AWG
S6	C4.2		20 AWG
S6	C5.2		20 AWG
S6	C10.2		20 AWG
S6	S2		20 AWG

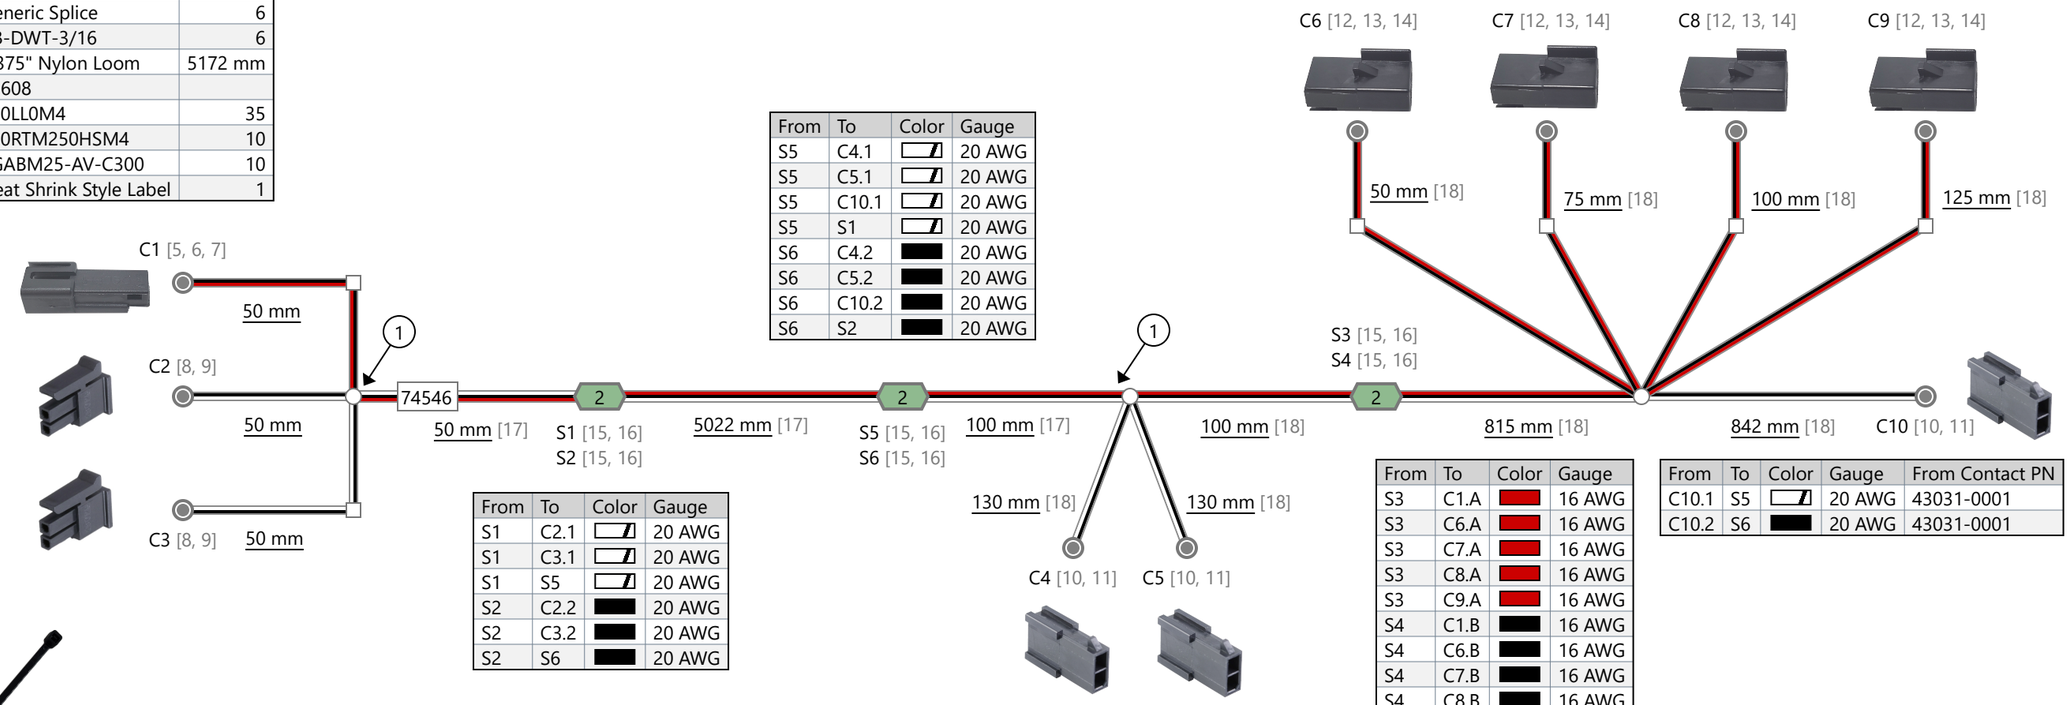

From	To	Color	Gauge	From Contact PN
C1.A	S3		16 AWG	12047581
C1.B	S4		16 AWG	12047581

From	To	Color	Gauge	From Contact PN
C2.1	S1		20 AWG	43030-0001
C2.2	S2		20 AWG	43030-0001


From	To	Color	Gauge	From Contact PN
C3.1	S1		20 AWG	43030-0001
C3.2	S2		20 AWG	43030-0001

From	To	Color	Gauge
S1	C2.1		20 AWG
S1	C3.1		20 AWG
S1	S5		20 AWG
S2	C2.2		20 AWG
S2	C3.2		20 AWG
S2	S6		20 AWG

From	To	Color	Gauge	From Contact PN
C4.1	S5		20 AWG	43031-0001
C4.2	S6		20 AWG	43031-0001
C5.1	S5		20 AWG	43031-0001
C5.2	S6		20 AWG	43031-0001

From	To	Color	Gauge
S3	C1.A		16 AWG
S3	C6.A		16 AWG
S3	C7.A		16 AWG
S3	C8.A		16 AWG
S3	C9.A		16 AWG
S4	C1.B		16 AWG
S4	C6.B		16 AWG
S4	C7.B		16 AWG
S4	C8.B		16 AWG
S4	C9.B		16 AWG

From	To	Color	Gauge	From Contact PN
C10.1	S5		20 AWG	43031-0001
C10.2	S6		20 AWG	43031-0001

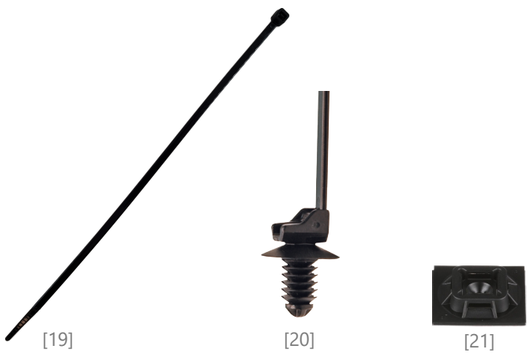
[19]

[20]

[21]

Revisions

Rev.	Date	Author	Description
A	07/09/2024	Bennet Fisher	Initial Drawing

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN MILLIMETERS [INCHES]
TOLERANCES: ±5MM

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AAMP GLOBAL. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AAMP GLOBAL IS PROHIBITED.

	Name	Date
Designed By	Bennet Fisher	07/09/2024
Engineering Approval		
Manufacturing Approval		
Revision Approval		
Quality Assurance		

Stinger® Commercial

Part Number: 74546	Revision: A
Description: 4.5'-5' Bed Hood Latch Security Harness	Sheet: 1