

Introduction / Comments:

Install Instructions For Exterior Plug & Play Lights For F150

Note:

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638)** before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.



Installation Instructions For Exterior Plug And Play Lights For F150

Table of Contents:


Torque requirements.....	2
Best Practices for Routing Through Firewall.....	3
Introduction Statement.....	4
Overall Harness Diagram.....	4
Tools needed.....	4
Harnesses/Components Needed (If Applicable).....	5
Component Placements.....	6
Overall Harness Routing.....	7-8
Beginning Install.....	9
Strobe Installation Instructions.....	12
Beacon/Lightbar Installation Instructions.....	16

*****TORQUE*****
Torque all strobe
fasteners to 10 in-lbs.
DO NOT OVER TIGHTEN

DO NOT MOUNT ON A
CURVED SURFACE

Best Practices to Follow when Routing Through Firewall:

- Create a drip loop with the harness being routed through the firewall as shown so that the water does not flow into the grommet.
- Make sure that the proper grommet for the hole being routed through is used so that there are no openings for water to get through.
- Use silicone after routing and apply around the grommet and wire to seal it. Make sure to let the silicone dry for 30 minutes to an hour.

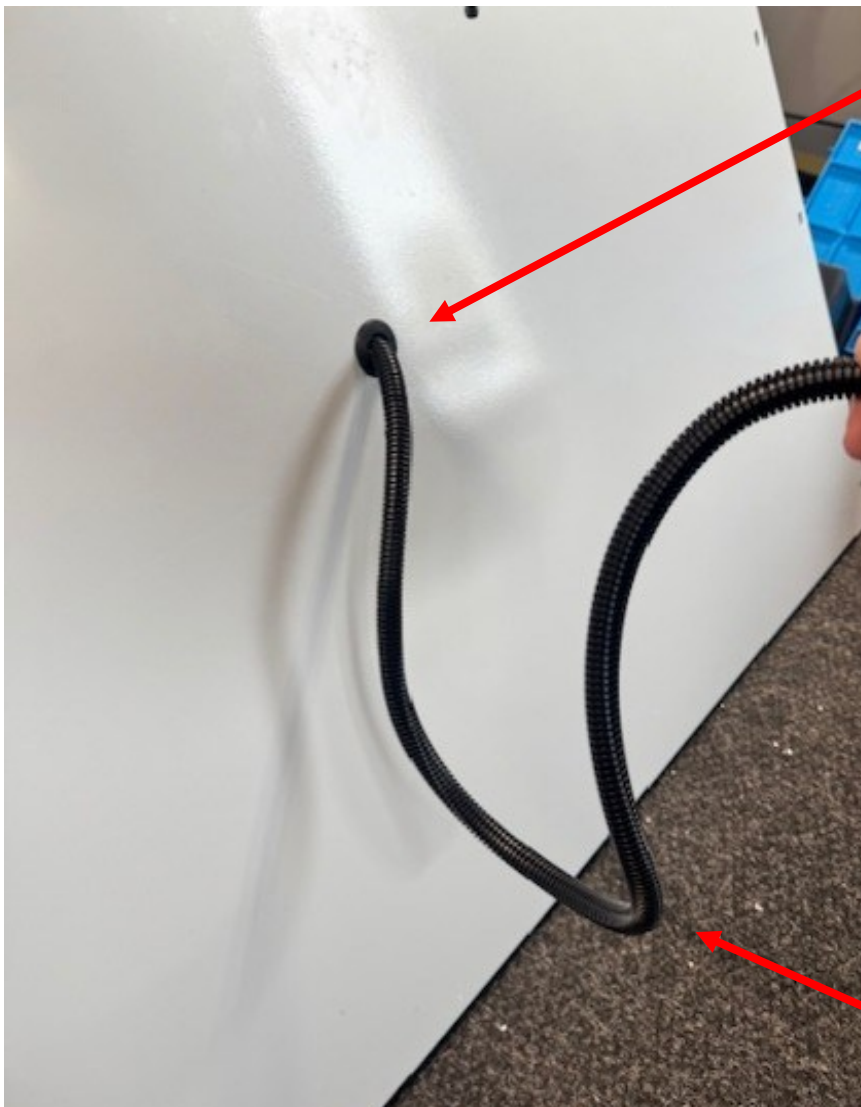

Apply silicone around the grommet and wire loom so that it is completely sealed.

Drip loop created so water runs off of loom and not into the cab of the vehicle.

****Please read statement below before moving forward****


Before installation, disconnect the OEM negative battery cable.

These plug and play kits are completely modular and can be configured in many different ways. Placement of lights will be determined by sales order drawings/customer ask. Therefore, these instructions are for the most standard configurations, and for reference only.

Please reference the order drawing and spec sheet to see what components are going to be installed on this particular upfit.

These installation instructions are for most cases and for reference. Not all installs will have strobes, beacons, and lightbars. Reference the instructions for only what you are installing.

Overall Harness Diagram

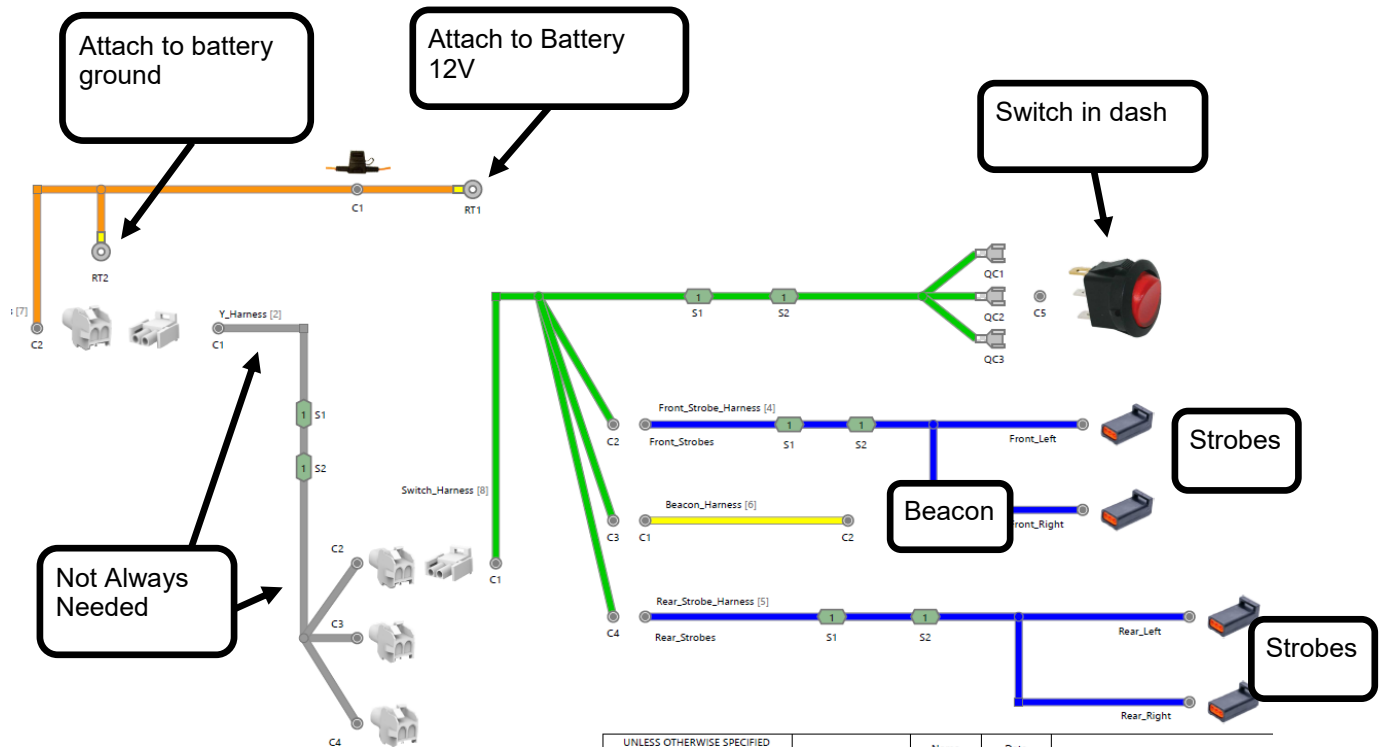


Tools required:

13 socket and 20 torx bit

Phillips bit and 5/16" step drill bit

Power drill and impact

Torque wrench

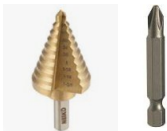

Components



	Part Number	Description
1	67095	Power Harness #4
2	67097	Switch Harness #1
3	67102	Front Strobe Harness #2 (If Applicable)
4	67107	Rear Strobe Harness #2 (If Applicable)
5	67113	Beacon/Lightbar Harness #3 (If Applicable)
6	67686 or 67687	Strobes (If Applicable)
7	67689 or 67690	Beacons (If Applicable)
8	52769 or 56075	Beacon/Lightbar Mount (If Applicable)
9	67691 or 67692 or 96118 or 67693	Lightbars (If Applicable)



The purpose of plug and play lighting is to be completely modular. Due to this feature, refer to the order drawing for all exact lighting placements. These installation instructions are for most cases and for reference. Not all installs will have strobes, beacons, and lightbars. Reference the instructions for only what you are installing.

Harness pictures are for reference only.

Placements

Switch placement: Dash panel
under headlight buttons




Front Strobes: Grill



*****TORQUE STROBES TO 10-IN-LB'S
MAXIMUM*****



Beacon or Lightbar: On CHMSL
above 3rd brake light—on some
sort of mount

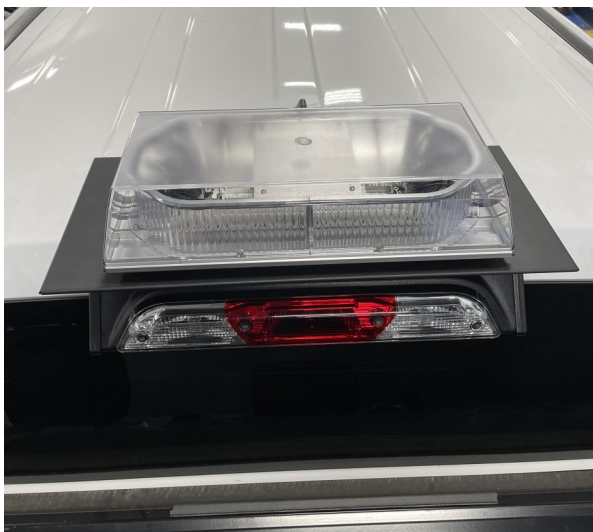

Rear Strobes: Rear Bumper




Routing Overview

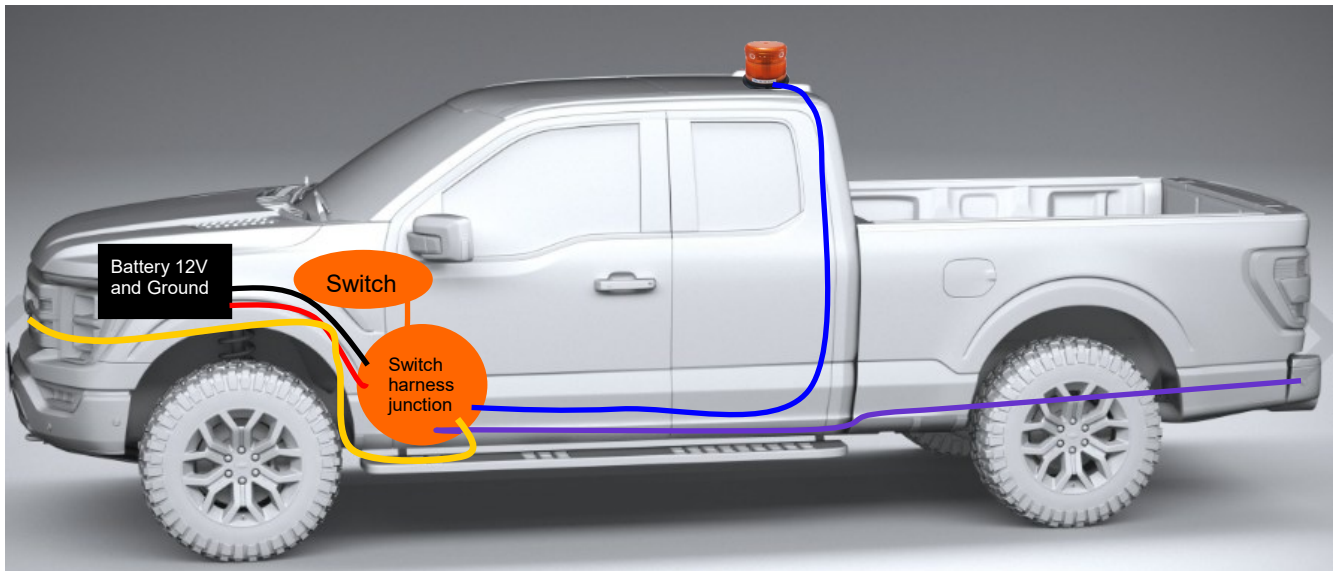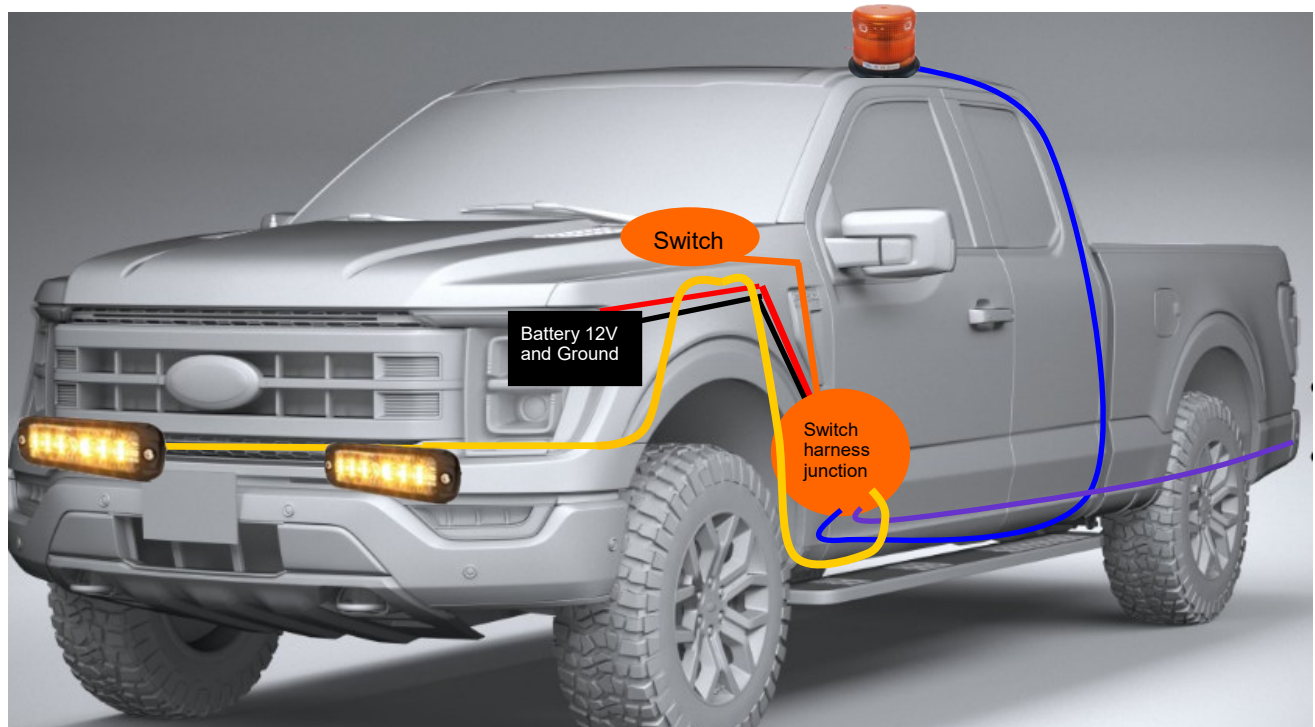


Color	Key - Items
Yellow	Strobes - Front strobe harness #2
Red/Black	Power harness: Battery to kick panel
Orange	Switch harness: Switch in dash
Blue	Beacon harness: Switch to beacon
Purple	Strobes - Rear strobe harness #2



Overview of Routing-Beacon/Lightbar Wire Harness:

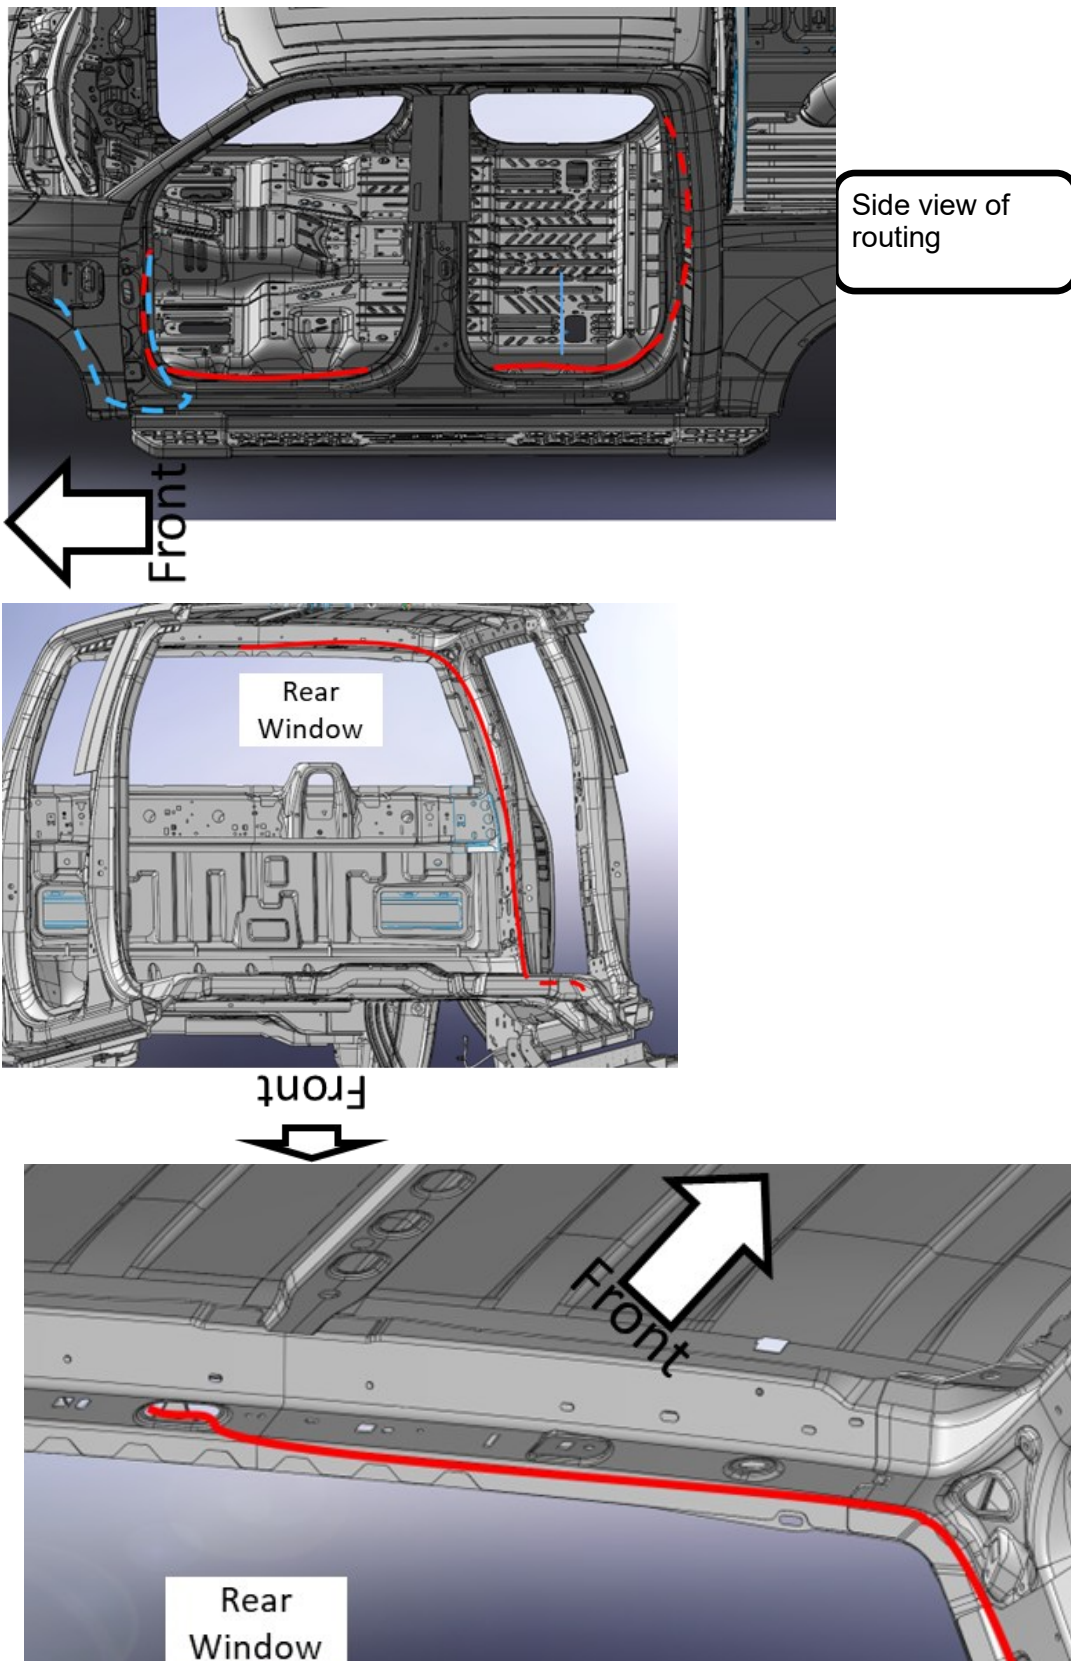

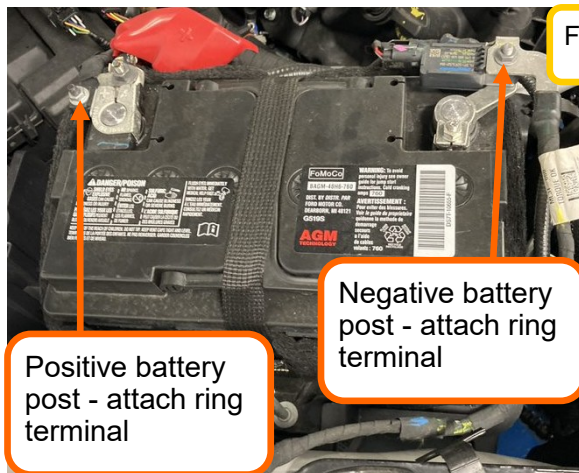

Step 1: Locate the power harness #67095.

Remove the fuse from the inline fuse holder until the end of the install


Locate the OEM battery under the hood.

Step 2:

Attach the red wire with the ring terminal to the battery positive post.

Attach the black wire with the ring terminal to the battery negative post.

Figure 9.1.

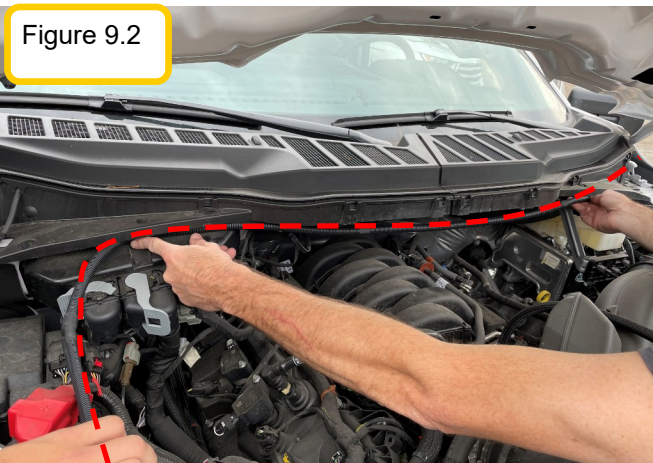

Route the white connector end along the underside of the cab filter (see figure 9.2 red dotted line) to the firewall. (You can tuck the wiring under the filter and hide it. Figure 9.3.)



Step 3:


Locate the firewall grommet from underneath the kick panel inside the cab on the driver's side.

Figure 9.4.

Drill a hole (to fit the grommet on the power harness) to the right of BOTH OEM grommets, like shown in figure 9.5.

****BE SURE TO CHECK THAT THE OPPOSING SIDE OF THE FIREWALL IS CLEAR BEFORE DRILLING.****

Route the white connector end through the firewall and insert the grommet on the sheet metal. Make sure to leave a drip loop in the engine bay.

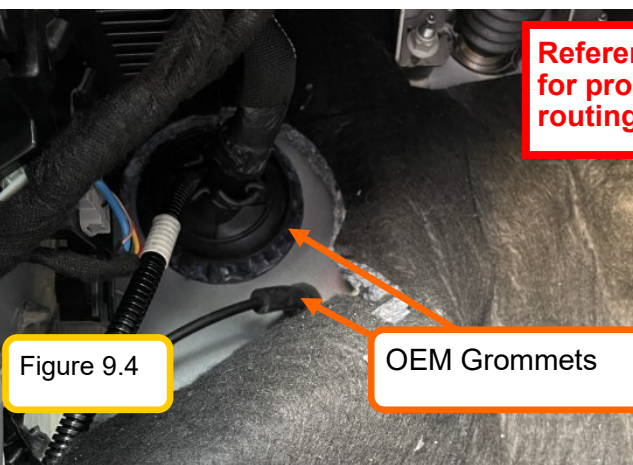

Reference Pg. 3 for proper firewall routing.



Power harness

Switch Harness



Step 4:

Locate the switch harness #67097

Connect the switch harness connector to the power harness in the kick panel area.

Disassemble the IP trim to gain access behind the dash. Figure 10.1 and 10.2.

Route the switch end of the switch harness up the dash and through the opening in the IP. Figure 10.3.

Secure to the OEM harnesses behind the IP.

Figure 10.1

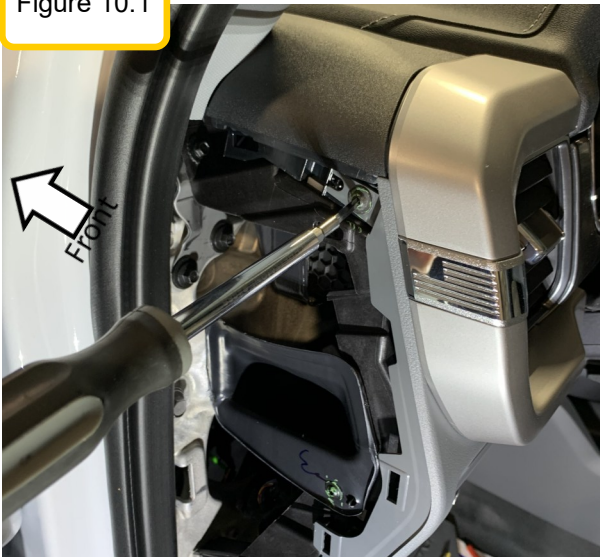


Figure 10.2


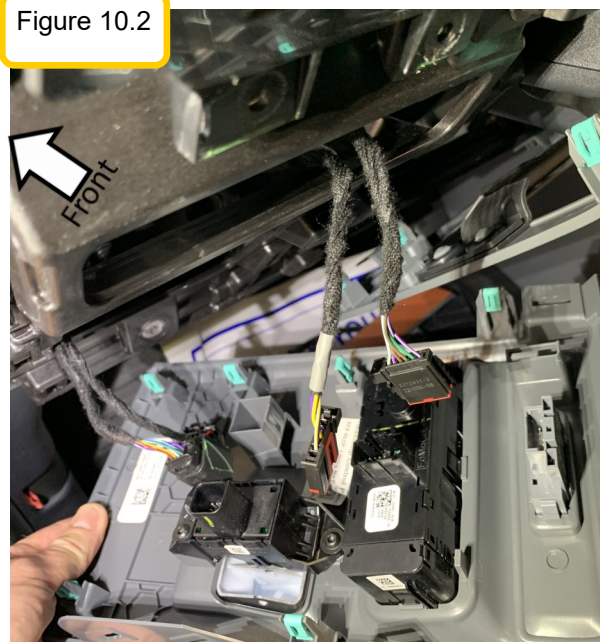


Figure 10.3



Behind the headlight trim panel

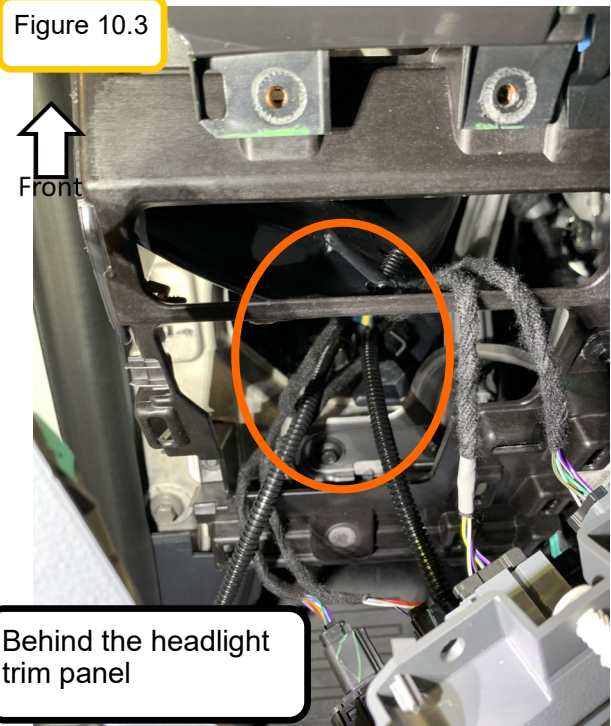

Step 5:

Drill a hole for the switch, in the trim panel like shown below.

The hole will be 1.25" inches down from the bottom of the headlight trim panel and 1" from the edge of the parking brake button. (4.25 from the edge of the IP panel). Figure 11.1.

Route the harnesses through the hole

Step 6:

Connect the ground spade to the gold pin on the rocker switch


Connect the white battery power spade to the opposite terminal on the switch.

Connect the red spade to the middle pin

Insert the switch into the hole and place the strobe/beacon decal (if supplied) around the switch.

Reassemble all trim and secure wiring.

Figure 11.1

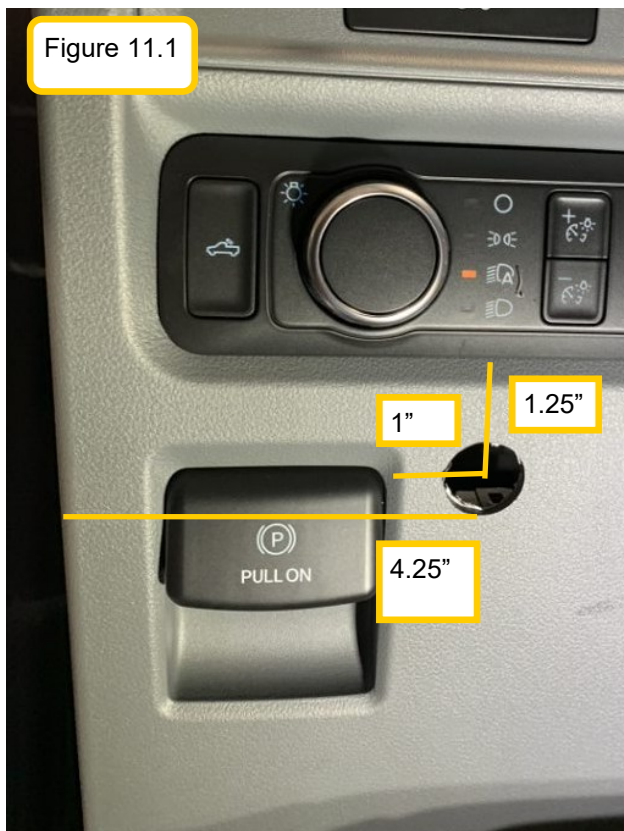

Strobe Install—If Applicable

Strobe pictures are for reference only. Please refer to product structure/spec sheets for the actual strobes for the install.

Figure 12.1



Step 1:

Locate the rear strobe harness #67107.

Connect the rear strobe harness to the switch harness (one of the remaining unused connectors) in the driver's foot well. Figure 12.1.

Step 2:

Locate the driver's side door sill area. Figure 12.2.

Use a trim tool to remove the trim panels in the driver's step well and dash/kick panel.



Locate the OEM grommets under the carpet. There will be one right next to the foot sill area and one to the right closer to the driver's seat.

The front strobes will use the one closest to the foot sill and the rear strobes will use the grommet closest to the driver's seat. Figure 12.3 and 12.4.

Cut an "X" in the grommet. Route the rear strobe harness through the grommet (by the seat) to the underneath of the vehicle.


Silicone the grommet when done.

Figure 12.2

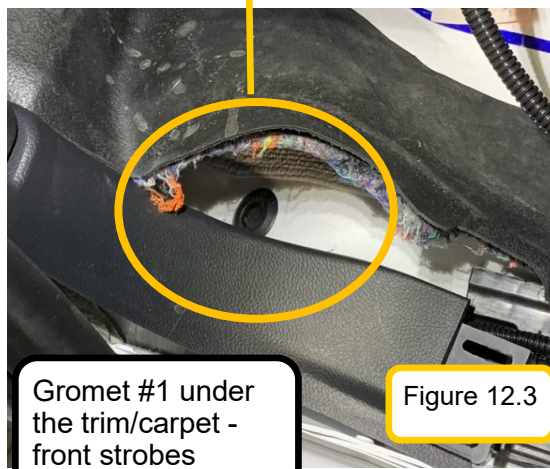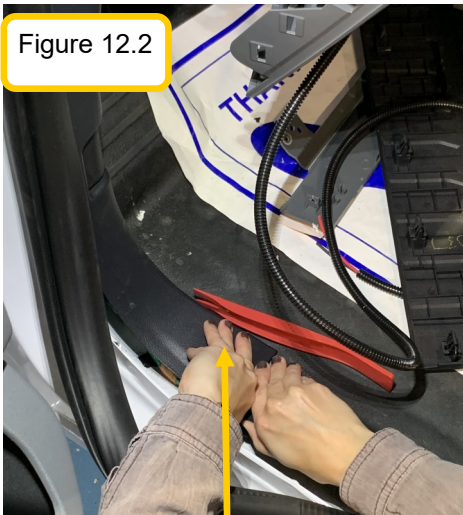

Grommet #1 under the trim/carpet - front strobes

Figure 12.3

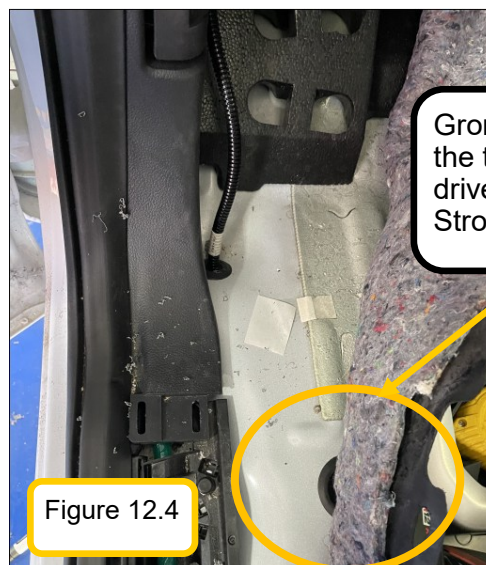

Grommet #2 under the trim/carpet - drivers seat (rear Strobes)

Figure 12.4

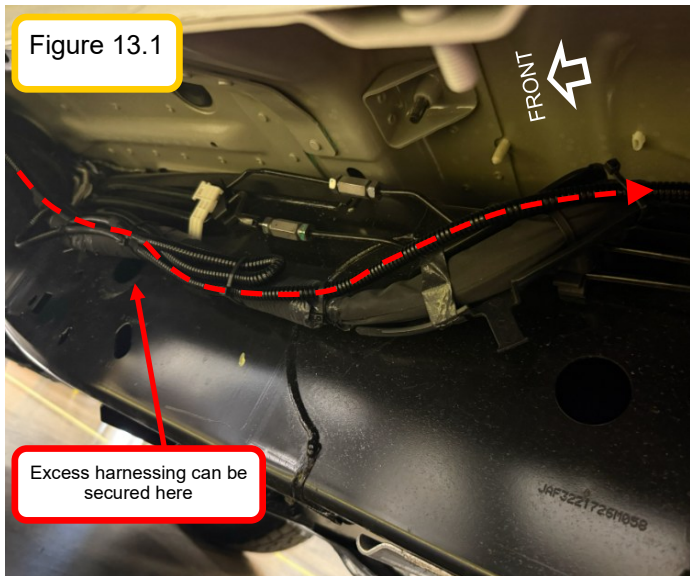


Figure 13.1

Excess harnessing can be secured here

Step 3: Routing (Refer to routing diagrams at the beginning of the instructions)

Route the strobe harness rearward following the frame (red dotted line). Secure with zip ties to the OEM harnessing. Figure 13.1.

Use provided edge-biting zip ties or normal zip ties to route rear strobe harnessing rearward along the body frame until you reach the rear driver wheel well. Figure 13.2.

***Do Not secure to any moving parts/brake lines when routing strobe harnessing.



Figure 13.2

Route over and behind the body frame, making sure to only secure to the body frame itself or nearby OEM harnessing. Figure 13.3.

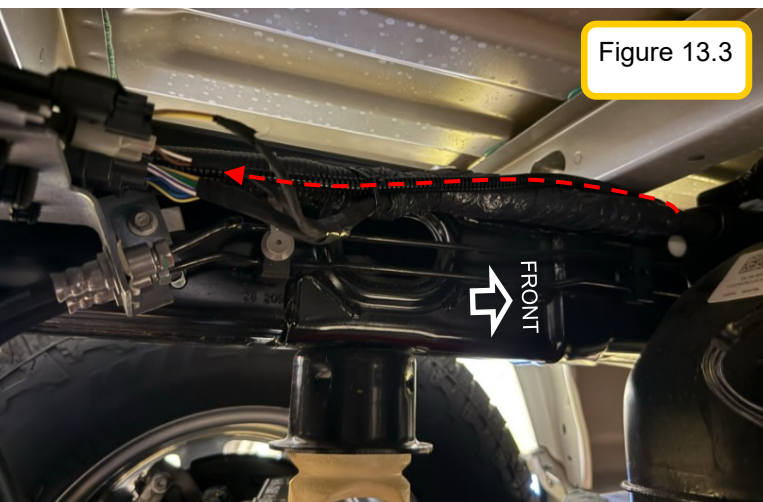


Figure 13.3

Figure 14.1



Step 3: Routing Continued (Refer to routing diagrams at the beginning of the instructions)

Route the harnessing to the rear driver underframe. Around here is where the split in the rear strobe harness will be, for the driver side and the passenger side.

Figure 14.1 and 14.2

Step 4: Mounting Strobes

Find the left most reverse sensor.

Place the strobes in line with the sensor horizontally (about 1" down from the bumper crease) and 1" over from the sensor.

Figure 14.3.

Use the strobe as a template, mark the center hole location on the bumper (for routing the wires through).

Drill a 3/8" hole for the wire pass through of the strobe. Use primer on the hole to prevent rusting. Figure 14.3.

Connect the strobe light to the harness and silicone the hole.

Place the strobes in their desired locations and fasten them onto the bumper with the **AS-CO SUPPLIED SCREW AND NUT: FAS0501 and FAS0503 (for rear bumper only—front will use Ecco supplied screws)**

Figure 14.4.

*****TORQUE STROBES TO 10-IN-LB'S MAXIMUM*****

Repeat for the right side strobe.

Figure 14.2

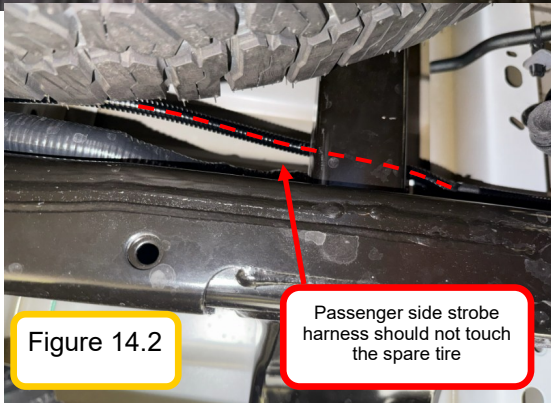


Figure 14.3


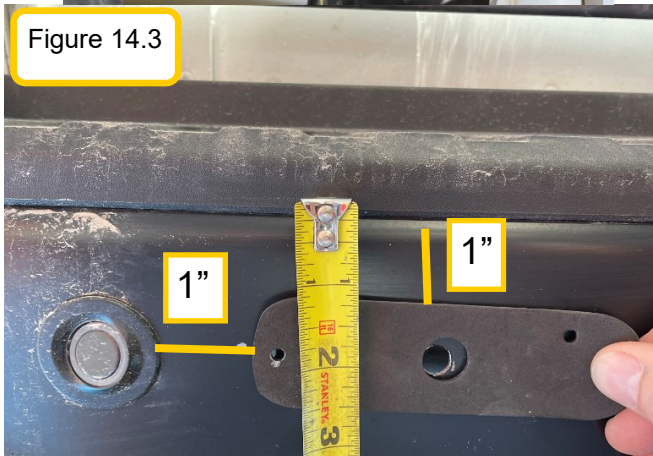


Figure 14.4



Figure 15.1

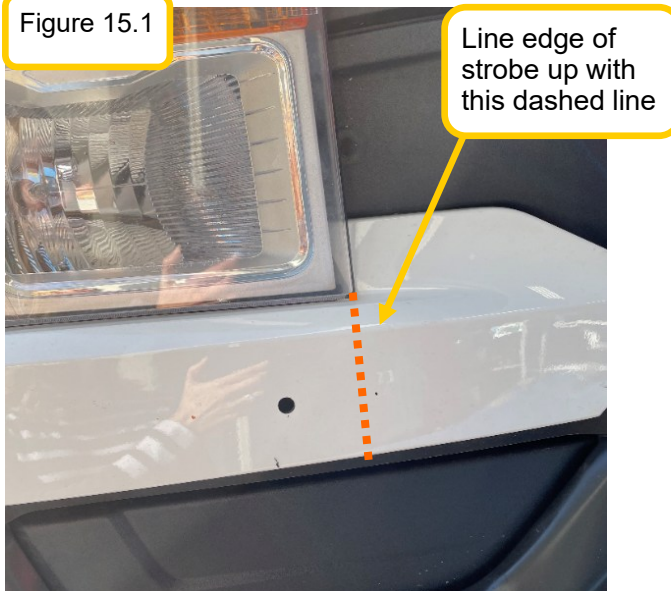

Step 5: Mounting Front Strobes

Locate the left front headlight area.

Line the farthest right edge of the strobe with the right edge of the headlight.
Figure 15.1.

Place the strobe 1.5" up from the bottom edge of the front fascia.
Figure 15.2.

Use the strobe as a template, mark the center hole location on the panel (for routing the wires through).

Drill a 3/8" hole for the wire pass through on the strobe.

Place the strobes in their desired locations and fasten them onto the grill with the supplied screws.
Figures 15.3 and 15.4.

*****TORQUE STROBES TO 10-IN-LB'S MAXIMUM*****

Repeat for the other side strobe.

Figure 15.2

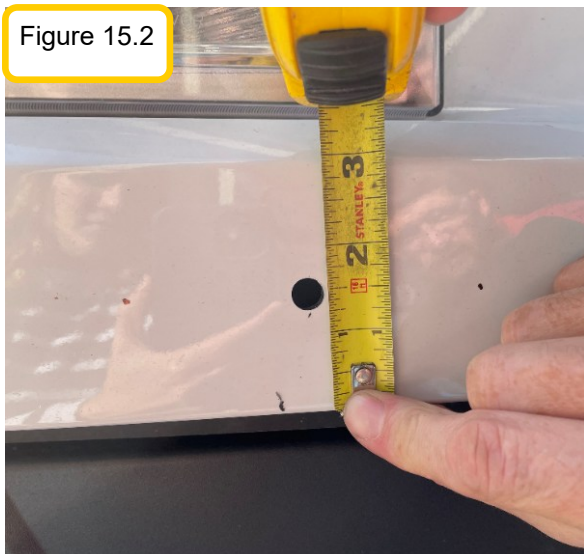


Figure 15.3



Figure 15.4





Figure 16.1

Point of view in pictures: Laying under the front bumper looking up toward the backside of the bumper

Figure 16.2

End to route through the OEM grommet—front strobe harness



Grommet: Cab view
Also, strobe harness connected to switch

Figure 16.3

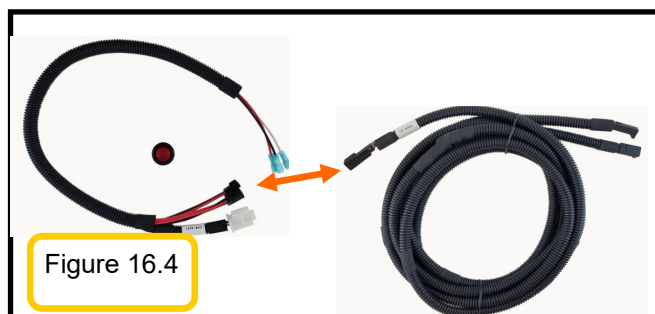
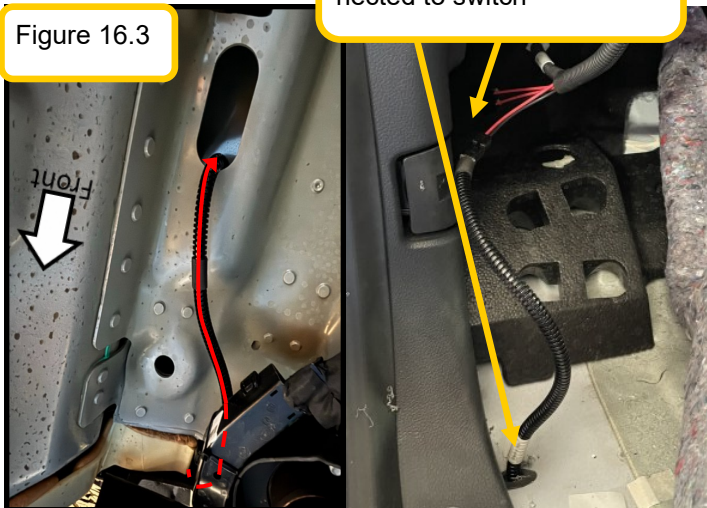


Figure 16.4

Step 6: Locate the front strobe harness #67102.

Start by placing the harness strobe ends at each strobe location, beneath the vehicle.

Note: There will be no slack in the harness so pull the wires carefully without damaging them.

Connect the passenger side strobe to the harness. Then follow the OEM harness that runs beneath the grill over the driver's side. Zip tie the harness to the OEM harness. See figure 16.1 for routing.

Note: You can best see the OEM harness and routing by laying under the vehicle front the front end.

Be sure not to secure or route the harness anywhere near moving or hot objects.

Connect the second connector to the driver's side strobe.

Step 7:

Start by routing the inside connector end of the harness to the firewall. Figure 16.2.

Locate the grommet by the driver's foot sill in the cab area (found previously on page 11)

Route the harness down to the underneath of the vehicle, following the OEM harnesses.

Cut and X in the grommet and route the connector through. Figure 16.3.

Connect the front strobe harness to the switch harness (one of the remaining unused connectors) in the driver's foot well. Figure 16.4.

Secure wiring with zip ties.
Silicone the grommet. Figure 16.5.

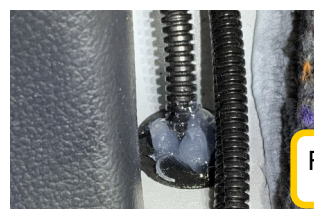


Figure 16.5

Beacon/Lightbar Install—If Applicable

Lightbar/ beacon/ and mount pictures are for reference only. Please refer to product structure/ spec sheets for the actual beacon/lightbar/mount for the install.



Step 1: On a table/bench: Assemble the light


Assemble the lightbar or beacon to the mount, using the supplied fasteners and rubber spacers with the lightbar.

If installing a Whelen lightbar, use the provided screws (FAS0869), washers (FAS0871), and nuts (FAS0501) in the ASCO kit. They are not provided with the light.

All other lights will have their own hardware.

Note: Lightbar (SWS Apollo) in pictures is for reference only.

Center the lightbar or beacon onto the mount, side to side, then slide the lightbar to the rear of the mount until it is flush. See pictures for reference.


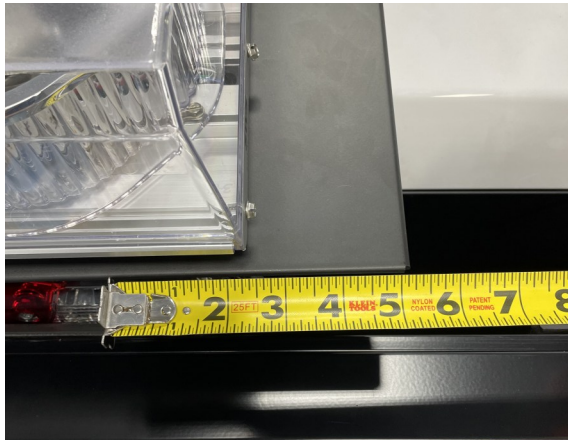


Use the lightbar/beacon as template, mark the needed holes for mounting. Drill the needed holes for mounting.

Drill the hole for the wiring pass through and insert the provided grommet (if applicable).

If there is a connector on the end of the lightbar/beacon, use the 1" grommet (36096-0). If there is not a connector, use the 3/8" grommet (70805) and refer to the next page.

Silicone the grommet/pass thru wiring.

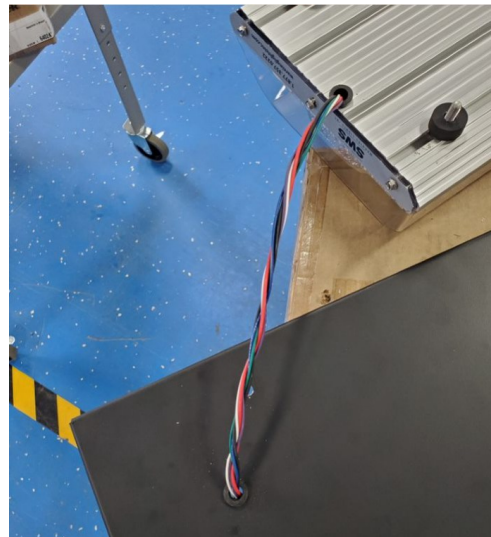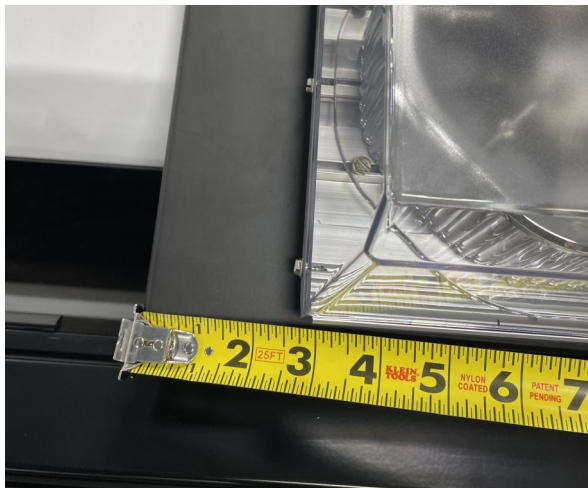

If Lightbar/Beacon does not have a connector on the wires:

Figure 18.1



Figure 18.2



After mounting the light to the Acari mount and pulling the wire through the grommet (70805)

Locate the connector housing inside the lightbar/beacon box. Figure 18.1.

Note if it has a red insert inside the connector or not. Refer to figure 18.2 for red insert inside the connector.

Insert the lightbar wire terminals into the connector. **See steps below:**

In these steps be very careful to place the terminals into the correct side of the connector.

Line the red wire terminal up with cavity #1 and the black wire terminal up with cavity #2. Figure 18.3.

Note the connector has a "1" and a "2" noted on the connector (circled in red). Figure 18.4. The red wire will be inserted into the #1 cavity of the connector. The black wire will be inserted into the #2 cavity on the connector.

Be sure to align the terminal prongs up with the inside of the connector pin outs.

Carefully insert the terminals into their designated section. Figure 18.5.

Also be sure the terminals snap into position. You should feel or hear a click when they are correctly inserted.

Pull on the wiring to be sure the connectors have been inserted completely.

If not already done:

Insert the red plastic piece into the top end of the connector. This will also click into place. Figure 18.6 and 18.7.

Silicone the grommet/wiring.

Figure 18.3



Figure 18.4



Figure 18.5

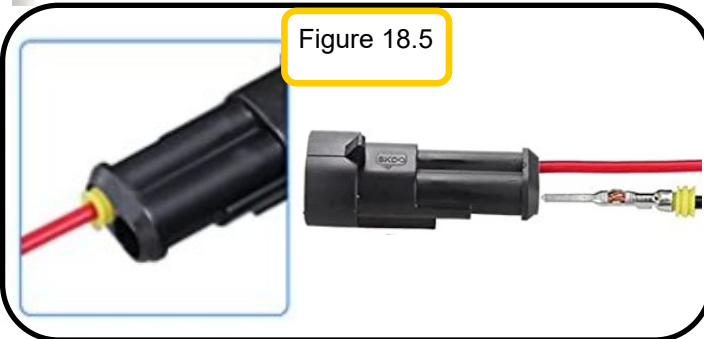


Figure 18.6

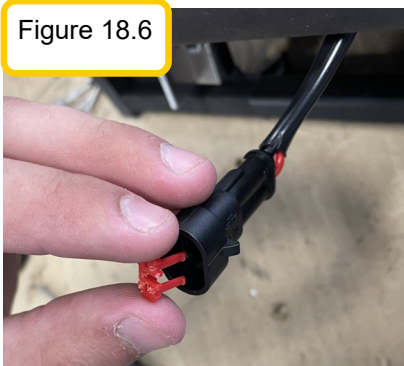


Figure 18.7

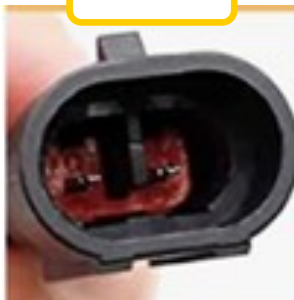




Figure 19.1



Figure 19.2

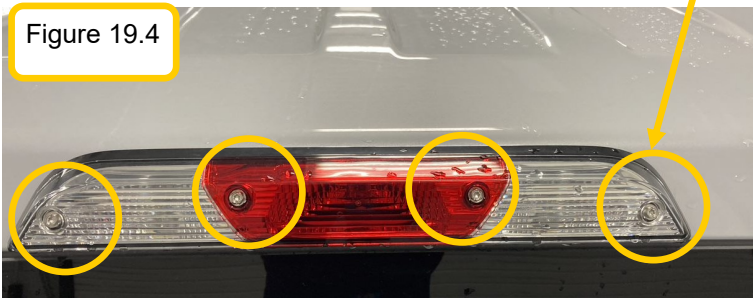


Figure 19.4

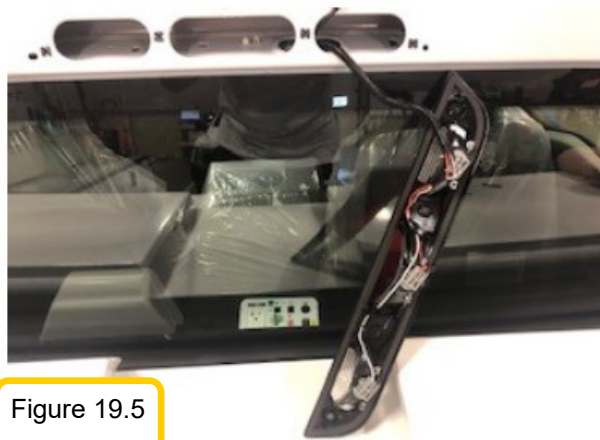


Figure 19.5

Pictures to the left are for beacon/lightbar mounting references.

Figure 19.1, 19.2, and 19.3



Figure 19.3

Step 2: Disconnect OEM Light

Using a torx T20 bit, remove the 4 screws holding the 3rd brake light to the CHMSL. Figure 19.4.


Remove the OEM light from the CHMSL and disconnect the OEM harness clip. Figure 19.5.

Step3:

Locate the beacon/lightbar harness (67113).

Remove the cable gland off the beacon/lightbar harness. This will not be needed to the CMSL mounted light install.

Connect the harness to the switch harness (one of the remaining unused connectors) in the driver's foot well. Figure 19.6.

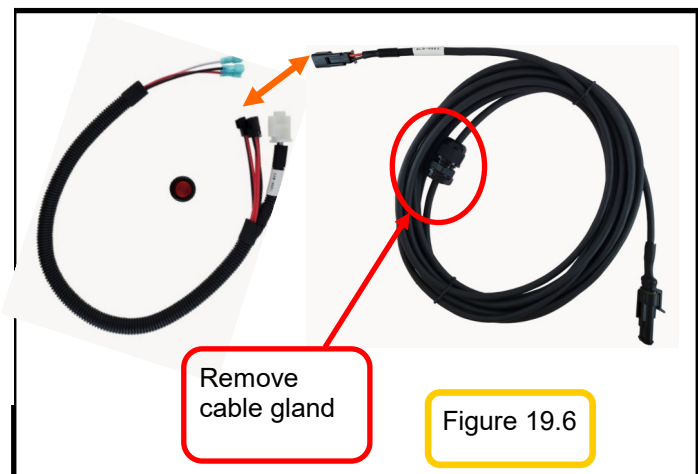

Remove cable gland

Figure 19.6

Beacon/Lightbar Install—If Applicable

Step 4: Routing (Refer to routing diagrams at the beginning of the instructions)

Route the beacon harness following the OEM harness rearward along the foot sill and then up the rear C pillar. Figure 20.1 and 20.2.

****BE SURE TO AVOID ALL SEAT BELT RETENTIONERS****

Step 5: Feed the fish tape through the CHMSL opening towards the driver's side C pillar. Tape the harness to the fish tape and pull through the CHMSL opening. Figure 20.3.

Make sure harness is tucked head liner and C pillar trim. Figure 20.4.

See pictures for routing references. Secure all wiring with cable ties and trim panels.

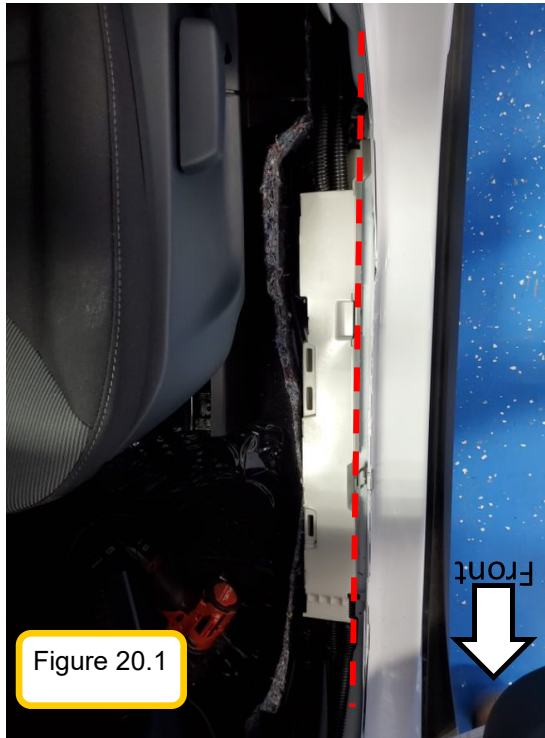


Figure 20.1



Figure 20.2

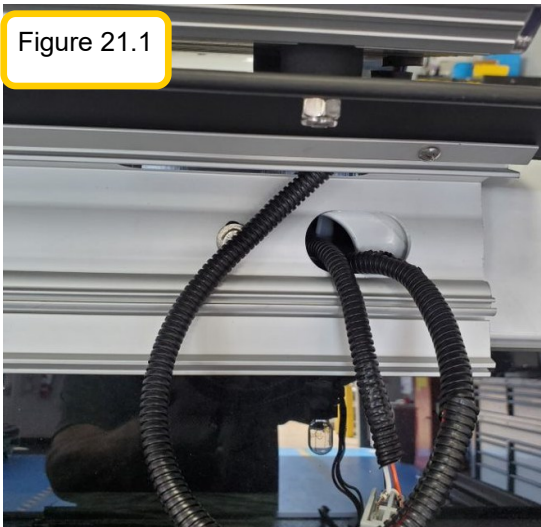


Figure 20.3



Figure 20.4

Figure 21.1



Step 5: Mounting the light:

Using the mount manufacturer supplied instructions, attach the mount to the vehicle body.

Pull the lightbar harness through the mount opening like seen in the picture to the left—before re-installing the OEM light and black trim plastic piece. Figure 21.1, 21.2, and 21.3.

Connect the beacon/lightbar harness with the beacon/lightbar.

Figure 21.2



Tape up all non-needed wires from the lightbar/beacon.

Assemble the rest of the needed lightbar/beacon mount pieces.

Re-connect all the OEM light wiring and attach the light back to the Acari mount/vehicle. Figure 21.4.

Figure 21.3



Figure 21.4





Insert the fuse into the inline-fuse holder on the power harness. The install is now complete. Secure all wiring with zip ties. Re-attach all trim. Re-assure all pass through holes have been silicone. Double check the functionality of the lights and switches.

PART NUMBER

13905-0**ITEM DESCRIPTION: WIRE TIE, NYLON 40Lb, 8.5" BLACK**

MANUFACTURER: WAYTEK, INC. or equivalent
MANUFACTURERS PART NUMBER: 21093M or 21093C

SPECIFICATIONS: STANDARD CABLE TIE
 BLACK, NYLON
 8-1/2" LONG
 TENSILE STRENGTH: 40.0 LBS
 21093M = 1,000 quantity
 21093C = 100 quantity

SPECIAL NOTES: PART NUMBER IS BLACK.

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM



CAUTION
WHEN INSTALLING EQUIPMENT IN OR ON
VEHICLES CHECK FOR FUEL TANKS, FUEL
LINES, CONTROL LINES AND ELECTRICAL
WIRING BEFORE DRILLING! ALWAYS USE
DRILL BITS WITH INTEGRAL STOPS
WHENEVER POSSIBLE!

DRAWN BY
MDG

DATE DRAWN
10/26/2006

ECN NUMBER
18021

ECN DATE
11/13/2015

PART WEIGHT
0.01 LBS.

REV. LEVEL
D

PART NUMBER
13905-0

PART NUMBER

26618-0**ITEM DESCRIPTION: SILICONE, 1oz. TUBE**

SPECIFICATIONS: SU5005 RTV SILICONE
1oz. TUBE
CLEAR OR EQUIVILENT
SELF PIERCING CAP

SPECIAL NOTES:

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

**906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM**



**WHEN INSTALLING EQUIPMENT IN OR ON
VEHICLES CHECK FOR FUEL TANKS, FUEL
LINES, CONTROL LINES AND ELECTRICAL
WIRING BEFORE DRILLING! ALWAYS USE
DRILL BITS WITH INTEGRAL STOPS
WHENEVER POSSIBLE!**

DRAWN BY
JLC

DATE DRAWN
7/21/2001

ECN NUMBER
16551

ECN DATE
7/22/2014

PART WEIGHT
0.02 LBS.

REV. LEVEL
C

PART NUMBER
26618-0

PART NUMBER

26618-0**ITEM DESCRIPTION: SILICONE, 1oz. TUBE**

SPECIFICATIONS: SU5005 RTV SILICONE
1oz. TUBE
CLEAR OR EQUIVILENT
SELF PIERCING CAP

SPECIAL NOTES:

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

**906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM**



**WHEN INSTALLING EQUIPMENT IN OR ON
VEHICLES CHECK FOR FUEL TANKS, FUEL
LINES, CONTROL LINES AND ELECTRICAL
WIRING BEFORE DRILLING! ALWAYS USE
DRILL BITS WITH INTEGRAL STOPS
WHENEVER POSSIBLE!**

DRAWN BY
JLC

DATE DRAWN
7/21/2001

ECN NUMBER
16551


ECN DATE
7/22/2014

PART WEIGHT
0.02 LBS.

REV. LEVEL
C

PART NUMBER
26618-0

ITEM DESCRIPTION: STROBE SWITCH DECAL SET

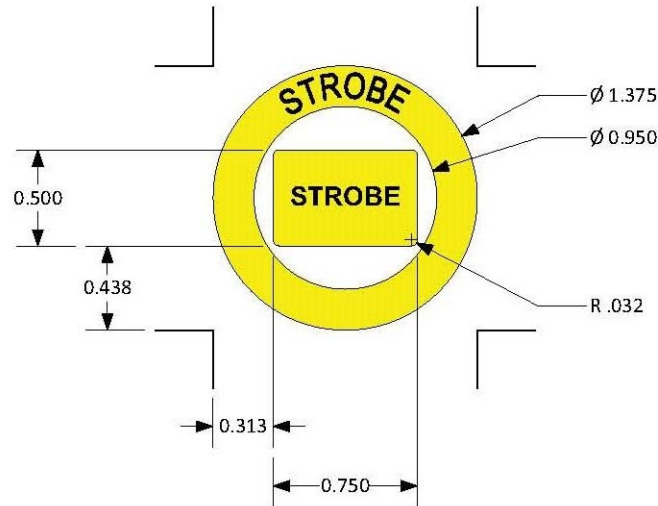

MANUFACTURER: VANNER

MANUFACTURERS PART NUMBER: TBD

SPECIFICATIONS: (1) Circular Yellow Decal (ID=0.950", OD=1.375") with "STROBE" in black letters
 (1) Rectangular Yellow Decal (H=0.500", L=0.750") with "STROBE" in black letters

SPECIAL NOTES: For round rocker switch (OD=0.780") and Ford Transit Upfitter Switches.

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!**PURCHASED PRODUCT DATA SHEET (PPDS)**

Page 1 of 1

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



906 JAMES STREET
 ADRIAN, MI 49221
 517-265-6194
 WWW.ADRIANSTEEL.COM



CAUTION
 WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY
 RJB

DATE DRAWN
 11/15/2017

ECN NUMBER
 XXXX

ECN DATE
 XXXXXX


PART WEIGHT
 0.02 LBS.

REV. LEVEL
 A

PART NUMBER
55073

REVISIONS			
REV	DESCRIPTION	DATE	RE/ECO

- NOTES:
1. MATERIAL : .002 YELLOW POLYESTER
 2. ARTWORK FROM D91XXXX-A PAGE 1, PMS BLACK
 3. .001 OVERLAMINATE
 4. ADHESIVE BACKED

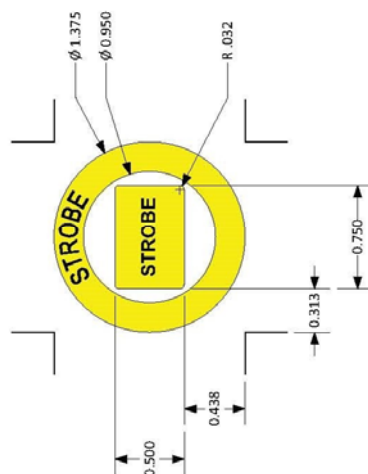

VANNER INCORPORATED HILLIARD, OHIO USA		TOL. .x ± .025 LABEL/ .xx ± .015 METAL .xxx ± .005		TITLE: LABEL, STROBE TXT, .95ID ROUND SWITCH	
		TOL. CABLES .xxx ± .25 DRNDATE MEO 11/14/17 CHKDATE XXX XXXXXX		DRAWING/ PART NO. D01XXXX SHEET 1 OF 1 REV A	
SCALE:	NONE	REA/ECO NO.:	XXXX	THIS DRAWING AND ALL INFORMATION CONTAINED HEREIN IS THE PROPERTY OF VANNER INC. AND MAY NOT BE COPIED, REPRODUCED OR DIVULGED TO UNAUTHORIZED PERSONS WITHOUT THE EXPRESS WRITTEN CONSENT OF VANNER INC. IT IS PROVIDED SOLELY FOR THE CONVENIENCE OF THE USER AND SHALL BE RETURNED UPON REQUEST.	

Page 2 of 1

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM



WHEN INSTALLING EQUIPMENT IN OR ON VEHICLES CHECK FOR FUEL TANKS, FUEL LINES, CONTROL LINES AND ELECTRICAL WIRING BEFORE DRILLING! ALWAYS USE DRILL BITS WITH INTEGRAL STOPS WHENEVER POSSIBLE!

DRAWN BY
RJB

DATE DRAWN
11/15/2017

ECN NUMBER
XXXX

ECN DATE
XXXXXXXX

PART WEIGHT
0.02 LBS.

REV. LEVEL
A


PART NUMBER
55073

PART NUMBER
55073

LOC | QTY | Part # | Description | Size

Material: IJ39 | Lamination: 8518

1 1: 6039597.Strobe Switch-1.52" x 2.07"

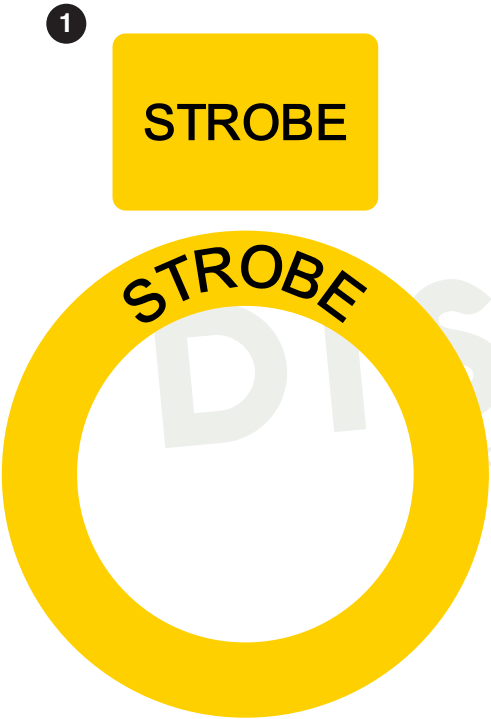

Note: Part will not be weeded, just cut.

Kit# 8001872 | Adrian Steel Part # 55073

06/01/2023 • JY
© 2022 DISTYLL Graphics Solutions. All rights reserved.

ASCO REV.1 6/14/2023

DISTYLL GRAPHIC SOLUTIONS FINAL DESIGN	CLIENT NAME:		Switch Decals		O-ID: O15319-1
	Adrian Steel				Rev #: XXXX
	DATE:	DESIGNER:			Opt #: A
	O5/31/2023	TRN			

Please check information to confirm accurate vehicle specifications.

CLEANING INSTRUCTIONS All surfaces must be considered contaminated. Clean the vehicle surface immediately before applying the film. Dust and other contaminates can collect quickly on the surface and prevent the film from adhering properly. Even a freshly painted surface can collect dust before graphics can be applied.

For the best success with the films recommended for vehicle graphics, always apply the graphics when the air and vehicle surface are both above 60°F (16°C) and below 90°F (32°C) before beginning the installation.

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
Note: This is also from HellermannTyton: Their Part Number is 156-00592



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN:	22671
CURRENT ECN:	22671
ECN DESCRIPTION:	
RELEASE TO PRODUCTION	
REVISED BY: EMS	

PURCHASED
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
Fastenal
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
0787863
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED


Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

 ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221		REVISION LEVEL A
MAT'L USED:			DESIGNED BY: EMS	
DESCRIPTION: Clip, Black UV Tie, HellermannTyton				
WEIGHT (Lbs.): 0.5		SEGMENT CODE: ELE		PART NUMBER: 59713

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
N/A

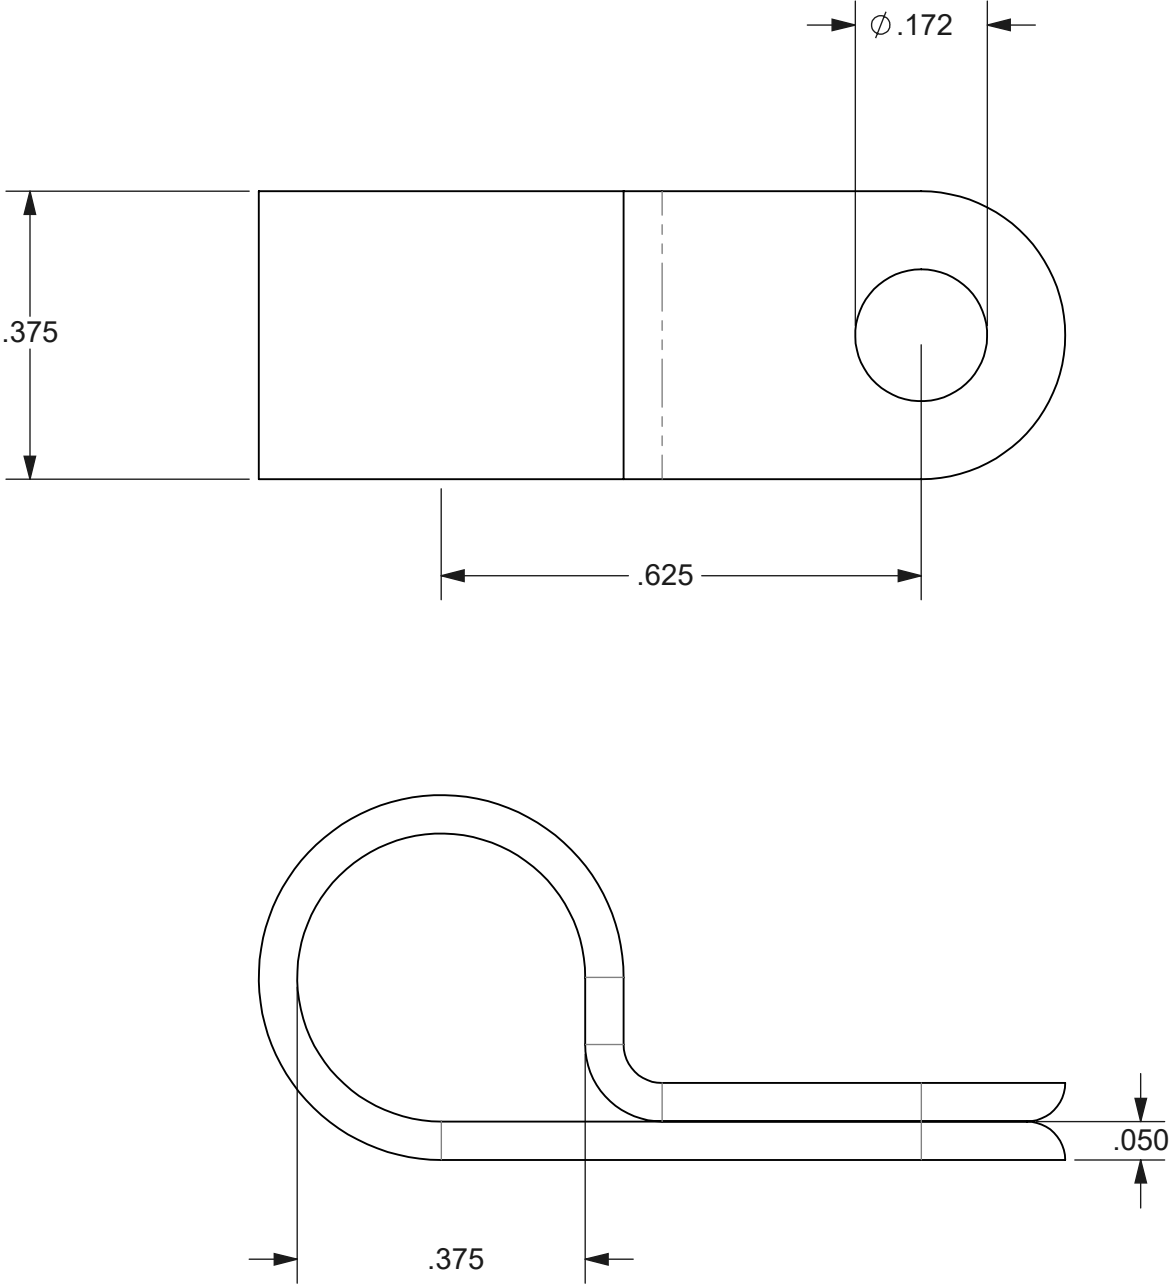

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 25297
CURRENT ECN: 25334
ECN DESCRIPTION: UPDATE SUPPLIER TO SAY EQUIVALENT
REVISED BY:

PURCHASED
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
MCMASTER-CARR OR EQUIVALENT
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
8876T38 OR EQUIVALENT
COLOR (ONLY LIST IF COLOR SPECIFIC)
BLACK
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

		ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221		REVISION LEVEL B	
MAT'L USED:				DESIGNED BY: E.BURKE			
DESCRIPTION: Nylon Plastic Loop Clamp							
WEIGHT (Lbs.): 0.001		SEGMENT CODE: HDW		PART NUMBER: 66843			

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 25378
CURRENT ECN: 25378
ECN DESCRIPTION:
RELEASE FOR PRODUCTION
REVISED BY:

PURCHASED
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP GLOBAL
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
67095 OR PWR-HAR4
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

		ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221		REVISION LEVEL A	
MAT'L USED:		PURCHASED		DESIGNED BY: E.BURKE			
DESCRIPTION:		POWER HARNESS EXTERIOR 4					
WEIGHT (Lbs.): 0.2		SEGMENT CODE: ELE		PART NUMBER: 67095			

PURCHASED COMPONENT KEY FEATURES	
DESCRIPTION OF REQUIREMENTS	
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)	
N/A	
LOAD/RATING REQUIREMENT	
N/A	
MATERIAL REQUIREMENT	
N/A	
PACKAGING REQUIREMENT	
N/A	
OTHER REQUIREMENTS	



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY			PRINTED DOCUMENT IS UNCONTROLLED			Sheet 1 of 1		
TOLERANCES & INSPECTION			PART / PRODUCT IDENTIFICATION					
UNLESS OTHERWISE SPECIFIED			AS ADRIAN STEEL® ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221				REVISION LEVEL	
ALL BEND ANGLES ARE 90 DEGREES							A	
ALL DIMENSIONS ARE IN INCHES.								
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION								
FEATURES			MAT'L USED:		PURCHASED		DESIGNED BY: E.BURKE	
HOLES/SLOTS			DESCRIPTION: SWITCH HARNESS 1 EXTERIOR LIGHTING					
ANGLES								
0.0 = ± .125			WEIGHT (Lbs.):		0.2		SEGMENT CODE: ELE	
0.00 = ± .062			PART NUMBER:		67097			
0.000 = ± .031								
Material Thickness: per ASTM Std. Weld Callouts per AWS								
RELEASE & REVISIONS			PURCHASED COMPONENT					
INITIAL ECN: 25378			REFERENCED SUPPLIER AND/OR MANUFACTURER					
CURRENT ECN: 25378			AAMP GLOBAL					
ECN DESCRIPTION:			REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER					
RELEASE FOR PRODUCTION			SSW-HAR1 OR 67097					
			COLOR (ONLY LIST IF COLOR SPECIFIC)					
			COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)					
REVISED BY:			NO					

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 25378
CURRENT ECN: 25378
ECN DESCRIPTION:
RELEASE FOR PRODUCTION
REVISED BY:

PURCHASED
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP GLOBAL
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
FS-HAR2 OR 67102
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

 ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221	REVISION LEVEL A
MAT'L USED: PURCHASED		DESIGNED BY: E.BURKE	
DESCRIPTION: FRONT STROBE HARNESS 2			
WEIGHT (Lbs.): 0.2	SEGMENT CODE: ELE	PART NUMBER: 67102	

PURCHASED COMPONENT KEY FEATURES	
DESCRIPTION OF REQUIREMENTS	
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)	
N/A	
LOAD/RATING REQUIREMENT	
N/A	
MATERIAL REQUIREMENT	
N/A	
PACKAGING REQUIREMENT	
N/A	
OTHER REQUIREMENTS	



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY	
TOLERANCES & INSPECTION	RELEASE & REVISIONS
UNLESS OTHERWISE SPECIFIED	INITIAL ECN: 25378
ALL BEND ANGLES ARE 90 DEGREES	CURRENT ECN: 25378
ALL DIMENSIONS ARE IN INCHES.	ECN DESCRIPTION:
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION	RELEASE FOR PRODUCTION
FEATURES 0.0 = ± .125 0.00 = ± .062 0.000 = ± .031	
HOLES/SLOTS 0.0 = ± .062 0.00 = ± .031 0.000 = ± .015	
ANGLES 0° = ± 2° 0.0° = ± 1°	
Material Thickness: per ASTM Std. Weld Callouts per AWS	REVISED BY:

PURCHASED COMPONENT	
REFERENCED SUPPLIER AND/OR MANUFACTURER	
AAMP GLOBAL	
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER	
RS-HAR2 OR 67107	
COLOR (ONLY LIST IF COLOR SPECIFIC)	
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)	
NO	

PRINTED DOCUMENT IS UNCONTROLLED			Sheet 1 of 1
PART / PRODUCT IDENTIFICATION			
 ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221	REVISION LEVEL A
MAT'L USED: PURCHASED	DESIGNED BY: E.BURKE		
DESCRIPTION: REAR STROBE HARNESS 2			
WEIGHT (Lbs.): 0.2	SEGMENT CODE: ELE	PART NUMBER: 67107	

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
ECCO STROBE LIGHT: ED3801 WITH EXTERIOR PLUG AND PLAY CONNECTOR



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 25921
CURRENT ECN: 25921
ECN DESCRIPTION:
RELEASE TO PRODUCTION
REVISED BY: N/A

PURCHASED
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
ECCO
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
ED3801A-ADR
COLOR (ONLY LIST IF COLOR SPECIFIC)
AMBER LED/CLEAR LENS
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

		ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221		REVISION LEVEL A
MAT'L USED: PURCHASED				DESIGNED BY: EMB		
DESCRIPTION: ECCO STROBE ED3801A W/CON						
WEIGHT (Lbs.): 0.5		SEGMENT CODE: EST			PART NUMBER: 67686	

PURCHASED COMPONENT KEY FEATURES	
DESCRIPTION OF REQUIREMENTS	
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)	
N/A	
LOAD/RATING REQUIREMENT	
N/A	
MATERIAL REQUIREMENT	
N/A	
PACKAGING REQUIREMENT	
N/A	
OTHER REQUIREMENTS	
N/A	



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY			PRINTED DOCUMENT IS UNCONTROLLED			Sheet 1 of 1															
TOLERANCES & INSPECTION			PART / PRODUCT IDENTIFICATION																		
UNLESS OTHERWISE SPECIFIED			AS ADRIAN STEEL® ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221				REVISION LEVEL														
ALL BEND ANGLES ARE 90 DEGREES							A														
ALL DIMENSIONS ARE IN INCHES.			MAT'L USED: PURCHASED		DESIGNED BY: A. GARAVALIA																
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION			DESCRIPTION: HOOD MOUNTED EXTERIOR STROBE ECCO ED3712AC																		
<table><tr><td>FEATURES</td><td>HOLES/SLOTS</td><td>ANGLES</td></tr><tr><td>0.0 = ± .125</td><td>0.0 = ± .062</td><td>0° = ± 2°</td></tr><tr><td>0.00 = ± .062</td><td>0.00 = ± .031</td><td>0.0° = ± 1°</td></tr><tr><td>0.000 = ± .031</td><td>0.000 = ± .015</td><td></td></tr></table>			FEATURES	HOLES/SLOTS	ANGLES	0.0 = ± .125	0.0 = ± .062	0° = ± 2°	0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°	0.000 = ± .031	0.000 = ± .015		WEIGHT (Lbs.): 1.0 LBS					SEGMENT CODE: EST	PART NUMBER: 78897
FEATURES	HOLES/SLOTS	ANGLES																			
0.0 = ± .125	0.0 = ± .062	0° = ± 2°																			
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°																			
0.000 = ± .031	0.000 = ± .015																				
Material Thickness: per ASTM Std. Weld Callouts per AWS																					
RELEASE & REVISIONS			PURCHASED COMPONENT																		
INITIAL ECN: 28622			REFERENCED SUPPLIER AND/OR MANUFACTURER ECCO																		
CURRENT ECN: 28622			REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER ED3712AC																		
ECN DESCRIPTION:			COLOR (ONLY LIST IF COLOR SPECIFIC)																		
RELEASE FOR MARKET FILL			COMMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)																		
REVISED BY: A. GARAVALIA			NO																		