



Introduction / Comments:

Install Instructions For Interior Lighting In Topper For Silverado 1500/2500/3500 (6.5'/6.75' & 8')

Note:

Read all instructions prior to installation. Review the Adrian Steel **GENERAL PRECAUTIONS PAGES (56638)** before attempting installation. Only personnel familiar with using electrical best practices should perform this install. Reference **ELECTRICAL BEST PRACTICES MANUAL (54479)** before attempting installation.



Installation Instructions For Interior Lighting In Topper For Silverado 1500/2500/3500 (6.5'/6.75' & 8')




****Please read statement below before moving forward****

These plug and play kits are completely modular and can be configured in many different ways. Placement of lights will be determined by sales order drawings/customer ask. Therefore, these instructions are for the most standard configurations, and for reference only.

Overall Harness Diagram

71905 Harness

71902 TLM Harness

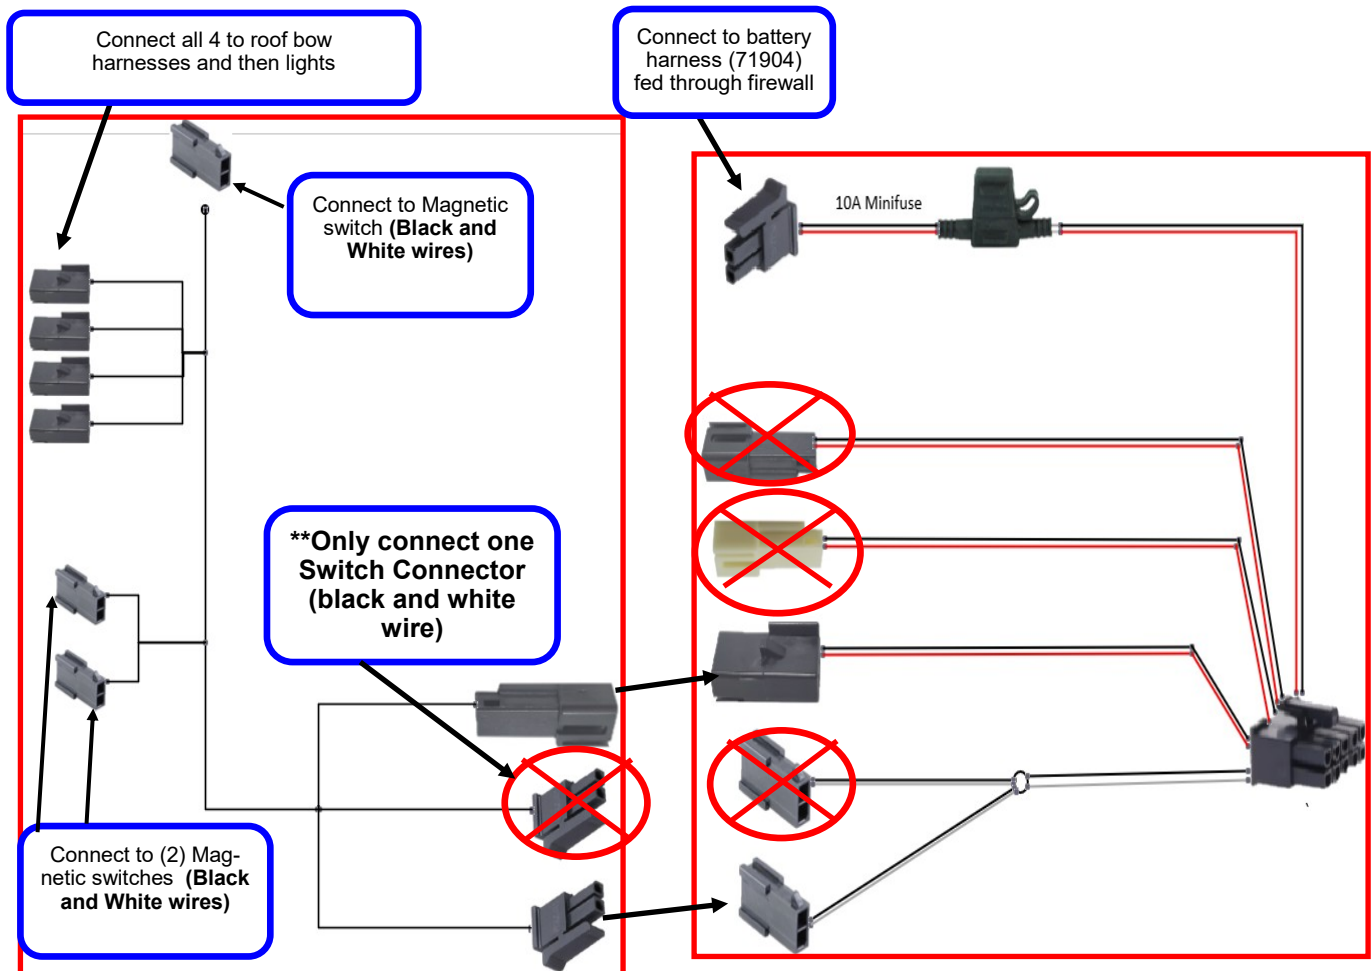

Tools Required:






Screwdriver

Power drill, 3/8" step drill bit



Components:

Please note all these components may not be used in every install.
Only install what you have. Refer to the order drawing.
Integrated Truck Solution Kit 72549 components are denoted with a red star.

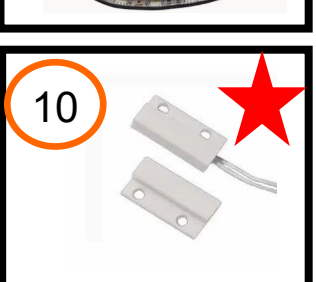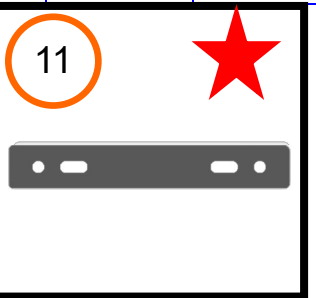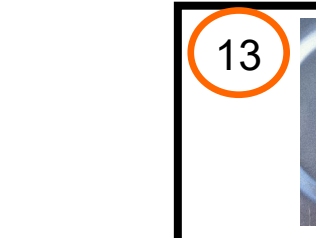		<table><thead><tr><th>Part Number</th><th>Description</th><th>Qty</th></tr></thead><tbody><tr><td>1</td><td>71902</td><td>TLM Module/Harness</td><td>1</td></tr><tr><td>2</td><td>71904</td><td>TLM To Battery Harness Silverado</td><td>1</td></tr><tr><td>3</td><td>71905</td><td>TLM To Lights Harness</td><td>1</td></tr><tr><td>4</td><td>63481</td><td>Roof Bow Harness #1</td><td>3</td></tr><tr><td>5</td><td>63482</td><td>Roof Bow Harness #2</td><td>1</td></tr><tr><td>6</td><td>65346</td><td>24" Strip Light</td><td>4</td></tr><tr><td>7</td><td>65347</td><td>36" Strip Light</td><td></td></tr><tr><td>8</td><td>65348</td><td>48" Strip Light</td><td></td></tr><tr><td>9</td><td>63480</td><td>Dome Light</td><td>2</td></tr><tr><td>10</td><td>71907</td><td>Magnetic Switches</td><td>3</td></tr><tr><td>11</td><td>73414-W</td><td>Magnetic Switch Bracket Spacer</td><td>3</td></tr><tr><td>12</td><td>73415-W</td><td>Magnetic Switch Rear Bracket</td><td>1</td></tr><tr><td>13</td><td>73416-W</td><td>Magnetic Switch Side Bracket</td><td>2</td></tr></tbody></table>	Part Number	Description	Qty	1	71902	TLM Module/Harness	1	2	71904	TLM To Battery Harness Silverado	1	3	71905	TLM To Lights Harness	1	4	63481	Roof Bow Harness #1	3	5	63482	Roof Bow Harness #2	1	6	65346	24" Strip Light	4	7	65347	36" Strip Light		8	65348	48" Strip Light		9	63480	Dome Light	2	10	71907	Magnetic Switches	3	11	73414-W	Magnetic Switch Bracket Spacer	3	12	73415-W	Magnetic Switch Rear Bracket	1	13	73416-W	Magnetic Switch Side Bracket	2
Part Number	Description	Qty																																																							
1	71902	TLM Module/Harness	1																																																						
2	71904	TLM To Battery Harness Silverado	1																																																						
3	71905	TLM To Lights Harness	1																																																						
4	63481	Roof Bow Harness #1	3																																																						
5	63482	Roof Bow Harness #2	1																																																						
6	65346	24" Strip Light	4																																																						
7	65347	36" Strip Light																																																							
8	65348	48" Strip Light																																																							
9	63480	Dome Light	2																																																						
10	71907	Magnetic Switches	3																																																						
11	73414-W	Magnetic Switch Bracket Spacer	3																																																						
12	73415-W	Magnetic Switch Rear Bracket	1																																																						
13	73416-W	Magnetic Switch Side Bracket	2																																																						
																																																									
																																																									
																																																									
																																																									
																																																									
																																																									

Light Kit's Offered:

Part Numbers/Kit Contents:

72549 Integrated Truck Solution: ★

Includes: (2) 24" strip lights on both sides of the side doors and 2 dome lights in the top, on the roof bows. Refer to all components denoted with a ★ and quantity in blue parenthesis on page 3.

72608 (1) 48" Rear strip light on the back door

Includes: (1) 48" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

72610 (1) 48" Strip light on the driver side only

Includes: (1) 48" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

72609 (1) 48" Strip light on the passenger side only

Includes: (1) 48" strip light, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

72611 (3) 48" Strip lights—rear, driver, and passenger side

Includes: (3) 48" strip light, (1) roof bow harness #2, (2) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

Driver's Side Strip Lights



Rear Side



Passenger's Side Strip Lights



Light Kit's Offered (8' beds only):

Part Numbers/Kit Contents:

74490 Integrated Truck Solution: ★

Includes: (2) 36" strip lights on both sides of the side doors and 3 dome lights in the top, on the roof bows. Refer to all components denoted with a ★ and quantity in blue parenthesis on page 3.

72608 (1) 48" Rear strip light on the back door

Includes: (1) 48" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

74493 (1) 48" Strip light on the driver side only

Includes: (2) 36" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

74492 (1) 48" Strip light on the passenger side only

Includes: (2) 36" strip light, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

74494 (3) 48" Strip lights—rear, driver, and passenger side

Includes: (4) 36" strip light, (1) 48" strip light, (1) roof bow harness #2, (2) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

Driver's Side Strip Lights



Rear Side



Passenger's Side Strip Lights



Light Kit's Offered (6.5', 6.75' beds only):

Part Numbers/Kit Contents:

74625 (2) 24" Strip light with handle on driver side only:

Includes: (2) 24" strip lights with handle, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

74626 (2) 24" Strip light with handle on passenger side only:

Includes: (2) 24" strip lights with handle, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

74627 (4) 24" Strip light with handle & (1) 48" strip light

Includes: (4) 24" strip lights with handles, (1) 48" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

Driver's Side Strip Lights



Passenger's Side Strip Lights



Walk In Topper Interior Lighting Kits Offered: 6.5ft Bed (1500,2500,3500)

Part Numbers/Kit Contents:

77415 Integrated Truck Solution:

Includes: (4) 24" strip lights on both sides of the side doors and 2 dome lights in the top, on the roof bows.

77416 (1) 48" Strip Light on Passenger Side Only

Includes: (1) 48" strip light, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

77751 (1) 48" Strip Light on Driver Side Only

Includes: (1) 48" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

81794 (1) 48" Strip Light on Rear Side Only

Includes: (1) 48" strip light, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

77752 (2) 48" Strip Lights on Driver & Passenger Side

Includes: (2) 48" strip lights, (2) roof bow harness #1, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

Driver Side



Passenger Side



Walk In Topper Interior Lighting Kits Offered: 8ft Bed (1500,2500,3500)

Part Numbers/Kit Contents:

79807 Integrated Truck Solution

Includes: (4) 36" strip lights on both sides of the side doors and 3 dome lights in the top, on the roof bows.

79808 (2) 36" LED Light Strips on Passenger Side Only

Includes: (2) 36" strip light, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

79809 (2) 36" LED Light Strips on Drivers Side Only

Includes: (2) 36" strip light, (1) roof bow harness #1, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag

79810 (4) 36" LED Light Strips on both Passenger and Driver Sides

Includes: (4) 36" strip lights, (2) roof bow harness #1, (1) roof bow harness #2, (1) TLM Module, (1) TLM to Battery Harness, (1) TLM to Lights Harness, (1) Magnetic Switches Bag


Driver Side




Passenger Side



Routing Overview:

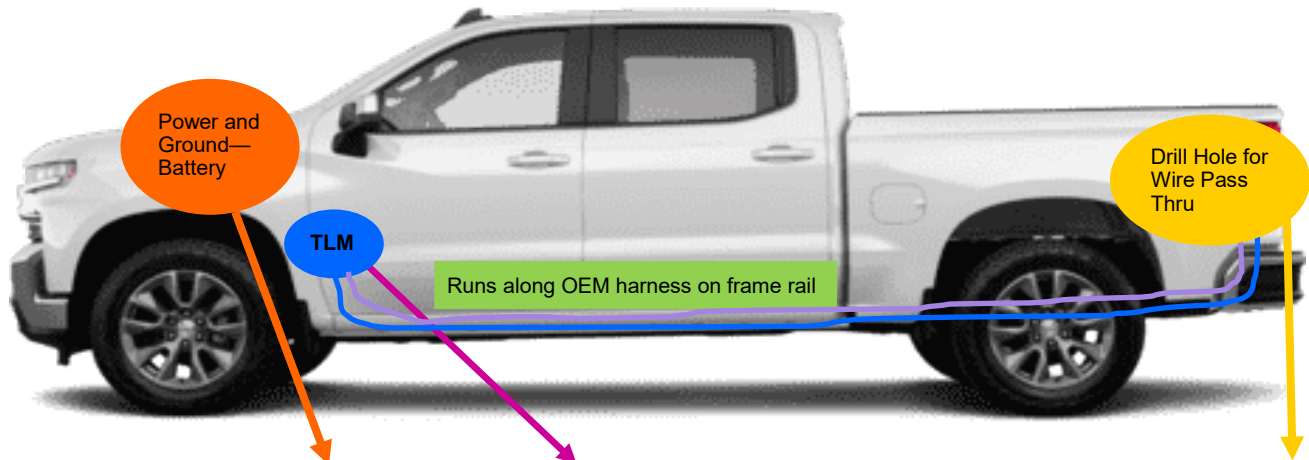

Chassis Ground

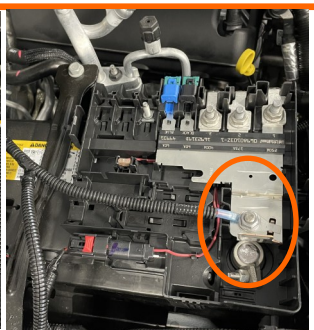

Battery Positive




Under Glove Box




View from
drivers side
inside the
cab




Driver's Side

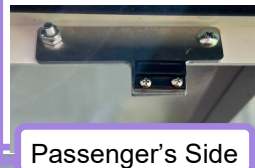


Passenger's Side

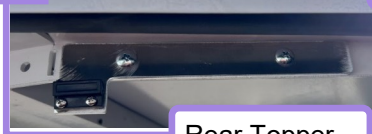

Rear Topper

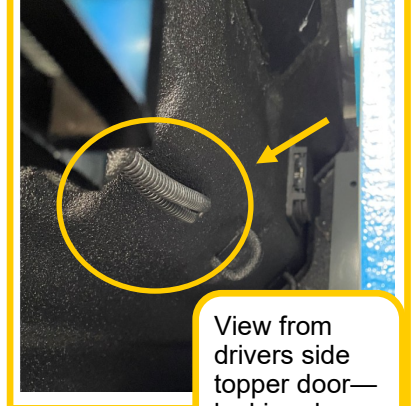

View from
drivers side
topper door—
looking down

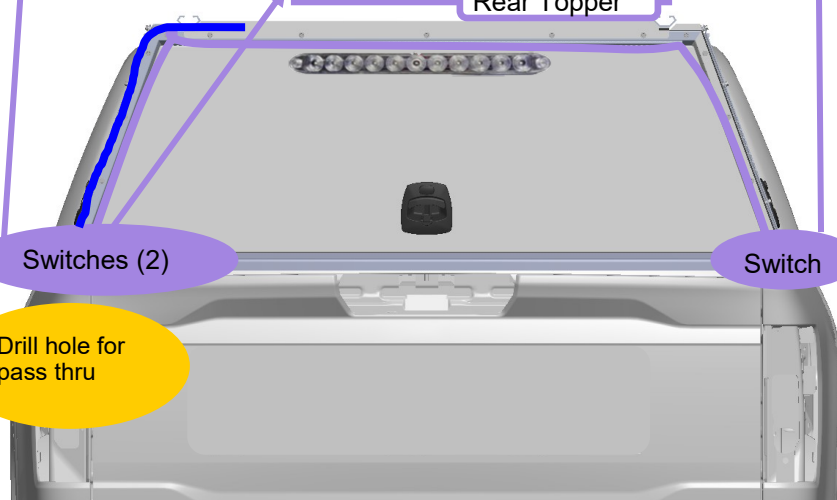

Switches (2)

Switch

Drill hole for
pass thru

Color	Key - Items
Orange	Power and Ground Location
Blue	Harness Routing From VTM To Top
Purple	Switches And Switch Harness
Yellow	Bed Wire Pass Thru



Light Placements (6.5', 6.75' beds only):

Please refer to the order drawing—not all lights will be used every install.
These are modular and created to work depending on customer needs.


Driver's Side



Passenger's Side



Rear Of Top

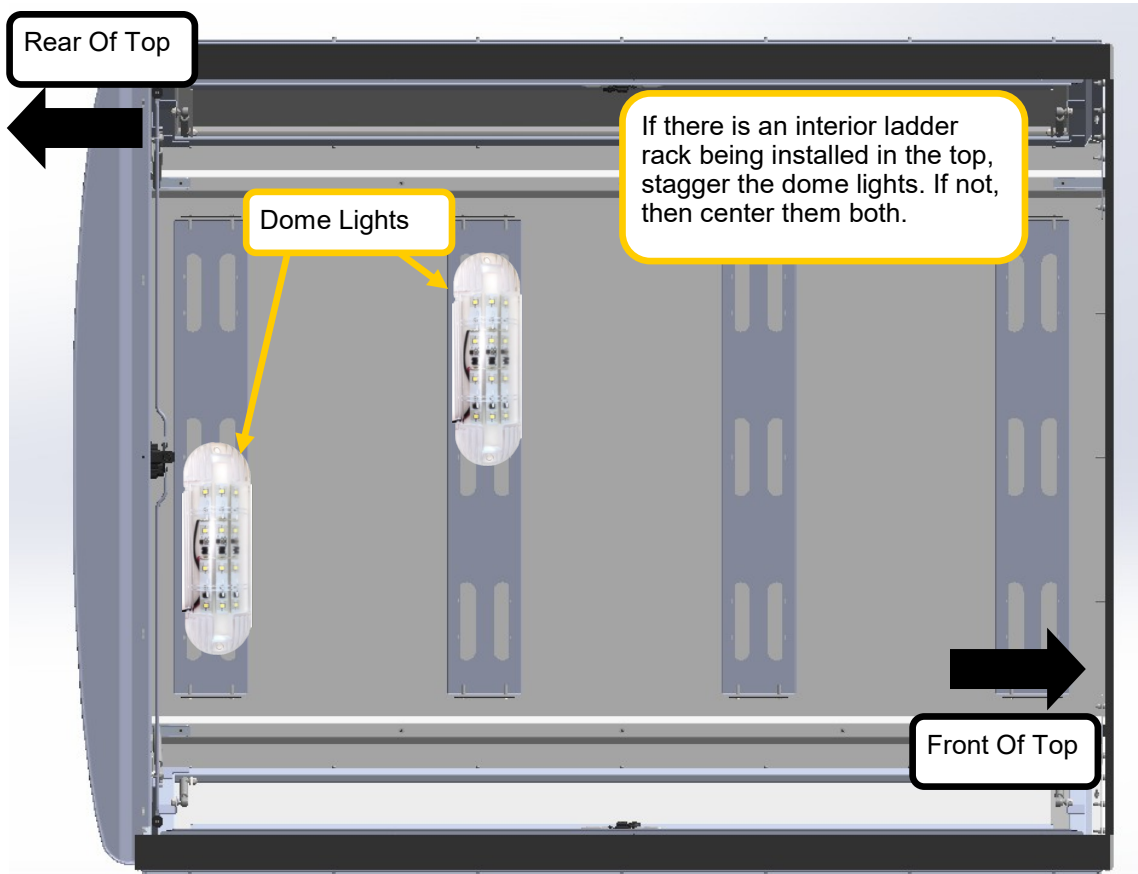




Light Placements (8' beds only):

Please refer to the order drawing—not all lights will be used every install.
These are modular and created to work depending on customer needs.


Driver's Side





Passenger's Side

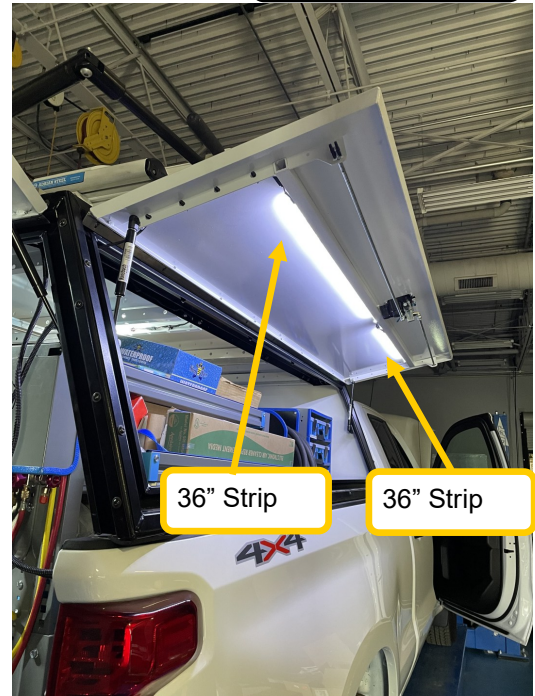

Rear Of Top

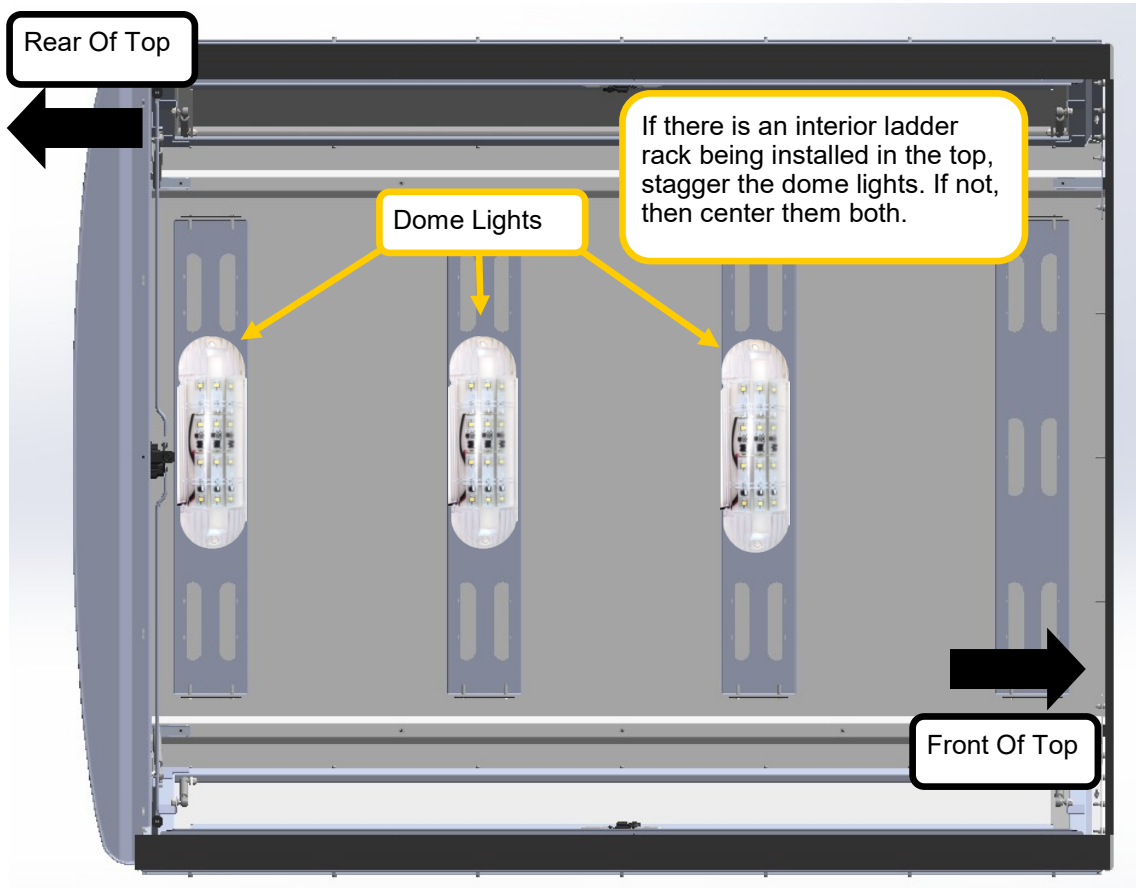


Front Of Top

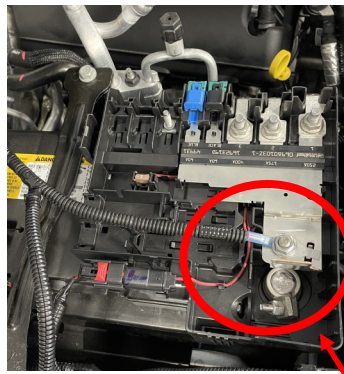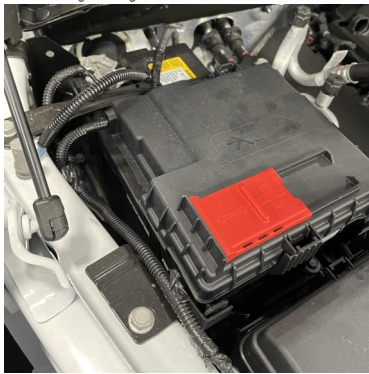

Step 1:

Open the truck hood and locate the battery. Remove the battery cover. Locate the power harness 71904. Remove the inline fuse in the fuse holder. Do not place fuse back into holder until after the install is complete. Connect the red wire ring terminal to the positive battery post circled in the figure to the left. Connect the black wire ring terminal to the chassis ground post located on the driver's side frame body. Refer to the picture to the left.

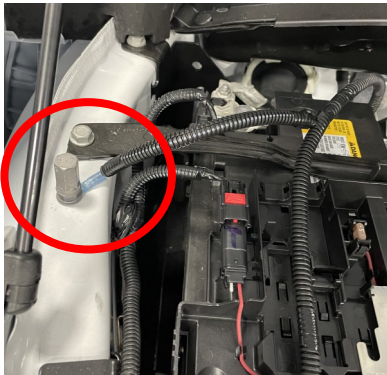

Re-torque ground to 22Nm. (16 ft lb) DO NOT OVER TIGHTEN.


Re-torque positive terminal to 10Nm (11 ft lb) DO NOT OVER TIGHTEN.

Step 2:

Route the connector end along the underside of the cab filter (red dotted line) to the fire-wall.

To tuck the wiring under the filter, stick zip ties through the red circled area on the second image. Using zip ties, secure the wiring to hide it. (Figure 8.2)

Figure 8.2

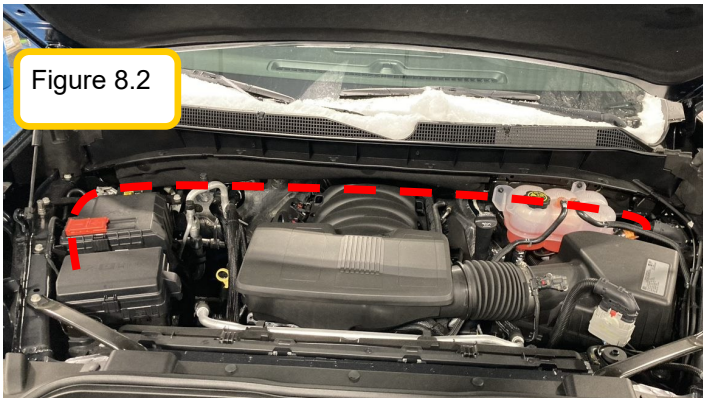

Step 3: Locate the floor grommet in the cab, by the driver's foot well area. You will need to remove the trim and some carpet in order to see this. The grommet is circled in red. Figure 8.3 and 8.4.

Drill a 3/4" hole (to fit the grommet in the kit—Part number 35735-0) in the OEM floor grommet.

****BE SURE TO CHECK THAT THE OPPOSING SIDE OF THE GROMMET IS CLEAR BEFORE DRILLING.****

Insert the grommet into the hole. Route the connector end through the grommet. Locate the big cream colored connector. This will be the area that the TLM is installed in the next few steps.

Figure 8.3



Trim to remove

OEM Grommet



Figure 8.4



For Rev A follow the steps below:



Step 4:

Locate the Timer Low-Voltage Module (TLM) and harness — Part number: 71902

First, plug the harness into the module.

Note:

You will NOT use the cream colored connector or the matching black connector. You will be using the smaller black module output connector, one(1) switch harness connectors (black and white wires), and the black power supply connector.

*** Ensure that the fuse from the inline fuse holder has been removed until the end of the install.



71904 connected to TLM

Please reference page 2 for the following connection information.

Locate the TLM to battery harness (71904) that has been routed through the firewall grommet and TLM power to light harness (71905).

On the 71904 harness, connect the black connector to the blunt red wire on the TLM. (Circled in red in first image, on top).

Plug the red and black connector on the 71905 to the mating connector on the 71902 (TLM), shown in the blue circle. Next, connect one of the switch connections (black and white wires) to one of the mating connections on TLM. Circled in yellow. The rest of the connectors will not be used.



71905 and 71902 Connections

*** You do NOT need to connect both switch connections.

To set the dip switch to 90 minutes (default) follow the chart below:

If customer would like a time different that 90 minutes, use the dip switches to set the time.

Chart is as follows: **TLM REV A**

1	2	3	4	5	6
Down	Down	Down	Up	Up	Down

DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	Minutes	DIP 6
Voltage Sense ON (Down) OFF (Up)	Timer ON (Down) OFF (Up)	Up	Up	Down	30	ON (Down) Steady Ground Input
		Up	Down	Up	45	
		Up	Down	Down	60	
		Down	Up	Up	90	OFF (Up) Momentary Ground Input
		Down	Up	Down	120	
		Down	Down	Up	150	



TLM Rev B:



Part #: TLM Rev B

DIP 1	DIP 2	V-Sense	DIP 3	DIP 4	DIP 5	Minutes	DIP 6
Up	Up	OFF	Timer ON (Down) OFF (Up)	Up	Up	30	ON (Down) Steady Ground Input OFF (Up) Momentary Ground Input
Up	Down	11.2V		Up	Down	60	
Down	Up	11.5V		Down	Up	90	
Down	Down	11.8V		Down	Down	120	

Dip Switches 1 & 2 determine Voltage Sense Threshold
Dip Switch 3 sets option to ON or OFF
Dip Switches 4 & 5 set Timer Duration

If topper lighting consists of only **1 Light Strip**, place dip switches in the following order:
(This is set for 90 minutes, if customer would like 30,60, or 120 minutes please refer to the chart above to set dip switches accordingly)

1	2	V-Sense	3	4	5	6
Down	Down	11.8	Down	Down	Up	Down

If topper lighting consists of only **more than 1 Light Strip (all other light kits)**, place dip switches in the following order:
(This is set for 90 minutes, if customer would like 30,60, or 120 minutes please refer to the chart above to set dip switches accordingly)

1	2	V-Sense	3	4	5	6
Up	Down	11.2	Down	Down	Up	Down

TLM
Location



Step 5: Locate OEM harness circled in red, on the driver side, near OBD port. There is a large harness. After TLM is connected, begin to mount TLM in place using zip ties. If necessary, tape back side of TLM to secure its location.

Refer to the picture to the left for the TLM placement.

Secure the TLM and wires with zip ties.

*** Picture is for location reference only.



Driver's
Side

Step 6: Locate the OEM floor grommet by lifting up the carpet on the driver side.

Locate the 1" diameter grommet (0.75" inner diameter). This will be the grommet needed to route both the brake light harness and lighting harness. Drill a 1" hole and route the wire harness (71905 and 71902) through the grommet, to the underbody of the truck. Silicone when done.

Please note this will be done on the driver side, not the passenger side. Image is for reference only.



Step 7: Routing (Refer to routing diagrams at the beginning of the instructions)

Route the harnesses rearward following the OEM wire harness on the frame.

Once you reach the area on the OEM harness where there is heat foil tape, please use the tape provided in the harness bag and apply the tape to the harness.

Continue routing the harness upward in the bed cavity, to the bed wire pass thru area.


Tuck any excess wiring into the empty cavity underneath the bed frame.

Please be sure to tightly secure the wiring with zip ties to ensure they are not able to fall out overtime.


DO-NOT secure wiring to any brake lines.



Excess wiring
tucked under the
bed frame

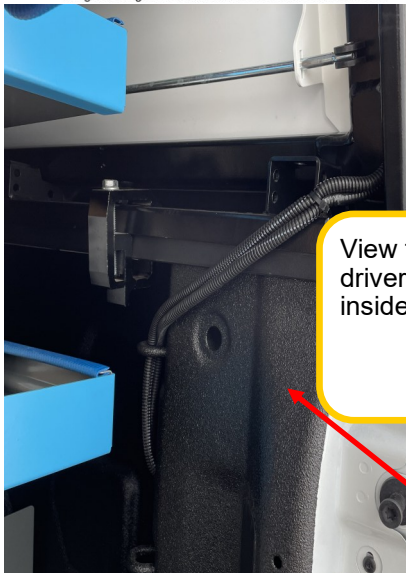

View from
drivers side
inside the cab

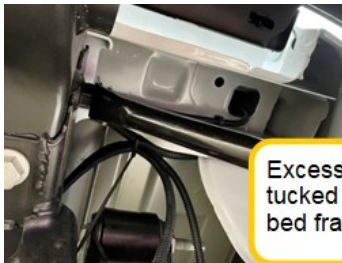

Excess wiring
tucked under the
bed frame

Step 8: Routing Continued

Locate the driver side rear bed area near the taillight. Vertically installed are two D pillar rings.


Locate the 1" diameter grommet (0.75" inner diameter). This will be the grommet needed to route both the brake light harness and lighting harness.

Drill a 1" hole above the 2 rings on the driver side of the bed. Be sure the area is clear for a pass thru before drilling. Route the wire harness (71905 and 71902) through the grommet, to the underbody of the truck.

Tuck any excess wiring into the empty cavity underneath the bed frame.

Please be sure to tightly secure the wiring with zip ties to ensure they are not able to fall out overtime.

*** **NOTE:** Image is view from passenger side, however, wiring must be routed on the driver's side. Be sure to be on **DRIVER'S SIDE**.

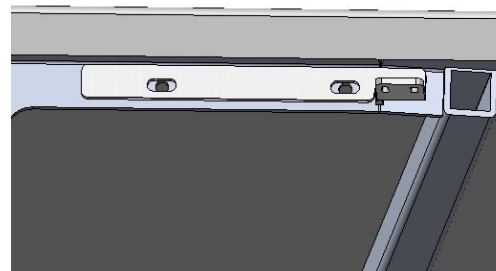


Step 9:

Locate BAG71907, magnetic switches PN 71907 and magnetic switch brackets.


There are two unique mounting brackets, these will be used for side doors.

Note: They are very similar, pay close attention to what one you have.

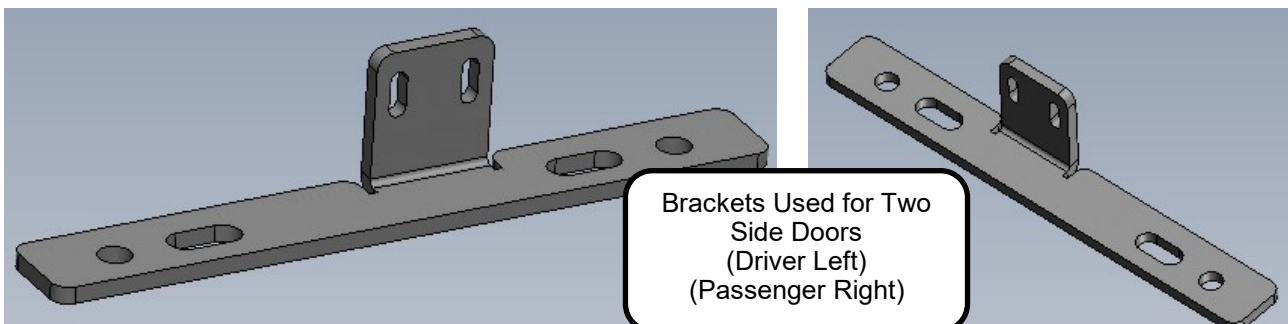

Brackets Used for Two
Side Doors
(Driver Left)
(Passenger Right)

MAGNET




MAGNETIC
SENSOR




Step 10:

71907 will have 3 magnets and 3 magnetic sensors. Use the image as reference.

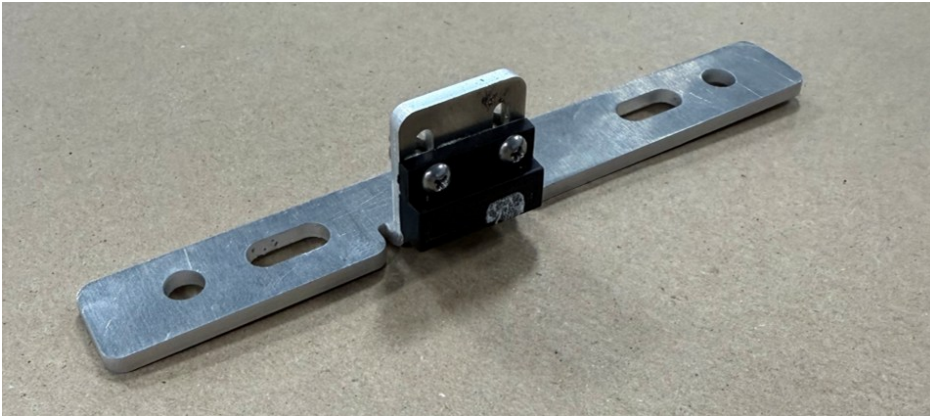


Step 10:

- Place magnet so that it matches the image.

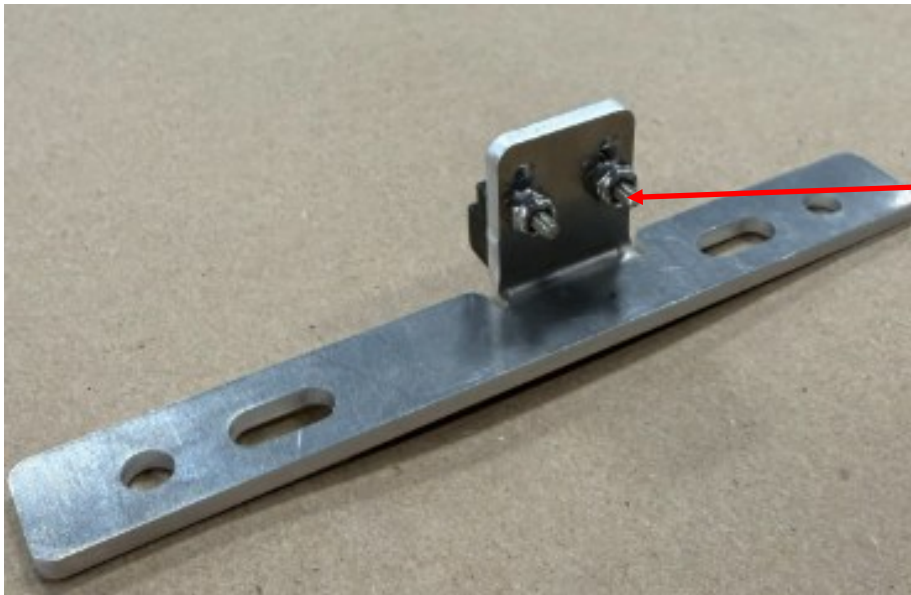

- Mount the bolts so that they are on the bottom edge of the slot.

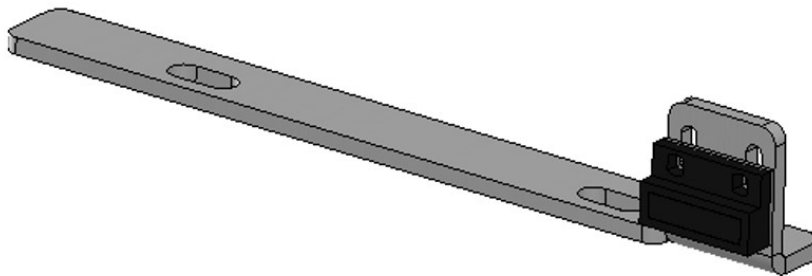

- The rear door is the same mounting as the side doors with the magnet.



Step 11: Install Magnetic Switch Brackets


Using an alcohol wipe, clean brackets. After they are dry, locate bracket for the driver side door.

For the driver side, mount the bracket so that the slightly shorter side goes towards the tube extrusion/upwards.


Line the bolt heads up to the middle of the slot for best alignment.

Use the image to the left as reference.

Secure mount with 10-24x.75 button head cap screws and 10-24 hex nuts.

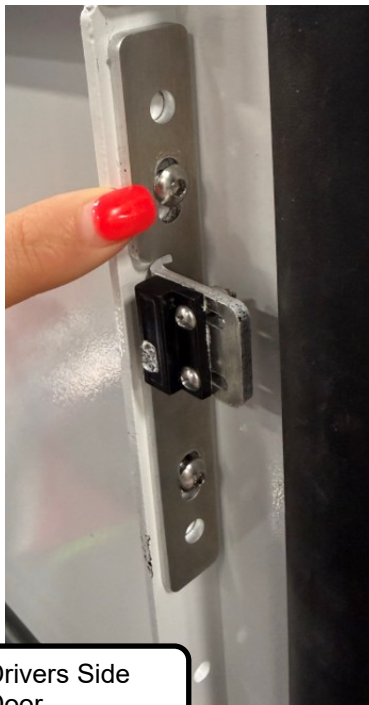

Drivers Side Door

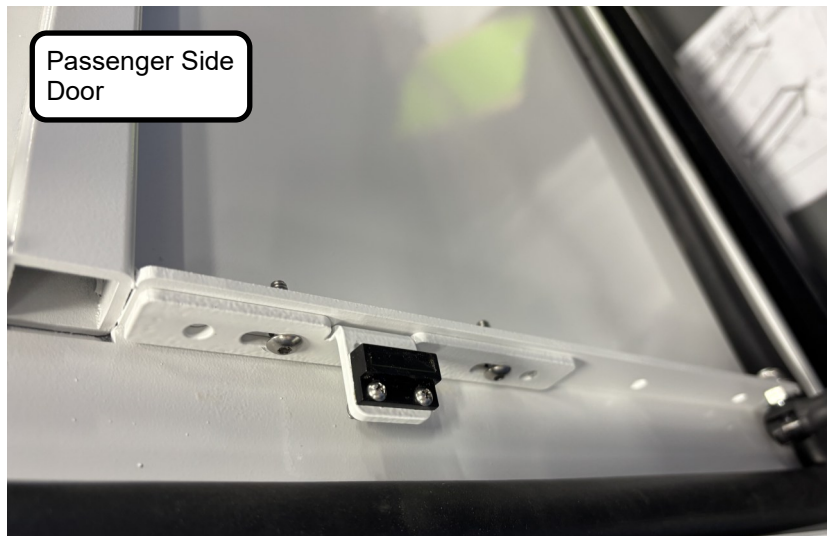


Passenger Side Door

For the passenger side, the shorter side of the bracket will be closer to the tube extrusion/away from truck.

Line bracket up with first two holes after metal brace make sure to have the bolts in the middle of the slot for best alignment.

Use the image to the left as reference.

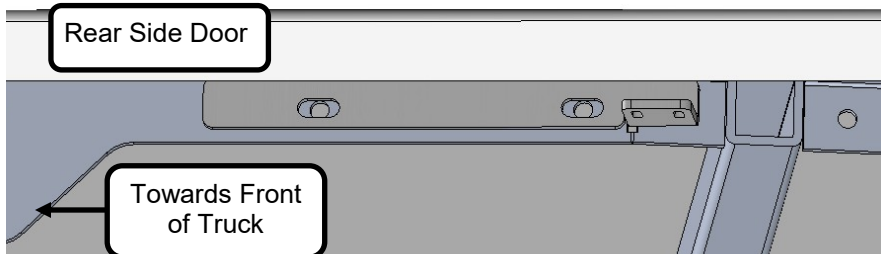

Rear Side Door

Towards Front of Truck

For the rear side, place bracket on the left outermost side of the topper door.

Secure bracket to metal brace with magnet attachment towards the back of the truck or away from the truck.

**Step 12:**

Identify the door shocks on the topper doors. Both the driver and passenger sides should have pre-existing holes on the shock mounts for placing the magnetic switch.

Start by cleaning the shock mount using an alcohol pad and remove any plastic film covering the back of switch.

**Step 13:**

Locate driver's side door shock mounts. There will be two magnetic switches mounted to each side of the driver's side door shock mount.


Position the magnetic switch along with its wires and connector. To have the wires point upward toward the shocks.

Place switch centered on the mount for easiest alignment.

Using a screw driver secure the magnetic switches in proper position. Make sure to mount the switch to the lower two holes.

Use the provided images as reference.

PASSENGER SIDE
POINTS DOWN

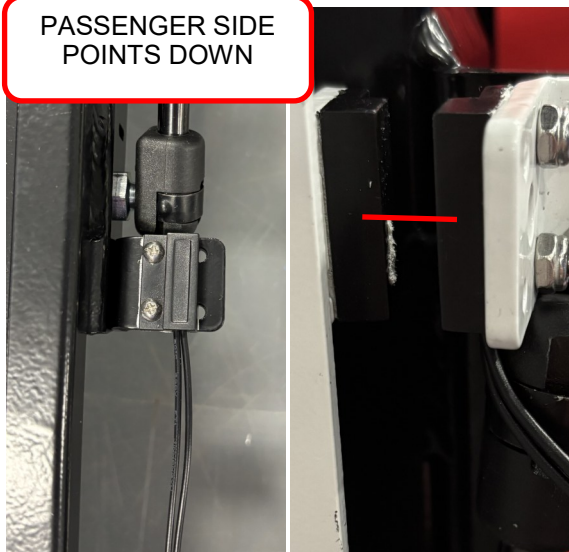**Step 14:**

Locate passenger side door shock mount. Secure magnetic switch on passenger side mount with wires facing upward.

Make sure magnetic switches are face to face with one another! If they are not aligned they will not function properly. Refer to image for proper alignment.

Make use of the slots throughout the bracket assembly to adjust the magnets to align as closely as possible.



Walk-In Topper Magnetic Switch Instructions: **Please follow the next two pages for mounting magnetic switches for the walk-in topper.**

- BAG0989**
- Bracket Part Number 77230**



Walk-In Topper Magnet Bracket Install





- Install Driver/Passenger side doors the same as the above pages.
- Mount magnetic switch sensor on the top part of door frame on the topper. Use the image to the left as reference.
- Plug in mating connector end to magnetic switch sensor to 71905. Circled in image on the bottom left.
- Place sensor end aligned with the holes.
- Secure sensor in place by removing sticky back paper, and use provided fasteners to mount in place. Be sure to clean the area with alcohol wipe before install.
- Use images below as reference for mounting the magnetic switch sensor.
- Secure harnesses using stud mounted zip ties.



Top part of door frame



Walk-In Topper Magnet Bracket Install

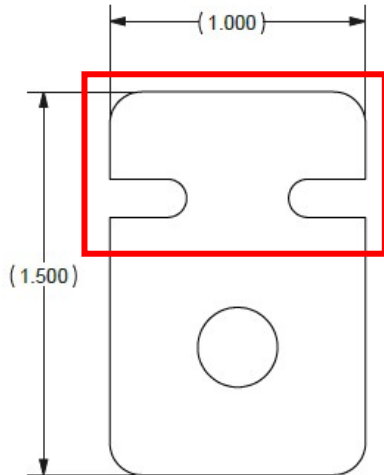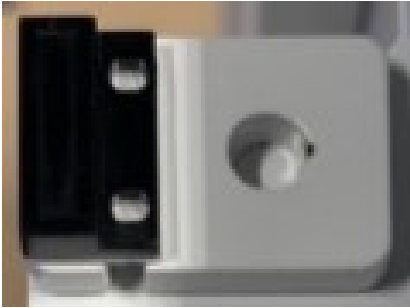

- Use the small bracket for the rear walk-in doors and use BAG0989 to secure it.
- Locate the 77230 bracket spacer and the magnet switch.
- Peel the sticky off the magnet and stick it to the bracket as shown in the images to the left. Make sure the holes in the magnet line up with the ones on the bracket.
- Locate the screws and place the bracket with the magnet switch on it and secure it to the top of the walk-in door as pictured below.
- Make sure the magnet switches line up so that they will properly work.
- Test functionality of magnetic switches.

Place the magnet in the location of the red rectangle. Make sure the holes line up.

NOTE: The hole in the small bracket is not for mounting. This hole was designed for paint line purposes.

After install check:
Shut the topper door and ensure the magnetic switches are aligned. The two magnets must meet, face-to-face when the door is shut.


Line the bracket with the magnet switch with these holes.





Walk-In Topper Magnet Bracket Install Cont.

Note: The brackets should be lined up as shown below. They should also be spaced apart as shown on the measuring tape in the photo.

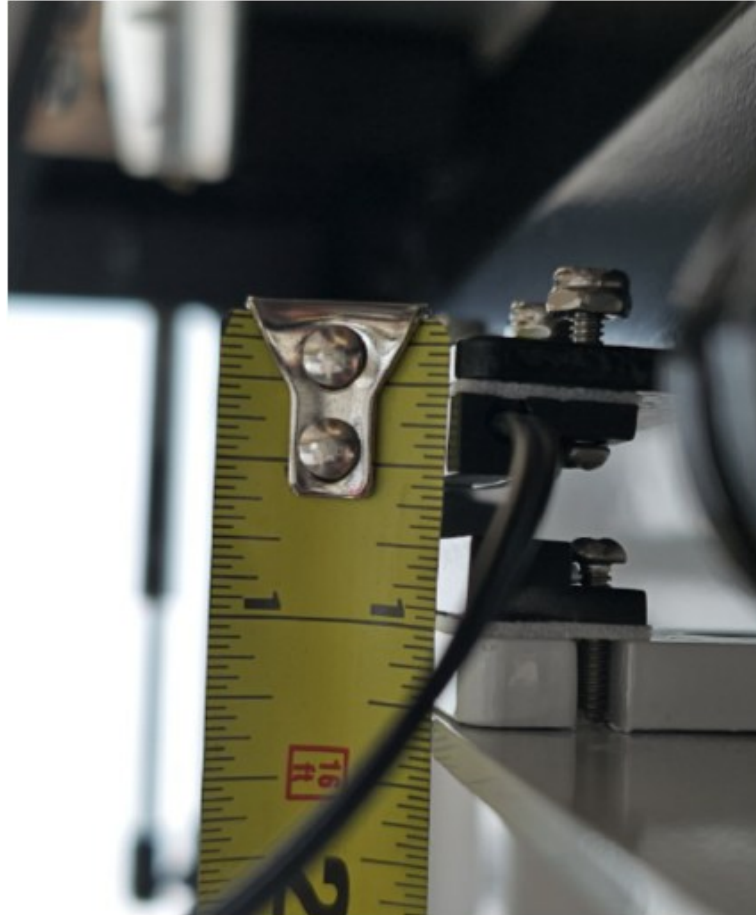



Mounting **Kit 81794's** Rear Door Light Kit

Mount [1] 48" light strip on the inside of the topper similar to the images below.



*** Be sure to place strip light high enough on inner wall to avoid making contact with door roller when closed. Image above for reference



CONTAINMENT FOR MAGNETIC SWITCHES

Route Harness 71905

- Route harness **71905** through the assembly following the standard routing path.

Connect Rear Door Magnetic Switch

- Identify the **shorter magnetic switch lead**.
- Route the shorter lead to the **rear door** location.

Plug the shorter magnetic switch connector into the rear door magnetic switch.

Extend Passenger Side Harness

- Locate the magnetic switch harness on the **passenger side**.
- Cut the harness at the appropriate location to allow for wire extension.
- Strip the wire ends.
- Add the required extra wire length using butt connectors.
- Crimp all butt connectors securely.

Route the extended harness to the final magnetic switch mounting location.

Final Inspection

- Verify all connectors are fully seated.
 - Confirm wiring is secured away from sharp edges and moving parts.
- Check that harness routing does not interfere with door operation





Step 14:

After mounting magnetic switches, begin to pull harness through grommet in truck bed. Connect magnetic switches to harness.

Pull the wiring upward to secure along the inside with zip ties.


Using zip-tie stud mounts, secure harness along inside of topper. Continue routing the harnesses in the corner of the topper, to the top front of the first roof bow. (Shown in Red)

Step 15:

The harness end with connectors should end up between the first roof bow and the door frame on the driver side. See picture below for reference. Use the holes in the roof bows to secure wiring with zip ties.

Be sure to not route any wires through holes in roof bows.



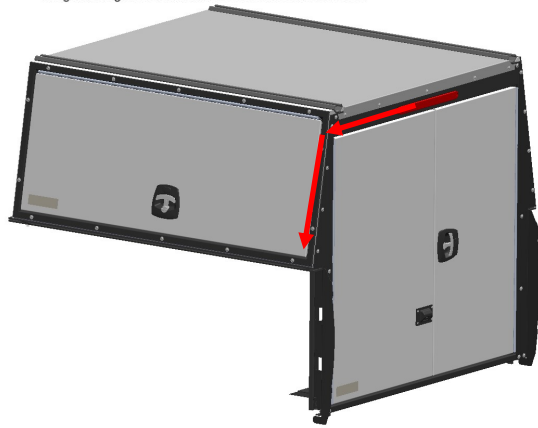

Step 16:

A) After routing 71905 underneath the vehicle, towards the rear, secure the bundle in the middle of the roof bows closest to the doors.


Route the longest lead of magnetic switch harness to the **driver side** switch mount. Image to the left.

When routing keep the harness tucked **up into the area with the harness**. Use stud mounts to secure harness, if there is no stud mounts to connect to, use sticky back mounting.

Connect end of magnetic switch to mating connector end on harness.
(Shown in **Red**)




B) With the two short leads plug one end into the rear magnetic sensor, the other add 80371 extension harness to it to reach the passenger side magnetic sensor.
(Shown in **Red**)

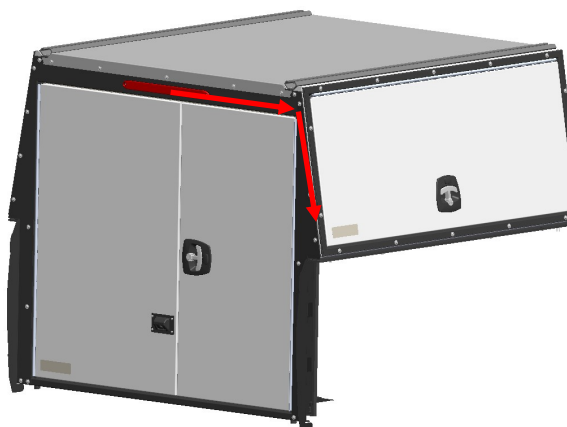

80371



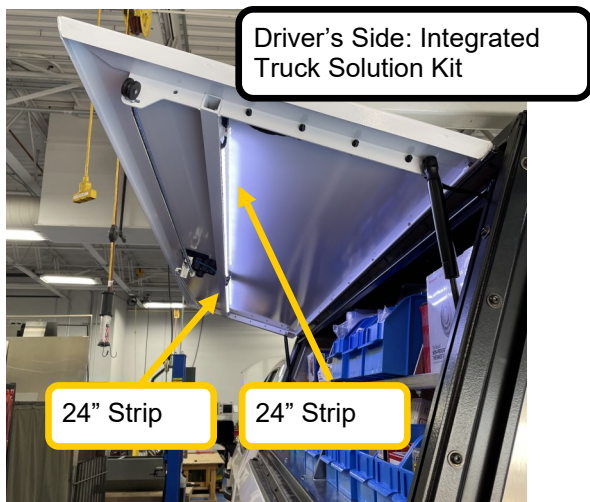

Driver's, Passenger, or Rear Door:
Other Interior Light Kits

**Step 17: Install the lights.**

Locate the lights for the install. This will vary with customers so grab only what is called out on the sales order per vehicle.

*****Please note:** if there is an added door handle strap, the lights will need to be installed as high up on the channel as possible, to avoid the nut and bolt clamping on the light strip.

Open the topper doors that are requiring lights. Locate the square tube running horizontal across the door. The side facing the interior of the top will be the side you will secure the lights to.

Using the alcohol pads provided in the boxes, clean the entire inside wall of the square tube where the lights will stick to before installing. Be sure to let the tube dry.

Be sure to have the larger connector end of the lights towards the rear for connecting into the roof bow harnesses.

If installing the integrated Truck Solution (72548):

Connect (2) 24" strips together, and remove sticky tape on the back.

On the drivers side, install (2) 24" strip lights as center as possible between the front and rear sides of the door.



For the passenger side, install (2) 24" strips, following the same instructions as above.

Follow the same mounting location/procedure for any other strip lights being mounted (48" or 36"). Lights will mount on the interior side of the channel that runs along the door.

Only install the lights on the sides that are needed. Not every door will always have lights. These will vary on customer asks. Refer to page 4 for kit part numbers and components.

Be sure to have the larger connector end of the lights towards the rear for connecting into the roof bow harnesses.

Place a stud mount zip tie mount at each end of the strips to secure the connector to the topper.

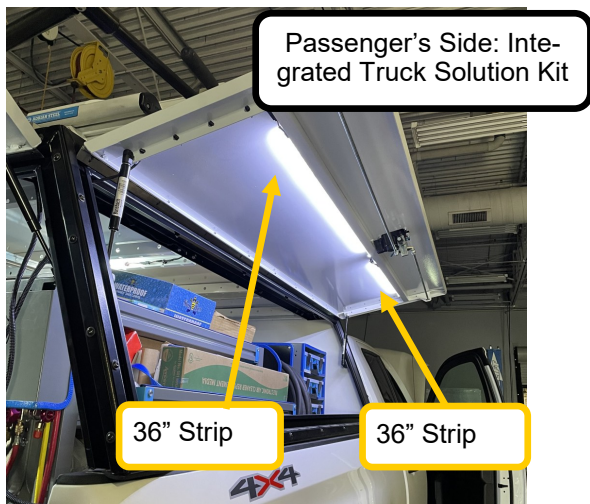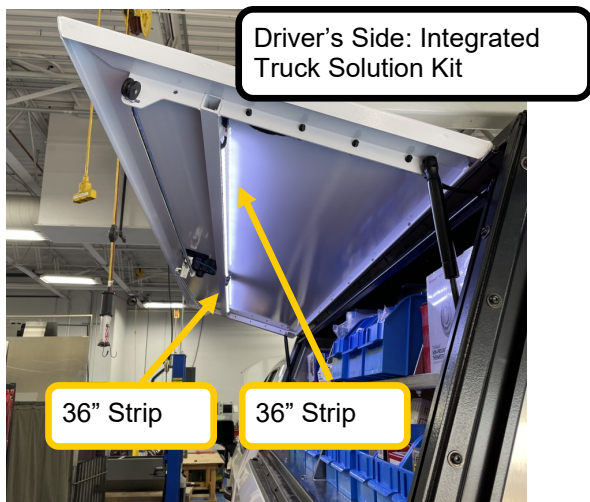

Driver's, Passenger, or Rear Door:
Other Interior Light Kits



Step 17 (8' only): Install the lights.

Locate the lights for the install. This will vary with customers so grab only what is called out on the sales order per vehicle.

*****Please note:** if there is an added door handle strap, the lights will need to be installed as high up on the channel as possible, to avoid the nut and bolt clamping on the light strip.

Open the topper doors that are requiring lights. Locate the square tube running horizontal across the door. The side facing the interior of the top will be the side you will secure the lights to.

Using the alcohol pads provided in the boxes, clean the entire inside wall of the square tube where the lights will stick to before installing. Be sure to let the tube dry.

Be sure to have the larger connector end of the lights towards the rear for connecting into the roof bow harnesses.

If installing the integrated Truck Solution (74490):

Connect (2) 36" strips together, and remove sticky tape on the back.

On the drivers side, install (2) 36" strip lights as center as possible between the front and rear sides of the door.

For the passenger side, install (2) 36" strips, following the same instructions as above.

Follow the same mounting location/procedure for any other strip lights being mounted (48"). Lights will mount on the interior side of the channel that runs along the door.

Only install the lights on the sides that are needed. Not every door will always have lights. These will vary on customer asks. Refer to page 5 for kit part numbers and components.

Be sure to have the larger connector end of the lights towards the rear for connecting into the roof bow harnesses.

Place a stud mount zip tie at each end of the strips to secure the connector to the topper.


Step 18:
For the Integrated Truck Solution (72548)
Locate the (2) dome lights.

Be sure to clean the area that the lights will stick to carefully before installing. Use the alcohol pad provided in the boxes and let it dry before installing.

If there will be an interior ladder rack installed, stagger the dome lights on the roof bows like shown. If not then please center the lights.

Note: This will be stick on only.

Integrated Truck Solution Kit With Interior Ladder Rack

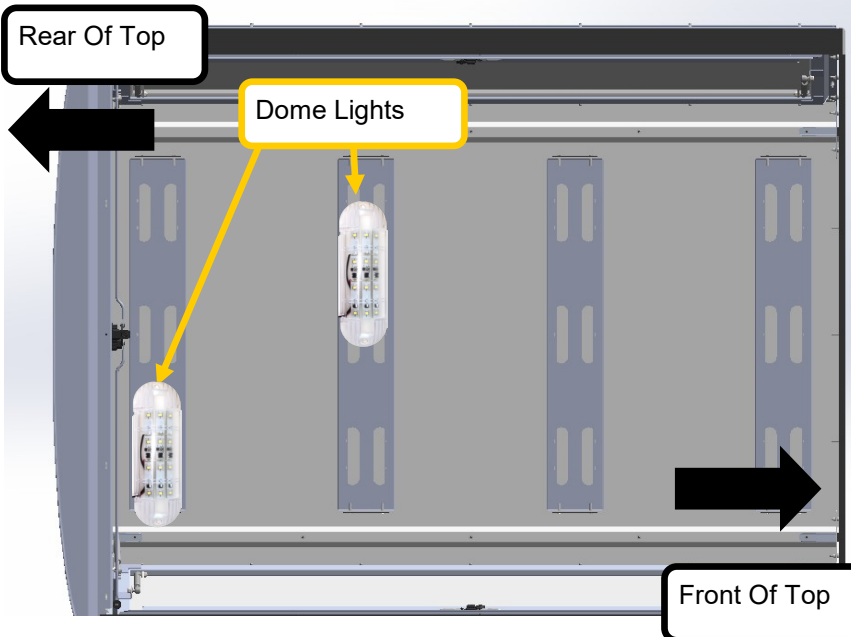


Place dome light on roof bow as shown in images below:



Please secure dome lights with (FAS-0022 10-24X0.75) screw, (FAS-0029 10-24) nut, and (FAS-0027) washer on roof bow.

Integrated Truck Solution Kit With No Interior Ladder

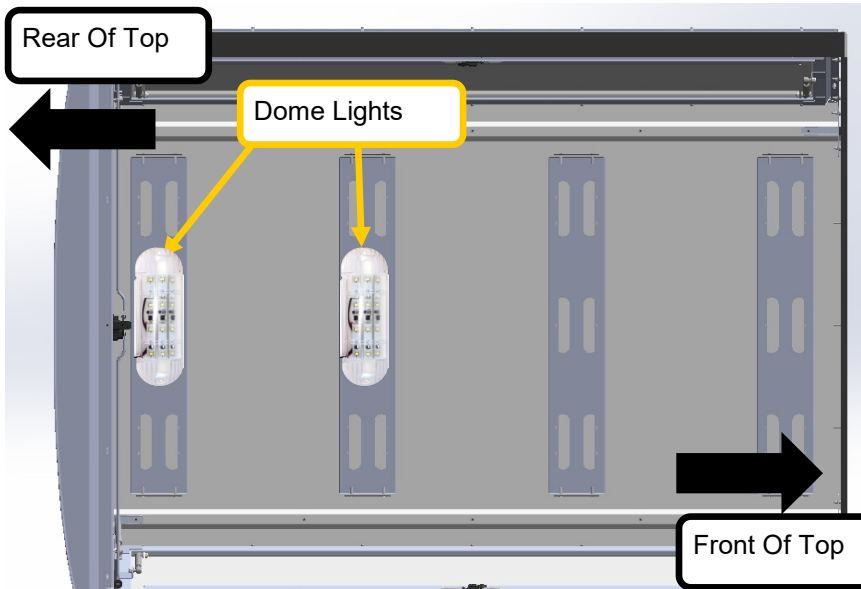

Step 18 (8' only):

For the Integrated Truck Solution (74490)


Locate the (3) dome lights.

Be sure to clean the area that the lights will stick to carefully before installing. Use the alcohol pad provided in the boxes and let it dry before installing.

If there will be an interior ladder rack installed, stagger the dome lights on the roof bows like shown. If not then please center the lights.

Note: Don't use the self tapper screws. Drill 2 holes and use nuts and bolts to secure Dome lights .

Integrated Truck Solution Kit With Interior Ladder Rack

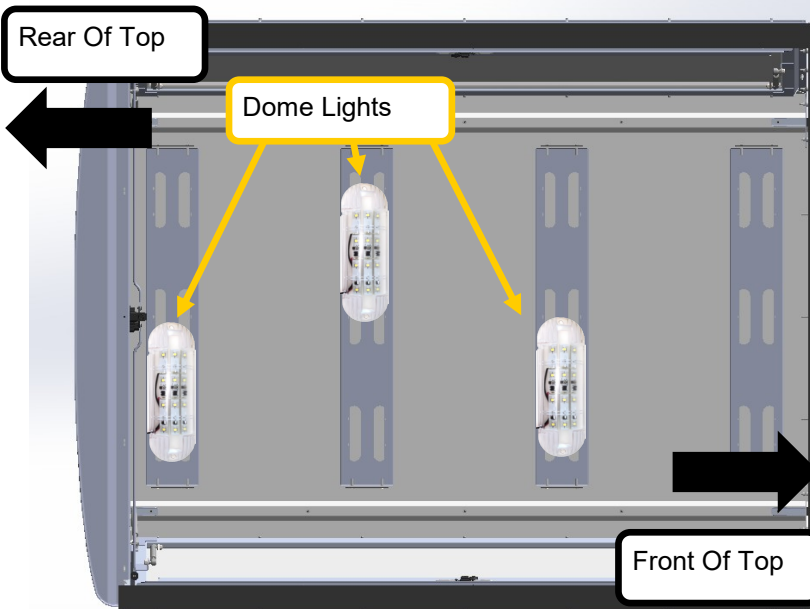


Place dome light on roof bow as shown in images below:



Please secure dome lights with (FAS-0022 10-24X0.75) screw, (FAS-0029 10-24) nut, and (FAS-0027) washer on roof bow.

Integrated Truck Solution Kit With No Interior Ladder

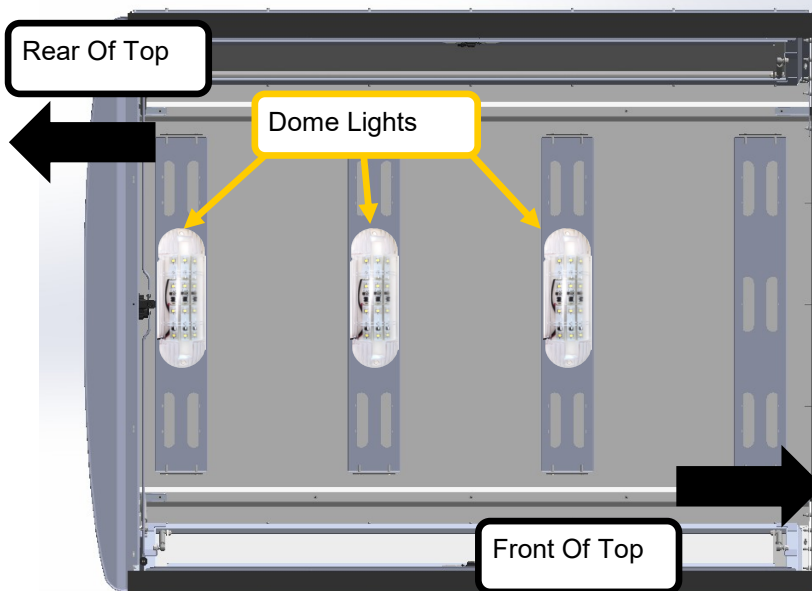



Dome light on roof bow



Dome light on roof bow



Strip light on doors—
use existing holes for
zip ties

Watch for
Sharp Edge



Leave extra wiring
for opening the door

Step 19: Roof Bow Harness Routing

Use roof bow harness #1 (63481) for routing the 2 dome lights and the strip lights on the driver's side door.

Use roof bow harness #2 (63482) for routing to the strip lights on the passenger side.

Utilize the existing holes in the doors and roof bows for securing the zip ties to. Clean topper surface in corner areas with alcohol pads. Begin to secure the harness using provided self adhesive tie mounts where necessary.

***IMPORTANT:

Ensure while securing wiring to avoid all sharp edges. (Shown in image 3, circled in red). When wiring from the light strips to the roof bow, avoid sharp edges at the ends.

When both side doors are open, allow very little slack on the wire, ensuring it is taut. However, while pulling wiring taut on the strip lights ensure the doors open and close without damaging the wires.

Route the harnesses to the TLM harness (71905) and plug them in.

Secure all the wires with zip ties and tuck neatly as possible between the first roof bow and the rear door edge.

Be sure all wiring is secured with zip ties.



Tuck excess wiring between door and roof bow. Secure with zip ties

Step 20: *** Testing of magnetic switches ***

Continue to route power to light harness PN 71905 to magnetic switches mounted on door shock mounts.

After plugging in the magnetic switches, be sure to secure the excess wiring using provided cable ties.

Once magnetic switches and all lights are plugged in, lights should be on.

To test and see if the magnetic switches are close enough to one another, open the tailgate of the truck and shut all of the topper doors.

Once all of the topper doors are shut, all of the lights should be off. If one topper door is open, the lights will remain on. In order for the lights to turn off, all of the topper doors must be shut.

Magnetic switches should be no more than 1/4th of an inch away from one another.

If the lights do NOT turn off when all of the doors are shut, preform next step below.




Step 21: Locate magnetic switch bracket spacer PN 73414-W.

Place one **or two bracket(s)** behind the pre-existing bracket on the topper door. This can be placed behind one bracket and then tested again.

Utilizing hardware provided, secure bracket behind magnetic switch bracket. This is ensure the magnetic switches are close enough for connectivity.

A spacer may be placed behind all magnetic switch brackets on the rear door and two side doors if deemed necessary.

Magnetic switches mounted on topper door must be **NO MORE** than 0.3" apart from each when the door is shut.

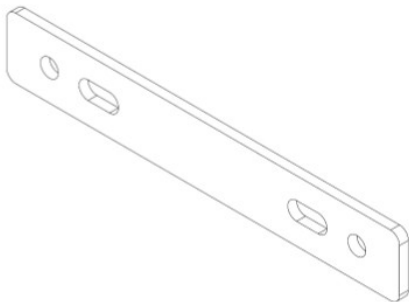



Insert the fuses into the inline-fuse holders on the TLM harness (71905) and the power harness (71904).

The install is now complete.

Check that the lights come on when any of the 3 doors open.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0406-A	4" x 6" 3MIL AUTOBAG	1
2	FAS0942	SCREW,RHP 4-40X.50 SS	20
3	FAS0943	NUT,HEX NLK 4-40 SS	20
4	FAS0674	SCREW,BHCS 10-24X.75 SS	4
5	FAS0554	18-8 Stainless Steel	6
6	FAS0989	SCREW,RHP 4-40X.50 SS	4



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 28219
CURRENT ECN: 28219
ECN DESCRIPTION: RELEASE FOR PRODUCTION
REVISED BY: LJK

FORMING, WELDING & ASSEMBLY
THIS PART IS NOT PAINTED, COATED OR FINISHED AT THIS PART LEVEL!
MECHANICAL FINISHING: N/A
SPECIAL FORM TOOL(S): N/A
WELDING JIG: N/A
ASSEMBLY JIG: N/A
MATERIAL TYPE: ASSM

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION			
	ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221
			REVISION LEVEL B
MAT'L USED:	ASSM	DESIGNED BY: L. KALENIECKI	
DESCRIPTION: FAS BAG WALK IN TOPPER MAG SWITCH F-150			
WEIGHT (Lbs.):	0.725	SEGMENT CODE:	BAG
		PART NUMBER:	BAG0989

PART NUMBER

13905-0**ITEM DESCRIPTION: WIRE TIE, NYLON 40Lb, 8.5" BLACK**

MANUFACTURER: WAYTEK, INC. or equivalent
MANUFACTURERS PART NUMBER: 21093M or 21093C

SPECIFICATIONS: STANDARD CABLE TIE
 BLACK, NYLON
 8-1/2" LONG
 TENSILE STRENGTH: 40.0 LBS
 21093M = 1,000 quantity
 21093C = 100 quantity

SPECIAL NOTES: PART NUMBER IS BLACK.

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM



CAUTION
WHEN INSTALLING EQUIPMENT IN OR ON
VEHICLES CHECK FOR FUEL TANKS, FUEL
LINES, CONTROL LINES AND ELECTRICAL
WIRING BEFORE DRILLING! ALWAYS USE
DRILL BITS WITH INTEGRAL STOPS
WHENEVER POSSIBLE!

DRAWN BY
MDG

DATE DRAWN
10/26/2006

ECN NUMBER
18021

ECN DATE
11/13/2015

PART WEIGHT
0.01 LBS.

REV. LEVEL
D

PART NUMBER
13905-0

PART NUMBER

26618-0**ITEM DESCRIPTION: SILICONE, 1oz. TUBE**

SPECIFICATIONS: SU5005 RTV SILICONE
1oz. TUBE
CLEAR OR EQUIVILENT
SELF PIERCING CAP

SPECIAL NOTES:

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

**906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM**



**WHEN INSTALLING EQUIPMENT IN OR ON
VEHICLES CHECK FOR FUEL TANKS, FUEL
LINES, CONTROL LINES AND ELECTRICAL
WIRING BEFORE DRILLING! ALWAYS USE
DRILL BITS WITH INTEGRAL STOPS
WHENEVER POSSIBLE!**

DRAWN BY
JLC

DATE DRAWN
7/21/2001

ECN NUMBER
16551

ECN DATE
7/22/2014

PART WEIGHT
0.02 LBS.

REV. LEVEL
C

PART NUMBER
26618-0

PART NUMBER

26618-0**ITEM DESCRIPTION: SILICONE, 1oz. TUBE**

SPECIFICATIONS: SU5005 RTV SILICONE
1oz. TUBE
CLEAR OR EQUIVILENT
SELF PIERCING CAP

SPECIAL NOTES:

SUPPLIED BY: THIS ITEM IS ADRIAN AVAILABLE!

PURCHASED PRODUCT DATA SHEET (PPDS)

THIS DRAWING/INFORMATION IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER THAT IS DETRIMENTAL TO THE INTEREST OF ADRIAN STEEL. COPYRIGHTS AND OR PATENTS THAT MAY BE THE PROPERTY OF APPLICABLE OWNERS MAY PROTECT INFORMATION AND/OR DRAWINGS OF SUPPLIED PRODUCTS.



ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

906 JAMES STREET
ADRIAN, MI 49221
517-265-6194
WWW.ADRIANSTEEL.COM



**WHEN INSTALLING EQUIPMENT IN OR ON
VEHICLES CHECK FOR FUEL TANKS, FUEL
LINES, CONTROL LINES AND ELECTRICAL
WIRING BEFORE DRILLING! ALWAYS USE
DRILL BITS WITH INTEGRAL STOPS
WHENEVER POSSIBLE!**

DRAWN BY
JLC

DATE DRAWN
7/21/2001

ECN NUMBER
16551

ECN DATE
7/22/2014

PART WEIGHT
0.02 LBS.

REV. LEVEL
C

PART NUMBER
26618-0

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS

DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)

N/A

LOAD/RATING REQUIREMENT

N/A

MATERIAL REQUIREMENT

N/A

PACKAGING REQUIREMENT

N/A



OTHER REQUIREMENTS

- **Roof Bow #2**
- **(5x) WIRE TIE W/CHRISTMAS TREE**
- **1570mm Length**



P-HARRB2

(5x)

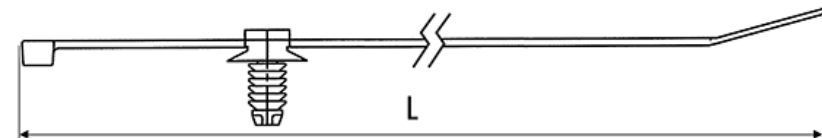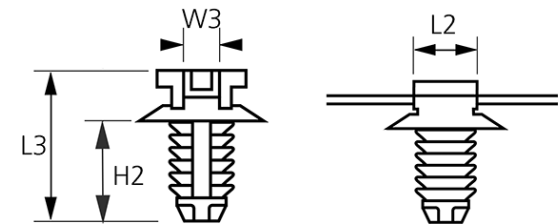

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED

ALL BEND ANGLES ARE 90 DEGREES

ALL DIMENSIONS ARE IN INCHES.

REFERENCE DIMENSIONS (X.XXX)

DO NOT REQUIRE INSPECTION

FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	

Material Thickness: per ASTM Std.
Weld Callouts per AWS

RELEASE & REVISIONS

INITIAL ECN: 24359

CURRENT ECN: 24359

ECN DESCRIPTION:

QE8539 RELEASE MODULAR DOME LIGHTING

REVISED BY: MJF

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER

ECHOMASTER FLEET SOLUTIONS

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER

P-HARRB2

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)

YES

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION



ADRIAN STEEL

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL

A

MAT'L USED: **PURCHASED**

DESIGNED BY: **MJF**

DESCRIPTION: **ROOF BOW HARNESS #2**

WEIGHT
(Lbs.):

.50

SEGMENT
CODE: **EAU**

PART NUMBER: **63482**

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS															
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)															
N/A															
LOAD/RATING REQUIREMENT															
N/A															
MATERIAL REQUIREMENT															
N/A															
PACKAGING REQUIREMENT															
N/A															
OTHER REQUIREMENTS															
Note: Connector / Terminal Configuration: • MALE 2 PIN ON ONE END • FEMALE 2 PIN ON THE OPPOSITE END. BOM: <table><tr><th>Item</th><th>Qty.</th><th>Description</th></tr><tr><td>1</td><td>1</td><td>36" WHITE LED STRIP LIGHT W/ADHESIVE</td></tr><tr><td>2</td><td>2</td><td>4" ZIP TIE</td></tr><tr><td>3</td><td>2</td><td>CABLE TIE MOUNT</td></tr><tr><td>4</td><td>1</td><td>ALCOHOL PAD</td></tr></table>	Item	Qty.	Description	1	1	36" WHITE LED STRIP LIGHT W/ADHESIVE	2	2	4" ZIP TIE	3	2	CABLE TIE MOUNT	4	1	ALCOHOL PAD
Item	Qty.	Description													
1	1	36" WHITE LED STRIP LIGHT W/ADHESIVE													
2	2	4" ZIP TIE													
3	2	CABLE TIE MOUNT													
4	1	ALCOHOL PAD													



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN:	24697
CURRENT ECN:	25778
ECN DESCRIPTION:	
Revise Modular Lights With New 3M Adhesive	
REVISED BY: JLT	

PURCHASED
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
CL-36BLED rev.B
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
YES


PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

 ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221	REVISION LEVEL B
MAT'L USED:		DESIGNED BY: J. TYNER	
DESCRIPTION: MODULE DOME LED STRIP 36"			
WEIGHT (Lbs.): 0.3	SEGMENT CODE: EAU	PART NUMBER: 65347	

Notes	
①	3:1 Adhesive Heat Shrink to be placed over LED Solder Joints
②	5925 Adhesive Liner Edges to be exposed next to heat shrink

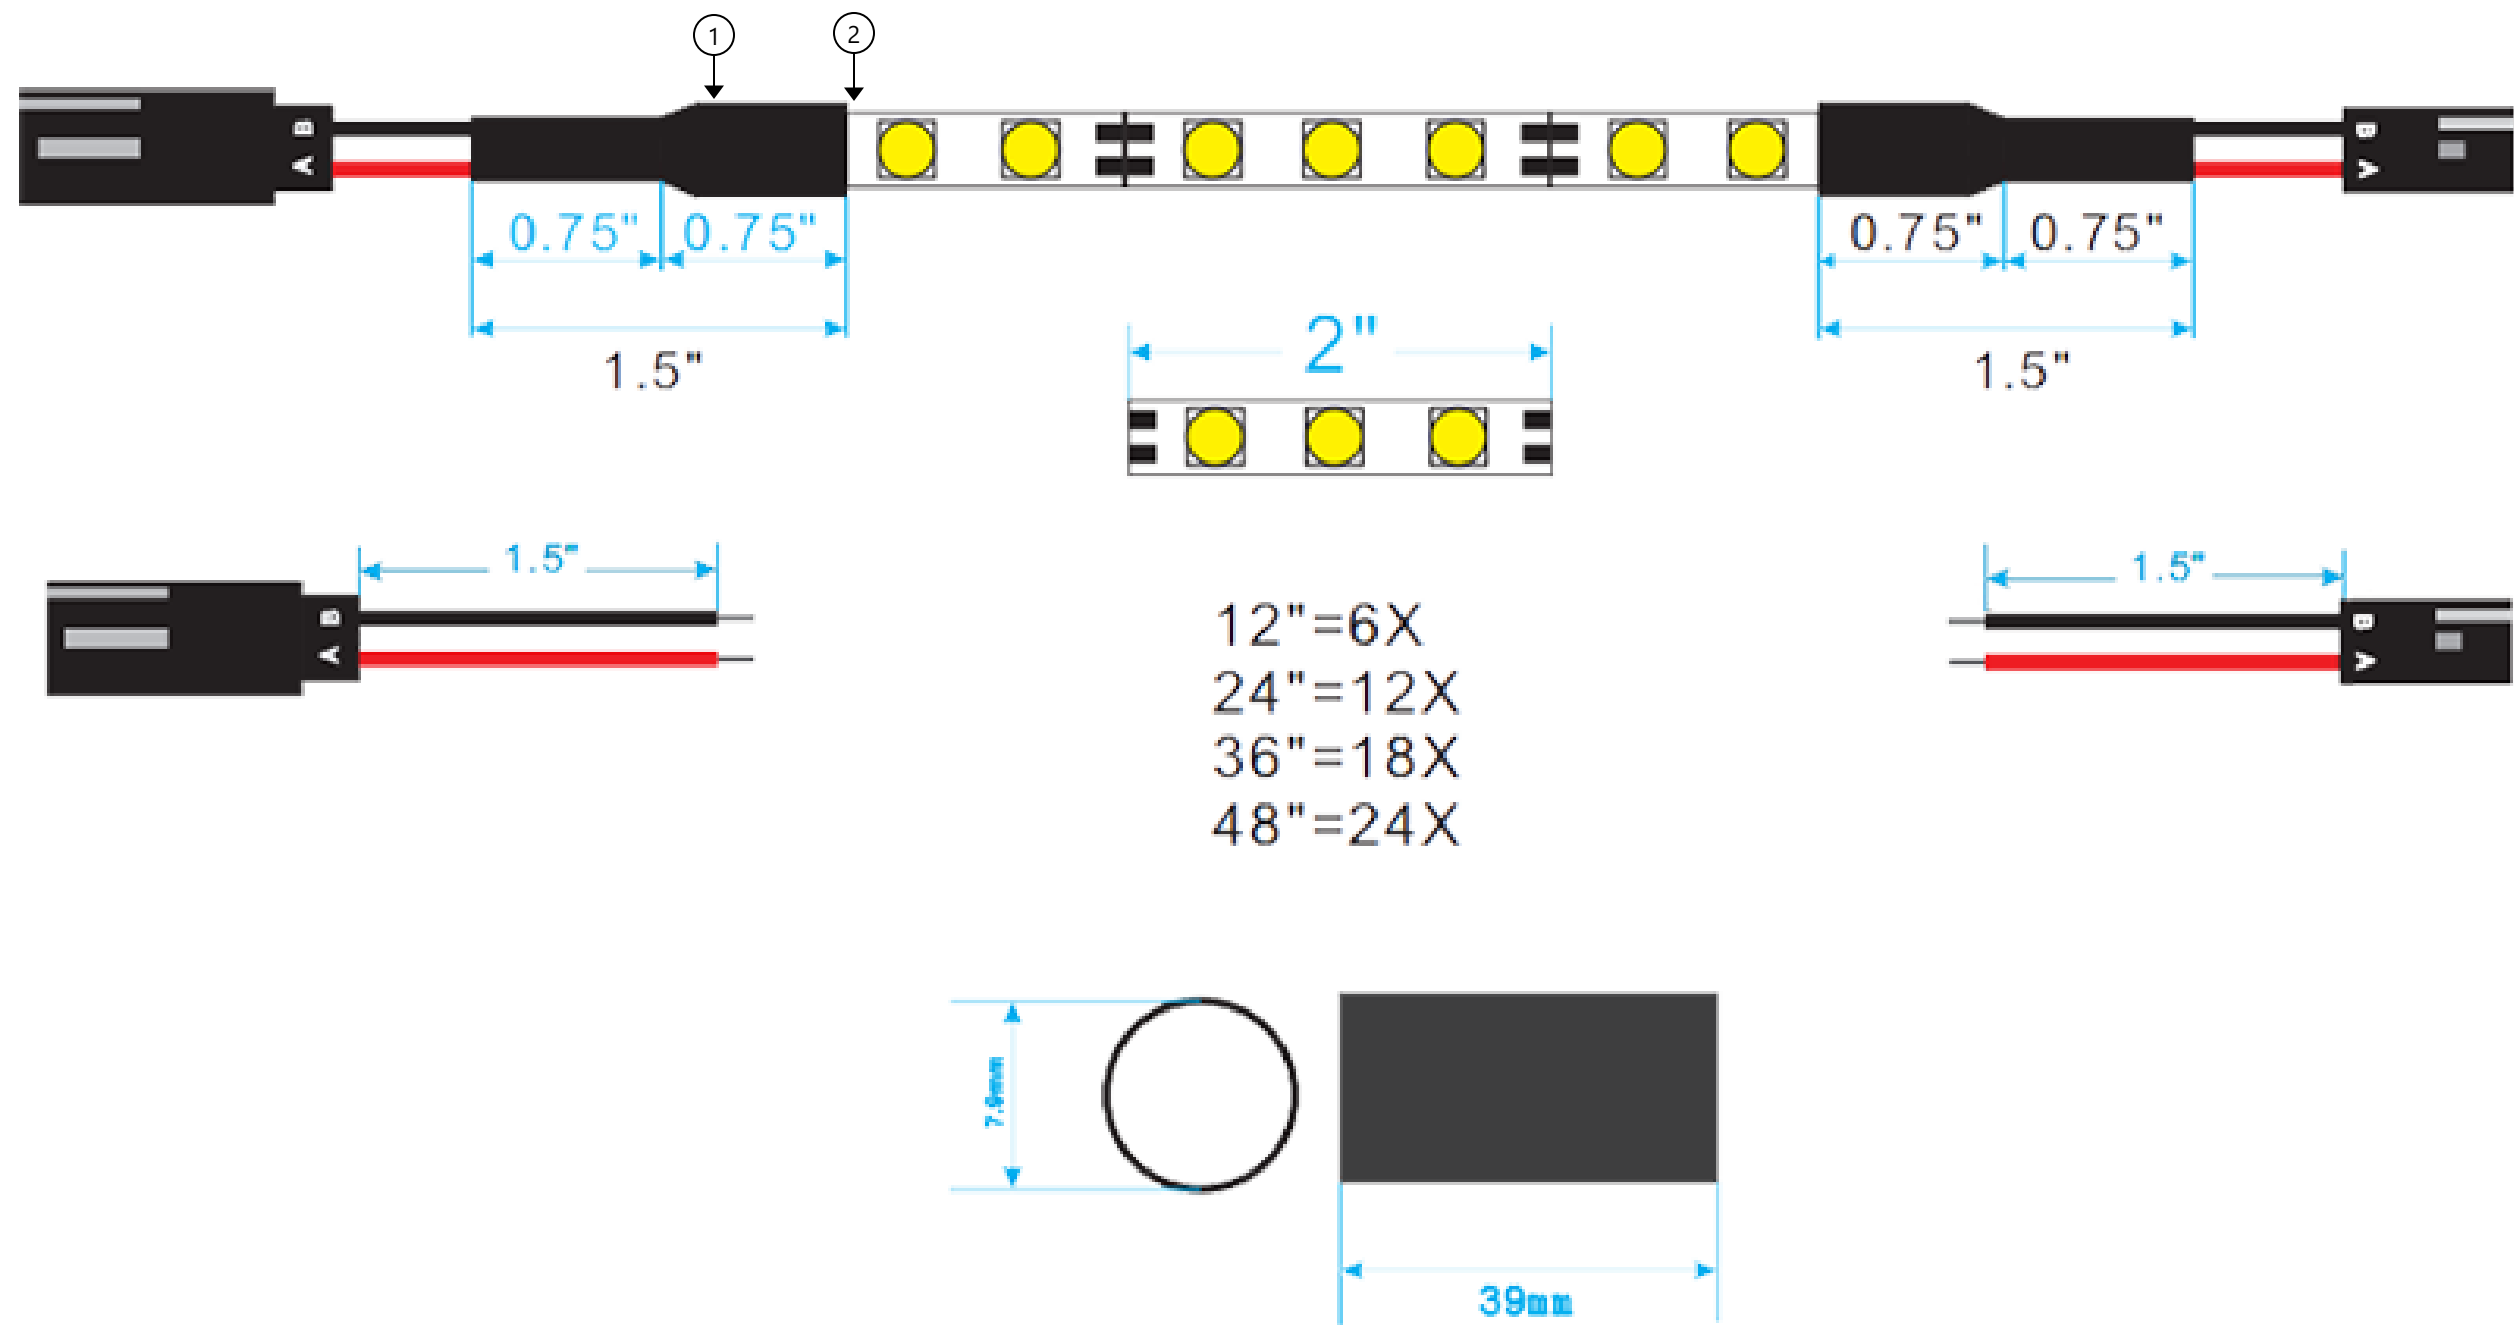

Revisions			
Rev.	Date	Author	Description
A	11/1/21	Bennet Fisher	Initial Drawing
B	7/27/2022	Bennet Fisher	Adhesive changed to VHB 5925

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS [INCHES] TOLERANCES: ±5MM PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AAMP GLOBAL. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AAMP GLOBAL IS PROHIBITED.		Name	Date	 — ADVANCING VEHICLE TECHNOLOGY —	
	Designed By	Bennet Fisher	11/1/21		
	Engineering Approval				
	Manufacturing Approval				
	Revision Approval			Part Number: CL-36BLED	
	Quality Assurance			Description: 36" LED Strip	
				Revision: B	
				Sheet: 1	

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
N/A



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 25297
CURRENT ECN: 25334
ECN DESCRIPTION: UPDATE SUPPLIER TO SAY EQUIVALENT
REVISED BY:

PURCHASED
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
MCMASTER-CARR OR EQUIVALENT
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
8876T38 OR EQUIVALENT
COLOR (ONLY LIST IF COLOR SPECIFIC)
BLACK
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

		ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221		REVISION LEVEL B	
MAT'L USED:				DESIGNED BY: E.BURKE			
DESCRIPTION: Nylon Plastic Loop Clamp							
WEIGHT (Lbs.): 0.001		SEGMENT CODE: HDW			PART NUMBER: 66843		

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
TIMER LIGHTING MODULE FOR INTERIOR PLUG AND PLAY LIGHTING ON TOPPERS



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION		
UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS
INITIAL ECN: 26830
CURRENT ECN: 27950
ECN DESCRIPTION:
Update to Rev B
REVISED BY: JJC

PURCHASED COMPONENT
REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
71902
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED			Sheet 1 of 1
PART / PRODUCT IDENTIFICATION			
 ADRIAN STEEL [®]		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221	REVISION LEVEL
MAT'L USED: PURCHASED		DESIGNED BY: E.BURKE	B
DESCRIPTION: TIMER LIGHTING MODULE			
WEIGHT (Lbs.): 0.2	SEGMENT CODE: ELE	PART NUMBER: 71902	



TLM

Timer/Low Voltage Module

INSTALLATION MANUAL

Stinger[®]



Thank you for purchasing the
TLM



WHAT'S INCLUDED:



- Timer/Low Voltage Module
- Module Harness
- Cable Ties

COMPATIBLE ACCESSORIES:



- Vehicle-specific harness (P-VTM-xxx)
- Switch harness (VTM-SWx)
- High current harness (VTM-RLY)

FEATURES:



- Selectable timer durations - 30, 60, 90, and 120 minutes
- Selectable Low Voltage Sense shut off - 11.8V, 11.5V, and 11.2V
- Timer and Low Voltage sense work independently of each other
- Inputs for 2 momentary switches or a steady ground input
- 10A max current output





OPERATING INSTRUCTIONS:

DIP 1	DIP 2	V-Sense	DIP 3	DIP 4	DIP 5	Minutes	DIP 6
Up	Up	OFF	Timer ON (Down) OFF (Up)	Up	Up	30	ON (Down) Steady Ground Input
Up	Down	11.2V		Up	Down	60	
Down	Up	11.5V		Down	Up	90	OFF (Up) Momentary Ground Input
Down	Down	11.8V		Down	Down	120	

DIP 1-2

If Voltage Sense feature is turned ON, low voltage shut down will occur when the input voltage to the TLM module drops below the V-Sense setting. To eliminate false triggers, there is a 20 second delay before shut down.

If Voltage Sense is turned OFF, input voltage level will not be monitored.

NOTE: Voltage Sense takes precedence over Timer.

DIP 3

If the Timer feature is turned ON and switch input is activated, output voltage will be provided for specified timer duration.

DIP 4-5

Switch settings will determine how long output will be active after the switch input is activated.

NOTE: If an invalid time is selected (e.g. Up, Up, Up or Down, Down, Down) the output will turn off 10 seconds after the switch input is activated.

DIP 6

Steady Ground Input Applications:

Applying ground to the switch input will activate the output, removing ground from switch input will disable the output. If ground is applied once again, the output will be re-activated, and the timer will reset/start over.

Momentary Ground Input Applications:

Applying a pulsed ground to the switch input will activate the output, a second pulsed ground to the switch input will disable the output. If a pulsed ground is applied once again, the output will be re-activated, and the timer will reset/start over.



Steady Ground Input Applications

Trigger Input	Switch Input	Output	Voltage Sense (ON)	Timer (ON)
Active	N/A	ON	Monitoring Input Voltage	N/A
Not Active	N/A	OFF	N/A	N/A
Not Active	Activated (Input Grounded)	ON	Monitoring Input Voltage	Timer Starts
Not Active	Deactivated (Ground Removed)	OFF	N/A	Timer Off
Not Active	Activated (Input Grounded)	ON	Monitoring Input Voltage	Timer Starts

Momentary Ground Input Applications

Trigger Input	Switch Input	Output	Voltage Sense (ON)	Timer (ON)
Active	N/A	ON	Monitoring Input Voltage	N/A
Not Active	N/A	OFF	N/A	N/A
Not Active	Activated (Pulsed)	ON	Monitoring Input Voltage	Timer Starts
Not Active	Activated (Pulsed)	OFF	N/A	Timer Off
Not Active	Activated (Pulsed)	ON	Monitoring Input Voltage	Timer Starts

In the tables above "Trigger Input" refers to the Positive Trigger Input and Negative Trigger Input of the module.

If a Trigger Input is active, its function takes precedence. Attempting to activate the Switch Input while a Trigger Input is active will have no effect on the modules output.





WIRING DIAGRAMS:

TLM Harness



If necessary, connectors may be removed for hardwire applications.

Positive Trigger Input: Applying 12V to Red wire will activate output

Negative Trigger Input: Applying ground to Black wire will activate output

Switch Input: Closing loop between switch input wire leads will activate output





VTM-RLY (Optional Harness)

For larger current demands, use the optional VTM-RLY and connect to power and ground, along with the TLM harness. VTM-RLY supports up to 15A.



VTM-RLY Output connects to P-VTMxxx harness for vehicle lighting

VTM-RLY Input connects to the output from the TLM harness





Troubleshooting Table:

Output does not activate when Positive or Negative Trigger Input is activated	Check fuse on TLM harness	Replace fuse if it is bad
	Check power and ground connections	Fix loose or bad wire connection
	Confirm module has power and ground at its input	Replace module or damaged harness if necessary
Output does not activate when Switch Input is activated	Confirm DIP 6 on module matches switch type being used	Change DIP 6 setting to match switch type
	Confirm switch being used is not defective	Replace bad switch if necessary
Switch Input - Irregular behavior	Output does not turn off with switch	Check DIP 6 and confirm it matches switch type
		Confirm switch is not damaged or defective; replace if necessary
	Output activates for 5 seconds then turns off	Input voltage to module is below Voltage Sense setting





Stinger[®]

Phone – 866-931-8021 (option 3)

E-Mail – support@stingersolutions.com

StingerSolutions.com

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
PLUG AND PLAY POWER HARNESS FOR TOPPER FORD KITS
POWER FROM BATTERY TO TLM MODULE



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY		
TOLERANCES & INSPECTION	RELEASE & REVISIONS	
UNLESS OTHERWISE SPECIFIED	INITIAL ECN: 26830	
ALL BEND ANGLES ARE 90 DEGREES	CURRENT ECN: 26830	
ALL DIMENSIONS ARE IN INCHES.	ECN DESCRIPTION:	
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION	RELEASE FOR MARKET FILL	
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		
	REVISED BY: FMB	


PURCHASED COMPONENT
REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
71904
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED			Sheet 1 of 1
PART / PRODUCT IDENTIFICATION			
	ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221
	DESIGNED BY: E.BURKE		REVISION LEVEL A
MAT'L USED:	PURCHASED		
DESCRIPTION:	HARN, PWR TLM BATT 16.8'		
WEIGHT (Lbs.):	0.2	SEGMENT CODE:	ELE
		PART NUMBER: 71904	

Bill of Materials				
Id	Type	Manufacturer	Part Number	Quantity
1	Wire		16 AWG Red GXL	5130 mm
2	Wire		16 AWG Black GXL	5130 mm
3	Ring Terminal	Molex	19164-0027	2
4	Connector	Molex	46993-0211	1
5	Contact	Molex	39-00-0081	2
6	Splice		ATM Fuse Holder	1
7	Corrugated Tubing		0.25" Nylon Split Wall	5435 mm
8	Fuse	Littelfuse	297010.WXNV	1
9	Cable Tie	HellermannTyton	T30LL0M4	10
10	Label		Heat Shrink Style Label	1

Coverings	
Id	Assembly
[7]	

Notes	
①	Lock tape loom behind connector with Tesa 51036
②	Tape knuckle with Tesa 51036
③	Install 10A Mini Fuse

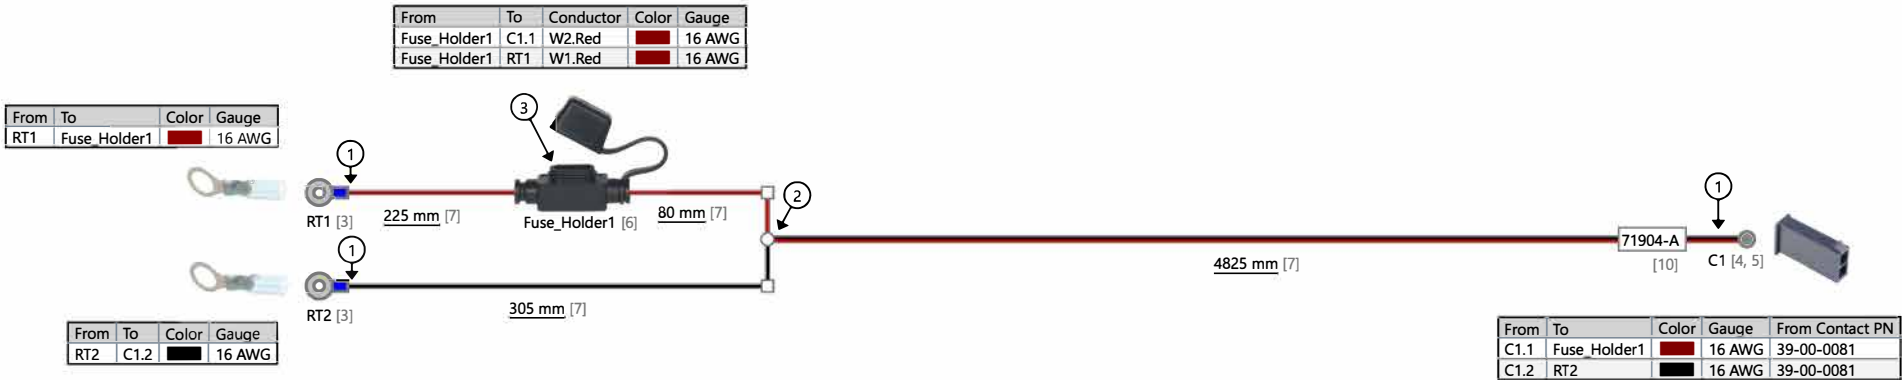

Revisions			
Rev.	Date	Author	Description
A	10/29/2023	Bennet Fisher	Initial Drawing

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS [INCHES] TOLERANCES: ±5MM PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AAMP GLOBAL. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AAMP GLOBAL IS PROHIBITED.		Name	Date		
	Designed By	Bennet Fisher	10/29/2023		
	Engineering Approval				
	Manufacturing Approval				
	Revision Approval			Part Number: 71904-A	Revision: A
	Quality Assurance			Description: HARN, PWR TLM BATT 16.8'	Sheet: 1

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
PLUG AND PLAY TIMER LIGHTING MODULE
POWER HARNESS TO LIGHTS



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 26830
CURRENT ECN: 26830
ECN DESCRIPTION:
RELEASE FOR MARKET FILL
REVISED BY: EMB

PURCHASED
COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
71905
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION


 ADRIAN STEEL®		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221	REVISION LEVEL A
MAT'L USED: PURCHASED		DESIGNED BY: E.BURKE	
DESCRIPTION: HARN,POWER TLM LIGHT SIF1			
WEIGHT (Lbs.): 0.2	SEGMENT CODE: ELE	PART NUMBER: 71905	

Bill of Materials				
Id	Type	Manufacturer	Part Number	Quantity
1	Wire		20 AWG White-Black	10520 mm
2	Wire		20 AWG Black	10520 mm
3	Wire		16 AWG Red GXL	11470 mm
4	Wire		16 AWG Black GXL	11470 mm
5	Connector	Aptiv	12047663	1
6	Contact	Aptiv	12047581	2
7	Lock	Aptiv	12047665	1
8	Connector	Molex	43025-0210	2
9	Contact	Molex	43030-0001	4
10	Connector	Molex	43020-0201	3
11	Contact	Molex	43031-0001	6
12	Connector	Aptiv	12047662	4
13	Contact	Aptiv	12047767	8
14	Lock	Aptiv	12047664	4
15	Splice		Generic Splice	6
16	Heat Shrink	CYG	CB-DWT-3/16	6
17	Corrugated Tubing		0.25" Nylon Split Wall	6960 mm
18	Tape	Tesa	51608	
19	Cable Tie	HellermannTyton	T30LL0M4	35
20	Cable Tie with Mount	Hellermann Tyton	T50RTM250HSM4	10
21	Cable Tie Mount	Panduit	SGABM25-AV-C300	10
22	Label		Heat Shrink Style Label	1

From	To	Color	Gauge	From Contact PN
C1.A	S3	Red	16 AWG	12047581
C1.B	S4	Black	16 AWG	12047581

From	To	Color	Gauge	From Contact PN
C2.1	S1	White/Black	20 AWG	43030-0001
C2.2	S2	Black	20 AWG	43030-0001

From	To	Color	Gauge	From Contact PN
C3.1	S1	White/Black	20 AWG	43030-0001
C3.2	S2	Black	20 AWG	43030-0001

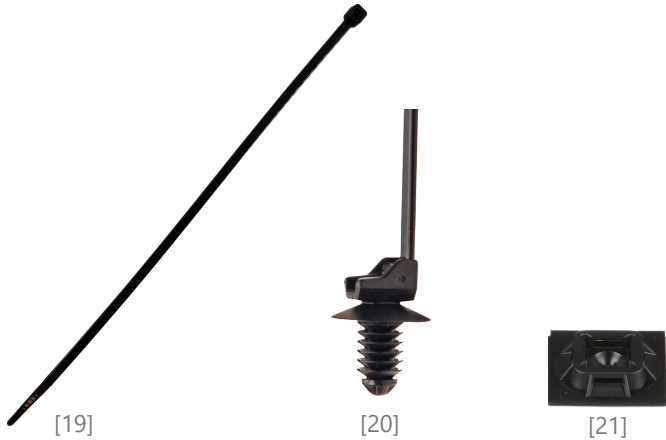

Revisions			
Rev.	Date	Author	Description
	10/29/2023	Bennet Fisher	Initial Drawing
	12/29/2023	Bennet Fisher	Added fourth 12047662 (C9) connector, modified length to C10
A	1/16/2024	Bennet Fisher	Modified lengths to C4, C5, and C10

Coverings	
Id	Assembly
[17]	
[18]	

Notes	
1	Lock tape end of loom with 51608

From	To	Color	Gauge	From Contact PN
C7.A	S3	Red	16 AWG	12047767
C7.B	S4	Black	16 AWG	12047767

From	To	Color	Gauge	From Contact PN
C9.A	S3	Red	16 AWG	12047767
C9.B	S4	Black	16 AWG	12047767


From	To	Color	Gauge	From Contact PN
C6.A	S3	Red	16 AWG	12047767
C6.B	S4	Black	16 AWG	12047767

From	To	Color	Gauge	From Contact PN
C8.A	S3	Red	16 AWG	12047767
C8.B	S4	Black	16 AWG	12047767

From	To	Color	Gauge
S3	C1.A	Red	16 AWG
S3	C6.A	Red	16 AWG
S3	C7.A	Red	16 AWG
S3	C8.A	Red	16 AWG
S3	C9.A	Red	16 AWG
S4	C1.B	Black	16 AWG
S4	C6.B	Black	16 AWG
S4	C7.B	Black	16 AWG
S4	C8.B	Black	16 AWG
S4	C9.B	Black	16 AWG

From	To	Color	Gauge
S1	C2.1	White/Black	20 AWG
S1	C3.1	White/Black	20 AWG
S1	S5	White/Black	20 AWG
S2	C2.2	Black	20 AWG
S2	C3.2	Black	20 AWG
S2	S6	Black	20 AWG

From	To	Color	Gauge
S5	C4.1	White/Black	20 AWG
S5	C5.1	White/Black	20 AWG
S5	C10.1	White/Black	20 AWG
S5	S1	White/Black	20 AWG
S6	C4.2	Black	20 AWG
S6	C5.2	Black	20 AWG
S6	C10.2	Black	20 AWG
S6	S2	Black	20 AWG

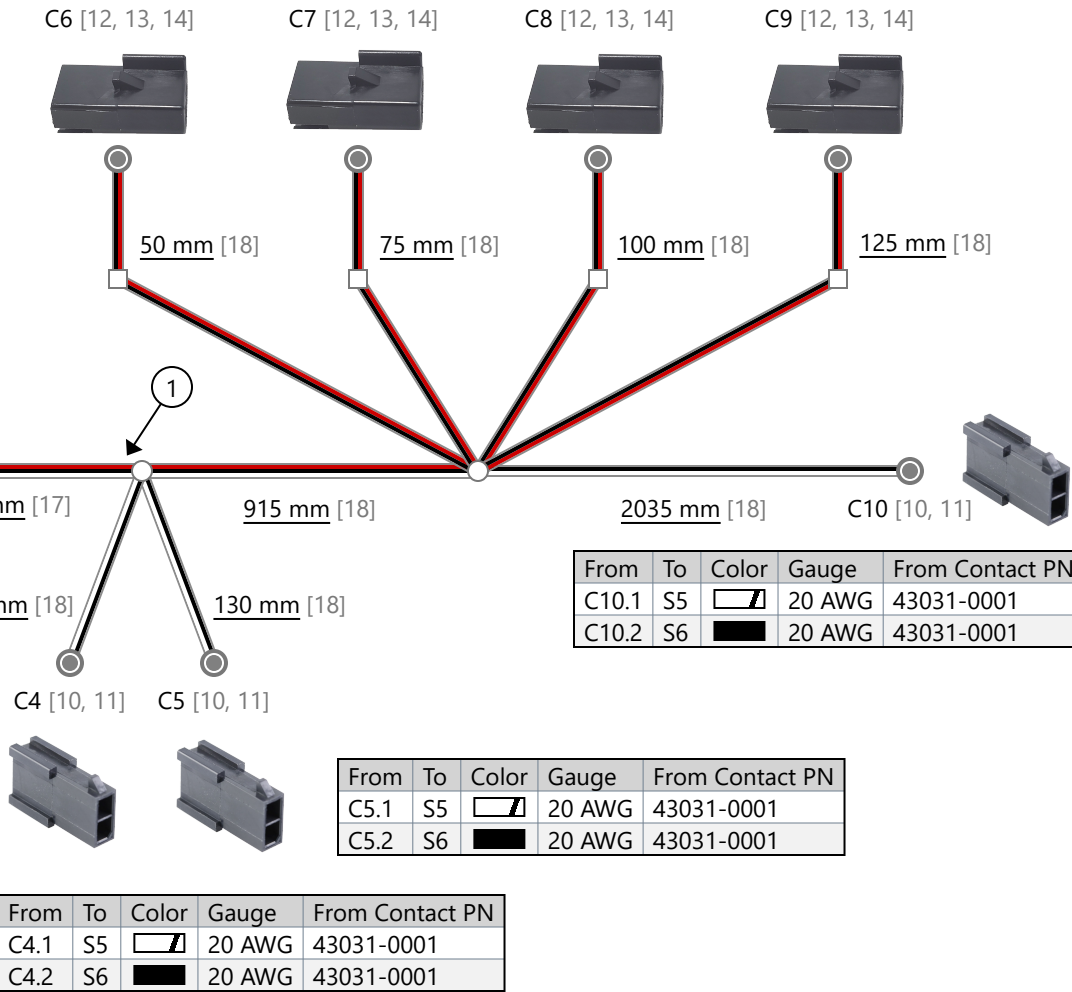

From	To	Color	Gauge	From Contact PN
C10.1	S5	White/Black	20 AWG	43031-0001
C10.2	S6	Black	20 AWG	43031-0001

From	To	Color	Gauge	From Contact PN
C5.1	S5	White/Black	20 AWG	43031-0001
C5.2	S6	Black	20 AWG	43031-0001

From	To	Color	Gauge	From Contact PN
C4.1	S5	White/Black	20 AWG	43031-0001
C4.2	S6	Black	20 AWG	43031-0001

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS [INCHES] TOLERANCES: ±5MM PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AAMP GLOBAL. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AAMP GLOBAL IS PROHIBITED.		Name	Date		
	Designed By	Bennet Fisher	10/29/2023		
	Engineering Approval				
	Manufacturing Approval				
	Revision Approval			Part Number: 71905	
	Quality Assurance			Description:	
				TLM - Switch & Light Extension Harness	
				Revision: A	
				Sheet:	
				1	

PURCHASED
COMPONENT
KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
PLUG AND PLAY MAGNETIC SWITCHES FOR TOPPER INTERIOR LIGHTING
BAG INCLUDES: 3 MAGNETIC SWITCH SETS WITH WIRE LEADS AND CONNECTORS



THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER
DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION

UNLESS OTHERWISE SPECIFIED		
ALL BEND ANGLES ARE 90 DEGREES		
ALL DIMENSIONS ARE IN INCHES.		
REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION		
FEATURES	HOLES/SLOTS	ANGLES
0.0 = ± .125	0.0 = ± .062	0° = ± 2°
0.00 = ± .062	0.00 = ± .031	0.0° = ± 1°
0.000 = ± .031	0.000 = ± .015	
Material Thickness: per ASTM Std. Weld Callouts per AWS		

RELEASE & REVISIONS

INITIAL ECN: 26830
CURRENT ECN: 26830
ECN DESCRIPTION:
RELEASE FOR MARKET FILL
REVISED BY: EMB

PURCHASED
COMPONENT


REFERENCED SUPPLIER AND/OR MANUFACTURER
AAMP
REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
71907
COLOR (ONLY LIST IF COLOR SPECIFIC)
COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

 ADRIAN STEEL [®]		ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221	REVISION LEVEL A
MAT'L USED: PURCHASED		DESIGNED BY: E.BURKE	
DESCRIPTION: TLM MAGNETIC SWITCH P&P			
WEIGHT (Lbs.): 0.02	SEGMENT CODE: ELE	PART NUMBER: 71907	

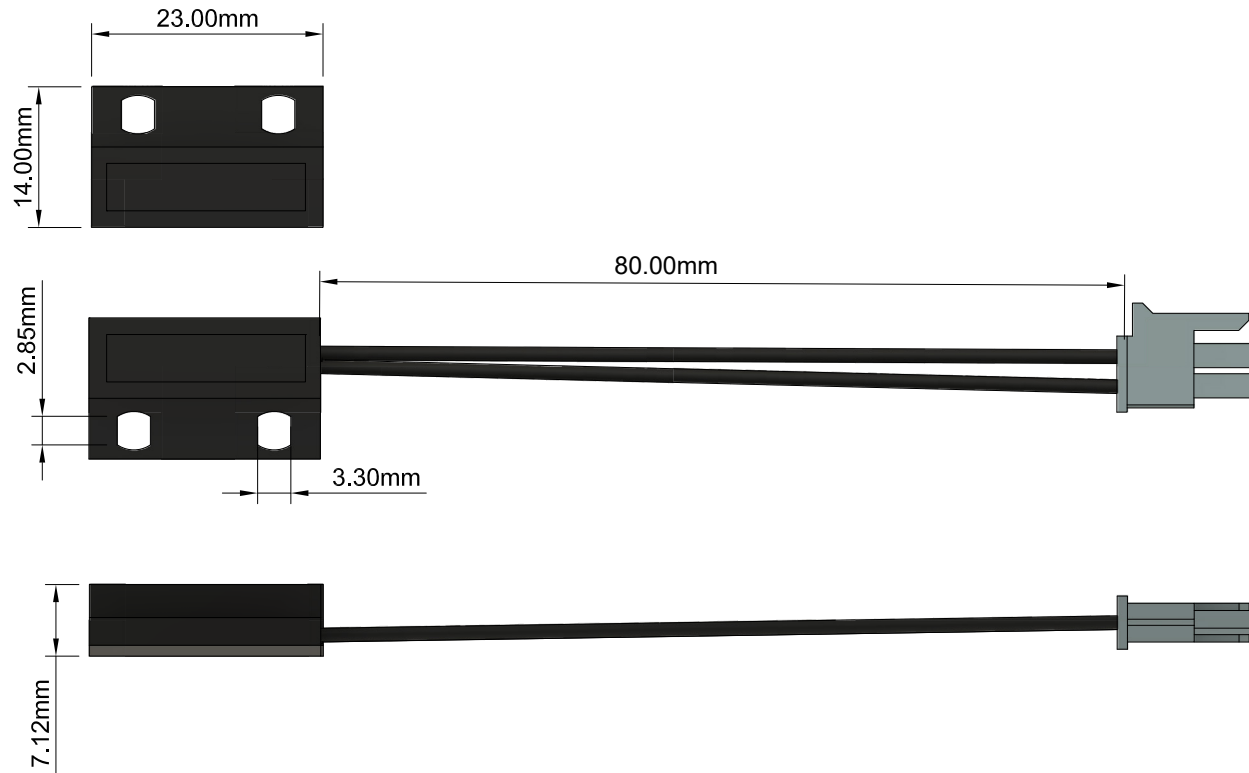

Magnetic Switch Type: N.O. (Normally Open)
 Housing: Black ABS 15E1
 Wire: 22AWG Black
 Operating Distance: 15-20mm
 Working Current: 0.5A
 Operating Voltage: 0-110Vdc
 IP Rating: IP67
 Operating Temperature: -40 ~ 110°C
 Reed Operating Temperature: -40 ~ 125°C
 ABS Operating Temperature: -40 ~ 110°C
 Package: 3pcs/kitted set

Dept.	Technical reference	Created by Bennet Fisher 4/12/2024	Approved by	
		Document type	Document status	
		Title Magnetic Switch Part # 71907	DWG No.	
		Rev.	Date of Issue	Sheet 1/1

Reed Switch

ORD324

Issue Date: Mar. 25, 2008

■ Features

- In order to achieve high electrical capacity and long, uses iridium with high hardness and high melting point.
- When power is turned on maximum voltage can reach 200V.
- To maintain the contact stability of the contacts, the contacts are sealed in a glass tube filled with inert gas.

■ Applications

- Position detection machine
- Rotation detection machine
- Vehicle electrical equipment
- Civil products

■ Appearance



■ Features

Contact material / contact form	Iridium / 1A	Unit
Pull in value (PI)	10 ~ 40	AT
Disconnect value (DO)	5 min	AT
Contact resistance value (CR)	100max	mΩ
Withstand voltage between contacts	250min	Vdc
Insulation resistance	1×10^{10} min	Ω
Electrostatic capacity between contacts	0.3max	pF
Contact rating	10	W
Maximum switching voltage	200	Vdc
Maximum switching current	0.5	A
Maximum power current	1	A
Release time	0.4max	ms
Bounce time	0.3max	ms
Recovery time	0.05max	ms
Shock proof	100G-6ms	---
Vibration resistance	50G (10 ~ 2kHz)	---
Operating temperature range	-40 ~ +125	°C
Life (5Vdc-1mA, impedance load)	1×10^8	---

■ Dimensions (unit: mm)




■ Withstand voltage between contacts



■ Maximum switching voltage



■ Life test data: 5Vdc-1mA

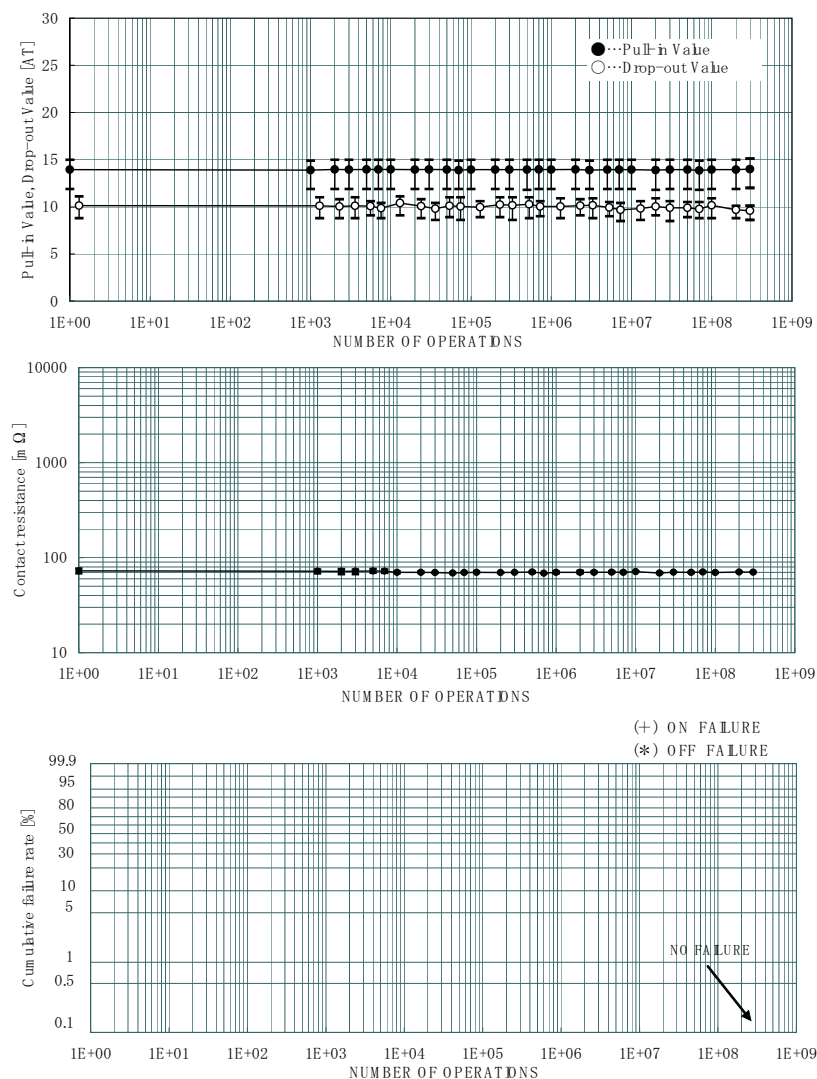

PURCHASED COMPONENT KEY FEATURES	
DESCRIPTION OF REQUIREMENTS	
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)	
N/A	
LOAD/RATING REQUIREMENT	
N/A	
MATERIAL REQUIREMENT	
N/A	
PACKAGING REQUIREMENT	
N/A	
OTHER REQUIREMENTS	
80lbs Tensile Strength - Low-Profile M5/M6 Stud Mount - Color: Black	




Low-Profile head allows mounts to stack, providing more mounting versatility from a single stud.

Four-pawl, three-tooth design delivers outstanding stud retention to keep bundles secure.

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY			PRINTED DOCUMENT IS UNCONTROLLED			Sheet 1 of 1	
TOLERANCES & INSPECTION			PART / PRODUCT IDENTIFICATION				
UNLESS OTHERWISE SPECIFIED ALL BEND ANGLES ARE 90 DEGREES ALL DIMENSIONS ARE IN INCHES. REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION			ADRIAN STEEL® ADRIAN STEEL COMPANY 906 JAMES STREET, ADRIAN, MI 49221			REVISION LEVEL A	
FEATURES HOLES/SLOTS ANGLES 0.0 = ± .125 0.0 = ± .062 0° = ± 2° 0.00 = ± .062 0.00 = ± .031 0.0° = ± 1° 0.000 = ± .031 0.000 = ± .015			INITIAL ECN: 78320 CURRENT ECN: 78320 ECN DESCRIPTION: Release				
Material Thickness: per ASTM Std. Weld Callouts per AWS			PURCHASED COMPONENT REFERENCED SUPPLIER AND/OR MANUFACTURER HellermannTyton REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER 157-00460 COLOR (ONLY LIST IF COLOR SPECIFIC) COMMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.) No				
REVISED BY: LJK			MATERIAL USED: Purchased			DESIGNED BY: L. Kaleniecki	
			DESCRIPTION: 7.5" STUD MNT CABLE TIE				
			WEIGHT (Lbs.): 0.01		SEGMENT CODE: HDW		PART NUMBER: 78320

PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS
DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)
N/A
LOAD/RATING REQUIREMENT
N/A
MATERIAL REQUIREMENT
N/A
PACKAGING REQUIREMENT
N/A
OTHER REQUIREMENTS
N/A

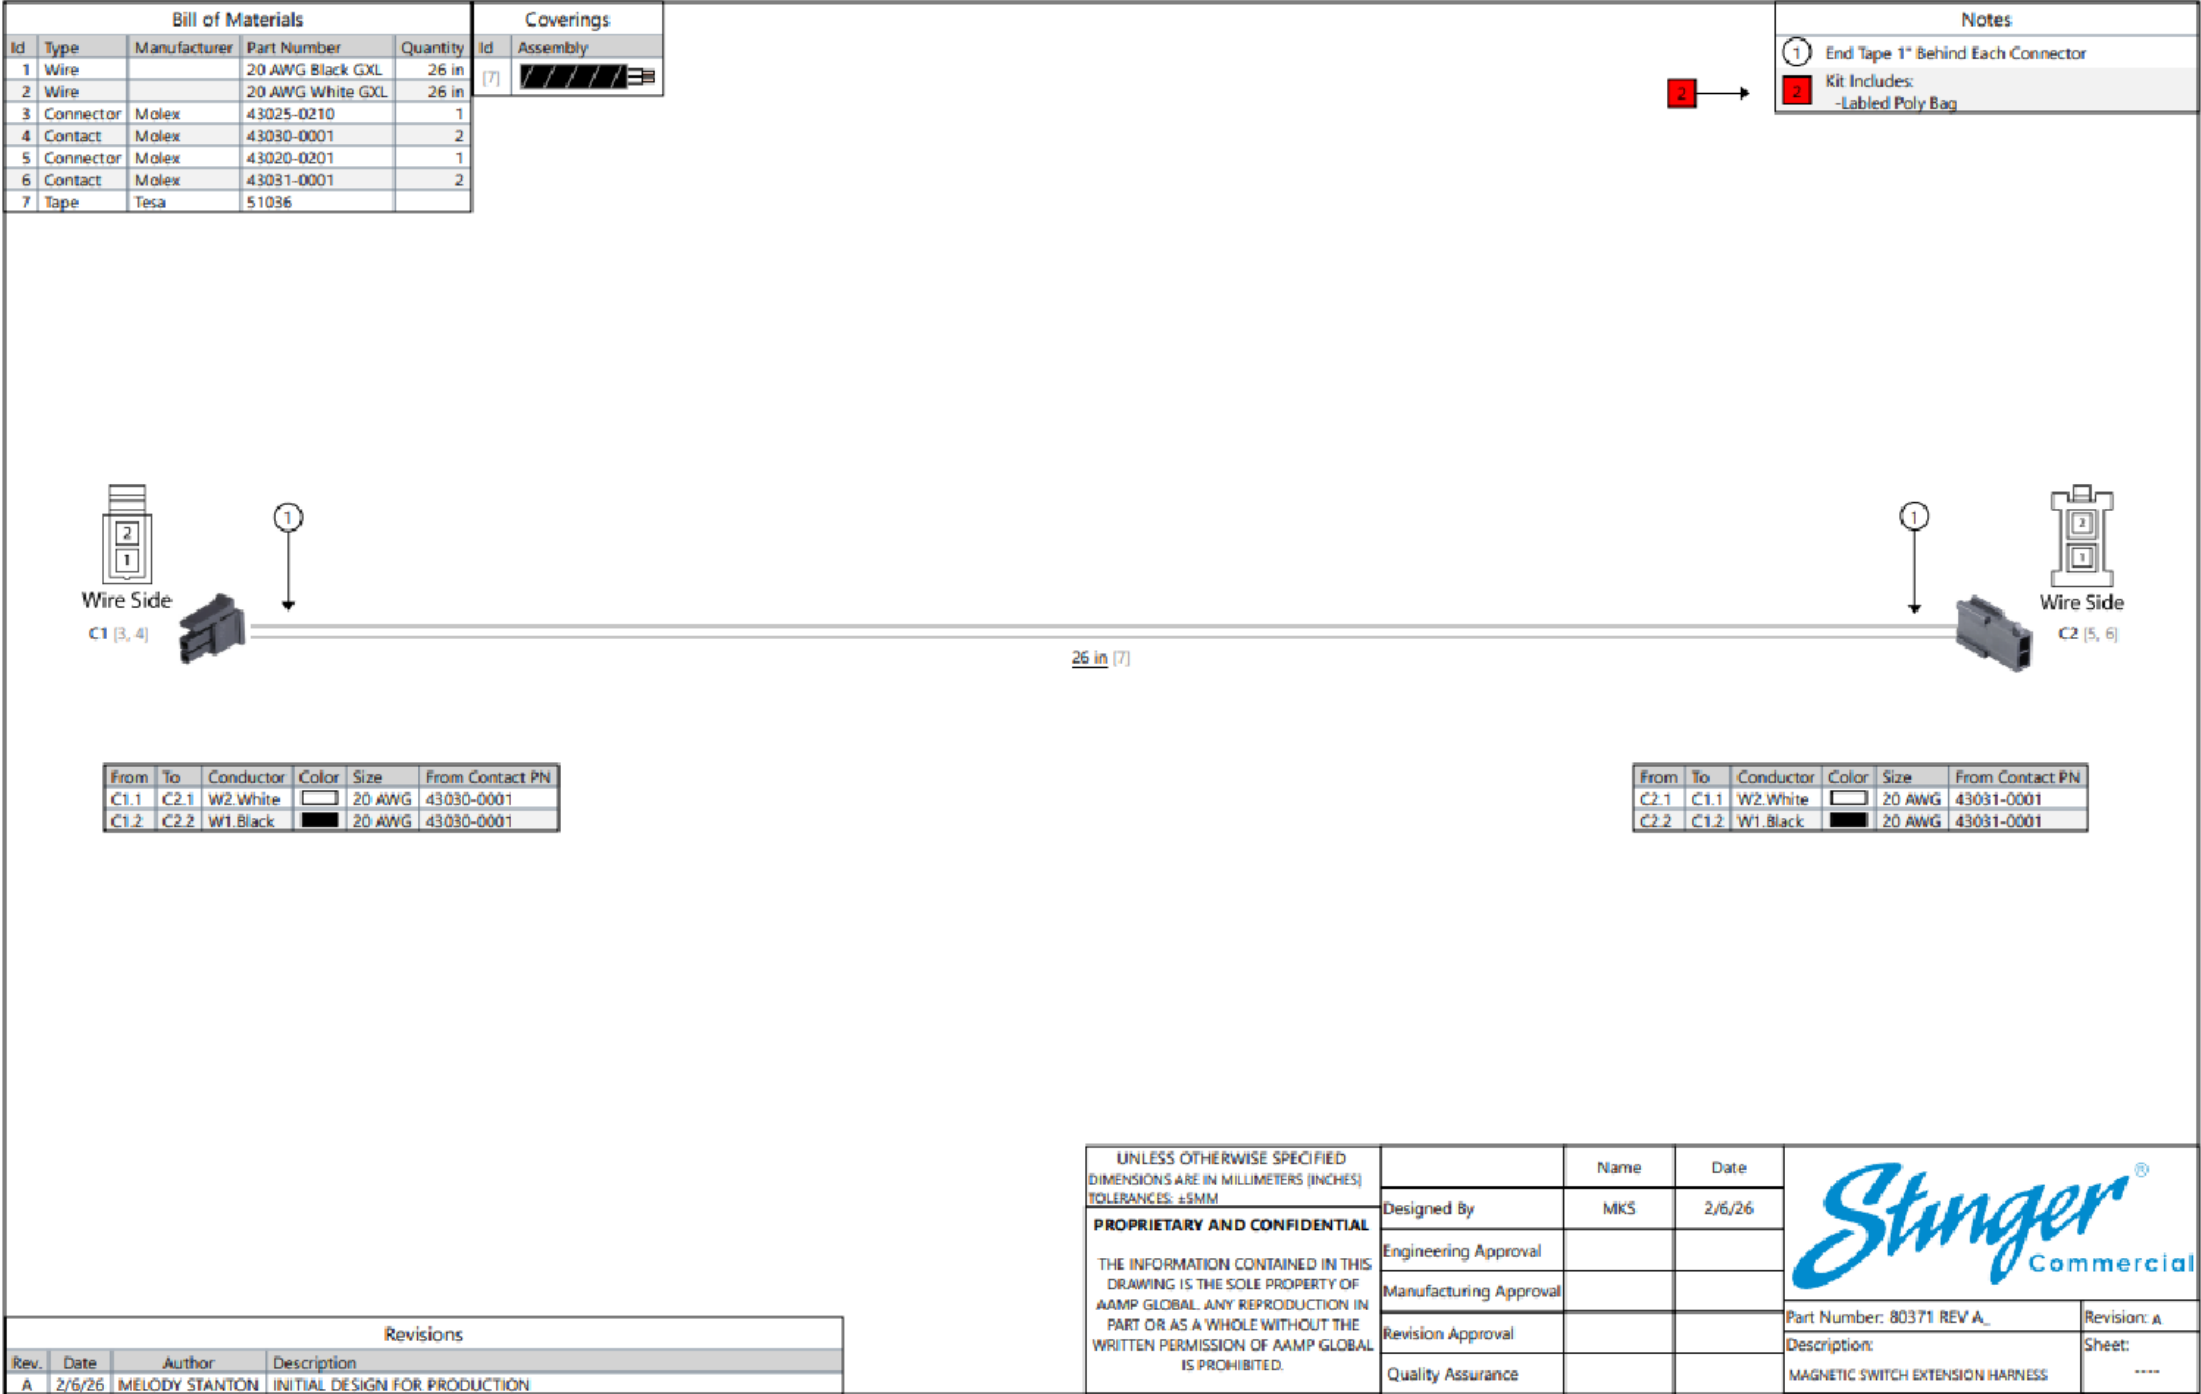

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

TOLERANCES & INSPECTION	RELEASE & REVISIONS
UNLESS OTHERWISE SPECIFIED ALL BEND ANGLES ARE 90 DEGREES ALL DIMENSIONS ARE IN INCHES. REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION	INITIAL ECN: 29342
FEATURES 0.0 = ± .125 0.00 = ± .062 0.000 = ± .031	CURRENT ECN: 29342
HOLES/SLOTS 0.0 = ± .062 0.00 = ± .031 0.000 = ± .015	ECN DESCRIPTION: RELEASE 80371 UPDATE WALK-IN KITS
ANGLES 0° = ± 2° 0.0° = ± 1°	REVISED BY:
Material Thickness: per ASTM Std. Weld Callouts per AWS	

PURCHASED COMPONENT

REFERENCED SUPPLIER AND/OR MANUFACTURER
STINGER

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER
80371

COLOR (ONLY LIST IF COLOR SPECIFIC)

COMMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERENCE)
(NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)
NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL®

ADRIAN STEEL COMPANY
906 JAMES STREET, ADRIAN, MI 49221

REVISION LEVEL
A

MAT'L USED: PURCHASED PART

DESIGNED BY: CJG

DESCRIPTION: HARN MAGNETIC SWITCH EXT

WEIGHT (Lbs.): 0.5

SEGMENT CODE: TPE

PART NUMBER: 80371