PURCHASED COMPONENT KEY FEATURES

DESCRIPTION OF REQUIREMENTS

DIMENSIONAL REQUIREMENTS (AS SHOWN ON DRAWING)

SEE TABLE

LOAD/RATING REQUIREMENT

N/A

MATERIAL REQUIREMENT

SEE TABLE

PACKAGING REQUIREMENT


SEE TABLE


OTHER REQUIREMENTS

Material Thickness: per ASTM Std.

Weld Callouts per AWS

N/A

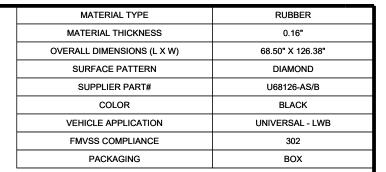

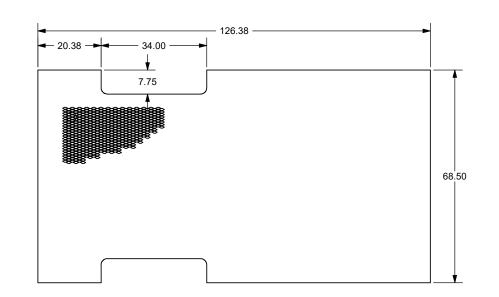

MAT'L USED:

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY

OLERANCES & INSPECTION **RELEASE & REVISIONS** UNLESS OTHERWISE SPECIFIED INITIAL ECN: 06071 ALL BEND ANGLES ARE 90 DEGREES ALL DIMENSIONS ARE IN INCHES. CURRENT ECN: 24392 REFERENCE DIMENSIONS (X.XXX) DO NOT REQUIRE INSPECTION ECN DESCRIPTION: HOLES/SLOTS ANGLES **UPDATE PPDS AND ADD** 0.0 = ± .125 0.00 = ± .062 0.000 = ± .031 $0.0 = \pm .062$ $0.00 = \pm .031$ $0.000 = \pm .015$ SPECIFICATIONS BLOCK

REVISED BY: BCB

PURCHASED COMPONENT

EAGLE INDUSTRIES

REFERENCED SUPPLIER AND/OR MANUFACTURER PART NUMBER

U68126-AS/B

COLOR (ONLY LIST IF COLOR SPECIFIC)

BLACK

COMODITY ITEM (Y/N) (YES = ALL DIMENSIONS AND NOTES ARE REFERANCE) (NOTE: DIMENSIONS AND FEATURES MAY VARY FOR A COMODITY ITEM.)

NO

PRINTED DOCUMENT IS UNCONTROLLED

Sheet 1 of 1

REVISION LEVEL

PART / PRODUCT IDENTIFICATION

ADRIAN STEEL

ADRIAN STEEL COMPANY

MES STREET, ADRIAN, MI 49221

DESIGNED BY: BDS

ESIGNED BY: BD3

WORKMAT,LWB G&F VAN KIT

WEIGHT 41.00 SEGMENT CODE: FLR PART NUMBER: 88-2



WORKMAT INSTALLATION INSTRUCTIONS

GENERAL:

Workmats need some trimming for a good fit in some vehicles. Most are die cut for the designated vehicle.

Aluminum trim strips contained in some workmat kits must be cut to size and installed at the side and rear cargo doors. They hold the mat edge in place in these high traffic areas.

FULL SIZE VAN INSTALLATION:

Short and long wheelbase vans us the wheelhouse cutouts as your locator points when unrolling the mat. Some trimming of wheelhouse cutouts may be required. Cut in the side door stepwell, the front seat pedestals, the gas filler housing and any other small obstruction that may be specific to each van make and model.

Use the leftover trim strip from the side cargo door to splice the factory installed cab area mat to the workmat or between the front seat pedestals after ticking the mat up under the cab area mat.

EXTENDED BODY FULL SIZE VAN:

In extended full size vans use the wheelhouse cutouts as your locator points when unrolling the mat. Some trimming of wheelhouse cutouts may be required. Cut in the side door stepwell, the front seat pedestals, the gas filler housing and any other small obstruction that may be specific to each van make and model.

ASTRO/SAFARI:

The workmats are die cut to fit the extended body. The trim strips supplied are added to the side and rear cargo doors.

WINDSTAR:

This mini van has a factory installed plastic mat with jute underlayment. It is suggested you install the workmat on top of the factory mat in this van. Do not remove the factory mat as it has built in protection covers for the floor routed wiring harnesses. Tuck workmat under side and rear cargo door thresholds. The mat is die cut for the extended body and must be cut down to fit the regular floor plan.

RAM AND GRAND AM:

No cargo version available since 1996.