



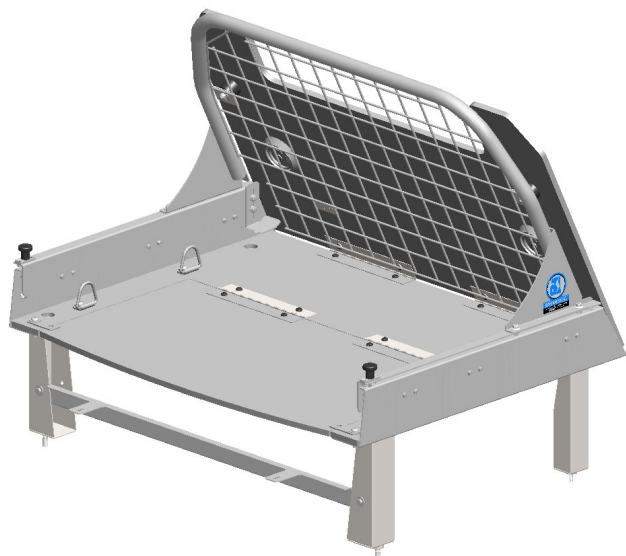

PRODUCT WEIGHT
26 LBS

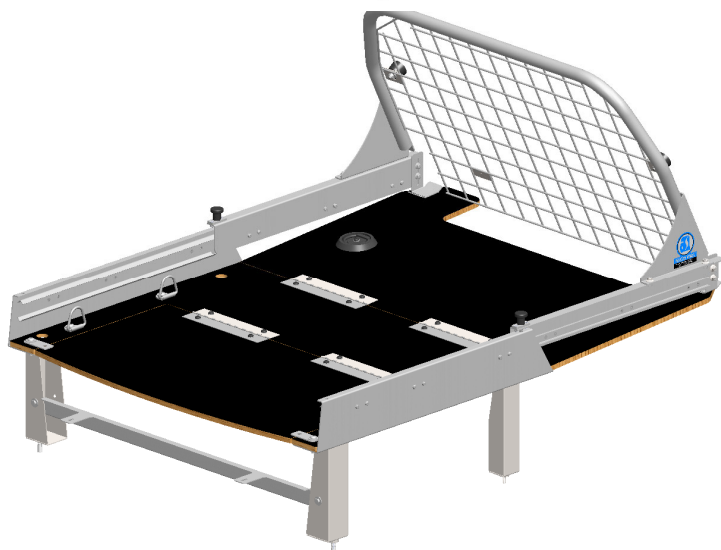

COLOR

BLACK

CATALOG NUMBER

89-EQNX20A

PRODUCT FEATURES

This folding floor is designed to fit on top of the P22PEQNX20 partition for model year 2018 thru 2024 Chevy Equinox. The images above show the floor installed to the partition. The floor folds with the partition to allow for the second row seating to be utilized or disabled. The floor allows for a flat cargo floor and full access to the spare tire.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.



CATALOG NUMBER 89-EQNX20A

PRODUCT APPLICATION

This product is designed to be in model year 2018 thru 2024 Chevy Equinox


ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION</i>
------------------------------	---------------------------


P22PEQNX20	PAR,ADJ,EQUINOX 18-24
-------------------	------------------------------

SPECIAL APPLICATION NOTES

Partition, P22PEQNX20, is required for installation.

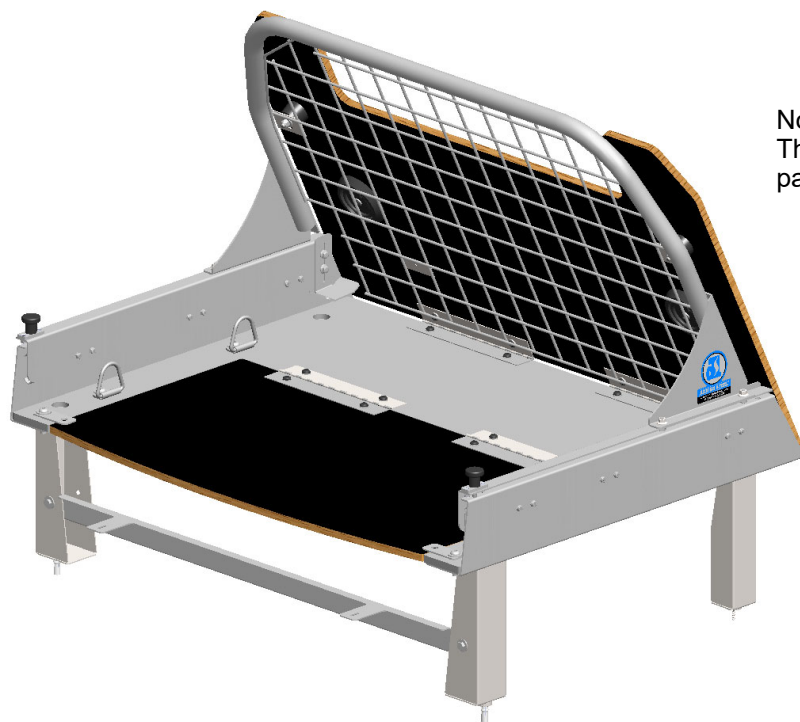

Note:
The flooring is shown installed on the sliding
partition kit, P22PEQNX20 (Not Included)

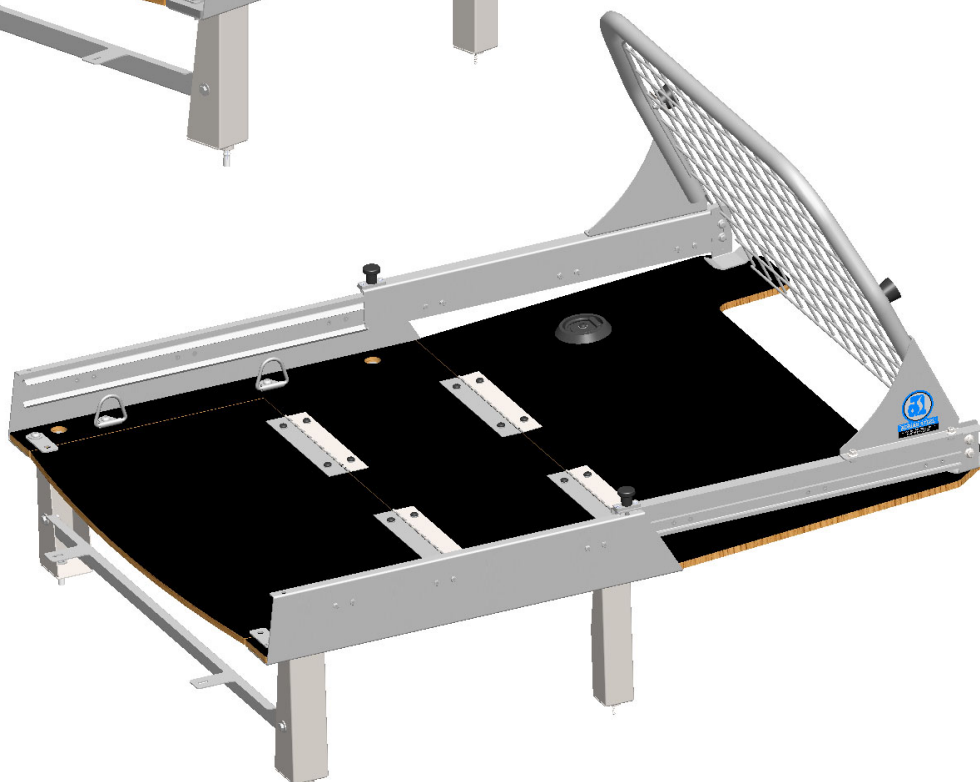


89-EQNX20A

FOLDING FLOOR FOR P22PEQNX20

- PRECAUTIONS -



CAUTION
 THE USE AIR IMPACT TOOLS CAN
 OVER-TORQUE FASTENERS AND
 CAUSE FASTENER FAILURE!

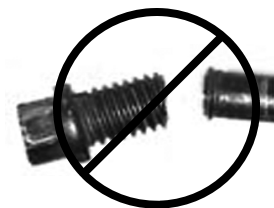

CAUTION
 ALL INSTALLATION HOLES SHOULD BE SEALED
 WITH SILICON OR BUTYL SEALANT TO PREVENT
 EXHAUST FUMES FROM ENTERING THE VEHICLE!



DANGER
 INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
 VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
 DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
 OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!



CAUTION
 TO AVOID DAMAGING THE VEHICLE ALWAYS
 USE DRILL STOPS WHEN DRILLING ANY IN-
 STALLATION HOLES!



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.


THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP

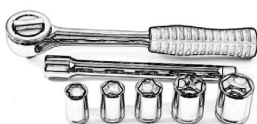

RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS




MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.


HDW71047

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	54977-B	BUMPER BRACKET	2
2	44005-B	HINGE FOR FORD FOCUS	4
3	54976	D RING, FLUSH MOUNT	2
4	CRT06987-A	SMALL CARTON	1
5	BAG61615	BAG FOR 89-ESC20AJ	1
6	71047	ASM INS FOR 89-EQNX20A	1

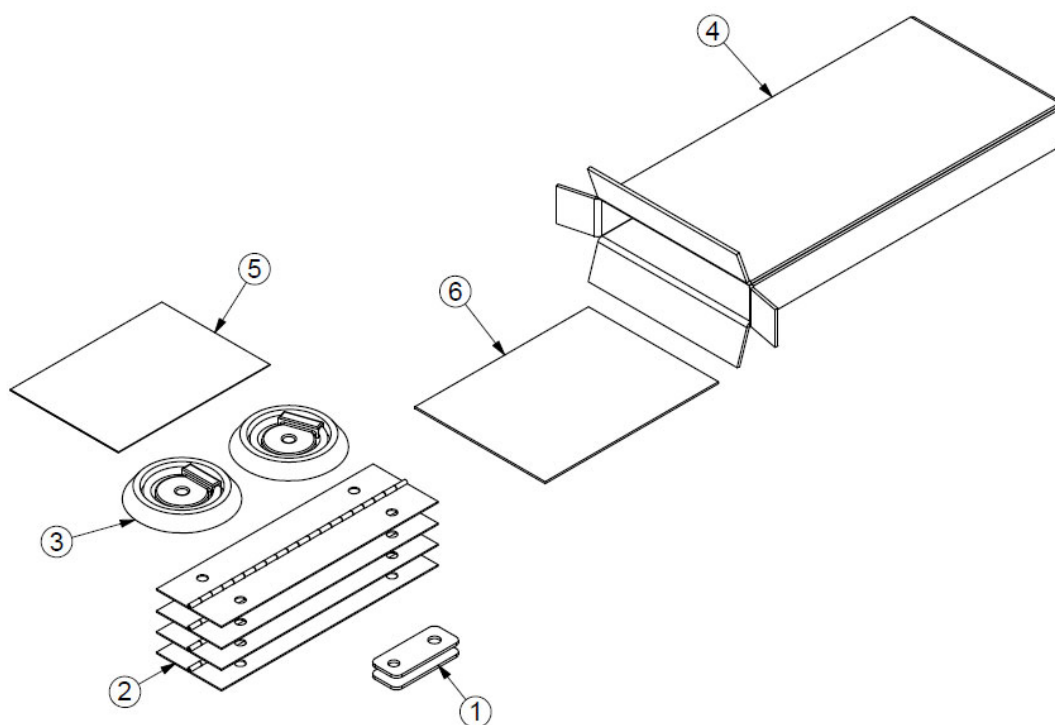


BAG61615

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	5" x 7" 3MIL AUTOBAG	1
2	FAS0040	SCREW, BHCS 5/16-18 X .625"	18
3	FAS0086	WASHER, FLAT USS 5/16 ZP	2
4	FAS0090	NUT, HEX NLK 5/16-18 ZP	2
5	FAS0098	Washer, Lock, Split, 5/16, Zinc Plate	18
6	FAS0104	Washer, Flat, 3/8, NI ZN	12
7	FAS0577	Screw, Button Hd Hex Soc, 3/8-16x1.50 NI-ZN	6
8	FAS0604	NUT, NYLOCK, 3/8-16, ZINC	6
9	FAS0829	NUT, T 5/16-18X.5ZN	18
10	34924-0	Neoprene Bumper	2
11	54466	ZINC- PLATED STEEL D-RING	4

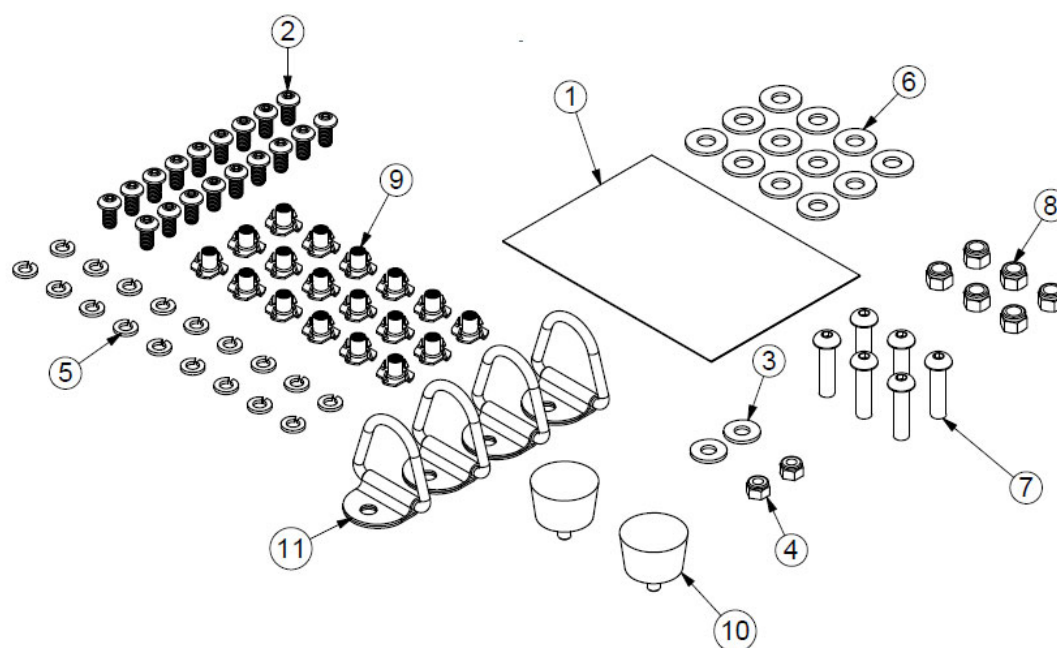


STEP 1 - Extend the partition over the second row seating. Loosen the fasteners securing the slide feet to the slide assemblies.


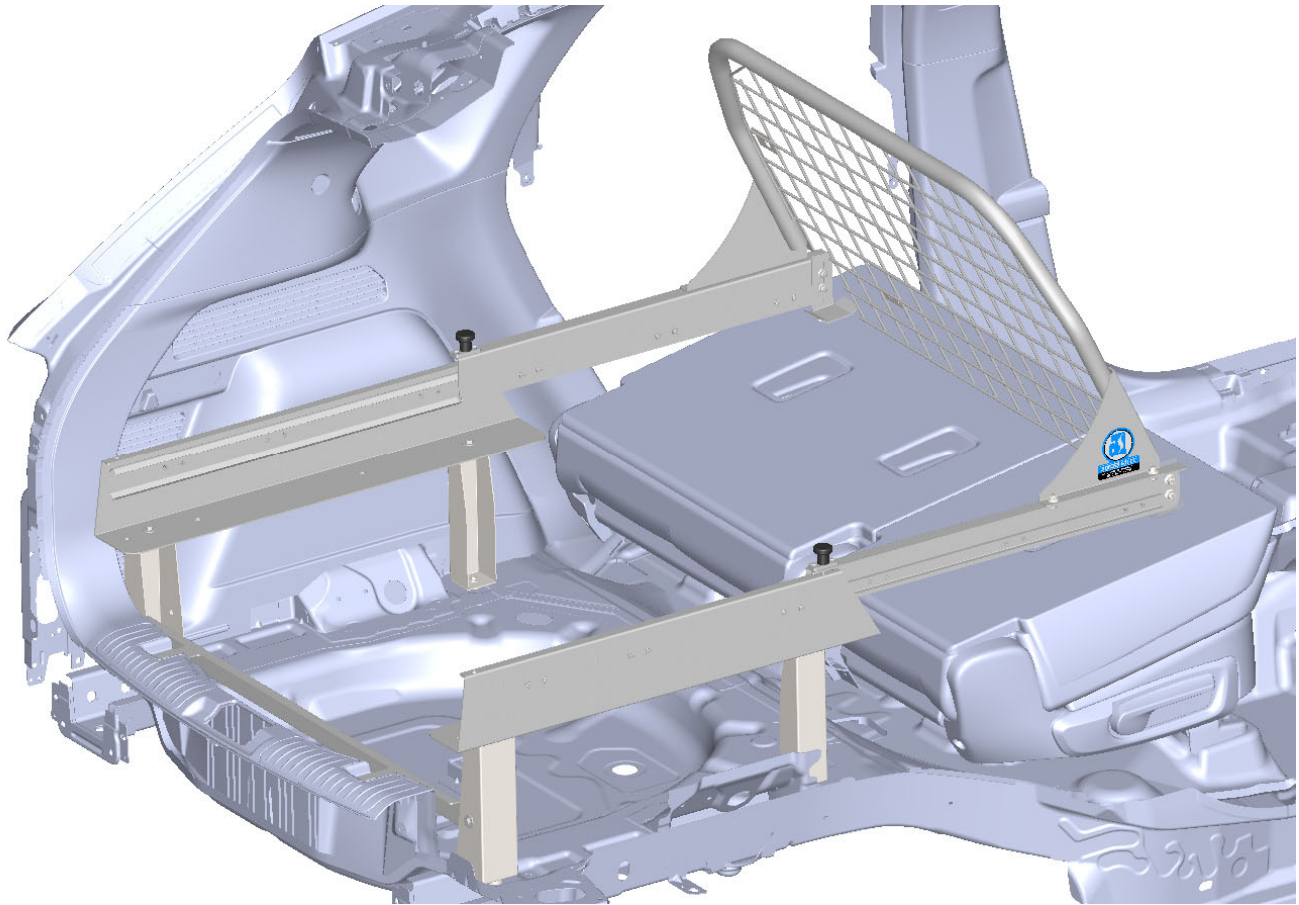


STEP 2 - Using a small sledge hammer, pound the (18) T-nuts in the locations shown below. The bottom of the T-nut head should be flush with the floor surface.

Note: The T-nuts should be installed on the bottom of the flooring. This is the wood side, not the black textured side.

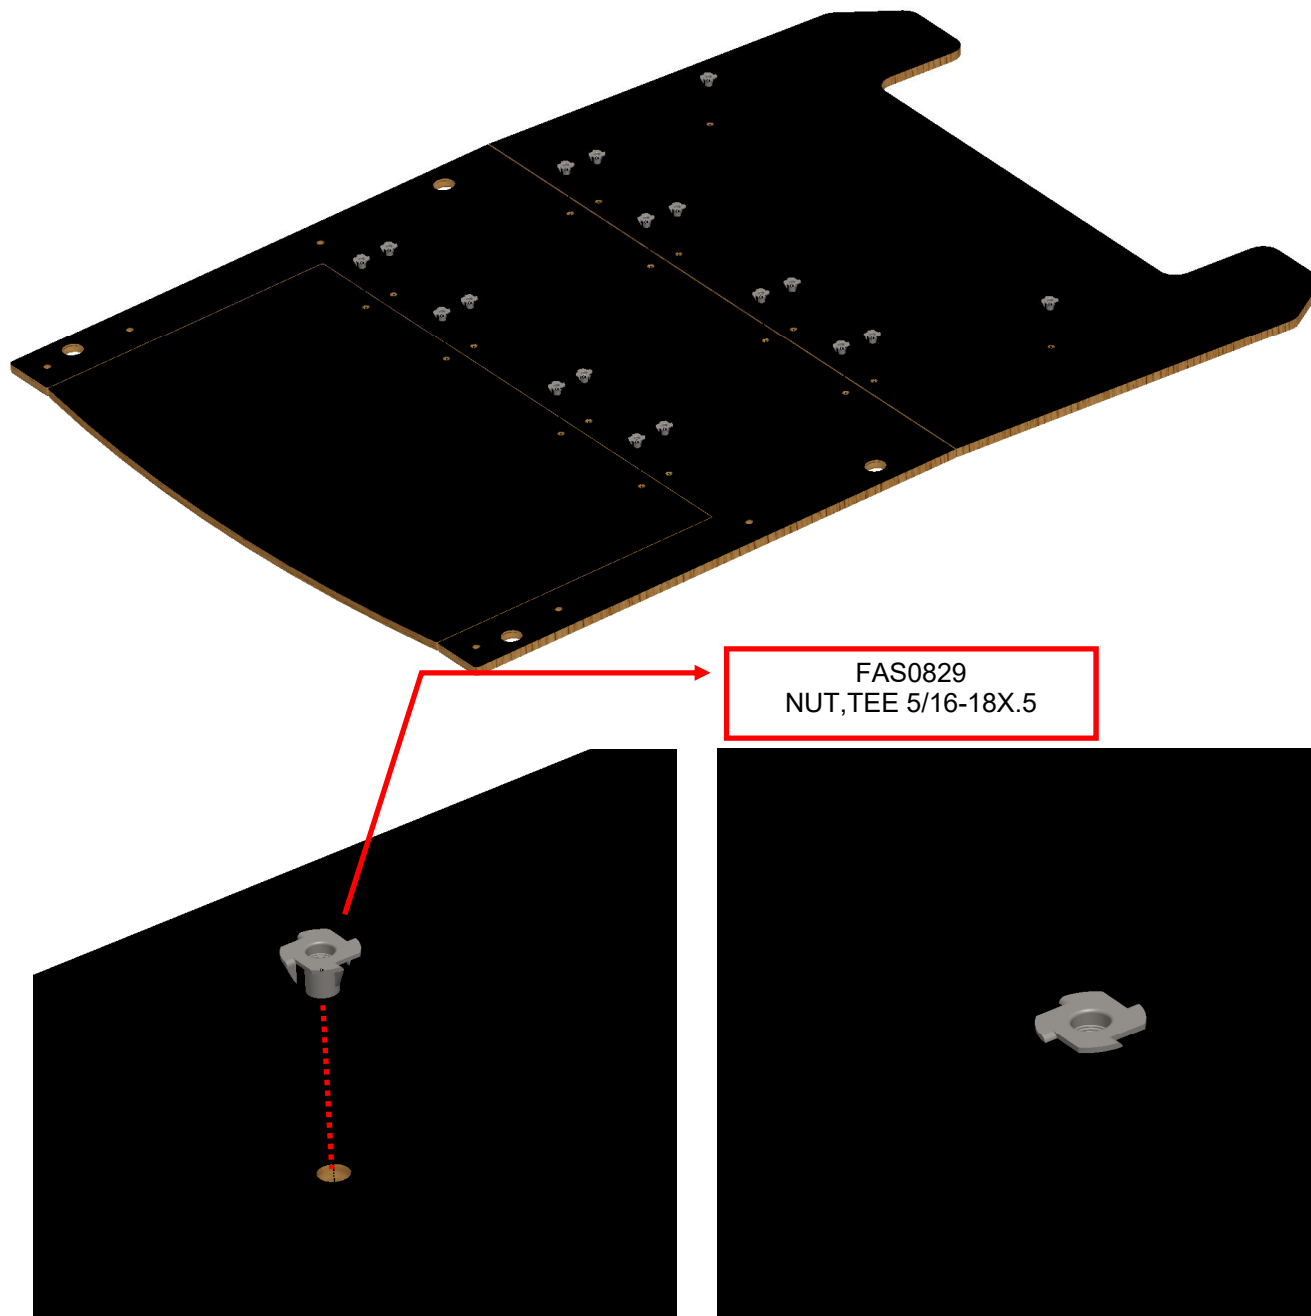


STEP 3 - Fasten the Hinges to the center floor piece as shown.

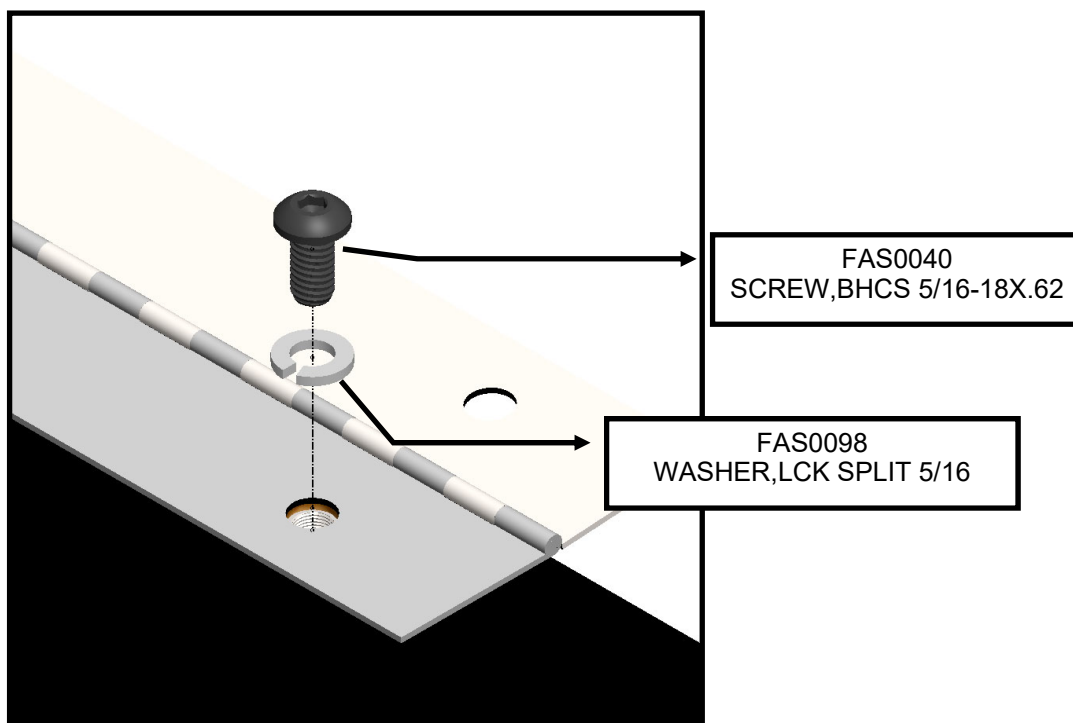
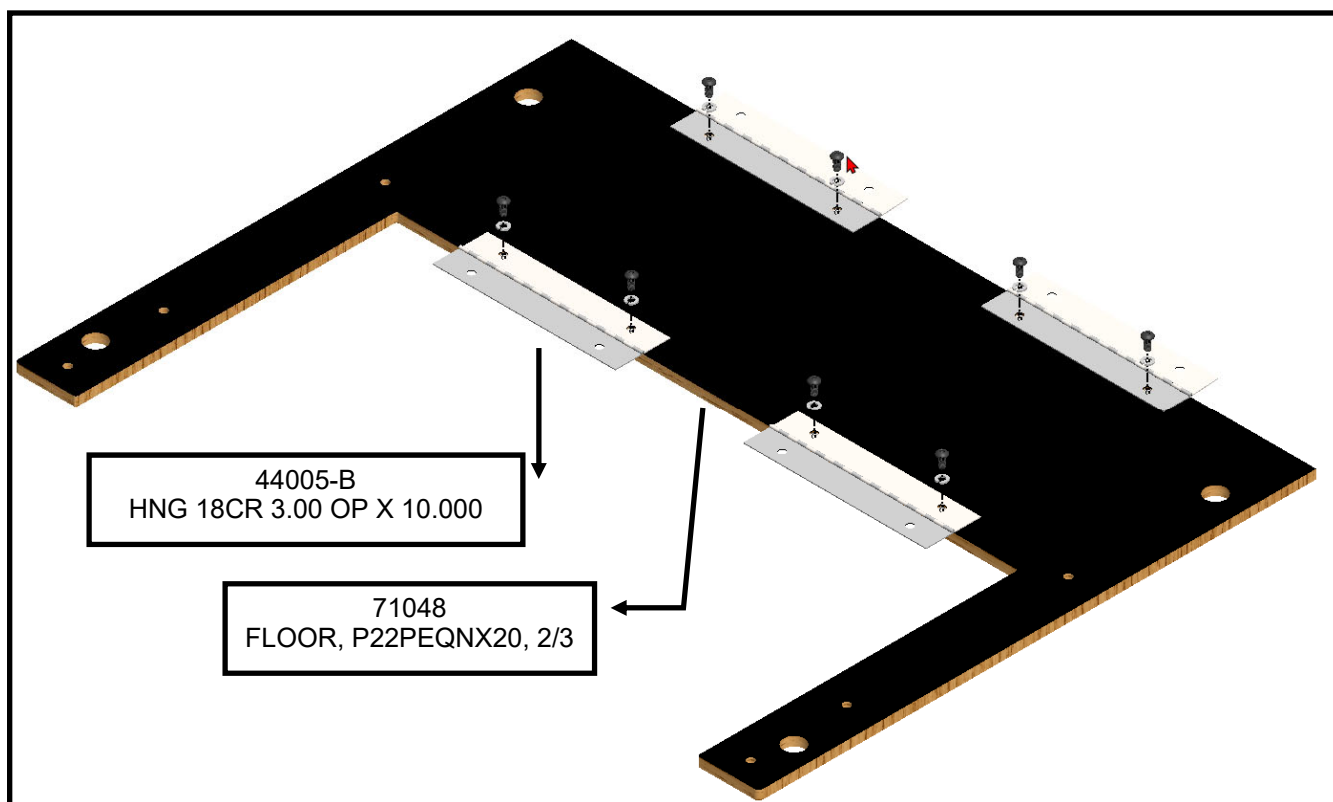


STEP 4 - BOLT DOWN (THROUGH BOLT) THE FLOORING PIECE 71048 USING THE FOLLOWING HARDWARE, BOTH SIDES


NOTE:
DO NOT TIGHTEN
DOWN BUMPER
BRACKET (54977-B)
ALL THE WAY. THIS
PART ACTS AS A
LATCH TO HOLD
DOWN THE FLOORING
WHILE THE VEHICLE IS
IN MOTION. IT
SHOULD BE JUST
TIGHT ENOUGH TO BE
MOVED BY HAND.

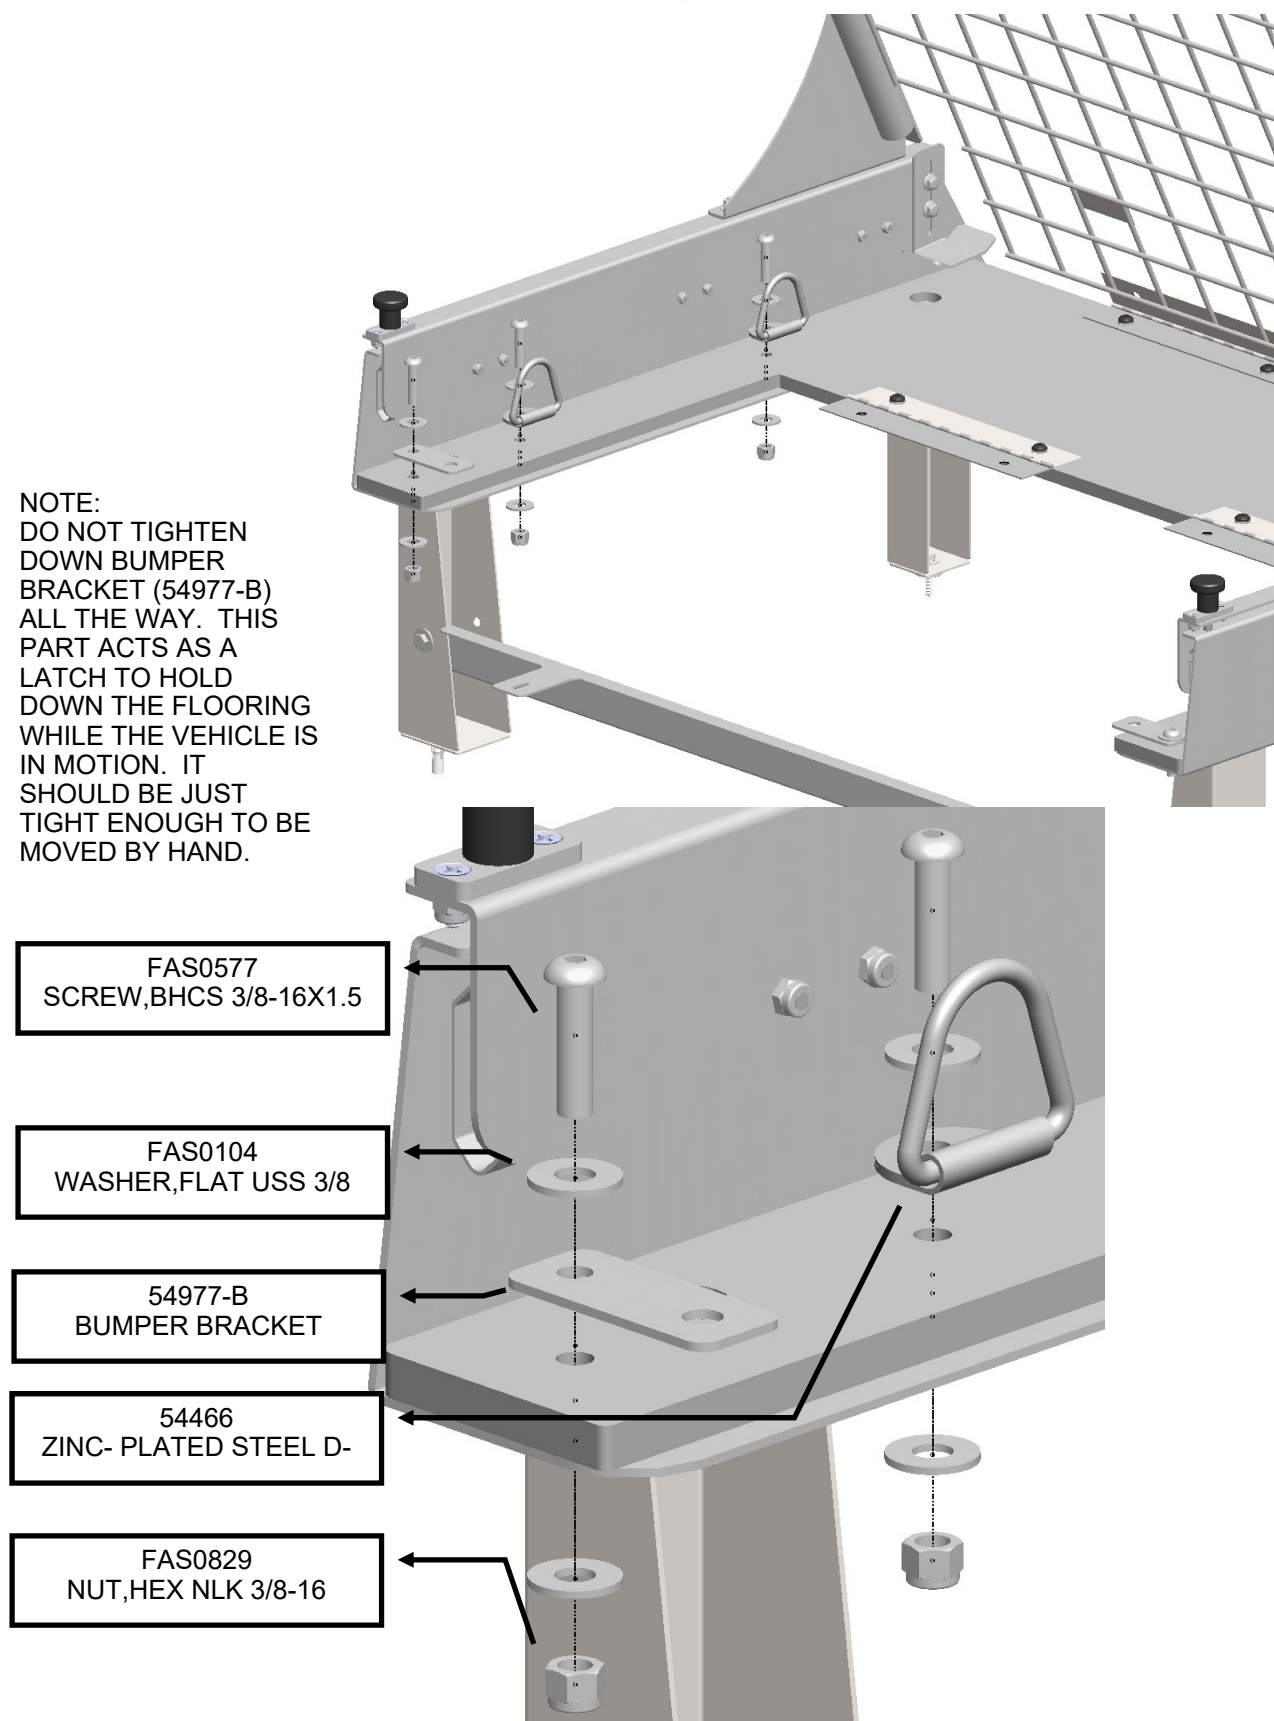

STEP 5 - Fasten the flooring that covers the spare tire as shown.

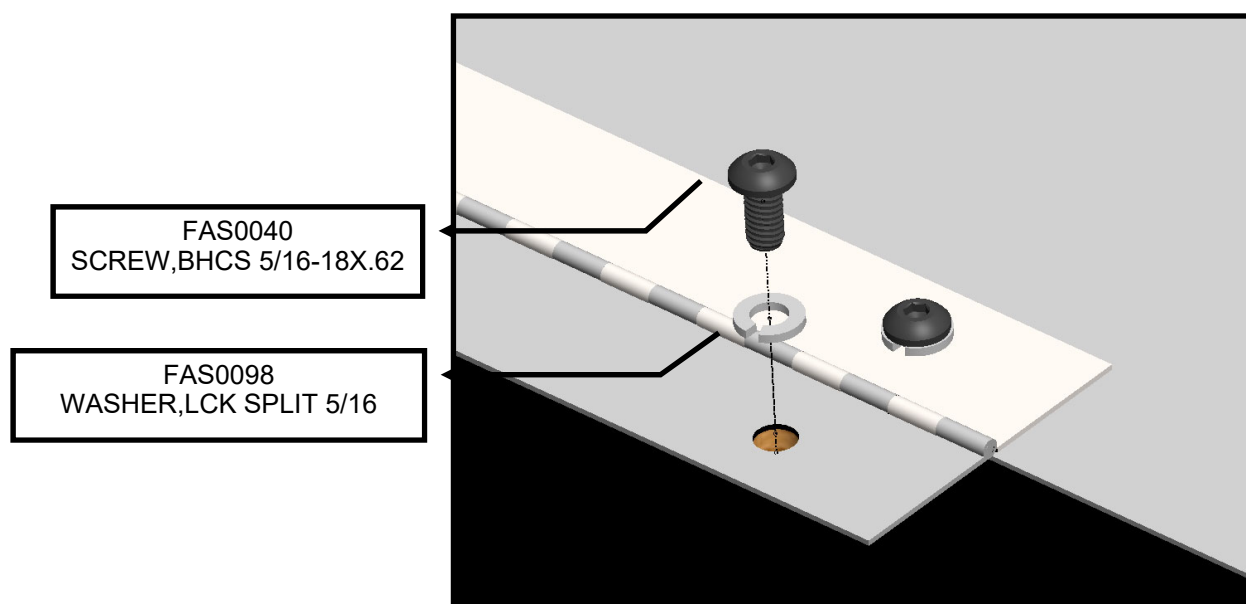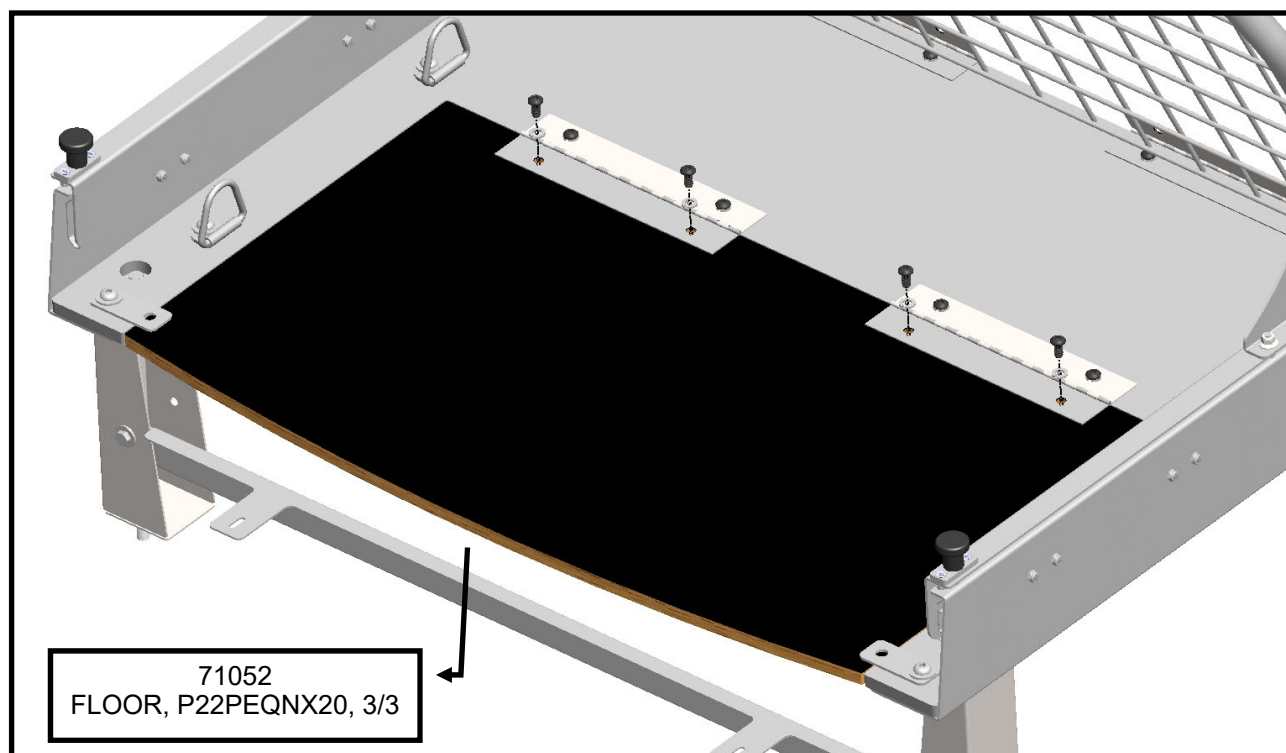

STEP 6 - Fasten the final floor piece to the hinges. Fasten the front D-Rings to the floor.

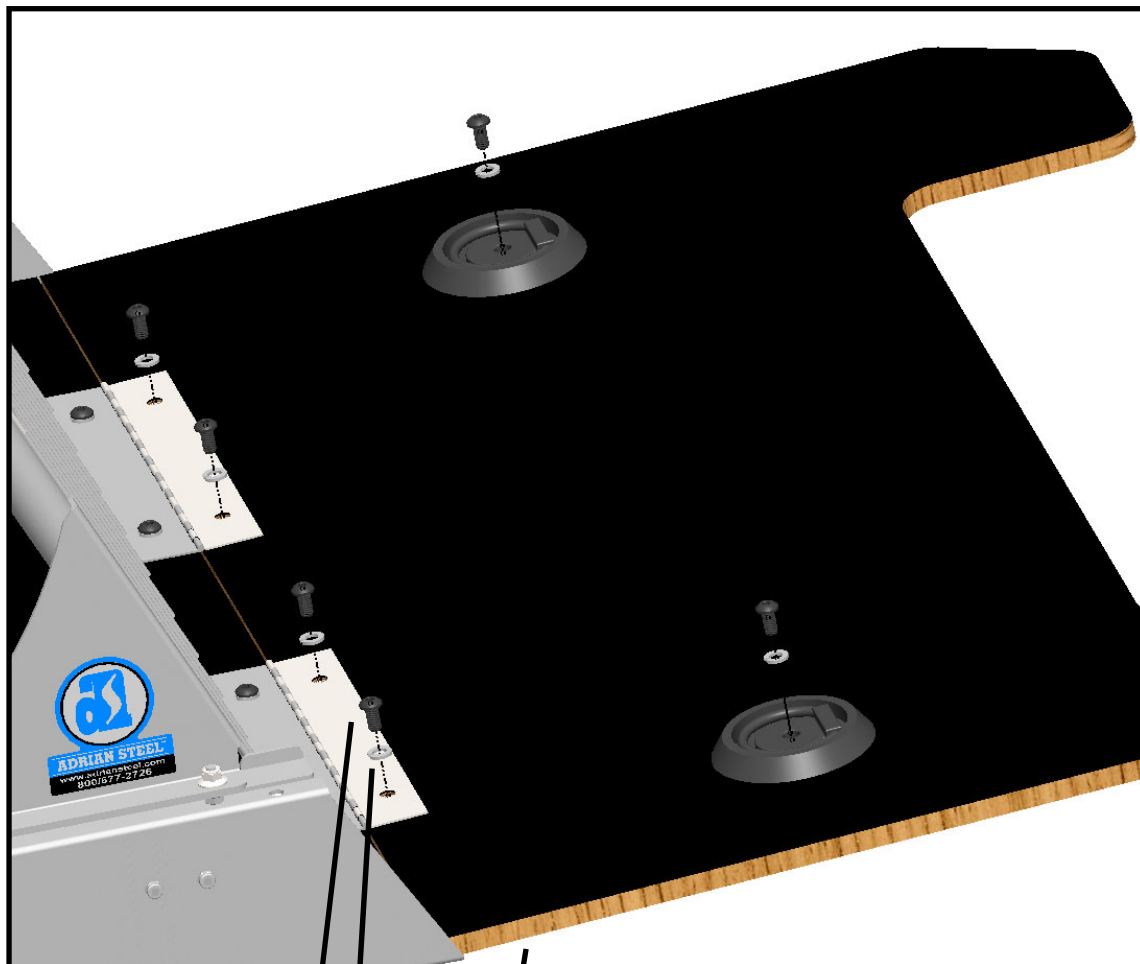

FAS0040
SCREW,BHCS 5/16-18X.62


FAS0098
WASHER,LCK SPLIT 5/16

71049
FLOOR, P22PEQNX20, 1/3


FAS0040
SCREW,BHCS 5/16-18X.62

FAS0098
WASHER,LCK SPLIT 5/16



54976
D-RING, FLUSH MOUNT

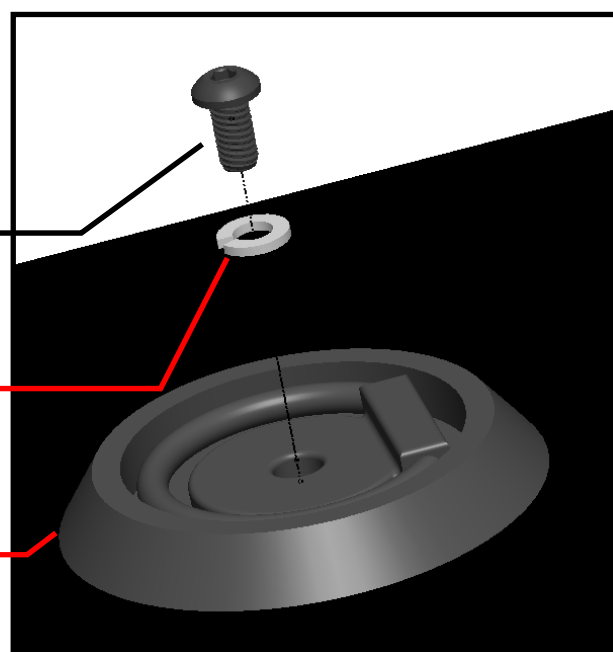


STEP 7 - Fasten the bumpers to the partition as shown.

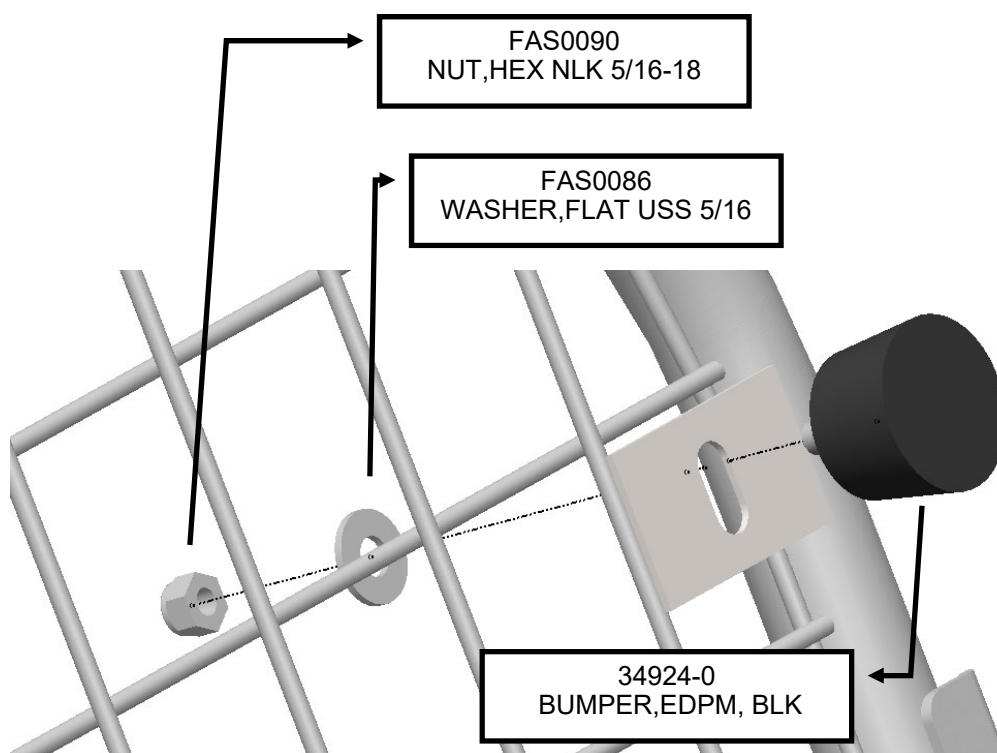

STEP 8 - Extend the partition over the second row seating. Adjust the slide feet so that they are flush with the floor. Tighten the fasteners

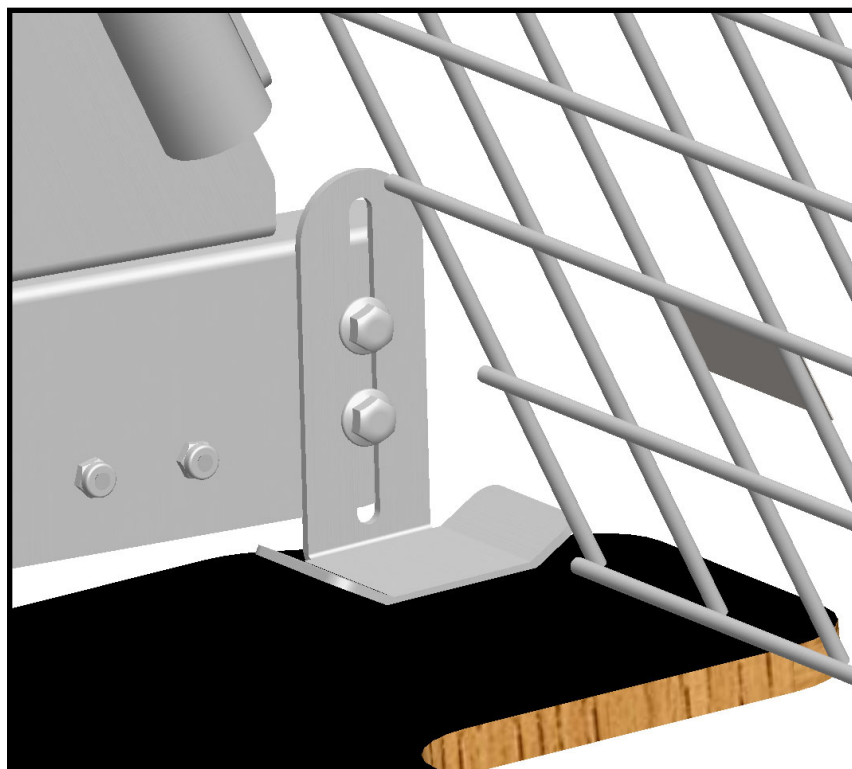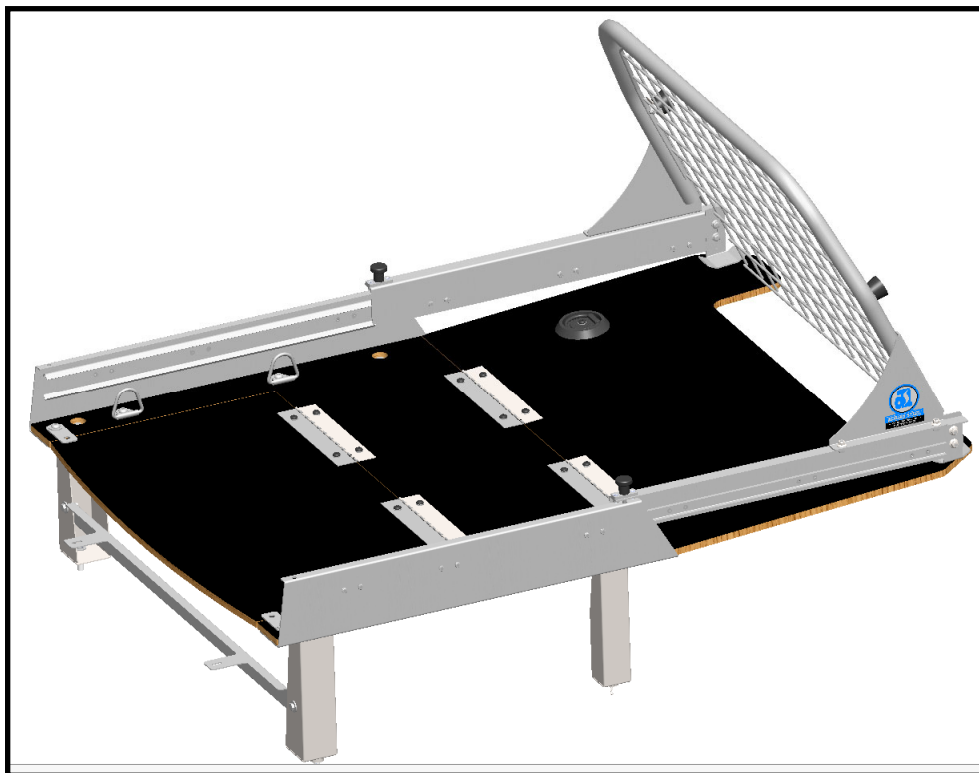

YOUR INSTALLATION IS NOW COMPLETE!

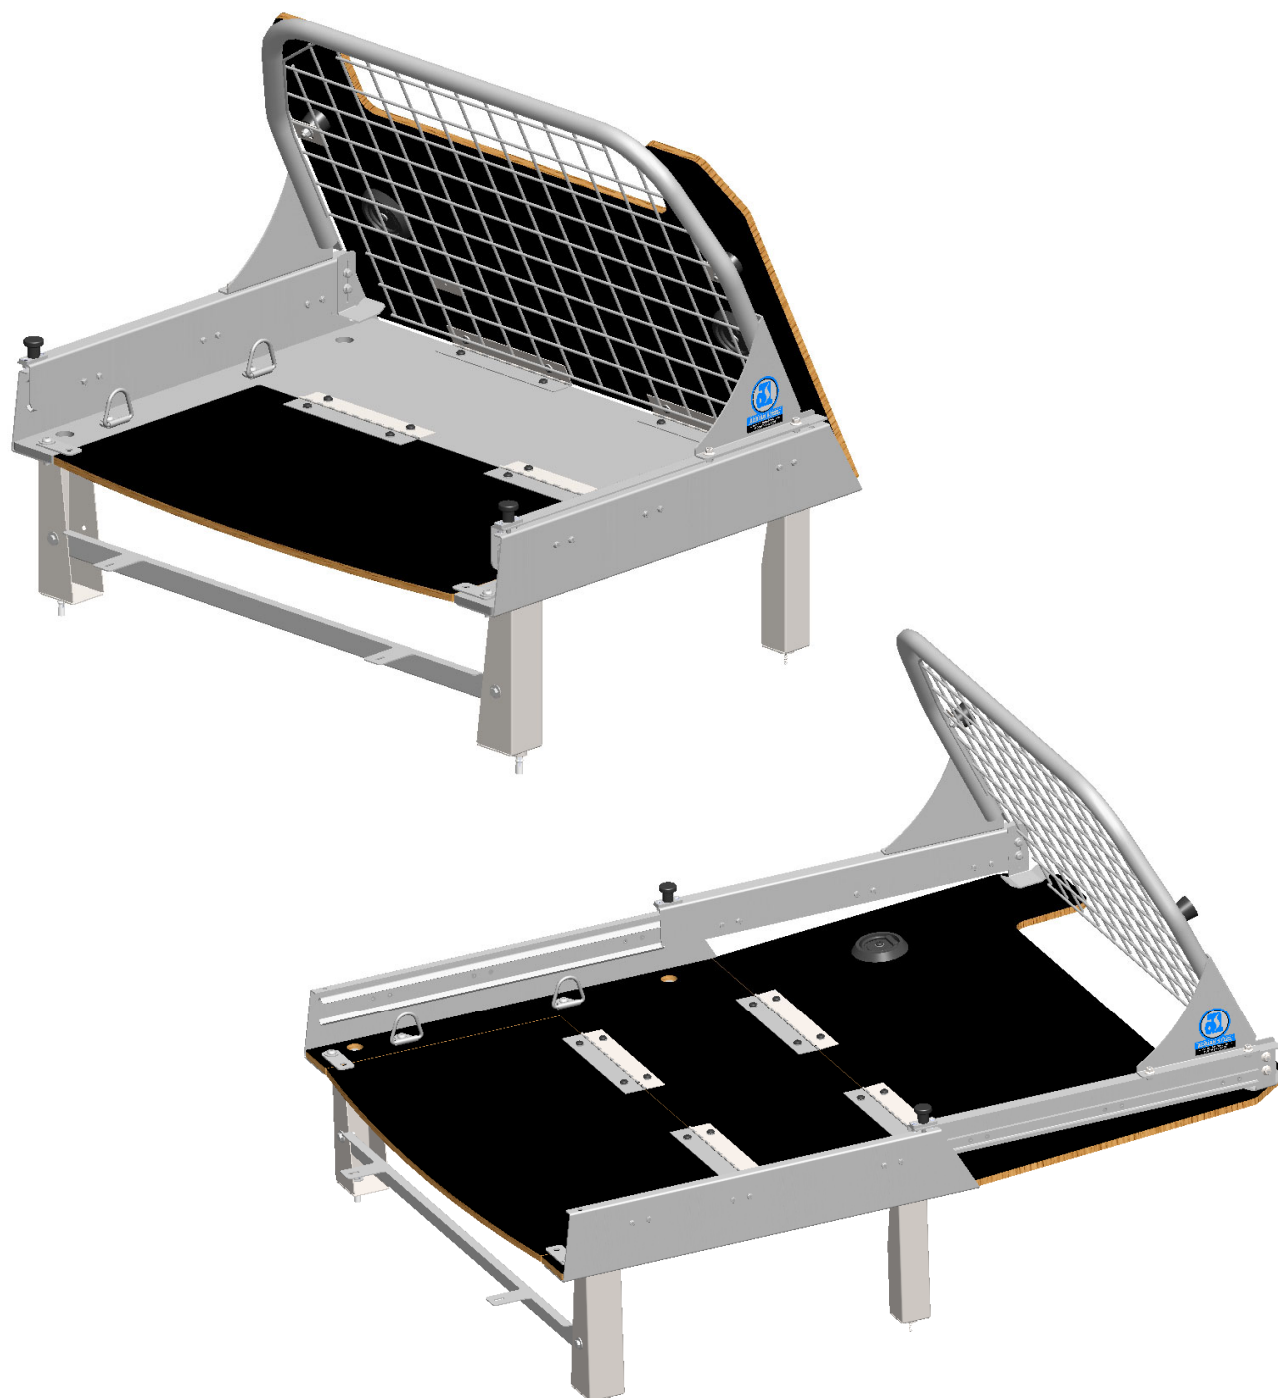

DOUBLE CHECK ALL FASTENER LOCATIONS TO BE SURE THAT
ALL FASTENERS ARE TIGHTENED TO SPECIFICATION.
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES