



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

FLOOR KIT, CHEVY TRAX

PRODUCT WEIGHT

23.29 LBS

WIDTH X DEPTH X HEIGHT

40"W X 61"D

CAPACITY


N/A

COLOR

BLACK

CATALOG NUMBER

89-TRAX26

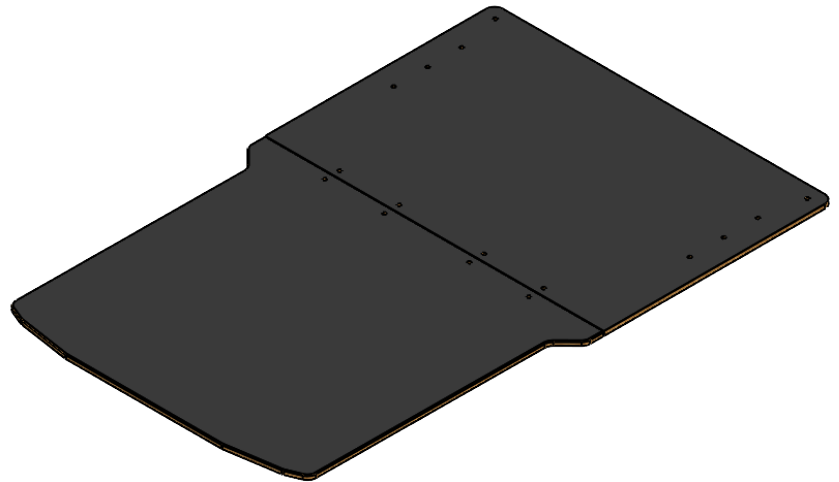

PRODUCT FEATURES

This fixed floor is designed to fit with P2TRAX26 for 2026 and current model year Chevy Trax. The floor allows for a flat cargo floor and full access to the spare tire.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



FLOOR KIT, CHEVY TRAX

CATALOG NUMBER **89-TRAX26**

PRODUCT APPLICATION

This product is designed to be in 2026 and current model year Chevy Trax


ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION (smart)</i>
P2TRAX26	PAR, FIXED, CHEVY TRAX,26
79866	SF KIT, 12X18X36, TRAX

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

<i>INSTR. NUMBER</i> : INS89-TRAX26 <i>PART NUMBER</i> : 89-TRAX26 <i>PART DESC.</i> : FLOOR KIT, CHEVY TRAX 26	<i>PG:</i> 1	<i>REV:</i> A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
			1	79725	FRONT FLOOR, P2TRAX	1
			2	79726	REAR FLOOR, P2TRAX	1
			3	HDW79727	HDW KIT FOR TRAX FLOORING	1

**NOTE: PARTITION P2TRAX26
MUST BE INSTALLED PRIOR TO
FLOOR KIT**

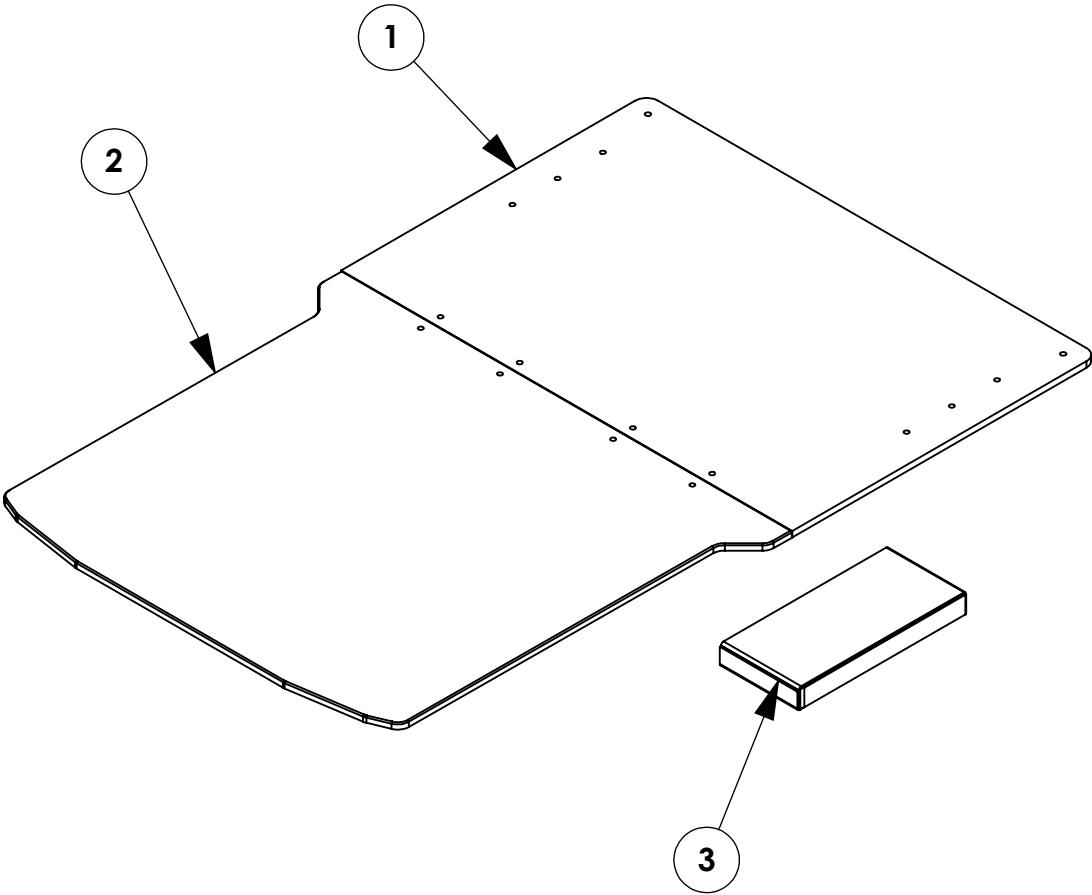

- TOOLS NEEDED:**
- HAMMER
 - HEX HEAD WRENCH
 - 1/2 WRENCH

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED


BAG REFERENCE: BAG79727




FAS0829
NUT, TEE
5/16-18X.5 ZY
QTY: 14




FAS0604
NUT, HEX NLK
3/8-16 ZP
QTY: 4

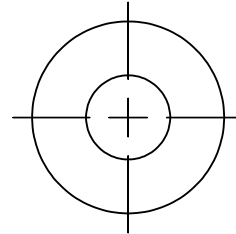


FAS0104
WASHER, FLAT USS
3/8 ZN
QTY: 6

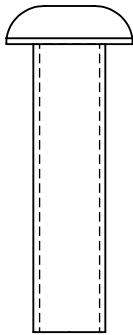


FAS0577
SCREW, BHCS
3/8-16X1.5 ZN
QTY: 2

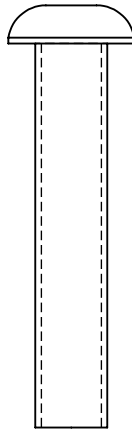


FAS0578
SCREW, BHCS
3/8-16X2 ZN
QTY: 2



FAS0040
SCREW, BHCS
5/16-18X.62 BK
QTY: 8

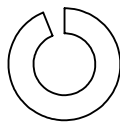

FAS0098
WASHER, LCK SPLIT
5/16 ZP
QTY: 10



FAS0668
SCREW, BHCS
5/16-18X.75 SS
QTY: 2


INTENTIONALLY LEFT BLANK

BEST PRACTICE: ORGANIZE ALL HARDWARE PCS. & VERIFY THAT ALL ARE ACCOUNTED FOR

PAGE:

5**HARDWARE USED****HDW KIT REFERENCE: HDW79727**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CRT06987-A	SMALL CARTON	1
2	44005-B	HNG 18CR 3.00 OP X 10.000	2
3	71659-B	SUPPORT BRKT,89-EQUIN20, BLACK	2
4	BAG79727	BAG FOR TRAX FLOOR KIT	1
5	54976	D RING, FLUSH MOUNT	2
6	INS89-TRAX26	INS FOR 89-TRAX26	1

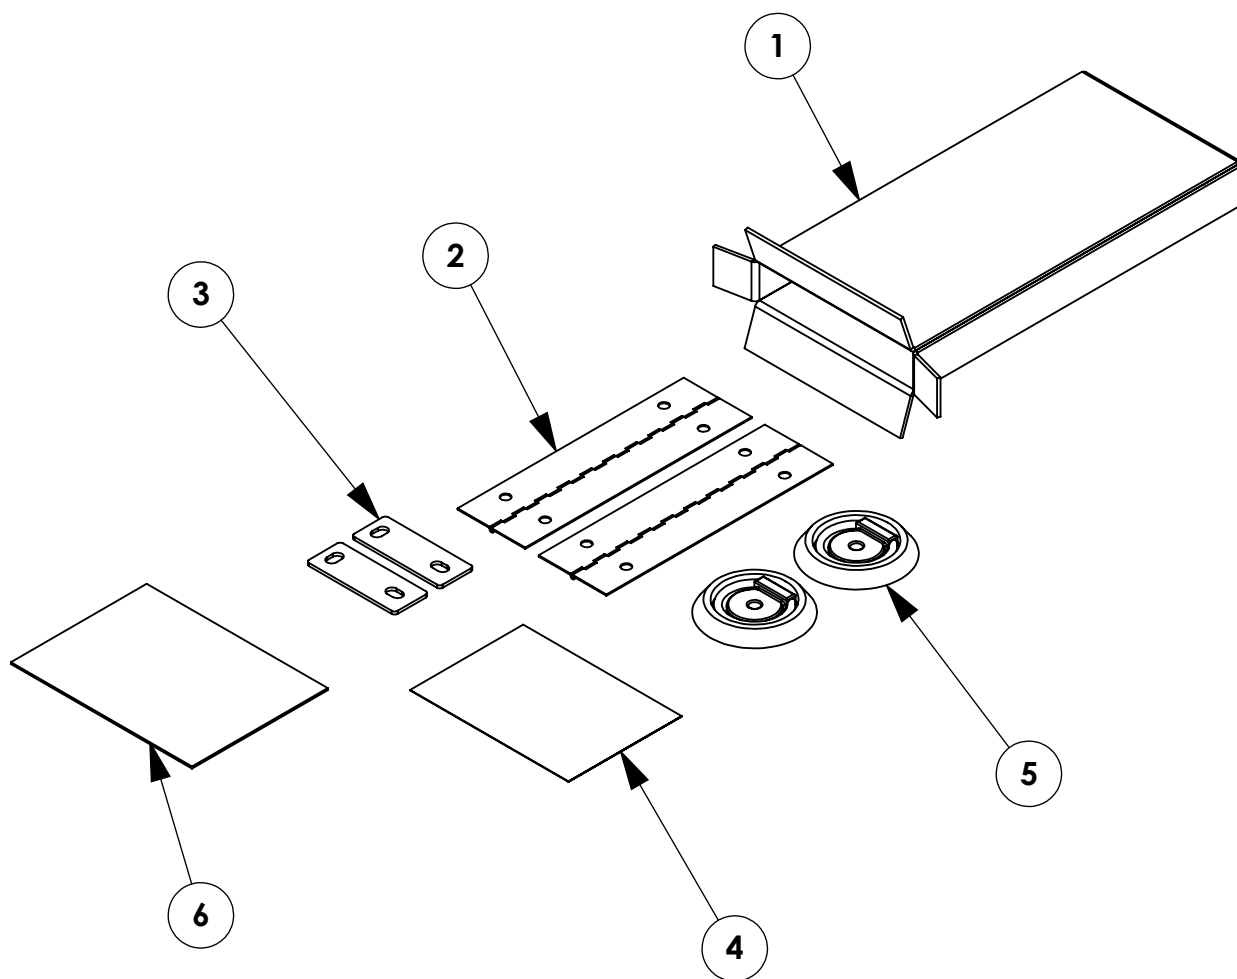

INTENTIONALLY LEFT BLANK




***P2TRAX26 PARTITION MUST BE INSTALLED PRIOR
TO 89-TRAX26 INSTALLATION***

STEP 1 - INSTALL T-NUTS

Step 1.1
FULLY TIGHTEN
FAS0829
(12 PLACES)

HAMMER

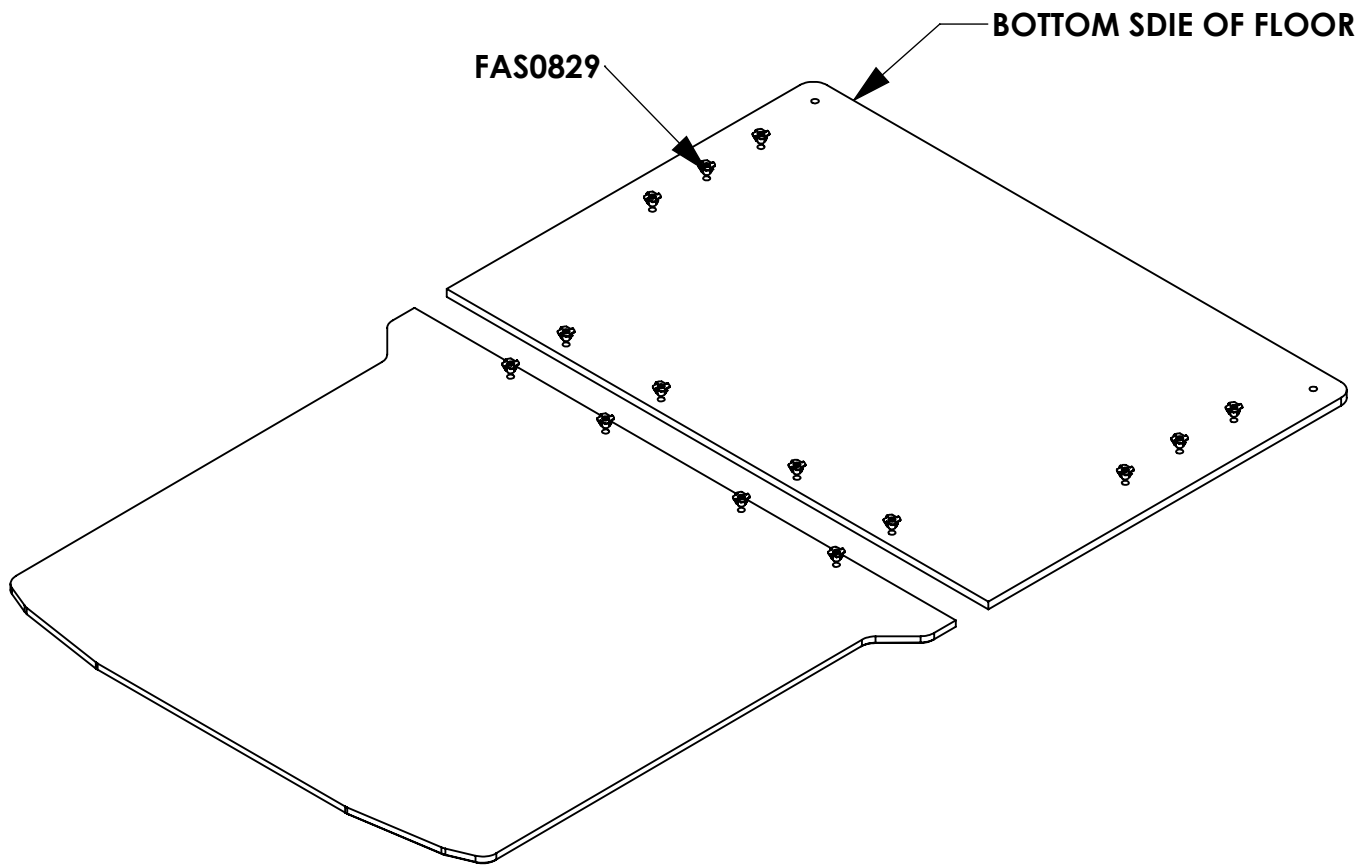

STEP 2 - INSTALL FLOORING INTO VEHICLE

Step 2.1
PLACE
FLOORING IN
VEHICLE AND
ATTACH 71659
FULLY TIGHTEN
FAS0577,
FAS0104,
FAS0604
(2 PLACES)

ALLEN WRENCH
1/2 SOCKET

Step 2.2
ATTACH
FLOORING TO
PARTITION
FULLY TIGHTEN
FAS0578,
FAS0104 AND
FAS0604
(2 PLACES)

ALLEN WRENCH
1/2 SOCKET

Step 2.3
ATTACH
HINGES
FULLY TIGHTEN
FAS0040 AND
FAS0098

(8 PLACES)

ALLEN WRENCH

Step 2.4
ATTACH
FORWARD D-
RINGS
FULLY TIGHTEN
FAS0668 AND
FAS0098

(2 PLACES)
ALLEN WRENCH

