



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

RISER KIT, DC6

PRODUCT WEIGHT

1.30 LBS

WIDTH X DEPTH X HEIGHT

3" W X 1.75" H

CAPACITY


15 lbs Total Weight

COLOR

GRAY

CATALOG NUMBER

ADC6RK

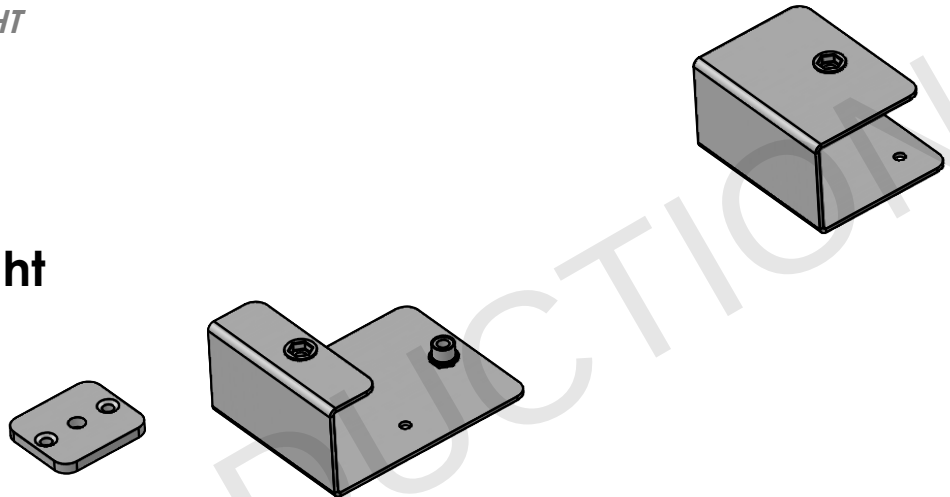


PRODUCT FEATURES

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.




PAGE 2 OF 2

INSTR. NUMBER : INSDCRK PART NUMBER • ADC6RK, ADC12RK PART • RISER KIT, DC6, DESC. • RISER KIT, DC12	PG: 1	REV: A	ADC6RK		
	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
	1	81910-G	RISER BRKT, DC6 AND DC12, FRONT, GRAY	1	
	2	81911-G	RISER BRKT, DC6 AND DC12, REAR, GRAY	1	
	3	BAGDCRK	FAS BAG, DC RISER KITS	1	
	4	FADUSPACER	FLAT FOR ADUSPACER	1	

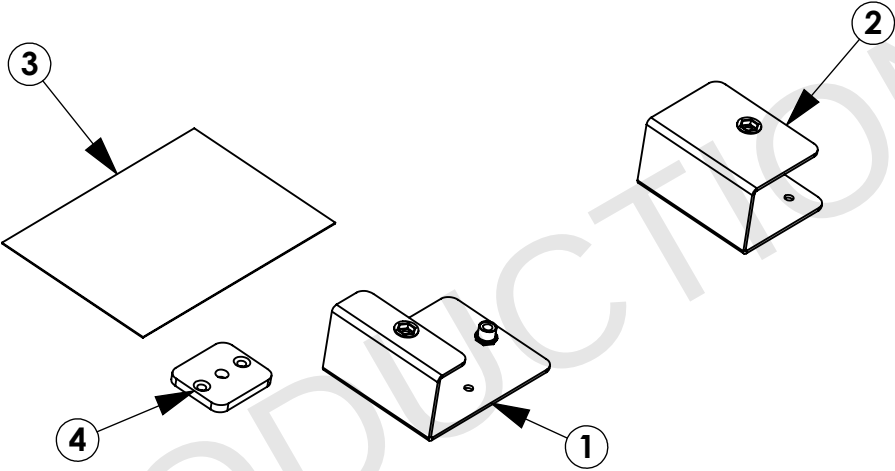

NOTE:
ADC6RK USED IN INSTRUCTIONS

ADC12RK			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	81910-G	RISER BRKT, DC6 AND DC12, FRONT, GRAY	2
2	81911-G	RISER BRKT, DC6 AND DC12, REAR, GRAY	2
3	BAGDCRK	FAS BAG, DC RISER KITS	1
4	FADUSPACER	FLAT FOR ADUSPACER	2

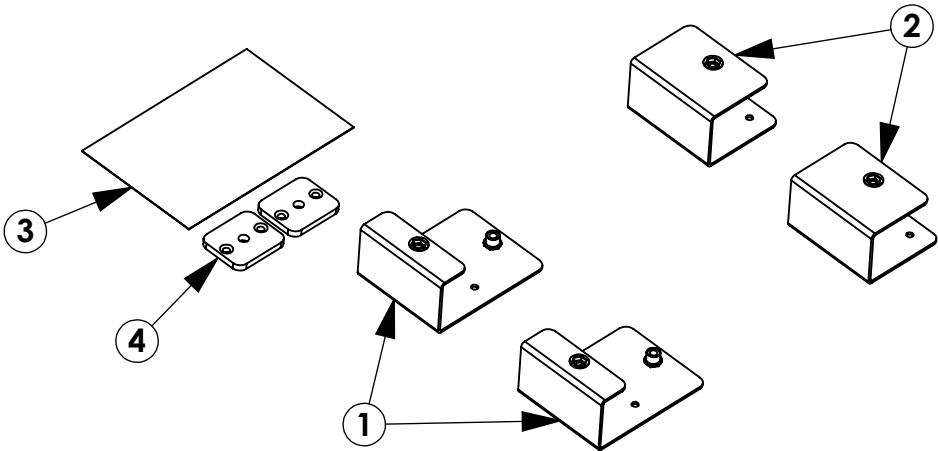

- TOOLS NEEDED:**
- PHILPS HEAD SCREWDRIVER
 - 3/16" DRILL BIT
 - 9/32" DRILL BIT
 - DRILL
 - 1/2" WRENCH

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).

THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED
BAG REFERENCE: BAGDCRK

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0062	SCREW,THP 1/4-20X.75 G5ZP	4
2	FAS0069	Screw, Truss Hd. Ph, 1/4-20x1.00	6
3	FAS0784	Rivet, Blind, Buttonhead, 3/16x.25 Grip	9
4	FAS1030	RIVET, BLIND, 3/16, 0.078"-0.375" GR	4
5	FAS0440	NUT,HEX NLK FLG 5/16-18 - ZP	2

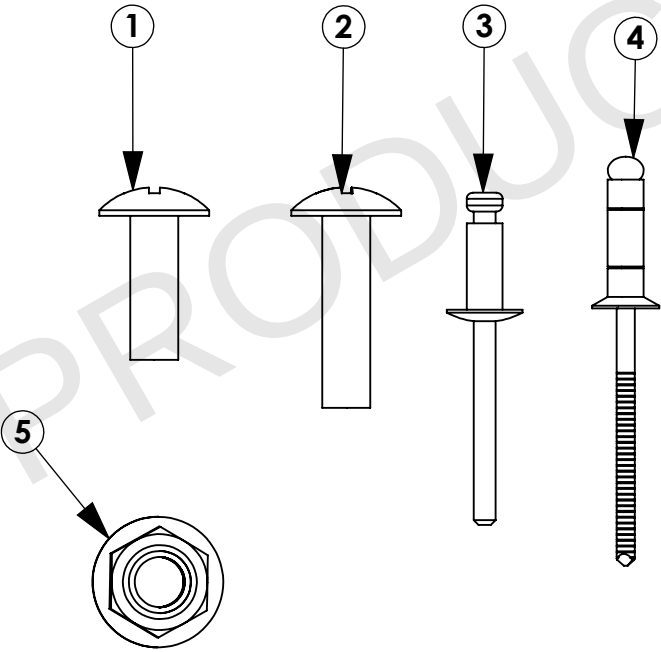


INTENTIONALLY LEFT BLANK

STEP 1 - MOUNTING DC RISERS TO SHELVING

Step 1.1
DETERMINE
DRAWER
LOCATION IN
SHELVING,
REMOVED
DRAWERS FROM
DC6

(NOTE:
INSTRUCTION CAN
BE USED FOR BOTH
DC6 & DC12)

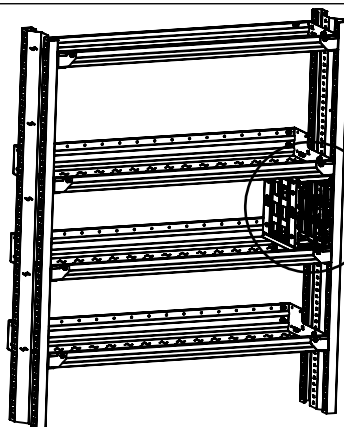


Step 1.1

Step 1.2
REMOVE DC6,
PLACE BRACKETS
ON SHELVING.

HAND TIGHTEN
FAS0062

PHILPS HEAD
SCREWDRIVER

FULLY TIGHTEN
AFTER Step 3.2

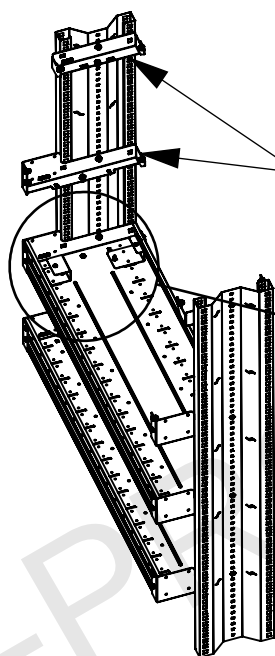



NOTE:
SHELVES HIDDEN
FOR CLARITY

Step 1.2


Step 1.2A
IF DRAWER IS
GOING TO BE
PLACED NEXT TO
END PANELS,
BEFORE PLACING
DC6 ON RISERS,
SWITCH FAS0924
AND FAS0055
PLACES ON THE
SHELF ABOVE THE
DRAWER

1/2" WRENCH


VIEW FROM BELOW

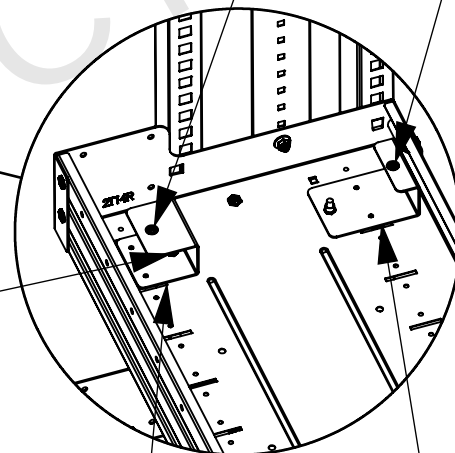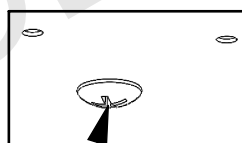

NOTE:
NOTE BRACKET
ORIENTATION
81910 IN FRONT,
81911 IN REAR

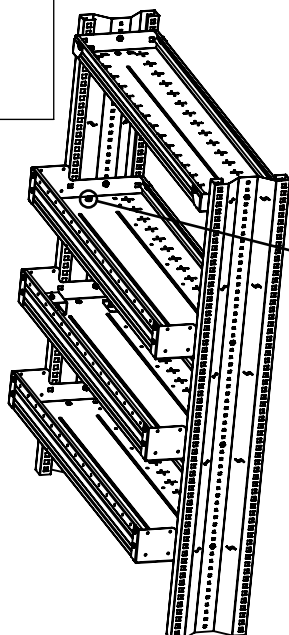

Step 1.2A

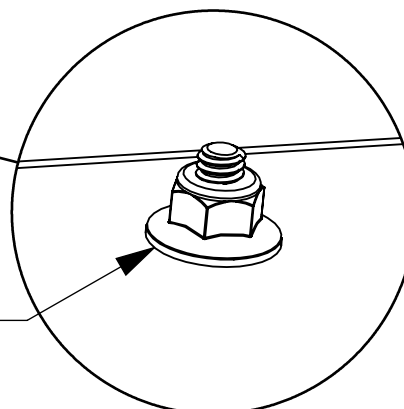

STEP 2 - ADDING SPACER TO DC6

Step 2.1
FOR DRAWERS THAT DO NOT HAVE HOLES FOR SPACER ON DC6, PLACE SPACER IN SHELVING AND MARK WHERE TO DRILL $9/32$ " CENTER HOLE INTO DRAWER


Step 2.2
AFTER $9/32$ " HOLE HAS BEEN MARKED ALIGN HOLE IN SPACER AND MARK (2) $3/16$ " HOLES IN DRAWER, DRILL ALL HOLES

$3/16$ " & $9/32$ "
DRILL BIT
DRILL

Step 2.3
AFTER (2) $3/16$ " HOLES HAVE BEEN DRILLED, OR ARE EXISTING.

PLACE
FADUSPACER
OVER HOLES,
AND RIVET
(2) FAS1030 TO
DC6

RIVET GUN

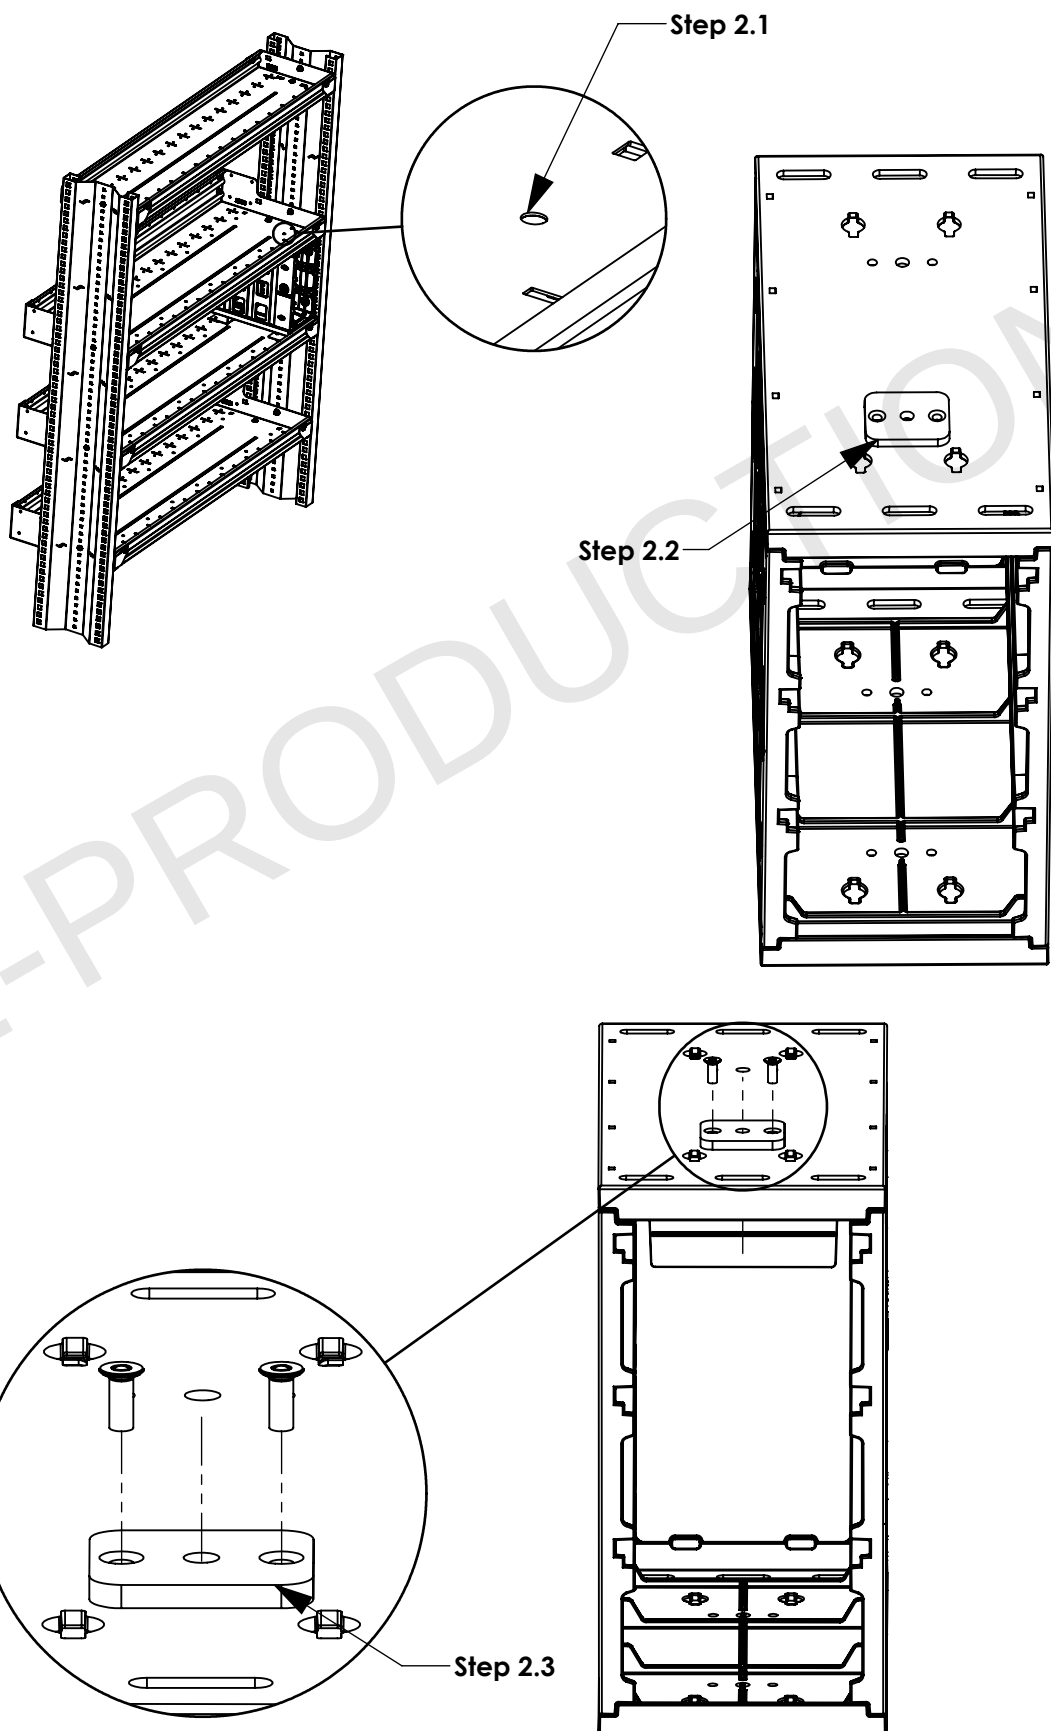

STEP 3 - INSTALL DC6 TO SHELVING

Step 3.1
PLACE DC6
BACK INTO
SHELVING,
FULLY TIGHTEN
(3)FAS0069 &
FAS0440


PHILIPS
SCREWDRIVER
1/2" WRENCH

Step 3.2
RIVET
(4)FAS0784
UNDER
SHELVING TO
SECURE RISERS


RIVET GUN

(TIGHTEN ALL
FASTENERS)



Step 3.3
PLACE DRAWERS
BACK IN DC6

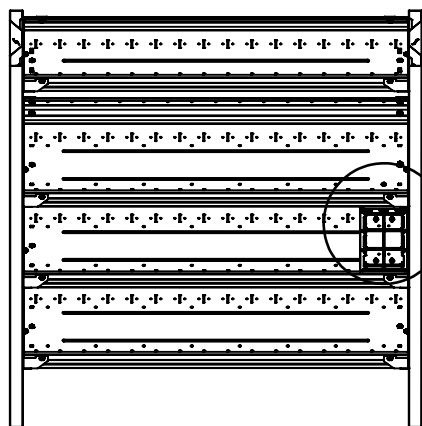



Step 3.1

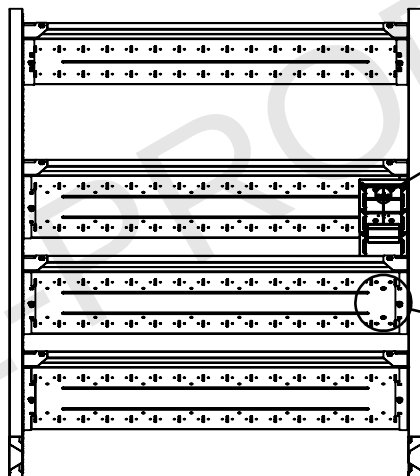

Step 3.1

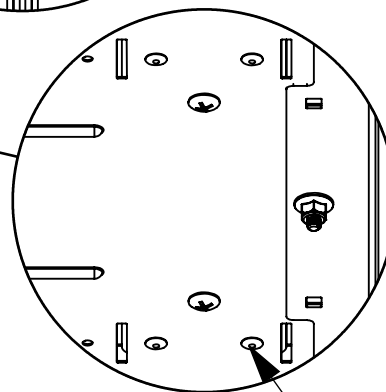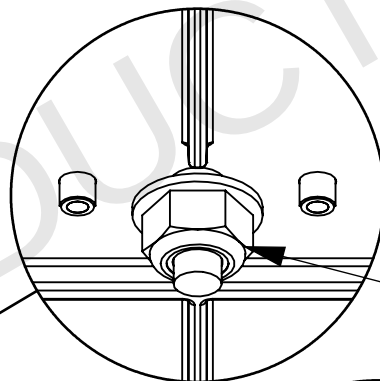

Step 3.2

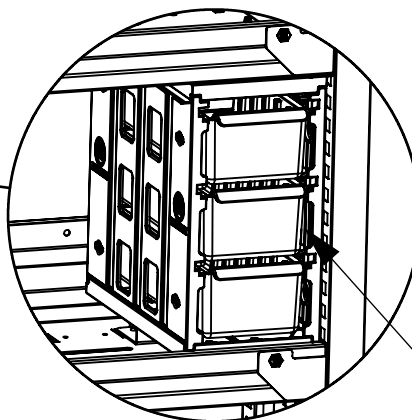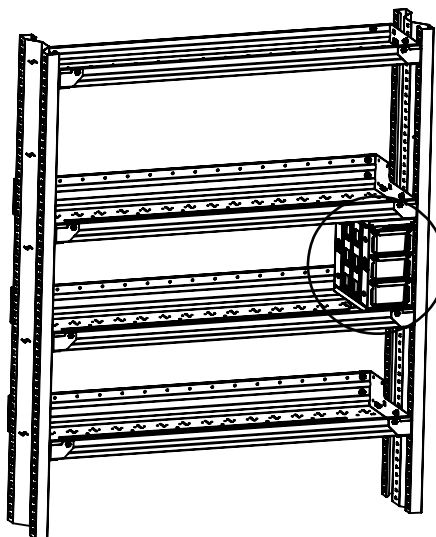

Step 3.3