



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

DRAWER UNIT, 16X18, A, 3, C, R

PRODUCT WEIGHT

37.29 LBS

WIDTH X DEPTH X HEIGHT

18" X 16" X 11.5"

CAPACITY


**15LBS. PER SHALLOW
DRAWER
25LBS. PER DEEP
DRAWER**

COLOR

ASC BLUE & GRAY

CATALOG NUMBER

ADUK1618A3C-RI

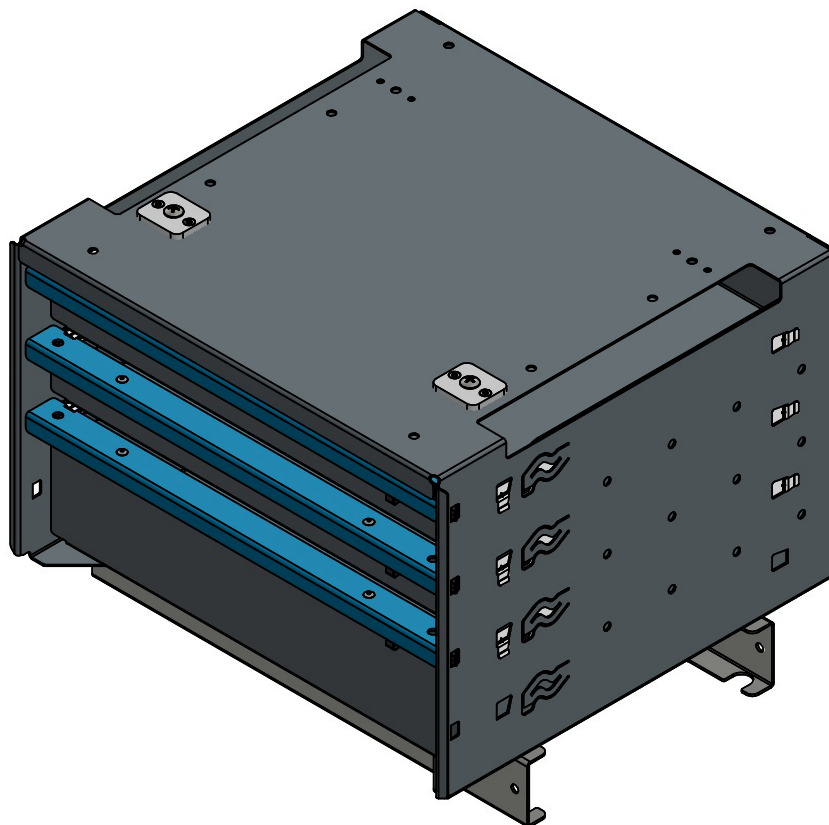

PRODUCT FEATURES

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.

***DRAWER UNIT, 16X18, A, 3, C, R*****CATALOG NUMBER** **ADUK1618A3C-RI*****PRODUCT APPLICATION***

This unit is designed to be installed on Adrian Shelving with the use of the included riser kit or by stacking with other units and mounting directly to vehicle (not included).

**NOTE: * - XX = WIDTH, # = NUMBER OF SHELVES
(EXAMPLE - ASFK2T1648G4)**

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
ADUK16182T	DRAWER UNIT, 16X18, A, 2, T
ADUK16184S	DRAWER UNIT, 16X18, A, 4, S
*ASFK2T16XXG#	NEXT GENERATION SHELVING KIT

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

DRAWER UNIT, 16X18, A, 3, C

PRODUCT WEIGHT

34.88 LBS

WIDTH X DEPTH X HEIGHT

18" X 16" X 11.5"

CAPACITY

**15LBS. PER SHALLOW
DRAWER**


**25LBS. PER DEEP
DRAWER**

COLOR

ASC BLUE & GRAY

CATALOG NUMBER

ADUK1618A3C

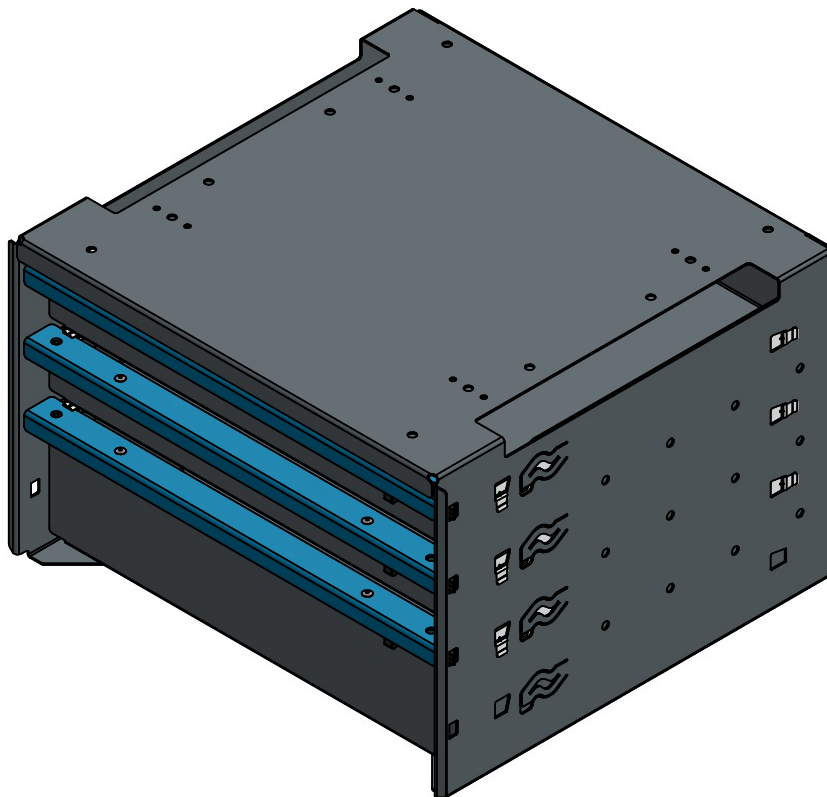

PRODUCT FEATURES

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



DRAWER UNIT, 16X18, A, 3, C

CATALOG NUMBER **ADUK1618A3C**

PRODUCT APPLICATION

This unit is designed to be installed on Adrian Shelving with the use of the included riser kit or by stacking with other units and mounting directly to vehicle (not included).


**NOTE: * - XX = WIDTH, # = NUMBER OF SHELVES
(EXAMPLE - ASFK2T1648G4)**

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT



CATALOG NUMBER	DESCRIPTION (smart)
ADURK18	DRAWER UNIT, RISER KIT, 18
ADUK16182T	DRAWER UNIT, 16X18, A, 2, T
ADUK16184S	DRAWER UNIT, 16X18, A, 4, S
*ASFK2T16XXG#	NEXT GENERATION SHELVING KIT

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

**THIS INSTRUCTION IS TO DEMONSTRATE THE ASSEMBLY AND INSTALLATION OF THE
ADRIAN SHELVING DRAWER UNIT PRODUCT LINE**


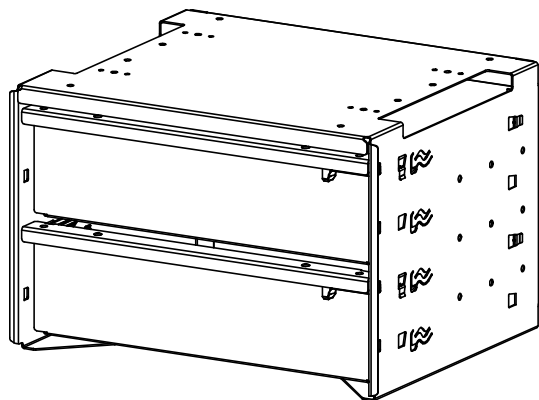


**ADUA1418A2T
ADUA1424A2T
ADUA1618A2T
ADUA1624A2T**

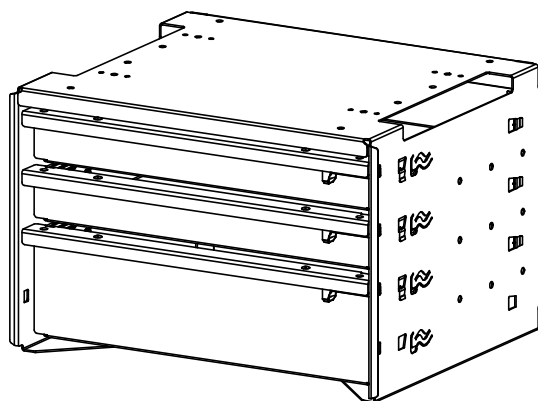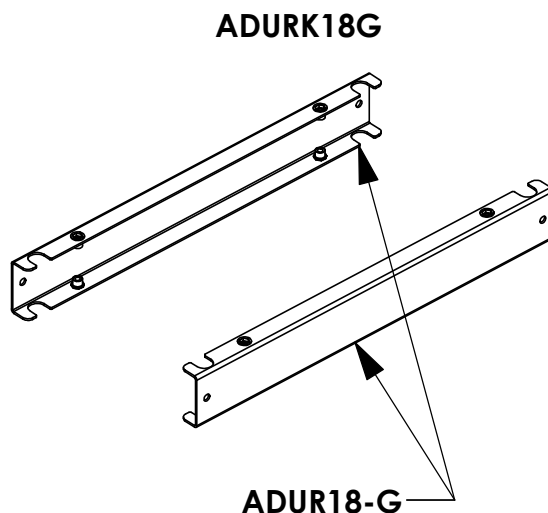

**ADUA1418A3C
ADUA1424A3C
ADUA1618A3C
ADUA1624A3C**

ADURK24G

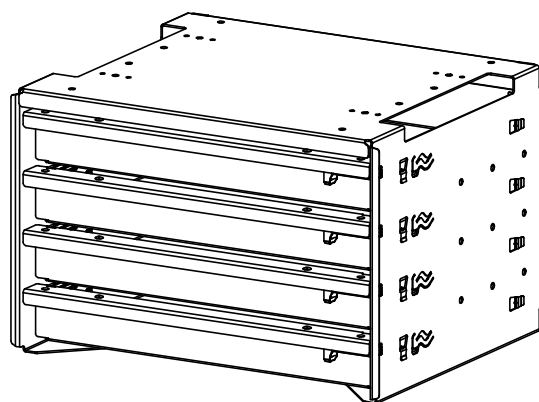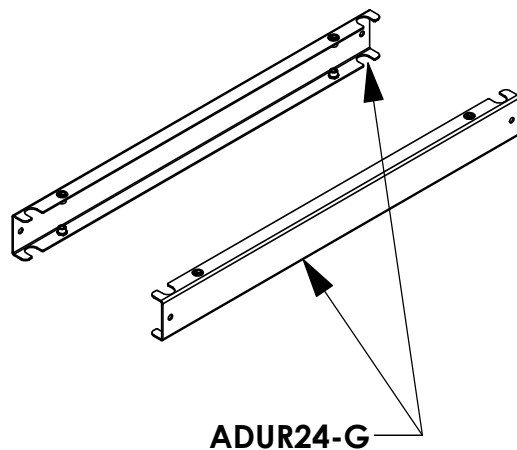

**ADUA1418A4S
ADUA1424A4S
ADUA1618A4S
ADUA1624A4S**

TOOLS NEEDED:

**- IMPACT
- DRILL
- RIVET TOOL**

**- 7/16" SOCKET
- 7/16" WRENCH**

**- #3 PHILLIPS DRIVER
- 9/32" OR "K" DRILL BIT**

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

BAG REFERENCE: BAGADU

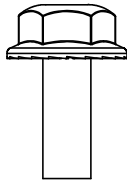


FAS0018
HEX FLANGE BOLT
1/4-20 X .63 LG
QTY: 04

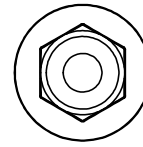


FAS0055
NYLOK FLANGE NUT
1/4-20 HEX
QTY: 04

FASTENERS USED


BAG REFERENCE: BAGADURK

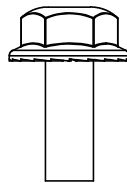


FAS0018
HEX FLANGE BOLT
1/4-20 X .63 LG
QTY: 08




FAS0033
HEX FLANGE BOLT
1/4-20 X 1.00 LG
QTY: 02




FAS0062
TRUSS HEAD PHILLIPS BOLT
1/4-20 X .75 LG
QTY: 02



FAS0066
STAR LOCK WASHER
1/4
QTY: 02



FAS0986
FLUSH MOUNT POP RIVET
3/16 X .188-.125
QTY: 04

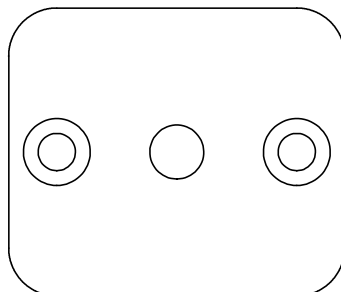


FADUSPACER
DRAWER UNIT SPACER
QTY: 02

INTENTIONALLY LEFT BLANK

STEP 1 - REMOVE DRAWERS FROM WRAPPER**Step 1.1**

**DISENGAGE TABS IN
SLIDES TO REMOVE
DRAWERS FROM
WRAPPER BODY**

**THIS IS TO PROVIDE
ACCESS TO
MOUNTING HOLES
AND ALLOW
SUFFICIENT TOOL
CLEARANCE**

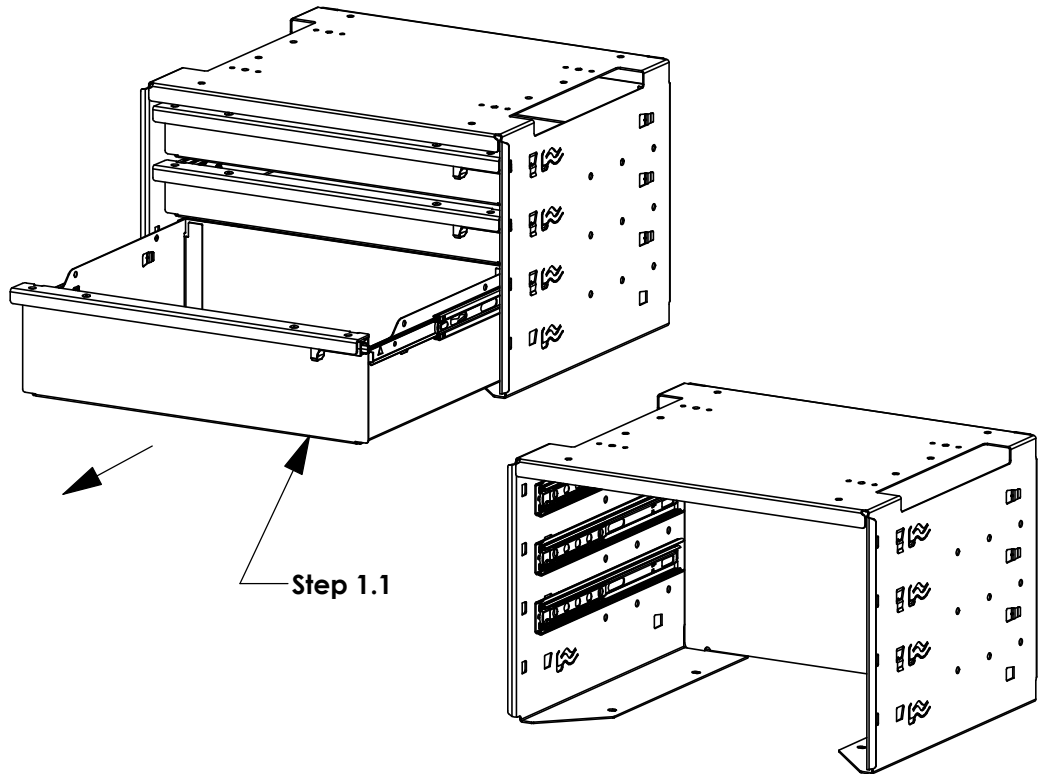

Step 1.1


STEP 2 - STACKING DRAWER UNITS

*****SKIP TO STEP 3 IF INSTALLING DRAWER UNIT(S) ON SHELVING UNIT**

Step 2.1

**FULLY TIGHTEN
FAS0018 AND FAS0055**

**(04 PLACES)
7/16" WRENCH
7/16" SOCKET**

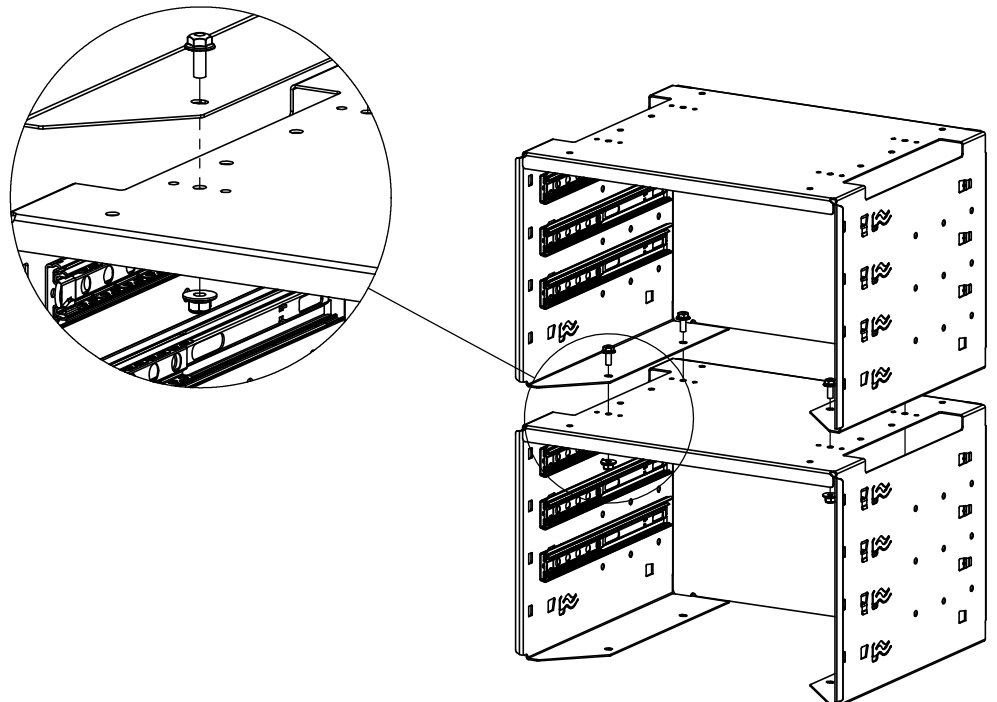

IF INSTALLING SHELF DIVIDERS ABOVE DRAWER UNIT, INSTALL THOSE AT THIS TIME!

DRAWER UNITS CAN BE INSTALLED ON SHELF AFTER THE SHELVING UNIT HAS BEEN INSTALLED IN THE VEHICLE!


STEP 3 - ATTACH SPACERS TO TOP OF DRAWER UNIT (SHELF INSTALL ONLY!)

Step 3.1

**FULLY TIGHTEN
FADUSPACER AND
(2) FAS0986**

**(02 PLACES)
RIVET TOOL**


Step 3.1

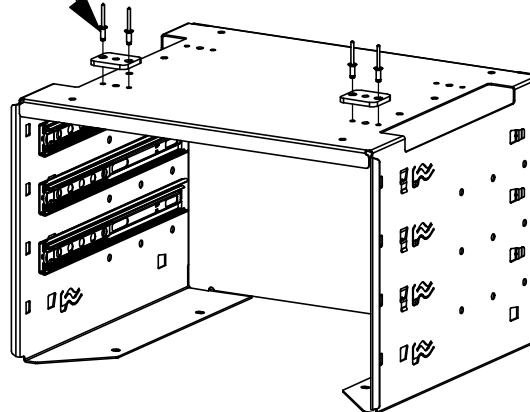


STEP 4 - ASSEMBLE RISER KIT TO SHELF (BOTTOM DRAWER UNITS ONLY!)

**Step 4.1
FULLY TIGHTEN
FAS0018**

**(04 PLACES)
7/16" SOCKET**

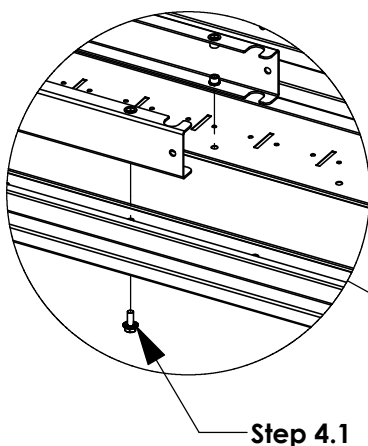


Step 4.1

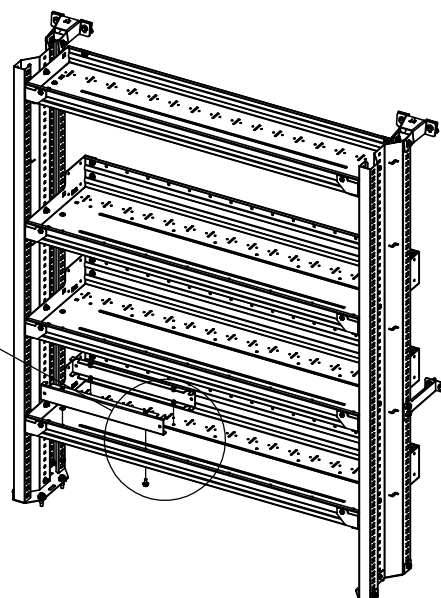


STEP 5A - ASSEMBLE REAR RISER TO SHELF (TOP DRAWER UNIT ONLY!)**Step 5A.1**

FULLY TIGHTEN
FAS0062 AND FAS0066


(02 PLACES)
#3 PHILLIPS DRIVER

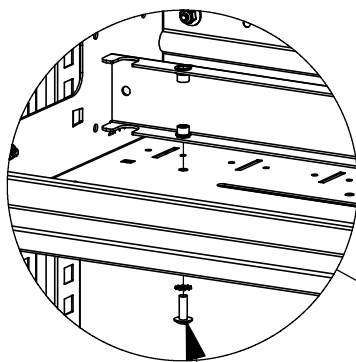

Step 5A.1

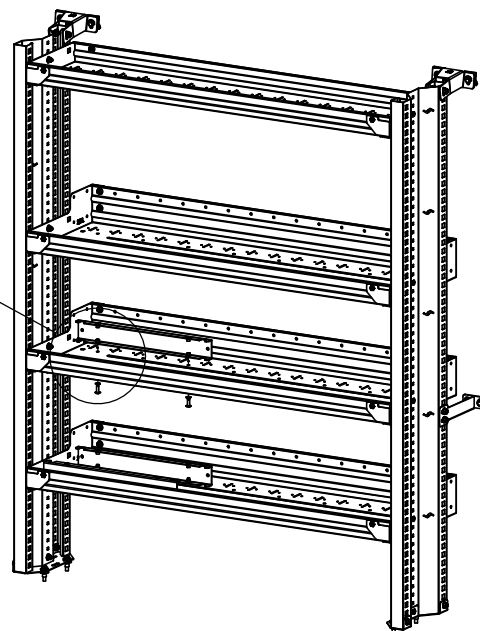**STEP 5B - ASSEMBLE FRONT RISER TO SHELF (TOP DRAWER UNIT ONLY!)****Step 5B.1**

INSERT DRAWER-UNIT
BELOW

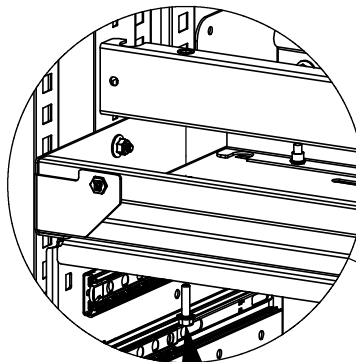


Step 5B.2

Step 5B.2

FULLY TIGHTEN
FAS0033

(02 PLACES)
7/16" SOCKET

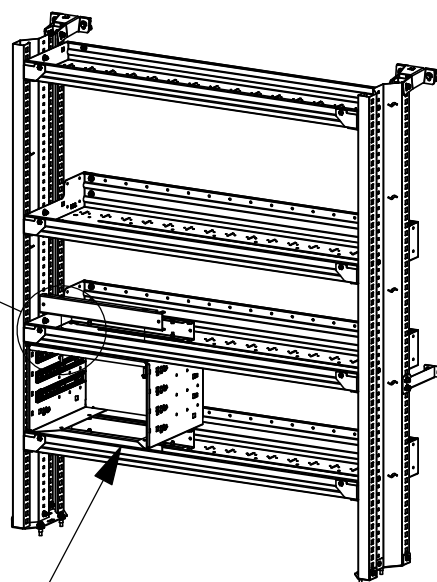


Step 5B.1

STEP 6 - ASSEMBLE DRAWER UNIT TO RISER**Step 6.1**

FULLY TIGHTEN
FAS0018

(08 PLACES)
7/16" SOCKET

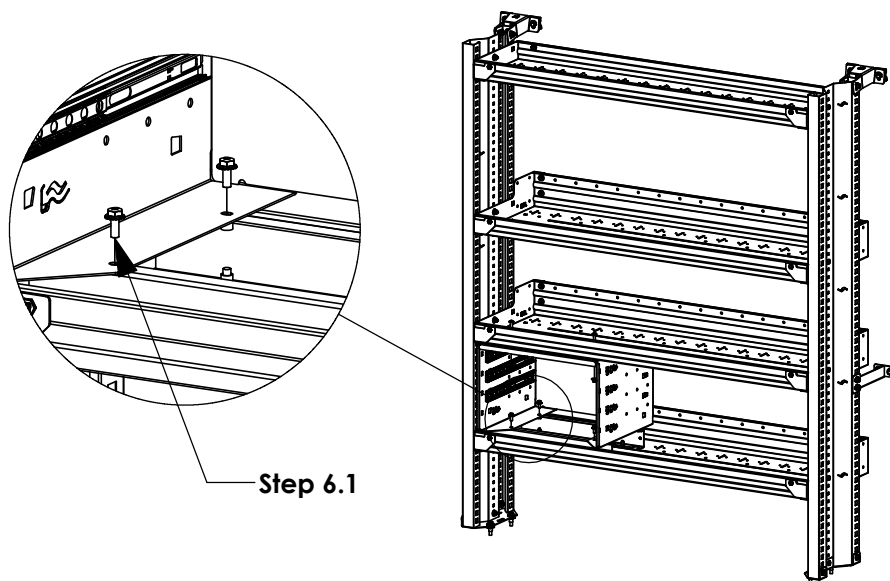**STEP 7 - ASSEMBLE TOP OF DRAWER UNIT TO SHELF ABOVE (TOP DRAWER UNIT ONLY!)****Step 7.1**

IF INSTALLING ON SHELF DIRECTLY BELOW TOP SHELF, MARK AND DRILL HOLES TO MOUNT


9/32" OR "K" DRILL BIT
(02 PLACES PER DRAWER UNIT)


Step 7.2

FULLY TIGHTEN
FAS0062 AND FAS0055

(02 PLACES)
#3 PHILLIPS DRIVER
7/16" SOCKET

FRONT HOLES ONLY!

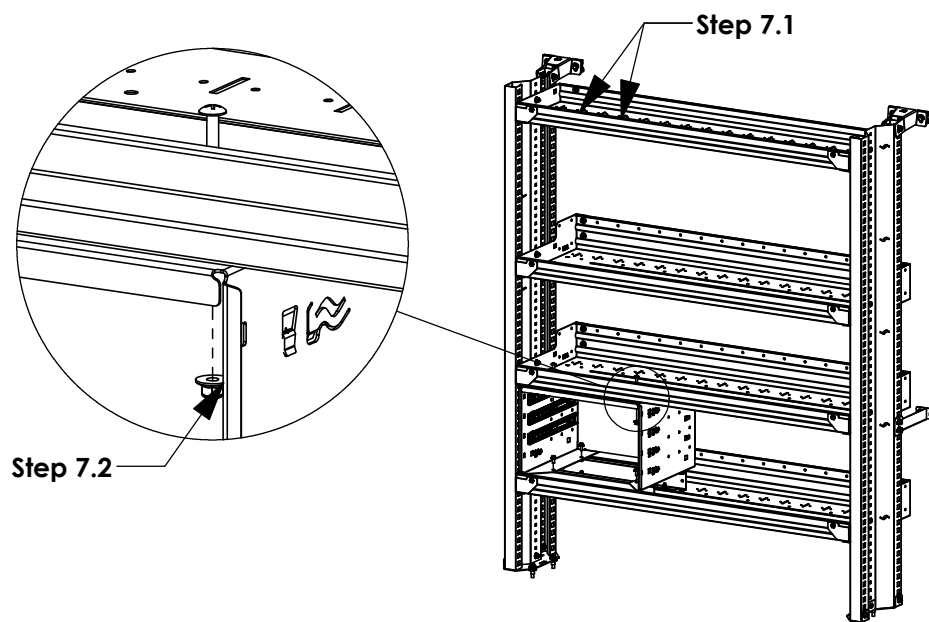

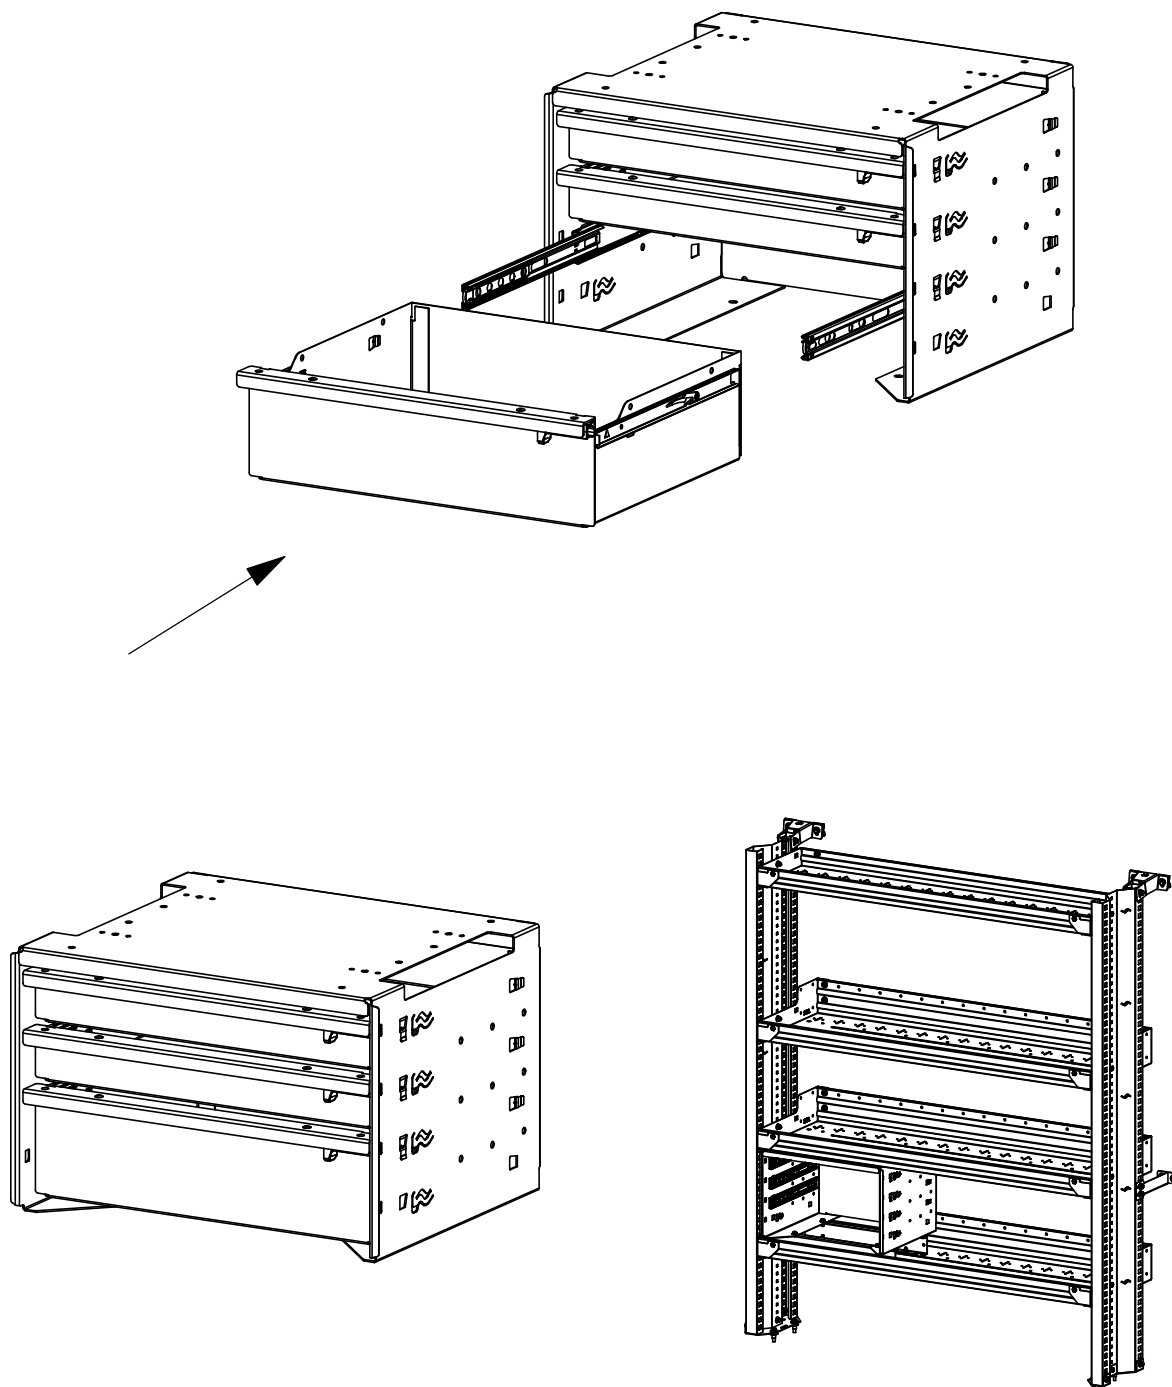STEP 8 - INSERT DRAWERS BACK INTO SLIDES

ASSEMBLY/INSATLLATION IS NOW COMPLETE!



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

DRAWER UNIT, RISER KIT, 18"

PRODUCT WEIGHT

2.79 LBS

WIDTH X DEPTH X HEIGHT

18" X .873" X 2.28"

CAPACITY


N/A

COLOR

GRAY

CATALOG NUMBER

NO SPACER & BAG

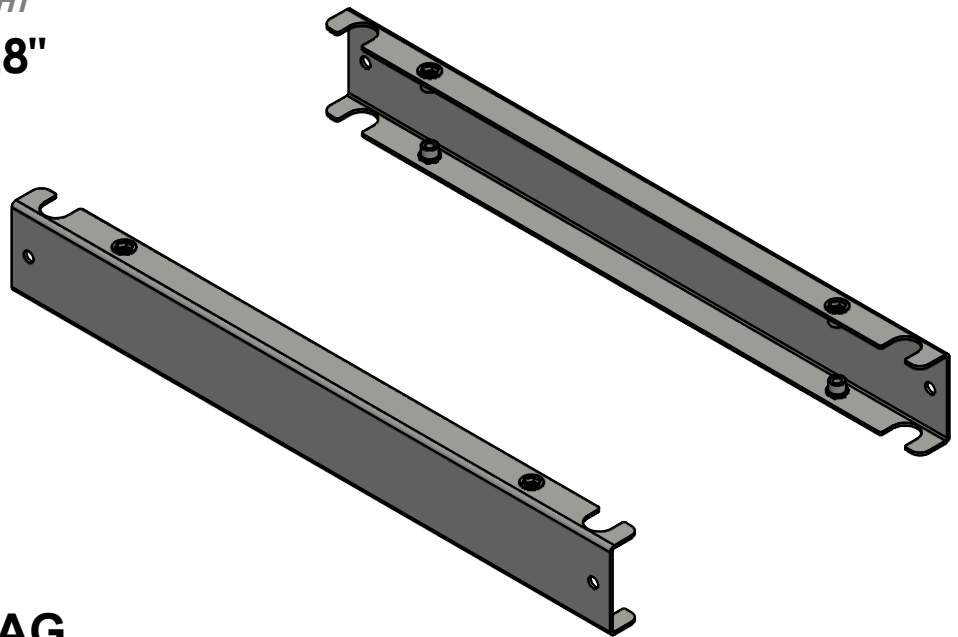

PRODUCT FEATURES

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



DRAWER UNIT, RISER KIT, 18"

CATALOG NUMBER ADURK18G

PRODUCT APPLICATION

Designed to integrate with 18" wide drawer units, to be mounted on next generation shelving in vehicle bay. By lifting the drawer unit above the shelf surface.

**NOTE: * - XX = WIDTH, # = NUMBER OF SHELVES
(EXAMPLE - ASFK2T1448G4)**

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
ADUK1418A2T	DRAWER UNIT,14X18,A,2,T
ADUK1418A3C	DRAWER UNIT,14X18,A,3,C
ADUK1418A4S	DRAWER UNIT,14X18,A,4,S
ADUK1618A2T	DRAWER UNIT,16X18,A,2,T
ADUK1618A3C	DRAWER UNIT,16X18,A,3,C
ADUK1618A4S	DRAWER UNIT,16X18,A,4,S
*ASFK2T14XXG#	NEXT GENERATION SHELVING KIT

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.