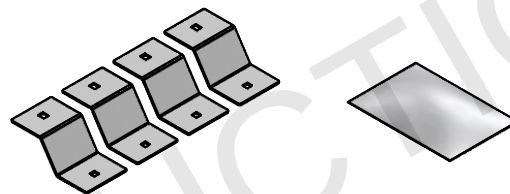


**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

END CAP MOUNTING BRACKET KIT, 4

PRODUCT WEIGHT**2.14 LBS*****VEHICLE*****MULTIPLE*****CAPACITY*****N/A*****COLOR*****ASC GRAY*****CATALOG NUMBER*****AECMBK4**

PRODUCT FEATURES

When the benefits of the Center Support Kit are not needed or wanted, a 3rd end panel on the Driver Side wall of the van is an alternative way to fill the van wall. This kit create's a way to prevent the tabs of the end cap from sliding out of the end panel on the concave side.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



END CAP MOUNTING BRACKET KIT, 4

CATALOG NUMBER AECMBK4

PRODUCT APPLICATION


This kit contains mounting brackets that connect to the end caps to the end panels on the concave side.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT


**ANY ADRIAN NEXT GEN SHELVING END PANELS WHERE 4 SHELVES
ARE REQUIRED WITH A 3RD END PANEL**

CATALOG NUMBER	DESCRIPTION (<i>smart</i>)
AEPK1048G1	END PANEL KIT, 10X48, G, 1
AEPK1063G1	END PANEL KIT, 10X63, G, 1
AEPK1068G1	END PANEL KIT, 10X68, G, 1


INSTR. NUMBER : INSAECMBK PART NUMBER : AECMBK3, AECMBK4, AECMBK5 PART DESC. : END CAP MNT. BRK. KIT	PG: 1	REV: A	AECMBK3			
			ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
			1	BAGAECEMBK3	BAG FOR AECMBK3	1
			2	81758-G	Z BRACKET, GRAY	3

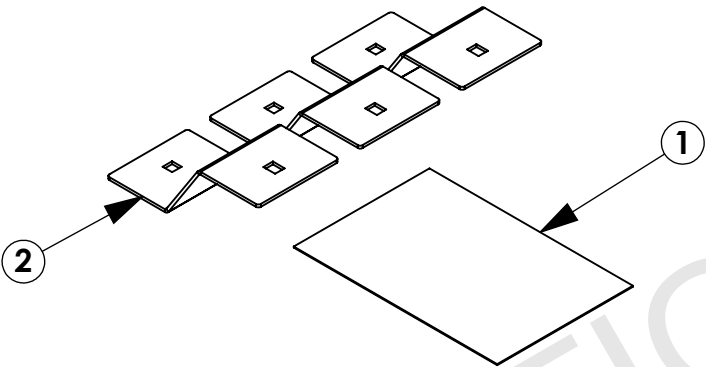

AECMBK4			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAGAECEMBK4	BAG FOR AECMBK4	1
2	81758-G	Z BRACKET, GRAY	4

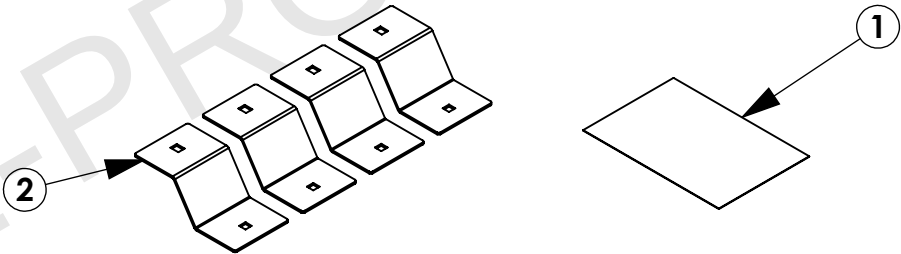

AECMBK5			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAGAECEMBK5	BAG FOR AECMBK5	1
2	81758-G	Z BRACKET, GRAY	5

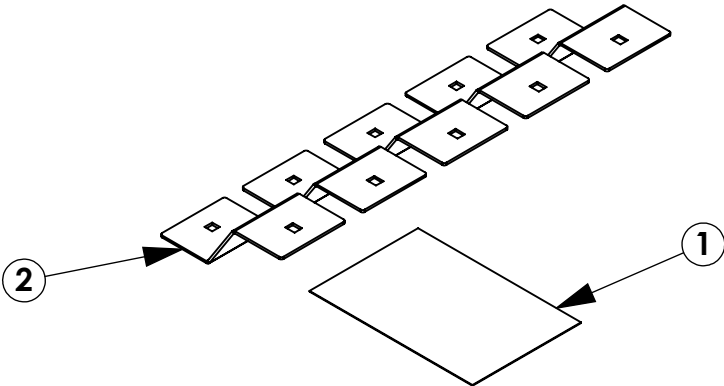

TOOLS NEEDED:
- 7/16 WRENCH

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

BEST PRACTICE: ORGANIZE ALL FASTENERS & VERIFY THAT ALL ARE ACCOUNTED FOR


PAGE:

3**FASTENERS USED****BAG REFERENCE: SEE BOM'S****BAGAECSMBK3**


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0924	BOLT,CRG 1/4-20X.62 FH ZP	6
2	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	6

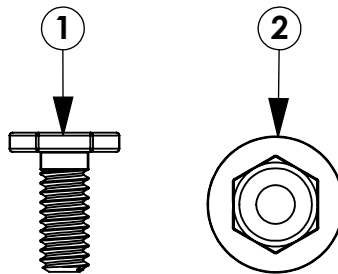**BAGAECSMBK4**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0924	BOLT,CRG 1/4-20X.62 FH ZP	8
2	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	8

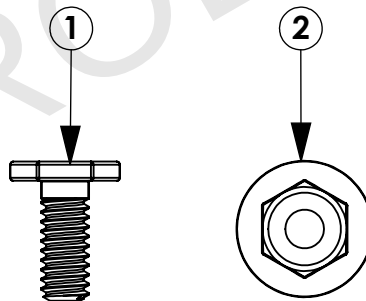**BAGAECSMBK5**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0924	BOLT,CRG 1/4-20X.62 FH ZP	10
2	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	10

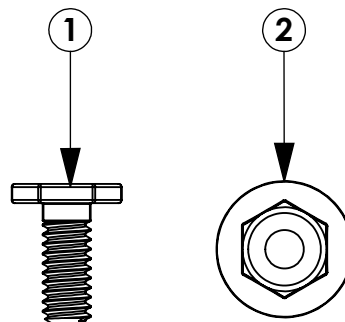

INTENTIONALLY LEFT BLANK

STEP 1 - ADDING TO 81758-G TO SHELVING UNIT

Step 1.1
DETERMINE
SHELVING
HEIGHT
PLACEMENT,
NEXT TO
EXISTING
SHELVING UNIT,


PLACE 81758-G
NEXT TO SLOT
ON END
PANELS, HAND
TIGHTEN
(3)FAS0924 &
(3)FAS0055

7/16 WRENCH

FULLY TIGHTEN
AFTER STEP 2.1




MOUNT 81758-G TOWARD REAR OF CARGO AREA
(SHOWN PASSENGE SIDE VIEW)

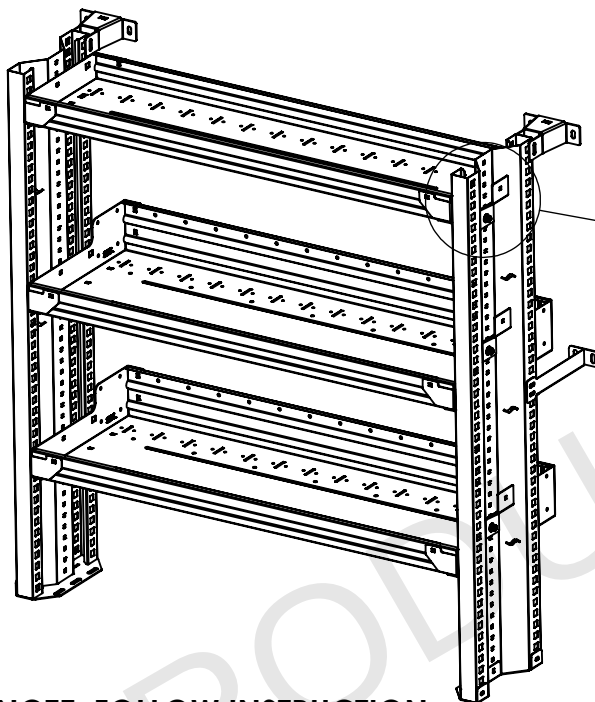

Step 1.1

NOTE: FOLLOW INSTRUCTION
INS-ASHEVLING TO BUILD SHELVING
(AS-2T1448PMLA IS EXAMPLE)

Step 1.1

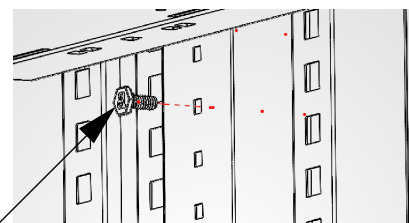

VIEW FROM BEHIND
END PANEL


STEP 2 - ADDING SHELVING COMPONENTS TO SHELVING UNIT

Step 2.1
ALIGN AEC2T143
HOLES TO
81758-G AND
MOUNT TO END
PANELS AS
DESCRIBED IN
INS-ASHEVLING.


FULLY TIGHTEN
(3)FAS0924 &
(3)FAS0055

7/16 WRENCH

FULLY TIGHTEN
ALL FASTENERS

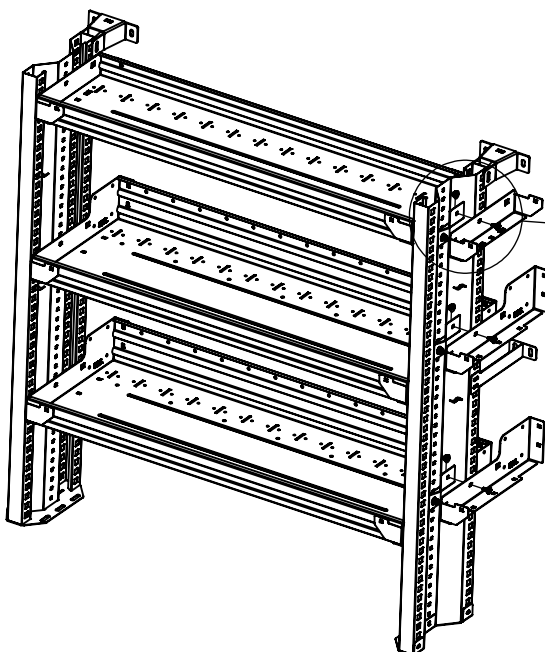

Step 2.1

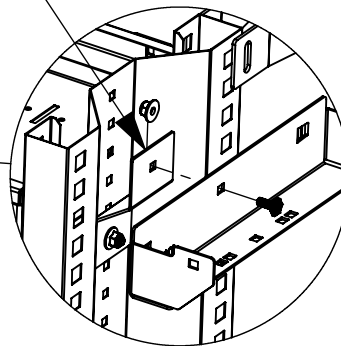

STEP 2 - ADDING SHELVING COMPONENTS TO SHELVING UNIT

Step 2.1
FOLLOW
INSTRUCTION
INS-ASHELVING
TO INSTALL
AEPK1048G1,
AEPMBKPM1A, &
ASFK2T1436G3
AND FINISH
ASSEMBLY.

FULLY TIGHTEN
FASTENERS

