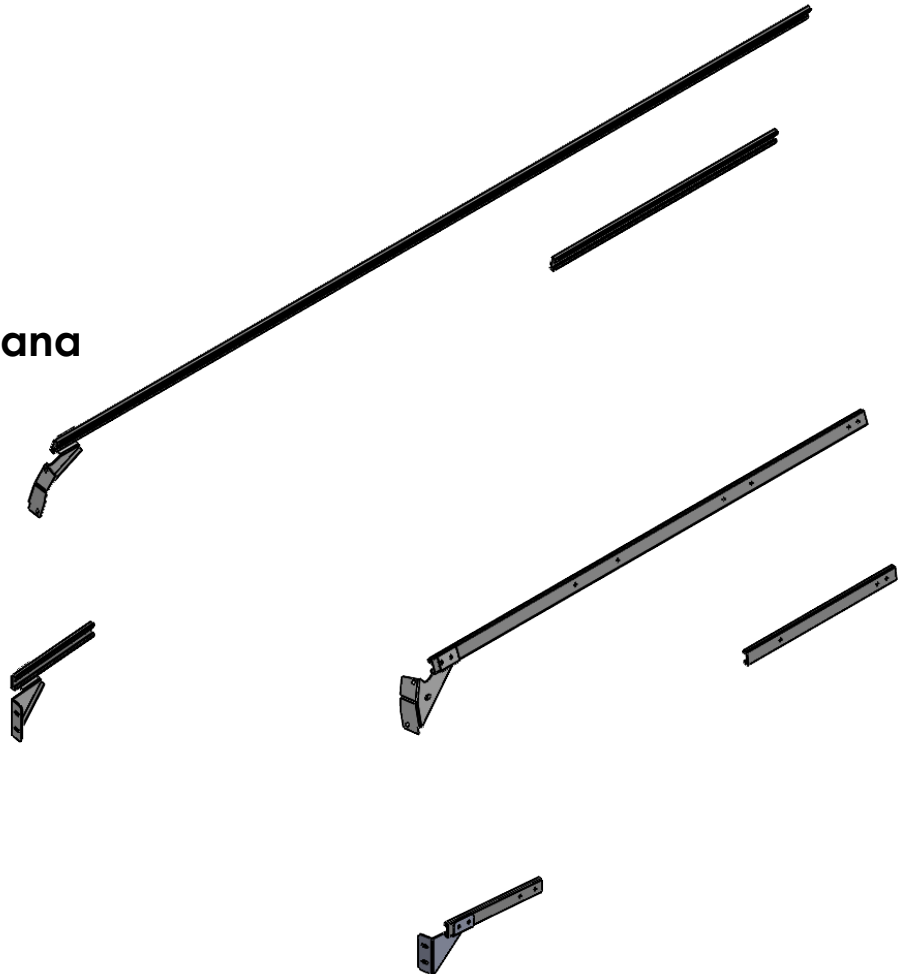


**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

RAIL KIT, GM 155

PRODUCT WEIGHT**21.77 LBS*****VEHICLE*****GM Express / GMC Savana
155" wheel base*****CAPACITY*****N/A*****COLOR*****GRAY*****CATALOG NUMBER*****ARKGM155*****PRODUCT FEATURES***

This product is design for installation in the GM Express / GMC Savana 155" wheel base. It is optimized for use with the next generation shelving. The rail kist includes brackets that span the window cavities to support the AD mounting rail.

This unit will arrive in two boxes, one for the driver side, and one for the passenger side.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



RAIL KIT, GM 155

CATALOG NUMBER **ARKGM155**

PRODUCT APPLICATION

This product is design for installation in the GM Express / GMC Savana 155" wheel base. Optimized for use with the next generation shelving.

All next generation shelving kits for express / savana vans. See online fitment guide for full list of shelving units.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION (smart)</i>
AEPMBKGM	END PANEL MNT BKT KIT, GM, A

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

RAIL KIT, GM 155, DS

PRODUCT WEIGHT

12.80 LBS

VEHICLE


**GM Express / GMC Savana
155" wheel base**

CAPACITY

N/A

COLOR

GRAY

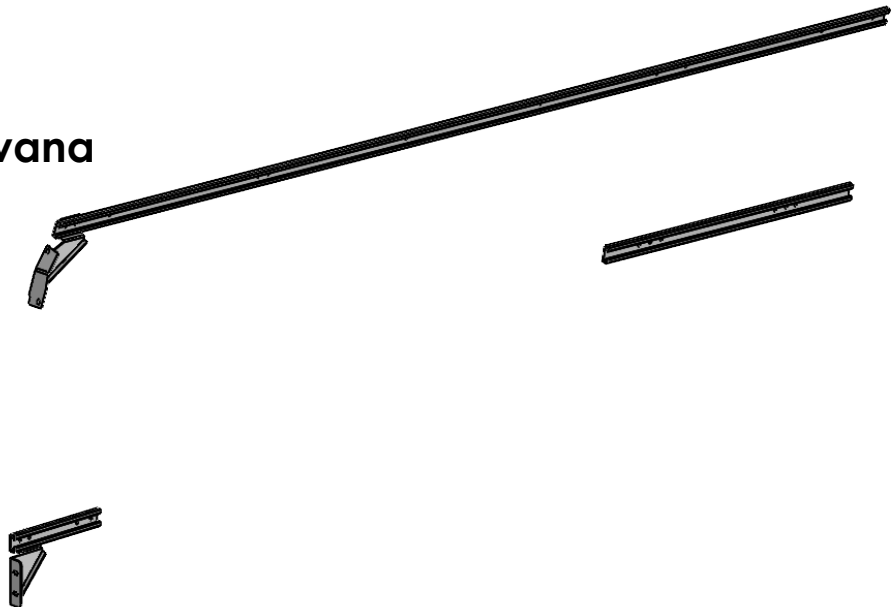

CATALOG NUMBER

ARKGM155DS

PRODUCT FEATURES

This product is design for installation in the GM Express / GMC Savana 155" wheel base. It is optimized for use with the next generation shelving. The rail kit includes brackets that span the window cavities to support the AD mounting rail.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



RAIL KIT, GM 155, DS

CATALOG NUMBER ARKGM155DS

PRODUCT APPLICATION

This product is design for installation in the GM Express / GMC Savana 155" wheel base. Optimized for use with the Next Generation Shelving.


All next generation shelving kits for express / savana vans. See online fitment guide for full list of shelving units.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT


CATALOG NUMBER	DESCRIPTION (smart)
TDK	TIE DOWN SYSTEM (1)

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

INSTR. NUMBER :INSARKGM155		PG: 1	REV: B	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART . ARKGM155DS NUMBER • ARKGM155PS PART • RAIL KIT,GM 155,DS DESC. • RAIL KIT,GM 155,PS				1	36501P	RAIL,122",STDSD,AD SERIES	1
				2	75769	RAIL AD,GM135 PS BELT	1
				3	75770	RAIL AD,GM135 PS BELT, REAR	1
				4	75771-G	RAIL D-PILLR BKT,GM,DS, GRAY	1
				5	36496-0	END CAP, RAIL EXTR #2	6
				6	75765-G	RAIL D-PILLR BKT,GM,DS,G	1

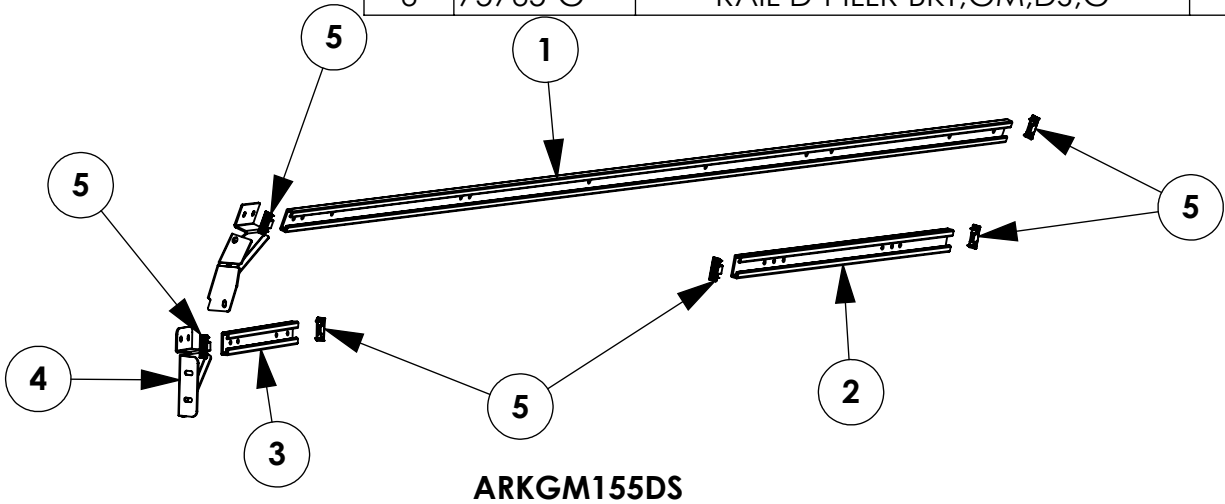

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	36502P	RAIL,70",CRBSD,AD SERIES	1
2	75773	RAIL AD,GM135 PS BELT	1
3	75770	RAIL AD,GM135 PS BELT, REAR	1
4	75764-G	RAIL D-PILLR BKT,GM,DS,G	1
5	75772-G	RAIL D-PILLR BKT,GM,PS,G	1
6	75768-G	RAIL FRONT BRKT,GM,PS,G	2
7	36496-0	END CAP, RAIL EXTR #2	6

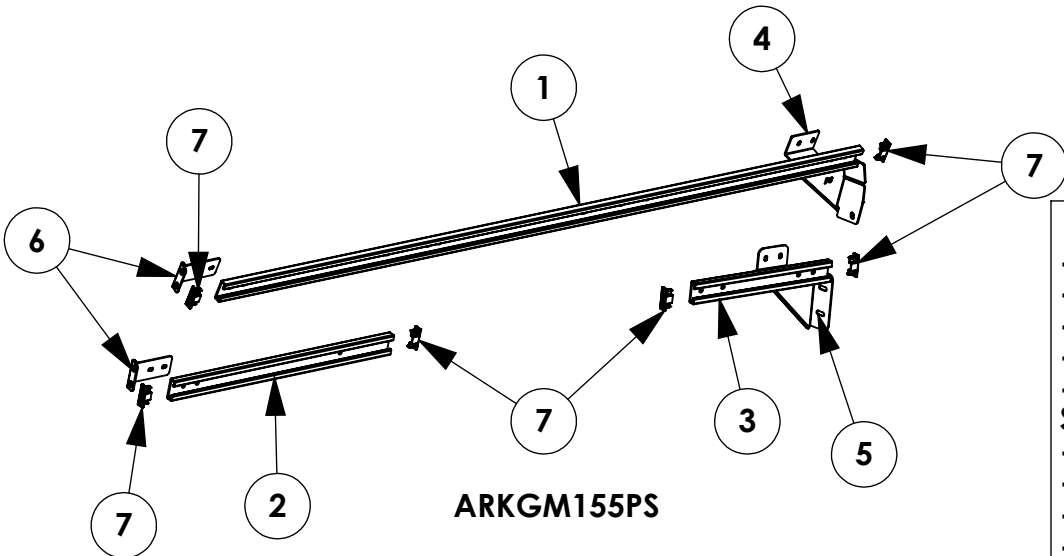

- TOOLS NEEDED:**
- 1/2 SOCKET
 - T-55 TORQUE BIT
 - 7/16 WRENCH
 - 3/16 ALLEN
 - PHILIP HEAD SCREWDRIVER
 - PLUSNUT TOOL
 - 1/2 DRILL STEP BIT
 - 1/2 DRILL STOP
 - DRILL

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED


BAG REFERENCE: BAGARKGM135DS

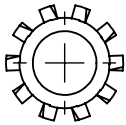


FAS0085
WASHER,LCK EXT,
5/16, ZP
QTY: 8




FAS0708
SCREW,BHCS,
5/16-18X1.25, ZN
QTY: 8

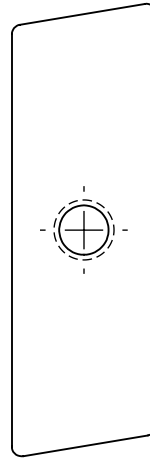


36503-0
RETAINER BAR,
5/16-18X2-3/8
QTY: 8

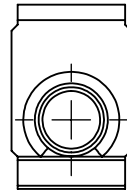


FAS0759
U-NUT,
5/16-18, ZP
QTY: 1




FAS0062
SCREW,THP,
1/4-20X.75, G5ZP
QTY: 4

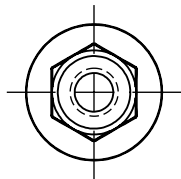


FAS0055
NUT,HEX NLK FLG,
1/4-20, ZP
QTY: 4

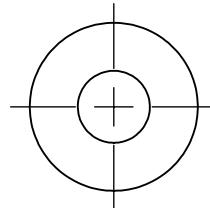


FAS0086
WASHER,FLAT USS,
5/16, ZP
QTY: 3




FAS0098
WASHER,LOCK,SPLIT,
5/16, ZP
QTY: 3



FAS0093
SCREW,HEX HD,
5/16-18X1.25
QTY: 3

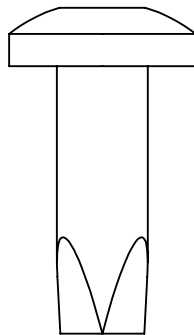

FAS0413
SCREW,PHT,
M12X36, ZP
QTY: 1

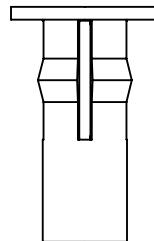


FAS0091
PLUSNUT, 5/16
QTY: 2


INTENTIONALLY LEFT BLANK

FASTENERS USED


BAG REFERENCE: BAGARKGM155PS

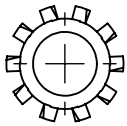


FAS0085
WASHER,LCK EXT,
5/16, ZP
QTY: 4




FAS0708
SCREW,BHCS,
5/16-18X1.25, ZN
QTY: 4




FAS0062
SCREW,THP,
1/4-20X.75, G5ZP
QTY: 8

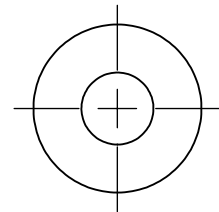


FAS0086
WASHER,FLAT USS,
5/16, ZP
QTY: 7




FAS0098
WASHER,LOCK,SPLIT,
5/16, ZP
QTY: 7




FAS0093
SCREW,HEX HD,
5/16-18X1.25
QTY: 7

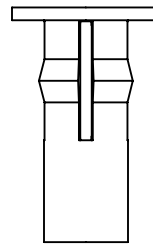


FAS0091
PLUSNUT, 5/16
QTY: 6

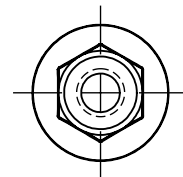


FAS0055
NUT,HEX NLK FLG,
1/4-20, ZP
QTY: 8

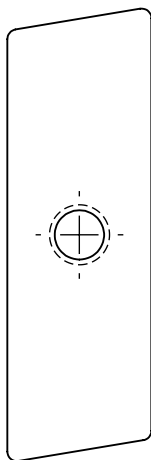

36503-0
RETAINER BAR,
5/16-18X2-3/8
QTY: 4

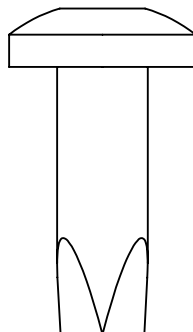

FAS0413
SCREW,PHT,
M12X36, ZP
QTY: 1

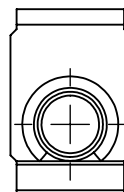


FAS0759
U-NUT,
5/16-18, ZP
QTY: 1

INTENTIONALLY LEFT BLANK


Step 1.1
FULLY TIGHTEN
FAS0062 &
FAS0055 TO
SECURE BRACKET
75771-G TO RAIL
75770

PHILPS HEAD
SCREWDRIVER
7/16 WRENCH

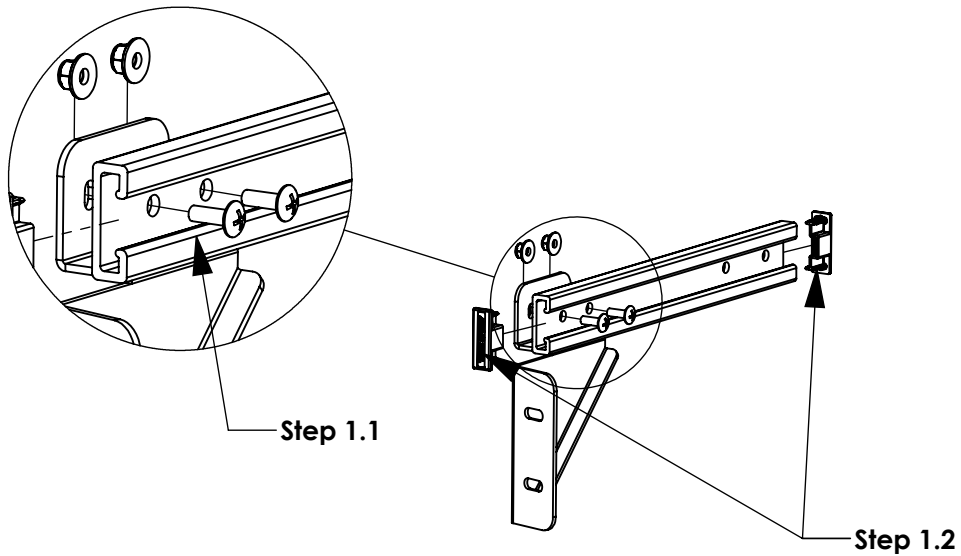

Step 1.2
PLACE 36496-0
AT ENDS OF RAIL

Step 2.1
PLACE BRACKET
75765-G
AGAINST D-
PILLAR, LOCATE
OEM HOLE IN
UPPER SECTION
SHOWN. CENTER
HOLE ON
BRACKET.

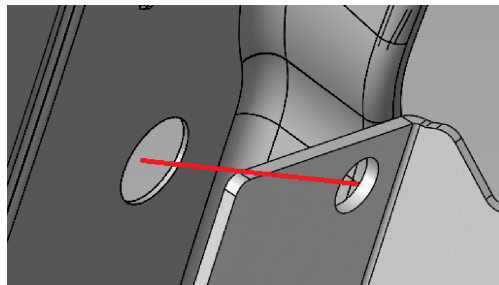


Step 2.2
MARK CENTER OF
SLOT ON
D-PILLAR TO BE
DRILLED


MARKER
1/2 DRILL STEP BIT
1/2 DRILL STOP
DRILL

Step 2.1

Step 2.2

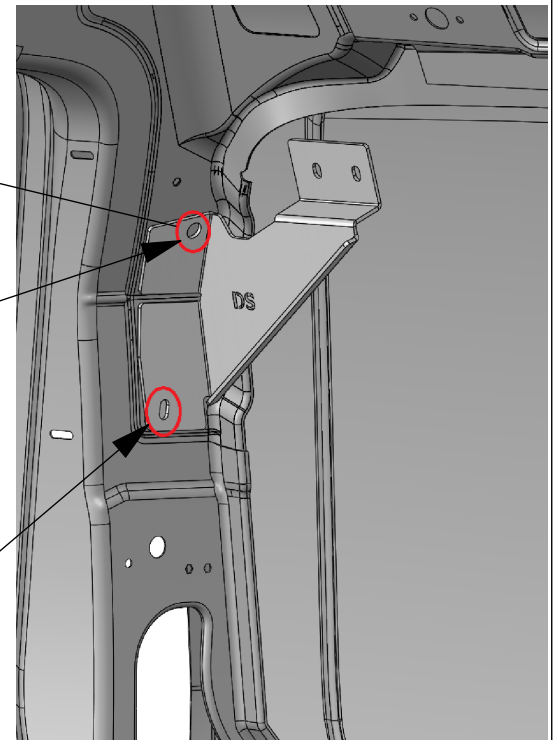

Step 2.3
PLACE
ASSEMBLED RAIL
AND BRACKET
FROM Step 1.1
AND PLACE IT
10 7/8" FROM
BEAR FLOOR. KEEP
RAIL PARALLEL
WITH FLOOR.

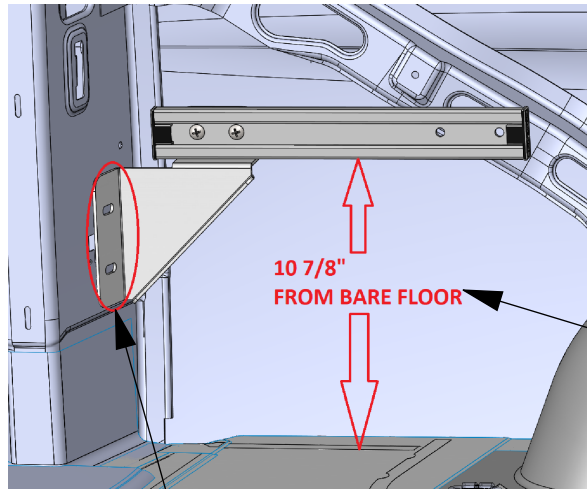


Step 2.3

Step 2.4
PLACE BRACKET
AGAINST D-PILLAR
AND MARK
CENTER OF SLOTS
ON BRACKET TO
BE DRILLED TO 1/2
DIA HOLES


Step 2.4

MARKER
1/2 DRILL STEP BIT
1/2 DRILL STOP
DRILL

Step 3.1
PLACE FAS0758
IN CUTOUT AND
ALINE WITH HOLE
THAT WAS
DRILLED

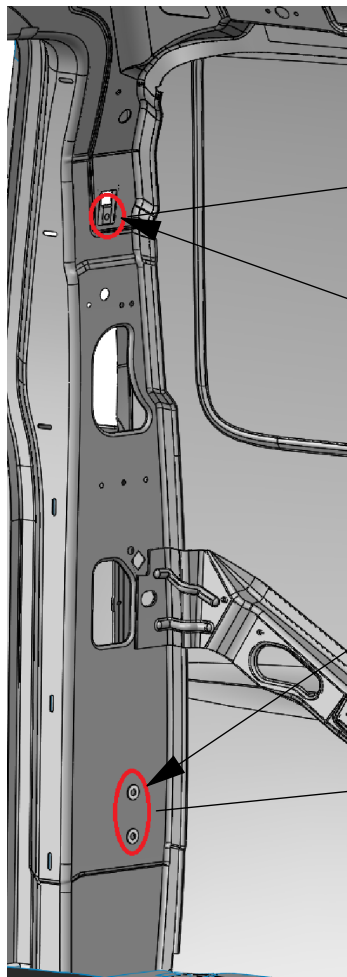


Step 3.1

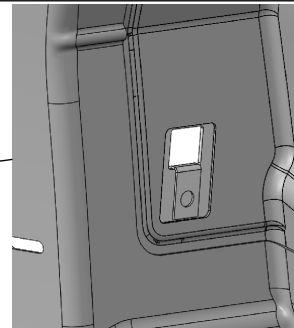

Step 3.2
PLACE FAS0091
INTO HOLES
THAT WERE
DRILL, USE
PLUSNUT TOOL
TO SECURE TO
D-PILLAR

Step 3.2

PLUSNUT TOOL

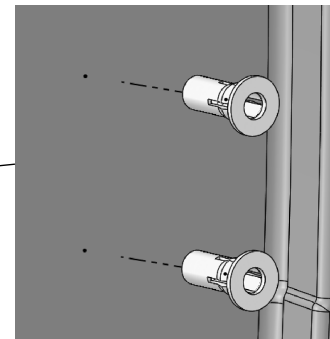

ARKGM155DS TO BE USED IN GM 135WB CARGO VAN


Step 4.1
PLACE 36496-0
AT ENDS OF
RAILS

Step 4.2
FULLY TIGHTEN
FAS0062 &
FAS0055 TO
BRACKET 75765-G
AND 36501P RAIL

PHILIPS HEAD
SCREWDRIVER
7/16 WRENCH


Step 4.3
PREASSEMBLY
FAS0708 &
FAS0085 IN
RAILS ALONG
WITH 36503-0,
KEEP FASTENERS
LOOSE TILL
FINAL ASSEMBLY

3/16 ALLEN

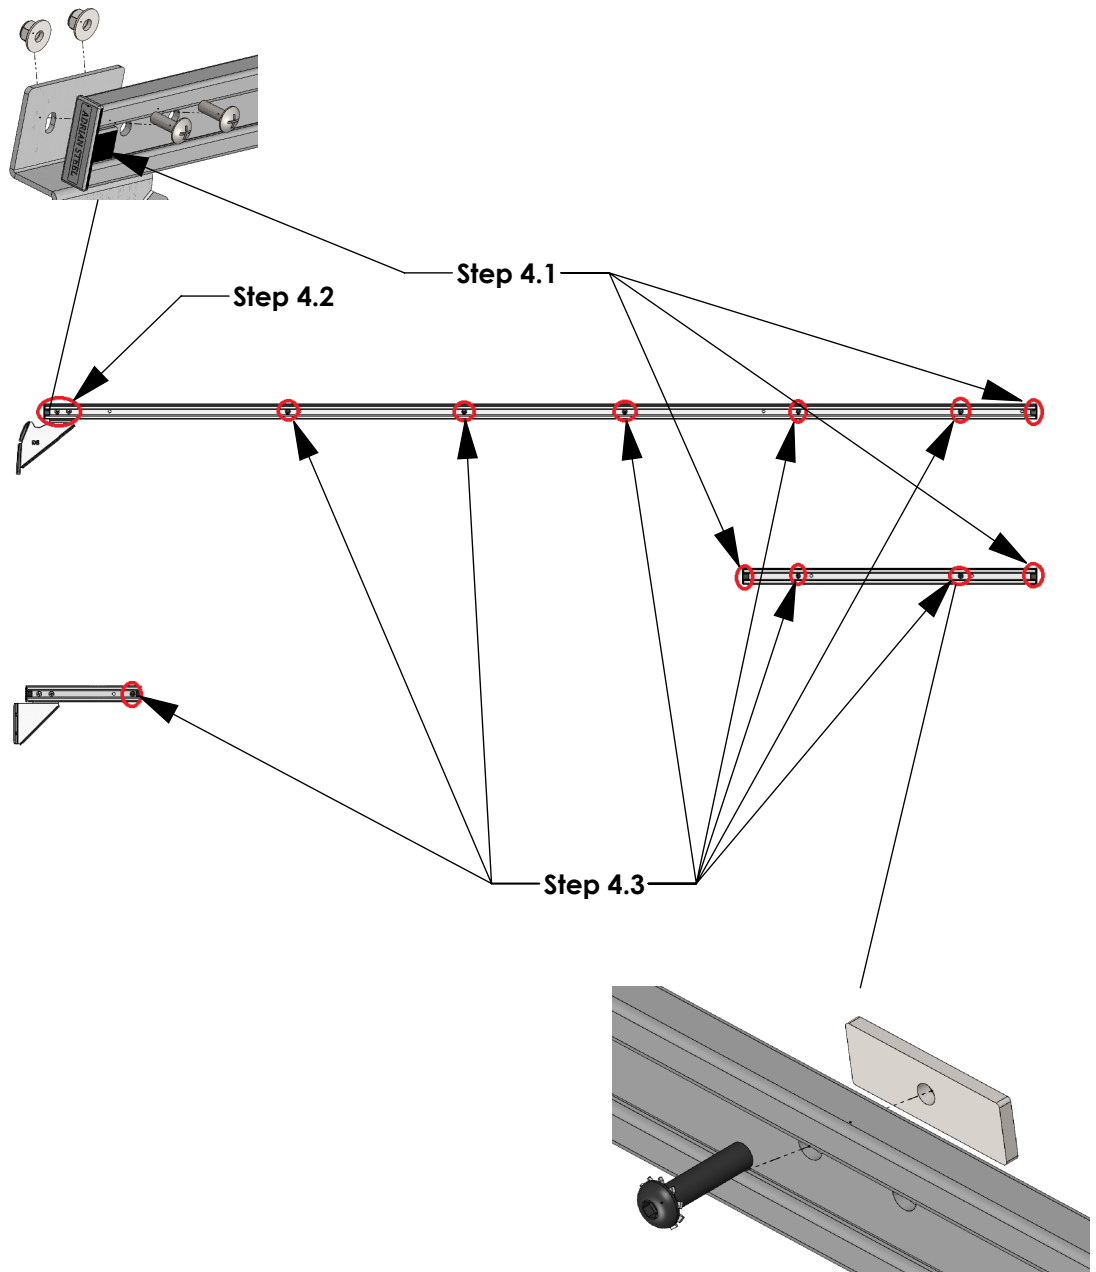

Step 5.1
PLACE RAILS
AGAINST THE
WALL AT THE
HEIGHT LISTED,
FULLY TIGHTEN
WHEN IN PLACE.
KEEP PARALLEL
WITH FLOOR



44 7/8" TOP RAIL
24 7/8" MIDDLE
RAIL
10 7/8" LOWER
RAIL

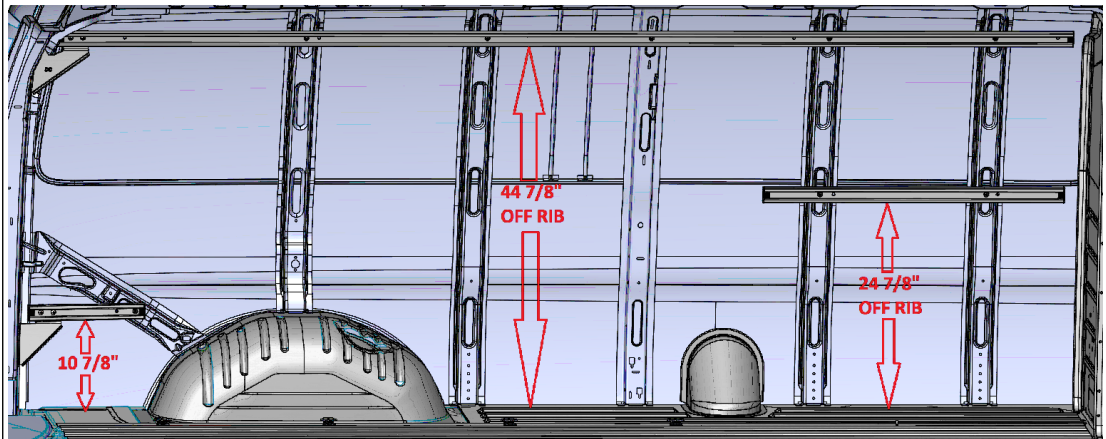

Step 5.2
FULLY TIGHTEN
FAS0413 INTO
HOLES

T-55 TORQUE BIT
DRILL


Step 5.2

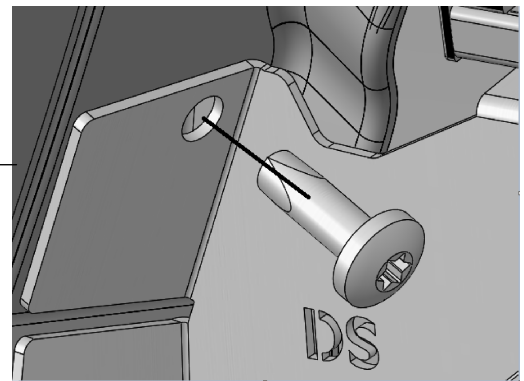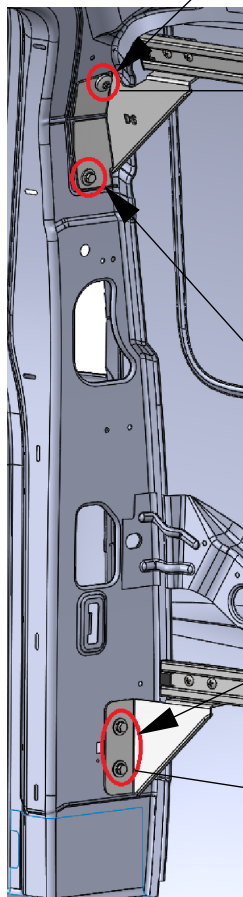

Step 5.3
FULLY TIGHTEN
FAS0093,
FAS0098, &
FAS0086 TO
BRACKETS ON
D-PILLAR


1/2 SOCKET
DRILL

Step 5.3

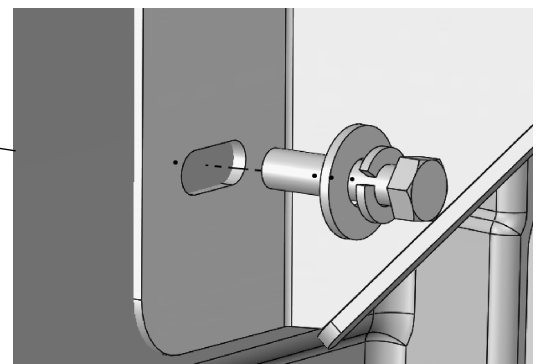

Step 1.1
FULLY TIGHTEN
FAS0062 &
FAS0055 TO
SECURE
BRACKET 75771
TO RAIL 75770

PHILIPS HEAD
SCREWDRIVER
7/16 WRENCH


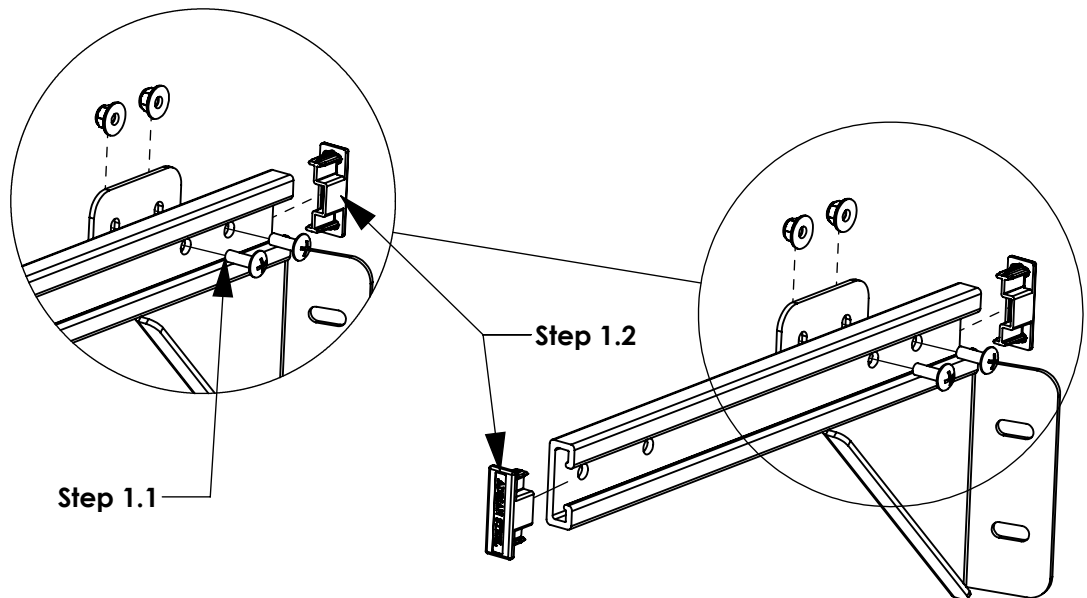


Step 1.2
PLACE 36496-0
AT ENDS OF RAIL

Step 2.1
PLACE BRACKET
75764-G
AGAINST D-
PILLAR, LOCATE
OEM HOLE IN
UPPER SECTION
SHOWN. CENTER
HOLE ON
BRACKET.

Step 2.2
MARK CENTER OF
SLOT ON
D-PILLAR TO BE
DRILLED

MARKER
1/2 DRILL STEP BIT
1/2 DRILL STOP
DRILL

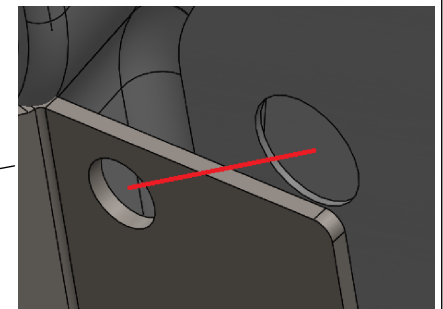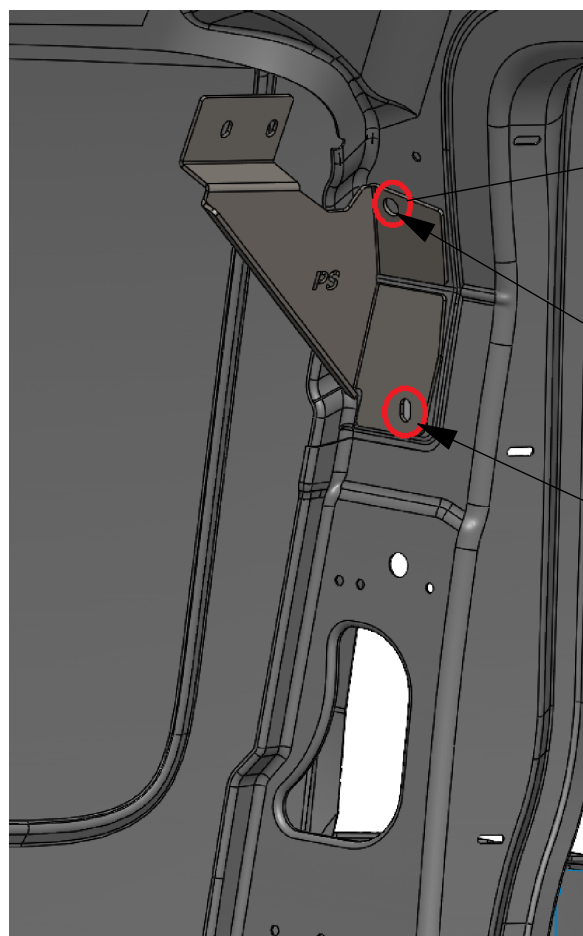

Step 2.1

Step 2.2

**YOU WILL NOW NEED TO RELOCATE THE JACK TO
INSTALL THE REST OF THIS KIT**

ORIGINAL LOCATION




NEW LOCATION



**ATTACH JACK TO
PARTITION
BEHIND
PASSENGER SEAT
USING THE
FASTENERS
INCLUDED IN THE
BAG
37275-0
BAG37274-0**

37275-0

**FASTENERS
FROM
BAG37274-0**

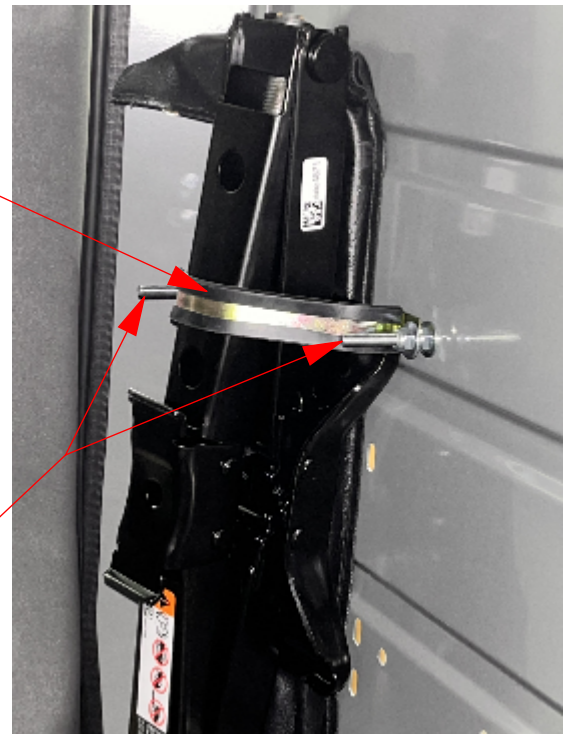

Step 2.3
PLACE
ASSEMBLED RAIL
AND BRACKET
FROM Step 1.1
AND PLACE IT
11 1/4" FROM RIB.
KEEP RAIL
PARALLEL WITH
FLOOR.



Step 2.4
PLACE BRACKET
AGAINST D-PILLAR
AND MARK
CENTER OF SLOTS
ON BRACKET TO
BE DRILLED TO 1/2
DIA HOLES

MARKER
1/2 DRILL STEP BIT
1/2 DRILL STOP
DRILL

Step 3.1
PLACE FAS0758
IN CUTOUT AND
ALINE WITH HOLE
THAT WAS
DRILLED

Step 3.2
PLACE FAS0091
INTO HOLES
THAT WERE
DRILL, USE
PLUSNUT TOOL
TO SECURE TO
D-PILLAR

PLUSNUT TOOL

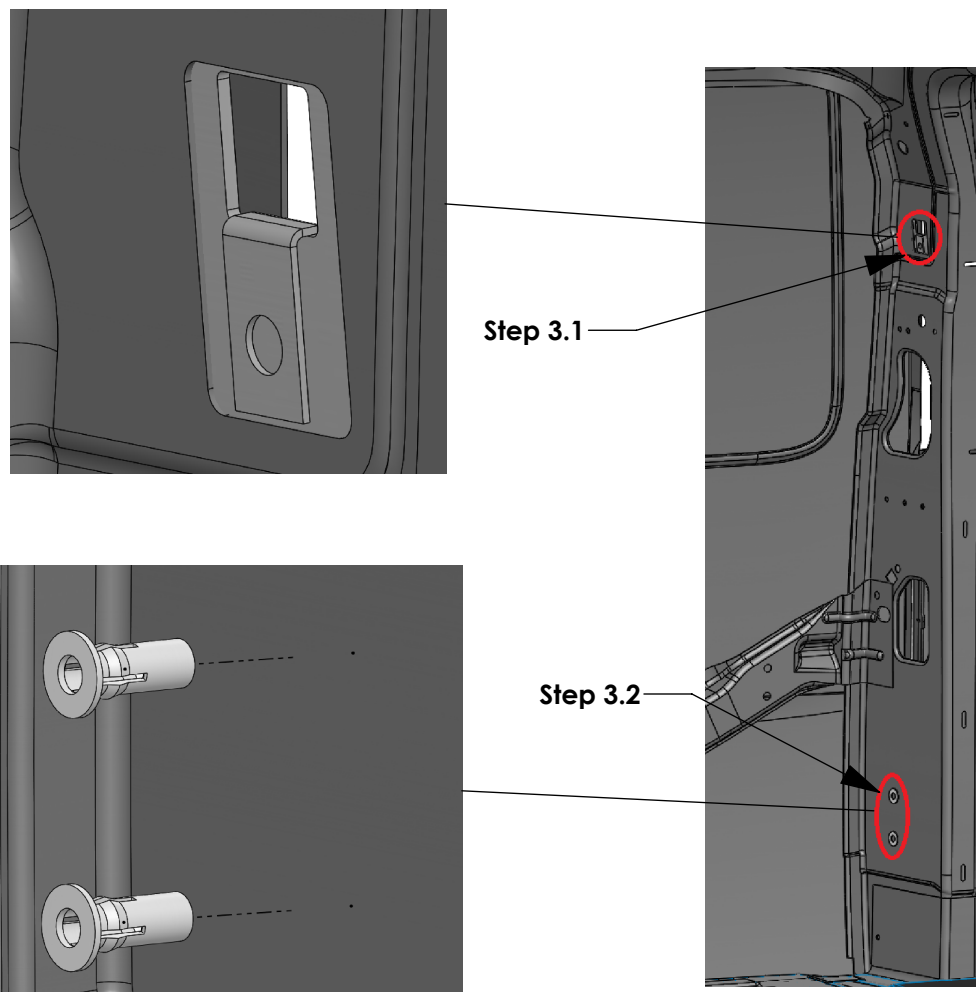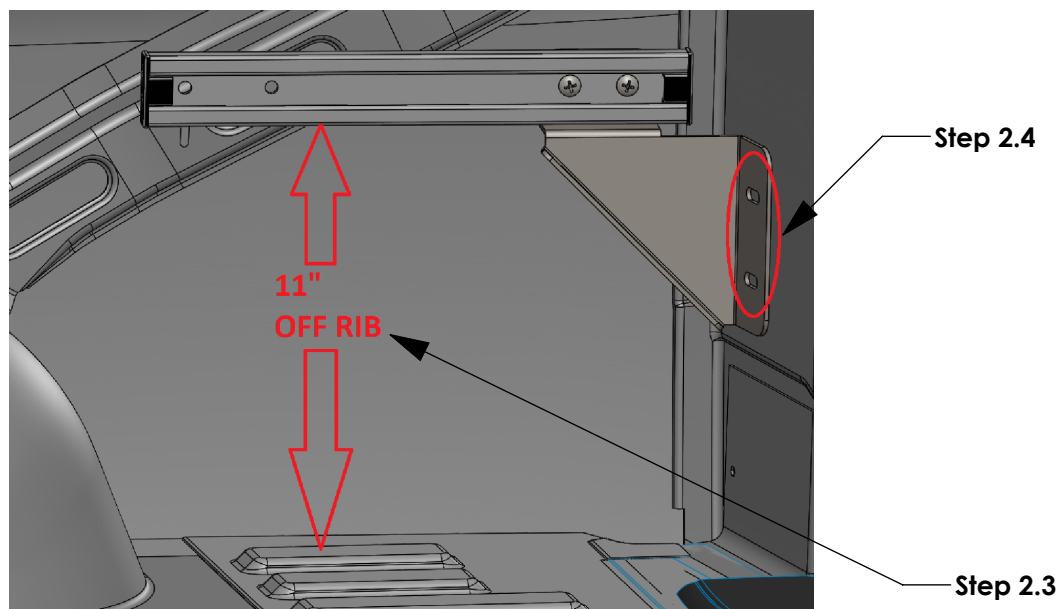

ARKGM155DS TO BE USED IN GM 135WB CARGO VAN

Step 4.1
PLACE 36496-0
AT ENDS OF
RAILS

Step 4.2
FULLY TIGHTEN
FAS0062 &
FAS0055 TO
BRACKET 75764-G
AND 36498P RAIL


PHILPS HEAD
SCREWDRIVER
7/16 WRENCH

Step 4.3
PREASSEMBLY
FAS0708 &
FAS0085 IN
RAILS ALONG
WITH 36503-0,
KEEP FASTENERS
LOOSE TILL
FINAL ASSEMBLY

3/16 ALLEN


Step 4.2
FULLY TIGHTEN
FAS0062 &
FAS0055 TO
BRACKET 75768-G
AND 36498P &
75773 RAILS

PHILPS HEAD
SCREWDRIVER
7/16 WRENCH

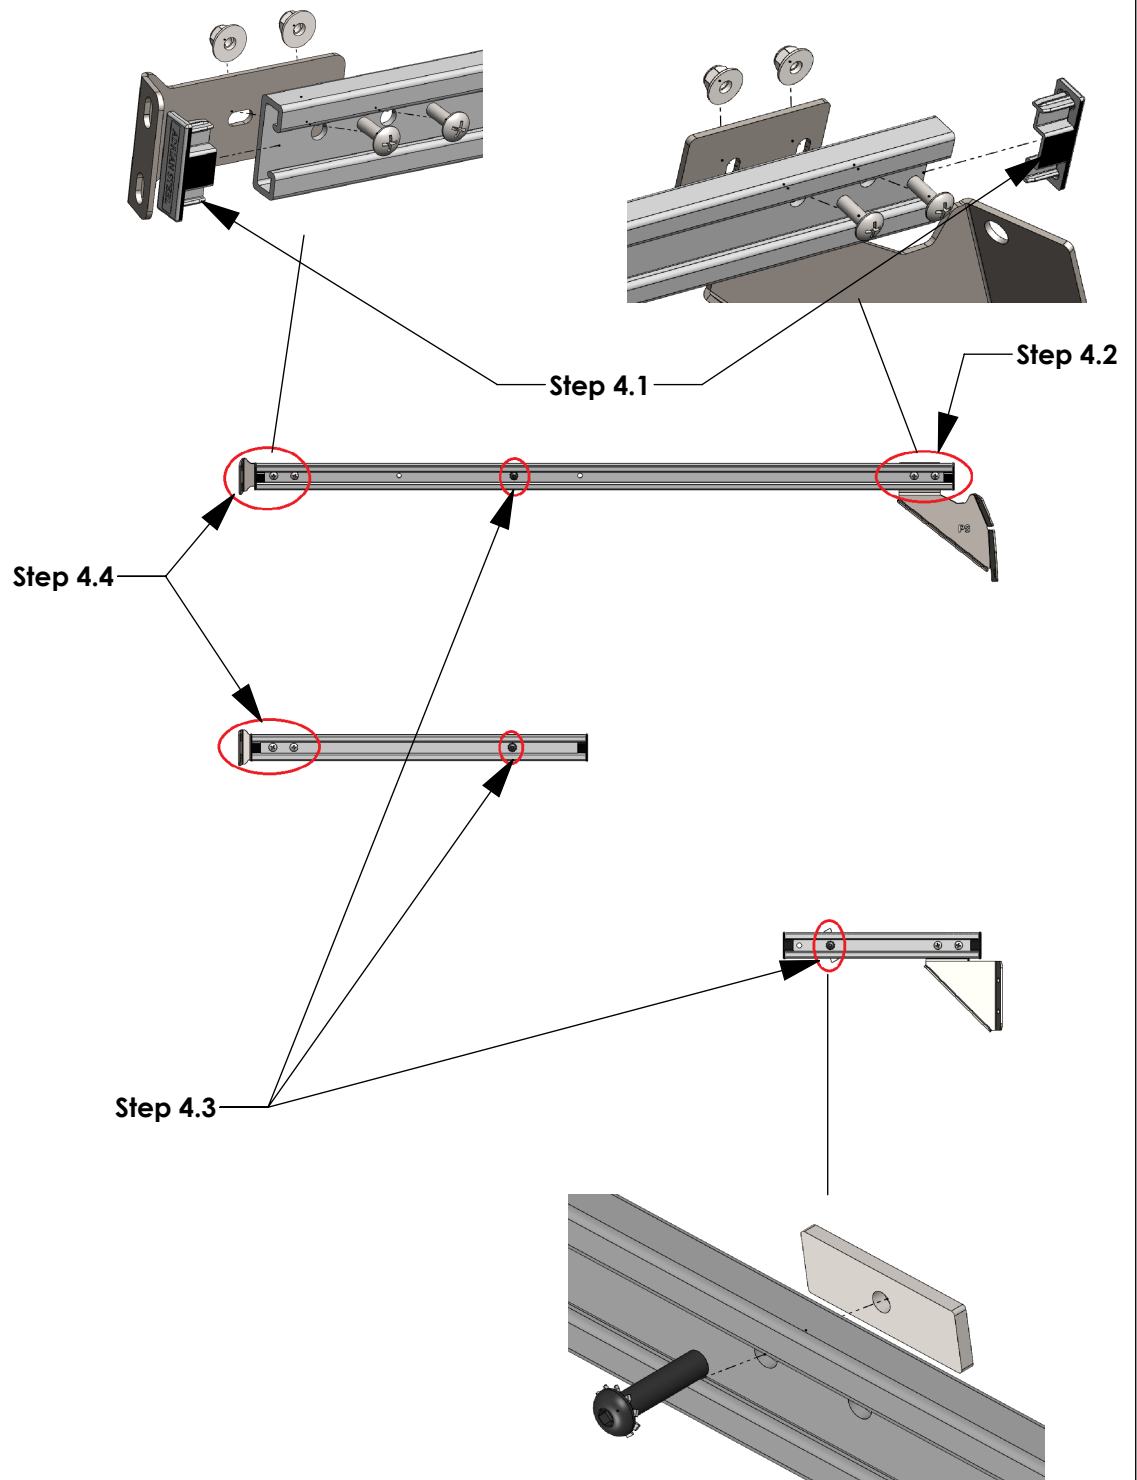

Step 5.1
PLACE RAILS
AGAINST THE
WALL AT THE
HEIGHT LISTED,
FULLY TIGHTEN
WHEN IN PLACE.
KEEP PARALLEL
WITH FLOOR

45 1/8" TOP RAIL
25 9/16" MIDDLE
RAIL
11" LOWER RAIL

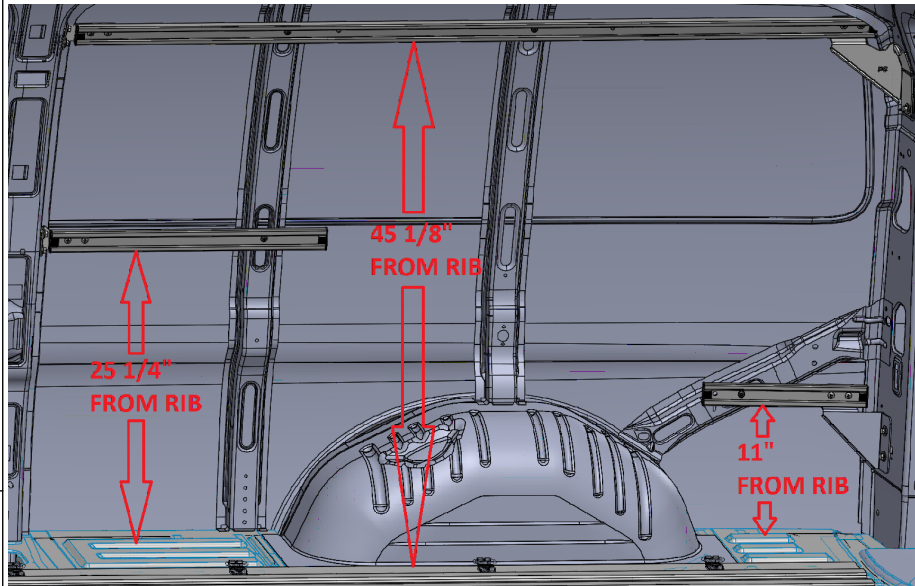


Step 5.2
FULLY TIGHTEN
FAS0413 INTO
HOLES

T-55 TORQUE BIT
DRILL




Step 5.2

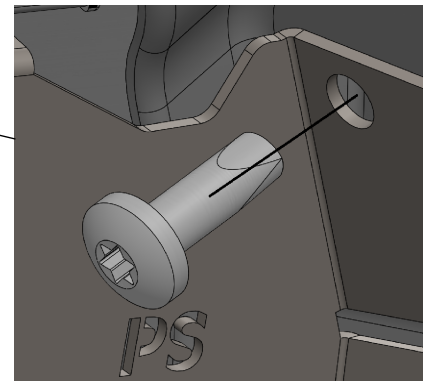

Step 5.3
FULLY TIGHTEN
FAS0093,
FAS0098, &
FAS0086 TO
BRACKETS ON
D-PILLAR

1/2 SOCKET
DRILL

Step 5.3

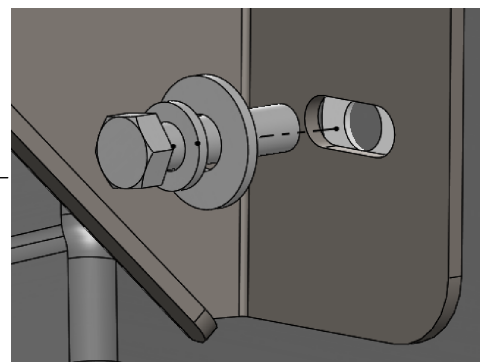



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

RAIL KIT, GM 155, PS

PRODUCT WEIGHT

8.97 LBS

VEHICLE

**GM Express / GMC Savana
155" wheel base**

CAPACITY




N/A

COLOR

GRAY

CATALOG NUMBER

ARKGM155PS

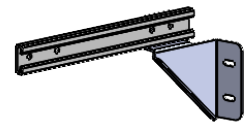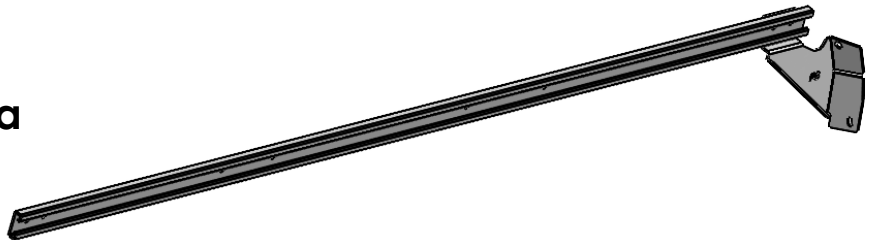

PRODUCT FEATURES

This product is design for installation in the GM Express / GMC Savana 155" wheel base. It is optimized for use with the next generation shelving. The rail kit includes brackets that span the window cavities to support the AD mounting rail.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



RAIL KIT, GM 155, PS

CATALOG NUMBER **ARKGM155PS**

PRODUCT APPLICATION

This product is design for installation in the GM Express / GMC Savana 155" wheel base. Optimized for use with the next generation shelving.

All next generation shelving kits for express / savana vans. See online fitment guide for full list of shelving units.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION (smart)</i>
TDK	TIE DOWN SYSTEM (1)

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.