



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

END PANEL MOUNTING BRACKET KIT, FT, 1, A

PRODUCT WEIGHT

2.50 LBS

VEHICLE

FORD TRANSIT

CAPACITY




N/A

COLOR

ASC BLUE

CATALOG NUMBER

AEPMBKFT1A

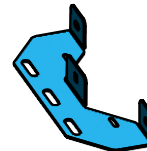

PRODUCT FEATURES

Use this kit to mount Next-Gen Shelving to any Ford Transit. The brackets integrate with the end panels at the floor, the belt line, and the upper mounting rail.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



END PANEL MOUNTING BRACKET KIT, FT, 1, A

CATALOG NUMBER AEPMBKFT1A

PRODUCT APPLICATION

This kit contains mounting brackets that connect to the end panels to the AD rails and the vehicle belt line. AS well as securing the end panels to the floor.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
AEPK10481	END PANEL KIT, 10X48, G
AEPK10631	END PANEL KIT, 10X63, G
AEPK10681	END PANEL KIT, 10X68, G
ARKFTL130DS	RAIL KIT,FD TR LR 130,DS
ARKFTL130PS	RAIL KIT,FD TR LR 130,PS
ARKFT130	RAIL KIT,FD TR LR 130
ARKFTL148DS	RAIL KIT,FD TR LR 148,DS
ARKFTL148PS	RAIL KIT,FD TR LR 148,PS
ARKFTL148	RAIL KIT,FD TR LR 148
ARKFTM130DS	RAIL KIT,FD TR MR 130,DS
ARKFTM130PS	RAIL KIT,FD TR MR 130,PS
ARKFTM130	RAIL KIT,FD TR MR 130
ARKFTM148DS	RAIL KIT,FD TR MR 148,DS
ARKFTM148PS	RAIL KIT,FD TR MR 148,PS
ARKFTM148	RAIL KIT,FD TR MR 148

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.



END PANEL MOUNTING BRACKET KIT, FT, 1, A

CATALOG NUMBER AEPMBKFT1A

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
ARKFTH148XDS	RAIL KIT,FD TR HR 148X,DS
ARKFTH148XPS	RAIL KIT,FD TR HR 148X,PS
ARKFTH148X	RAIL KIT,FD TR HR 148X
ASCH-CH48	CASE HOLDER TOWER, 48
ASCH-48AO	CASE HOLDER TOWER, 48, ADD ON
ASCH48FTLA	CASE HOLDER TOWER, 48, FTL, A
ASCH-48FTLAO	CASE HOLDER TOWER, 48, FTL, ADD ON
ASCH-63	CASE HOLDER TOWER, 63
ASCH-63AO	CASE HOLDER TOWER, 63, ADD ON
ASCH-63FTMA	CASE HOLDER TOWER, 48, FTM, A
ASCH-63FTMAO	CASE HOLDER TOWER, 48, FTM, ADD ON
ASCH-68	CASE HOLDER TOWER, 68
ASCH-68AO	CASE HOLDER TOWER, 68, ADD ON
AS-CH68FTHA	CH TOWER, 68, FTH, A
AS-CH68FTHAO	CH TOWER, ADD ON, 68, FTH
AECMBK3	END CAP MNT BKT KIT, 3
AECMBK4	END CAP MNT BKT KIT, 4
AECMBK5	END CAP MNT BKT KIT, 5

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

CH TOWER, ADD ON, 48

PRODUCT WEIGHT

62.71 LBS

WIDTH X DEPTH X HEIGHT

25.90" X 17.08" X 47.50"

CAPACITY


**50 LBS PER SHELF MAX
200 LBS PER "TOWER"**

COLOR

GRAY

CATALOG NUMBER

AS-CH48AO

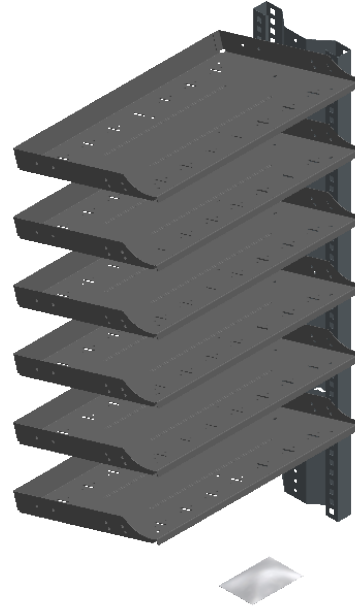

PRODUCT FEATURES

USED IN TRANSIT LOW ROOF AND GM VANS

DESIGNED TO BE ADDED TO THE END OF A NEXT GEN SHELVING UNIT

FOR STORING TOOL CASES LIKE THE MILWAUKEE PACKOUT, HILTI, DEWALT AND MORE

DESIGNED WITH A LOW FRONT LIP FOR EASY HANDLE ACCESS

USES NGS END PANELS AND MOUNTING BRACKETS

SHELVES ARE TO BE MOUNTED ON AN ANGLE WHEN USED FOR STORING CASES

SHELVES CAN BE MOUNTED FLAT, CAN BE MOUNTED 2" INBOARD ALSO.

SHELVES HAVE HOLE PATTERN TO ACCEPT 16" NG DIVIDERS AND BINS

HAS HOLE PATTERN FOR MOUNTING A MILWAUKEE PACKOUT PLATE, CAN BE USED IF SHELF IS MOUNTED UPSIDE DOWN

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



CH TOWER, ADD ON, 48

CATALOG NUMBER AS-CH48AO

PRODUCT APPLICATION

FOR STORING TOOL CASES LIKE THE MILWAUKEE PACKOUT, HILTI, DEWALT, KLEIN, KOBALT, FLEX, RIGID, CRAFTSMAN, BOSCH, MAKITA, RYOBI, HUSKY AND MORE

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

WORKS WITH NEXT GEN SHELVING


CATALOG NUMBER	DESCRIPTION (smart)
BIN616	BIN, 6W X 16D
BIN1216	BIN, 12W X 16D
DIVK161	SHELF DIVIDER KIT, 16D, 1
DIVK164	SHELF DIVIDER KIT, 16D, 4

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.



THIS DOCUMENT LISTS THE PRODUCT STRUCTURE OF THE VARIOUS MODULAR KITS
TO ASSEMBLE YOUR SHELVING UNIT OF THE

ADRIAN SHELVING PRODUCT LINE

TO VIEW INSTRUCTIONS OF HOW TO ASSEMBLE YOUR SHELVING UNIT, PLEASE
REFER TO PART#: INS-ASHELVING

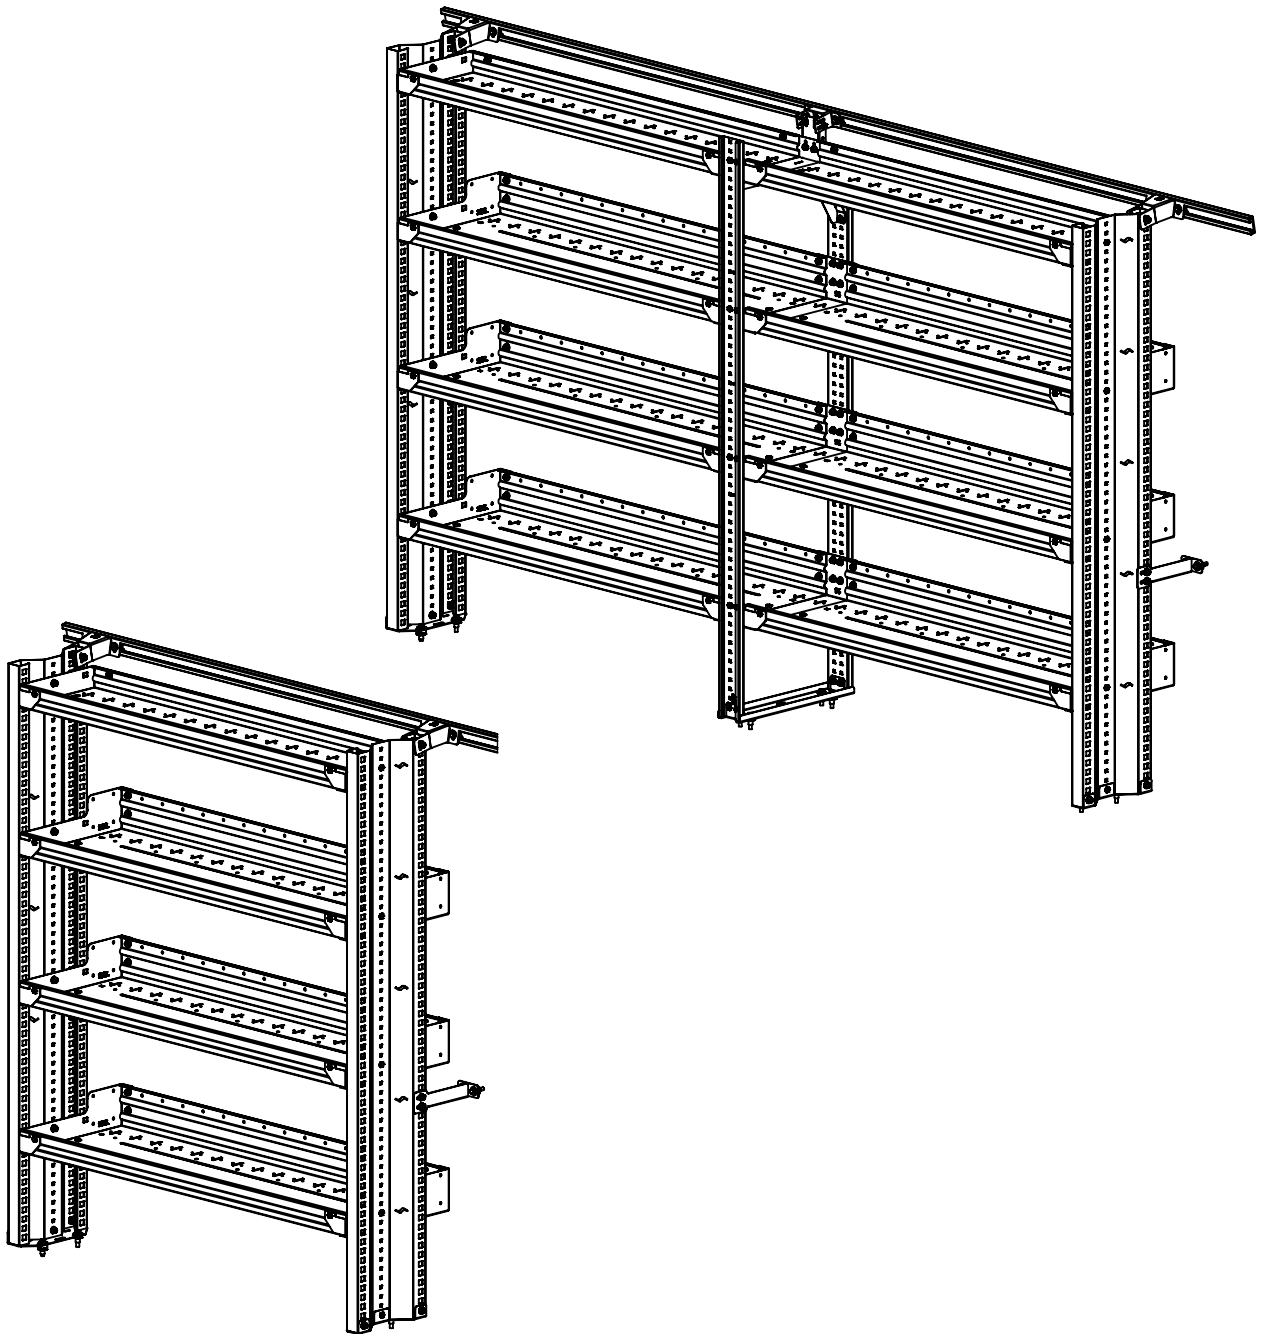


END PANEL KIT PRODUCT STRUCTURES

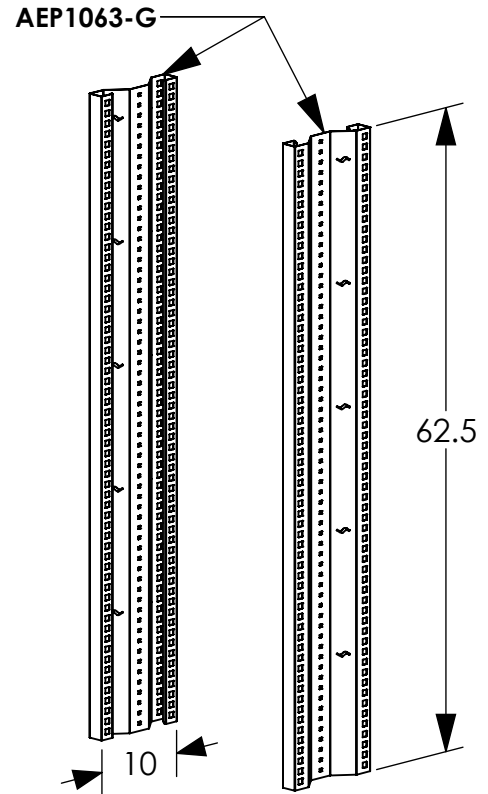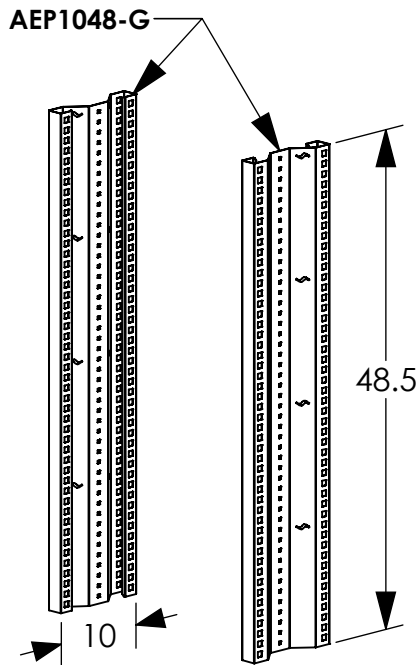


AEPK1048G

AEPK1063G

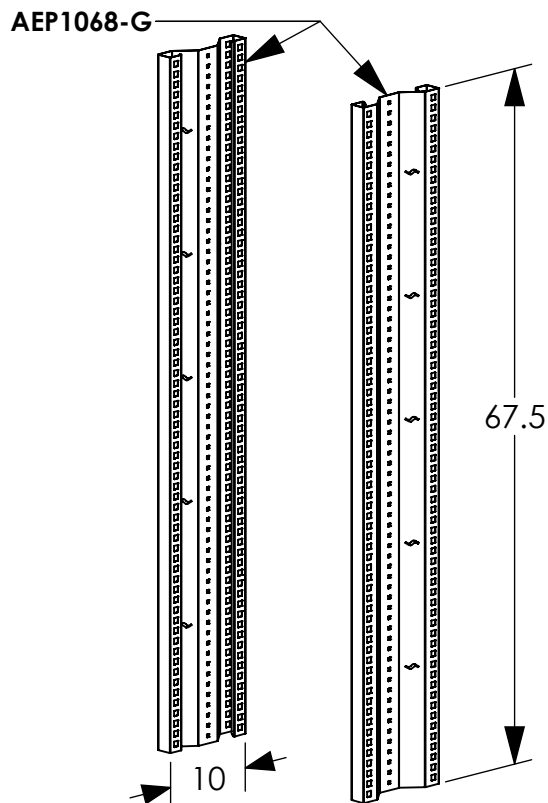


AEPK1068G


14 INCH END CAP KIT PRODUCT STRUCTURES

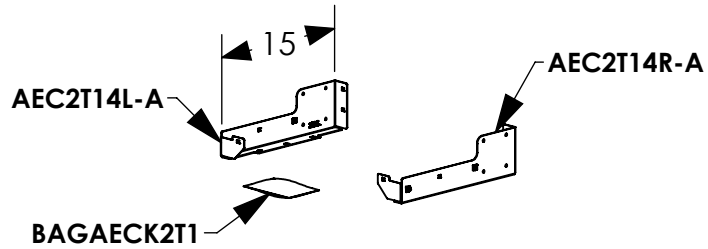


AEC2T14A1

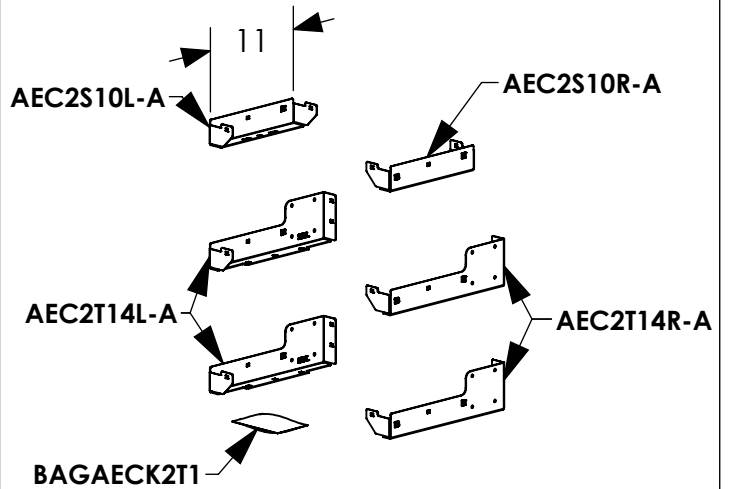

AEC2T14A3

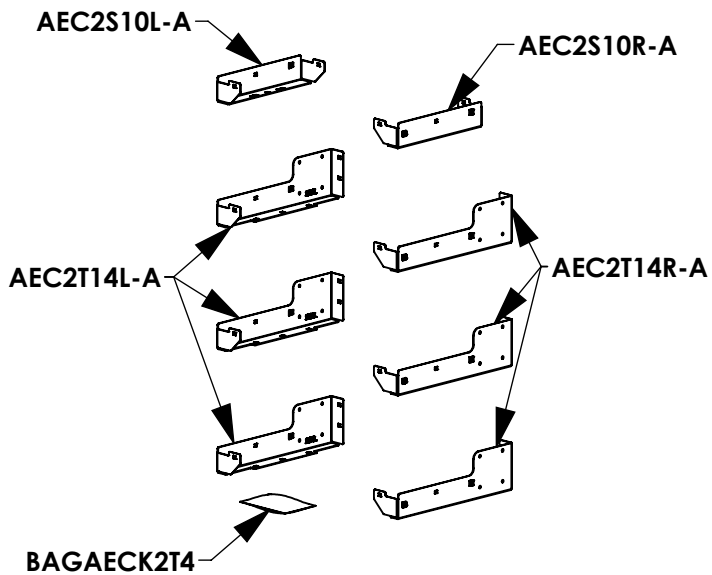


AEC2T14A4

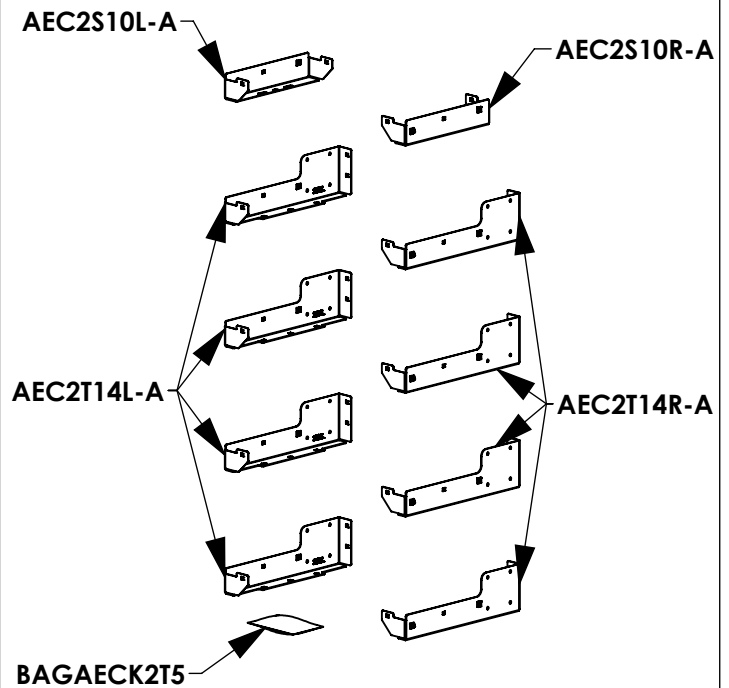


AEC2T14A5


16 INCH END CAP KIT PRODUCT STRUCTURES

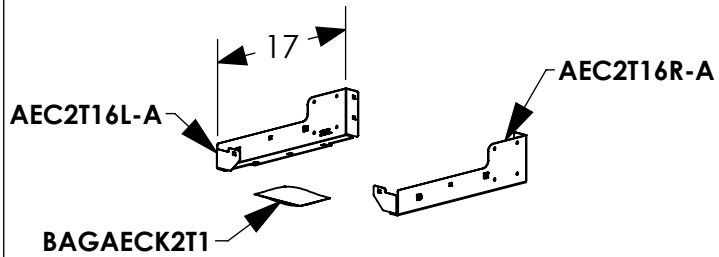


AEC2T16A1

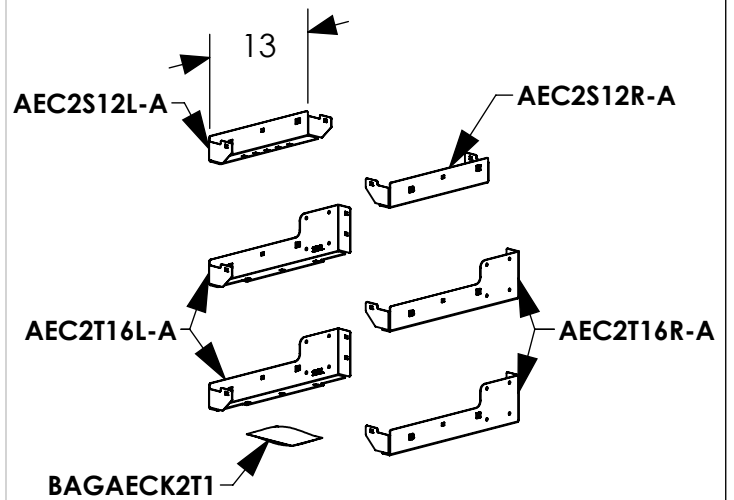

AEC2T16A3

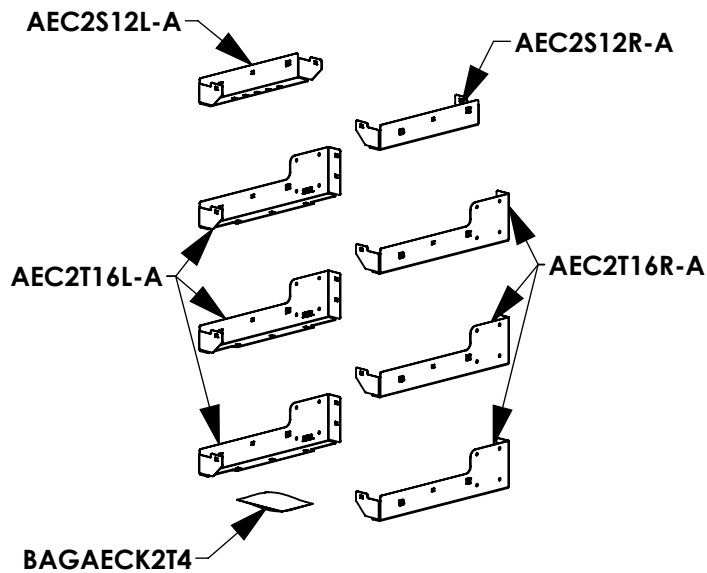


AEC2T16A4

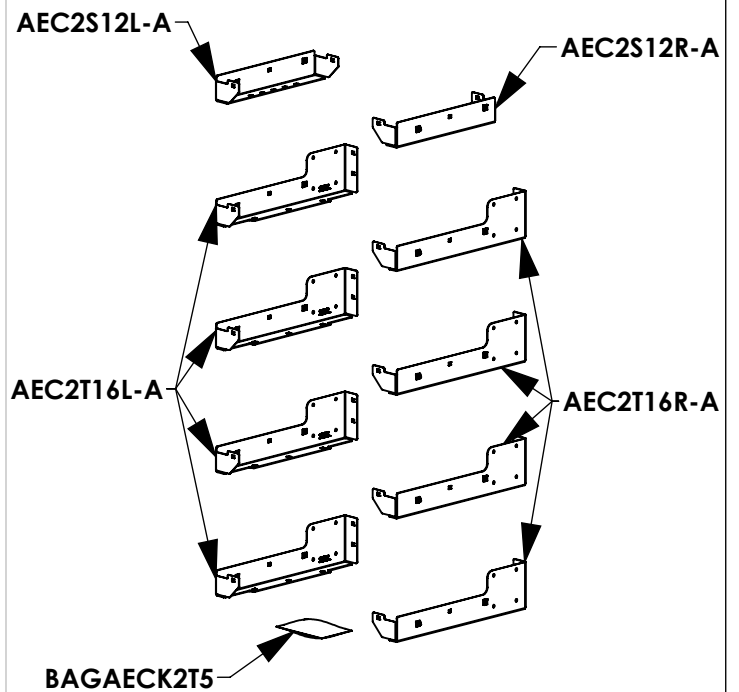


AEC2T16A5


18 INCH END CAP KIT PRODUCT STRUCTURES

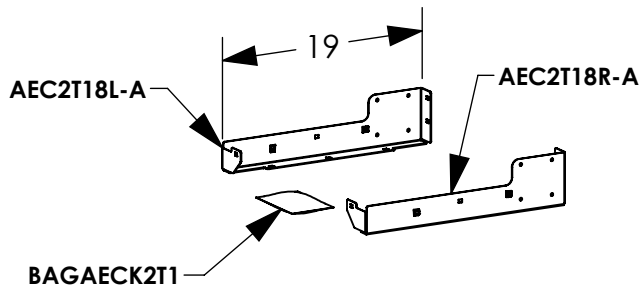


AECK2T18A1

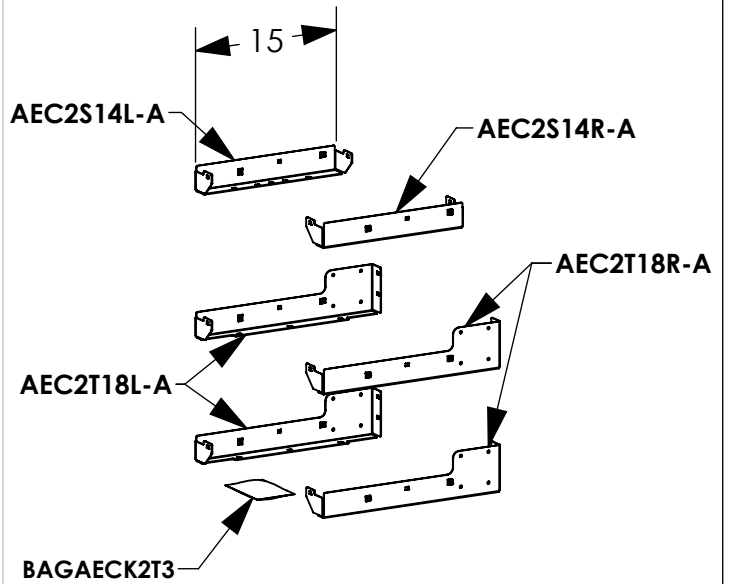

AECK2T18A3

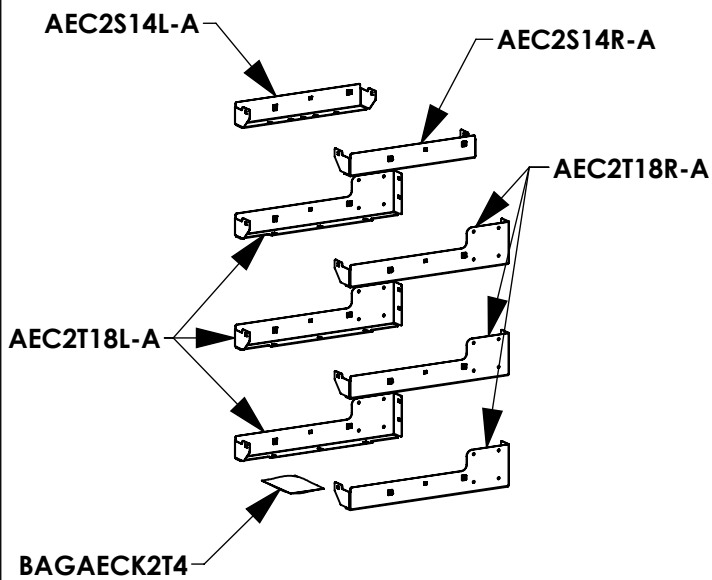

AECK2T18A4

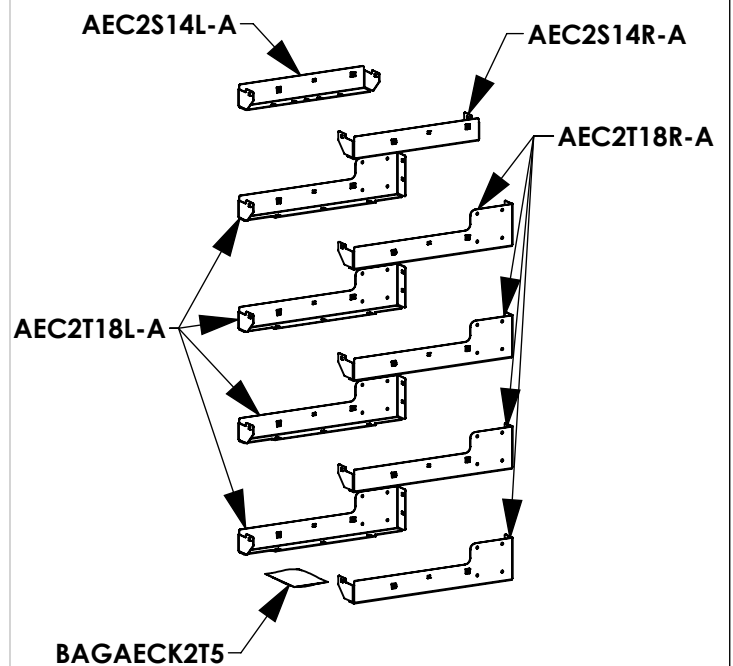



AECK2T18A5

14 INCH DEEP SHELF KIT PRODUCT STRUCTURES


NOTE: SHELF LENGTHS (NOTATED AS ##) RANGE FROM 24" - 72", AT 6" INCREMENTS

EXAMPLE SHELF PART NUMBER: ASF2T1448-G


EXAMPLE SHELF KIT PART NUMBER: ASFK2T1448G1

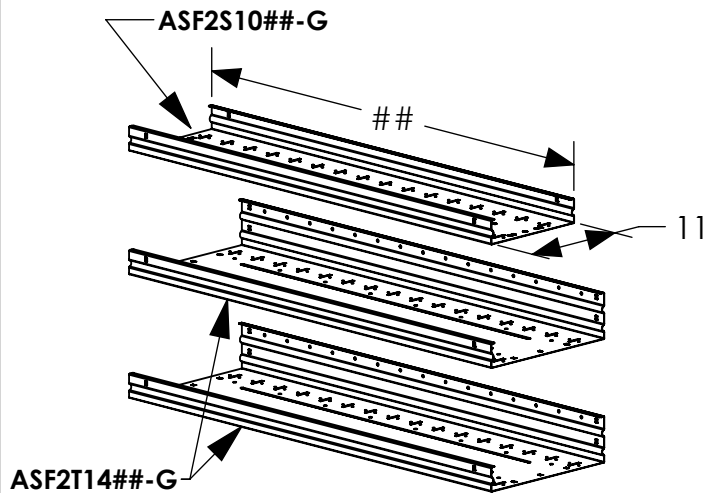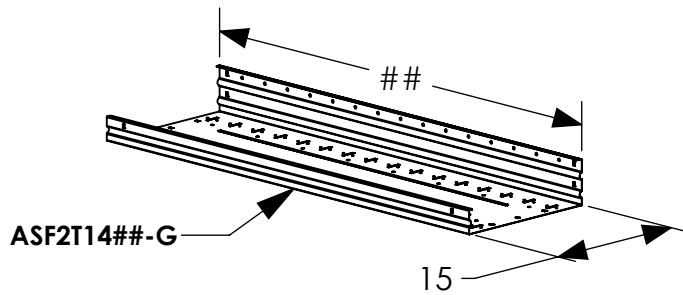

ASFK2T14##G1

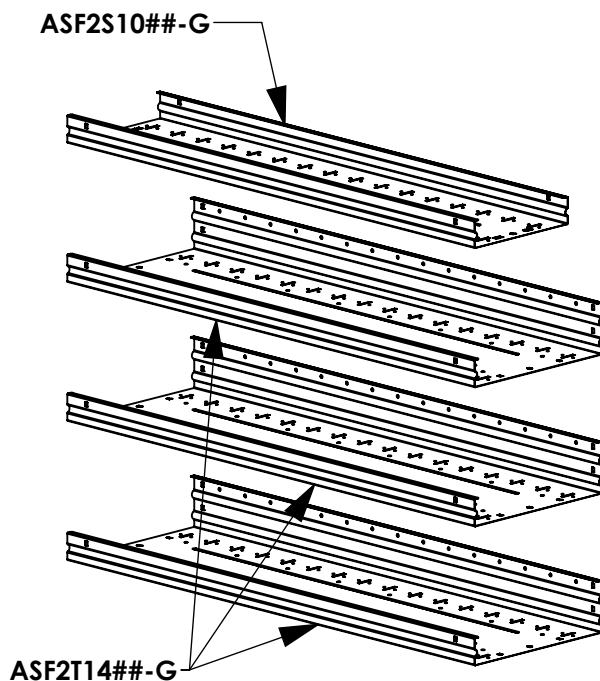

ASFK2T14##G3

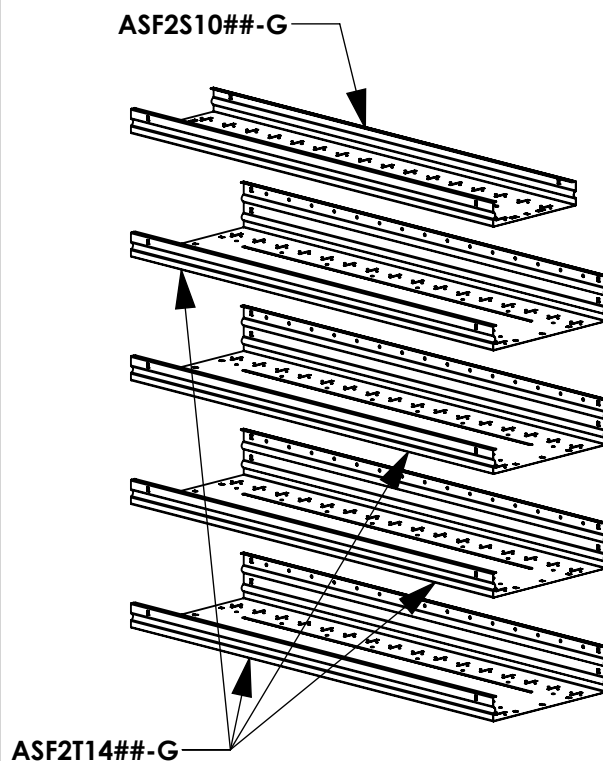

ASFK2T14##G4



ASFK2T14##G5

16 INCH DEEP SHELF KIT PRODUCT STRUCTURES


NOTE: SHELF LENGTHS (NOTATED AS ##) RANGE FROM 24" - 72", AT 6" INCREMENTS

EXAMPLE SHELF PART NUMBER: ASF2T1648-G


EXAMPLE SHELF KIT PART NUMBER: ASFK2T1648G1

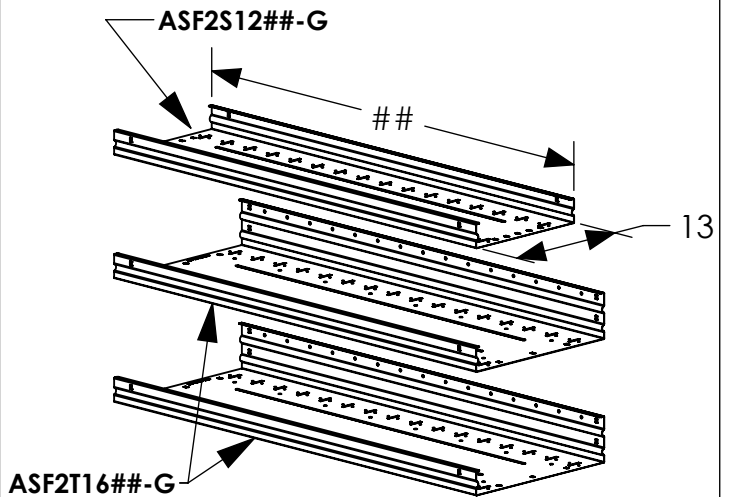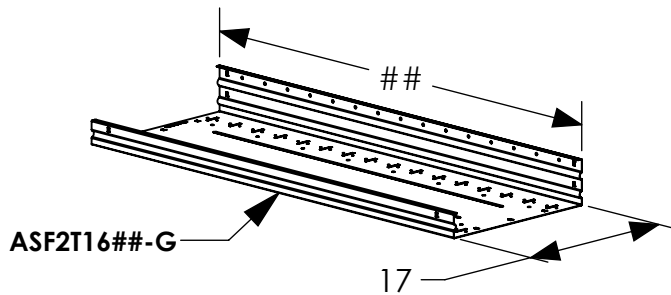

ASFK2T16##G1

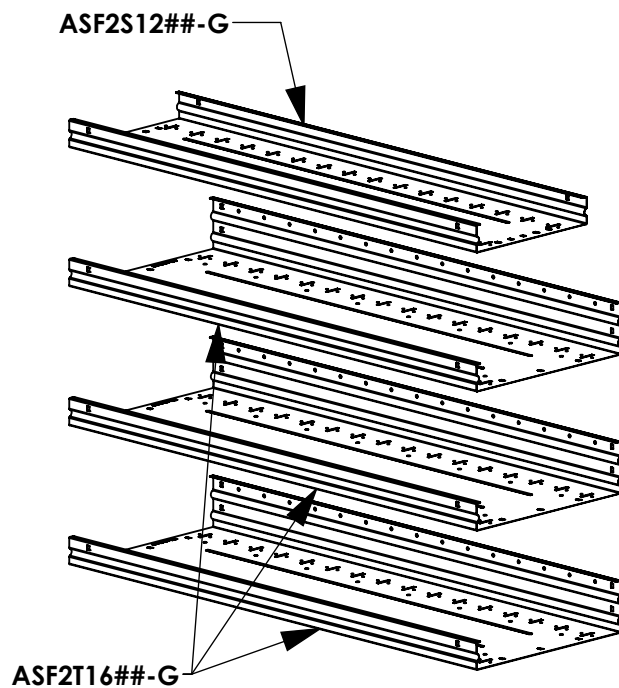

ASFK2T16##G3

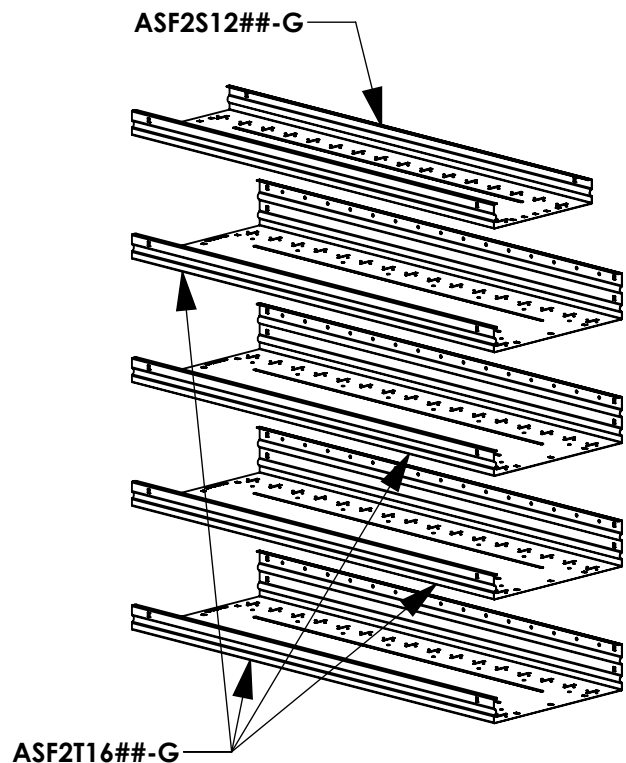

ASFK2T16##G4



ASFK2T16##G5

16 INCH DEEP SHELF KIT PRODUCT STRUCTURES

NOTE: SHELF LENGTHS (NOTATED AS ##) RANGE FROM 24" - 72", AT 6" INCREMENTS



EXAMPLE SHELF PART NUMBER: ASF2T1848-G

EXAMPLE SHELF KIT PART NUMBER: ASFK2T1848G1

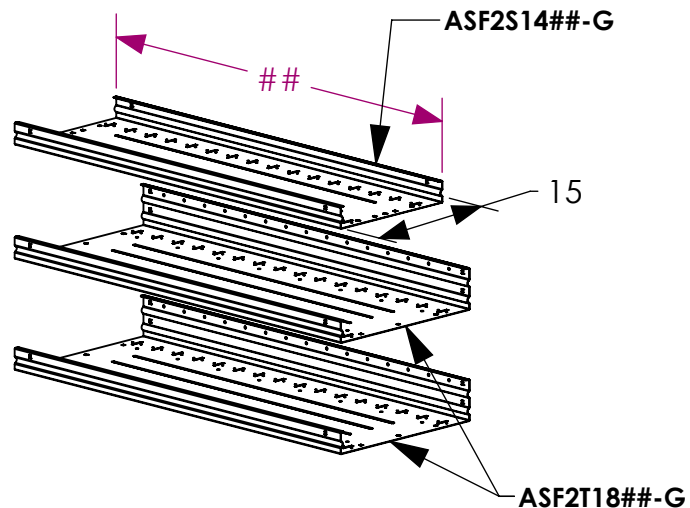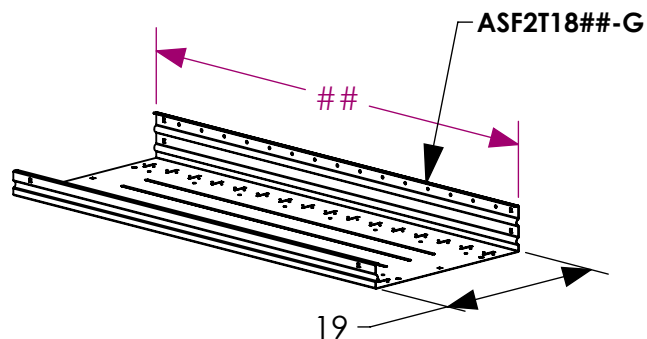

ASFK2T18##G1





ASFK2T18##G3

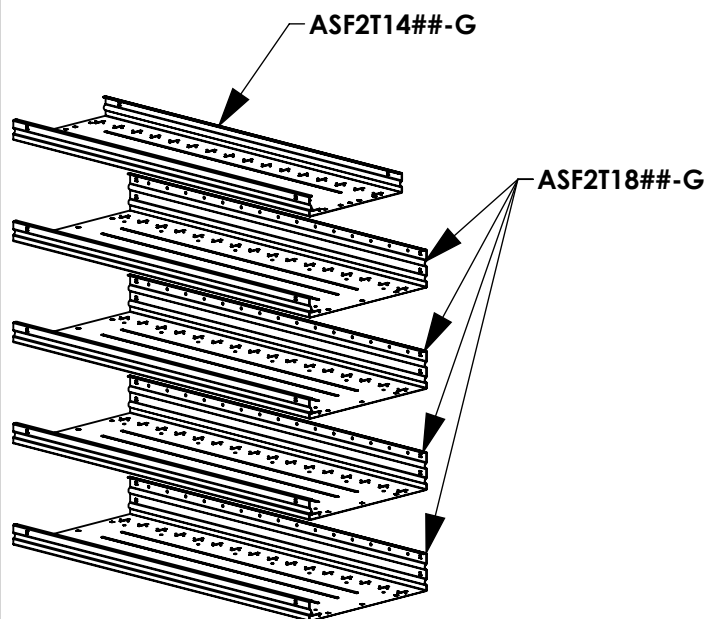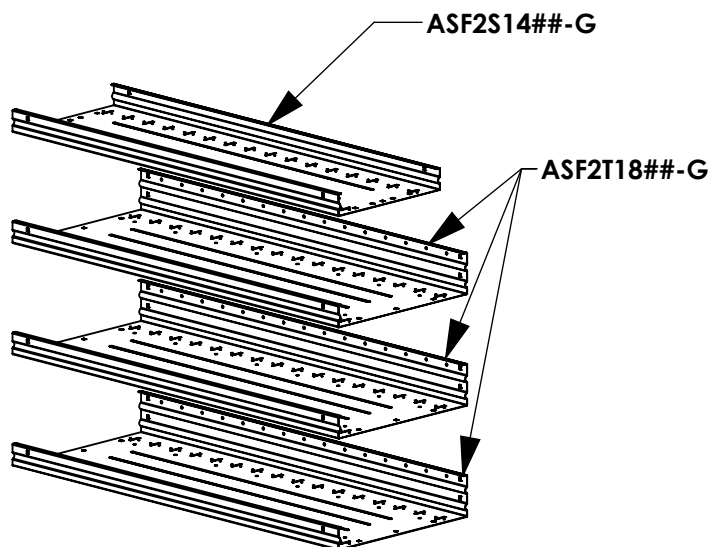





ASFK2T18##G4

ASFK2T18##G5


14 IN DEEP CENTER SUPPORT KIT PRODUCT STRUCTURES

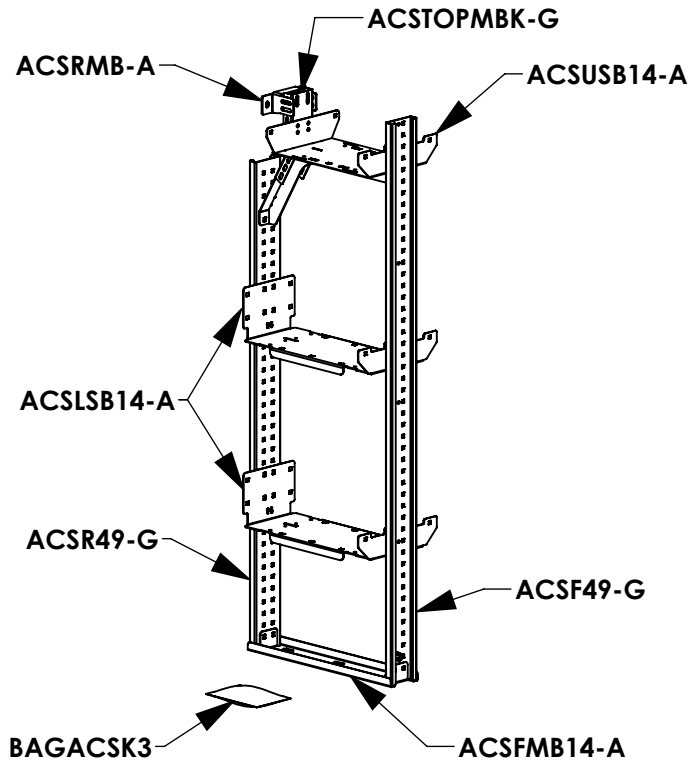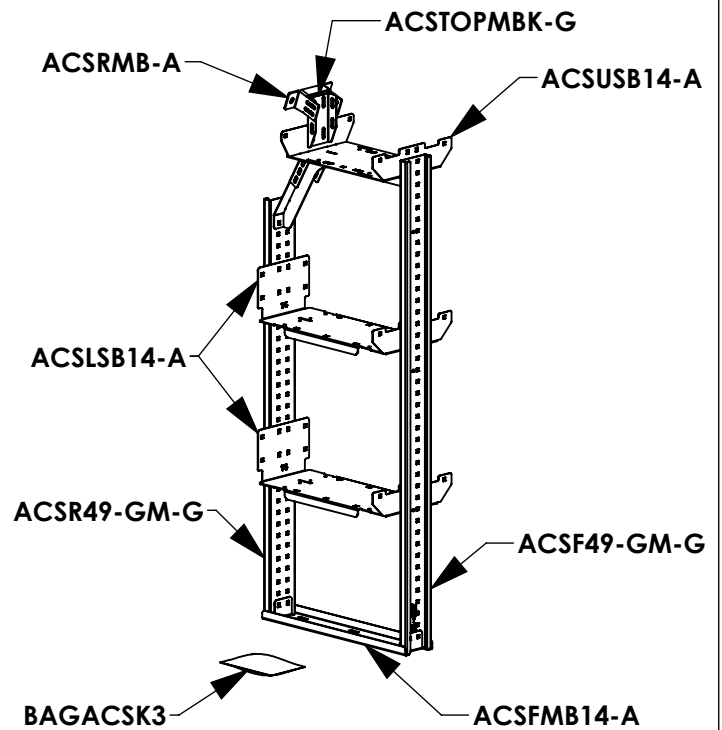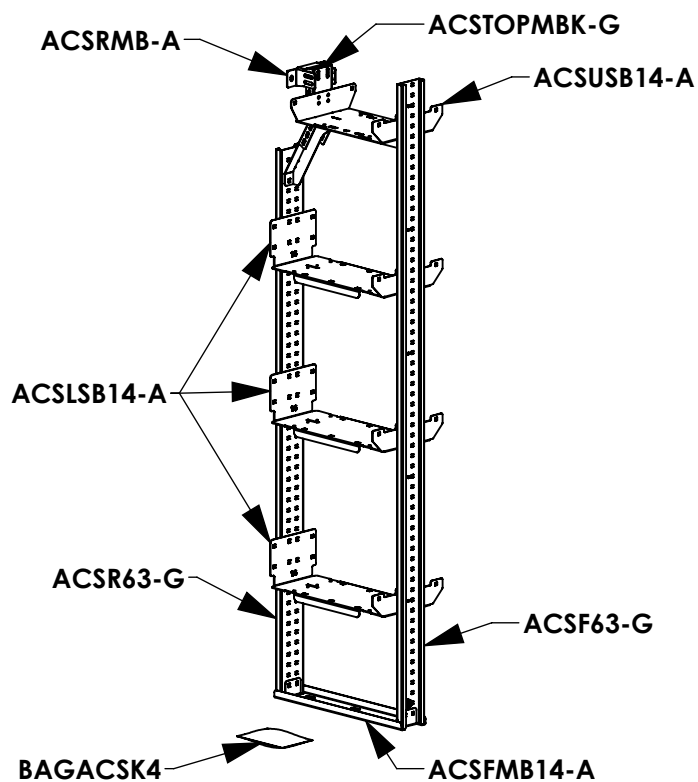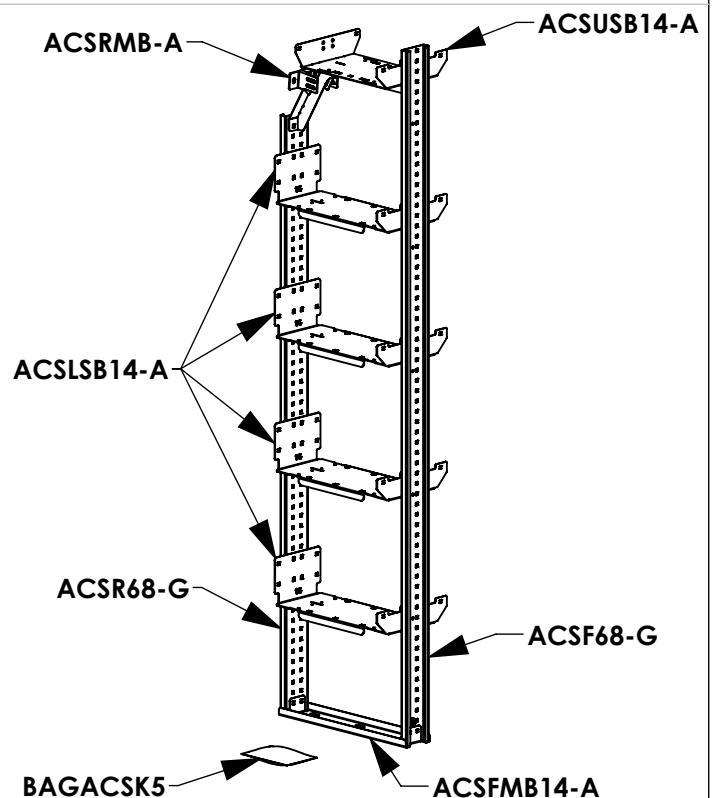**ACSK1449A3****ACSK1449-GMA3****ACSK1463A4****ACSK1468A5**


16 IN DEEP CENTER SUPPORT KIT PRODUCT STRUCTURES

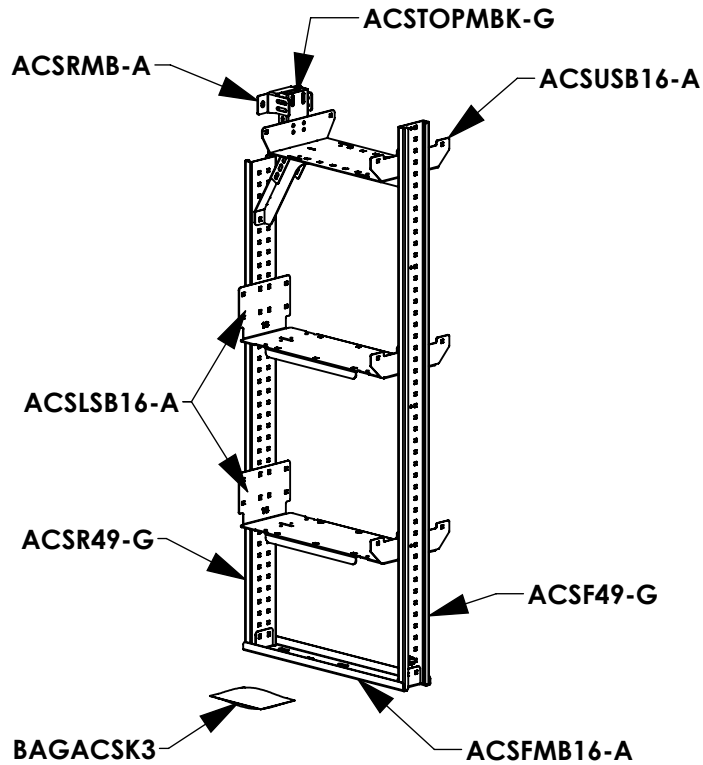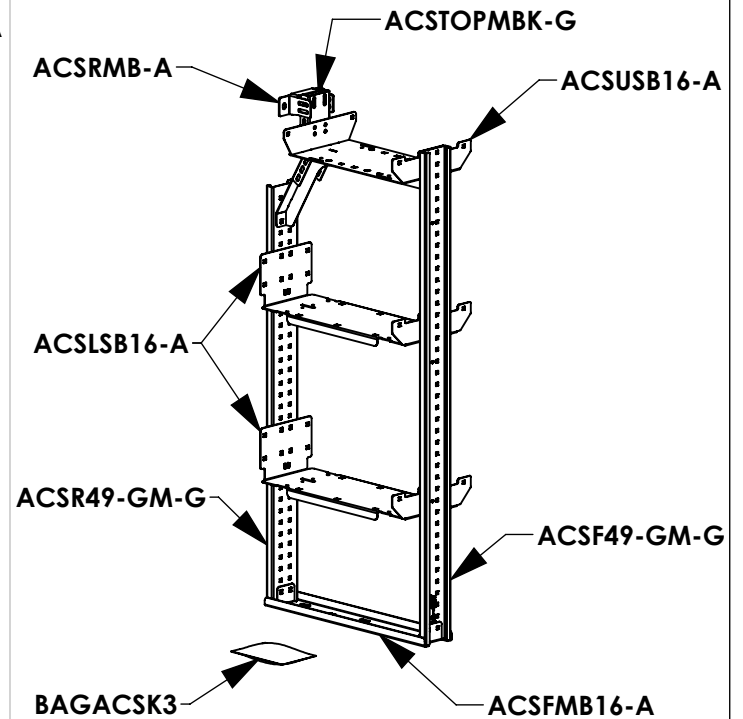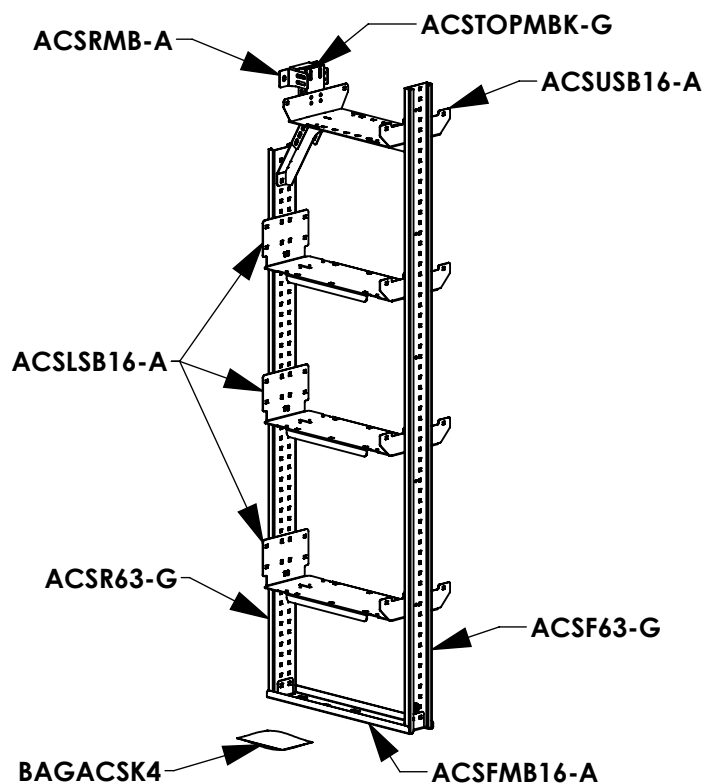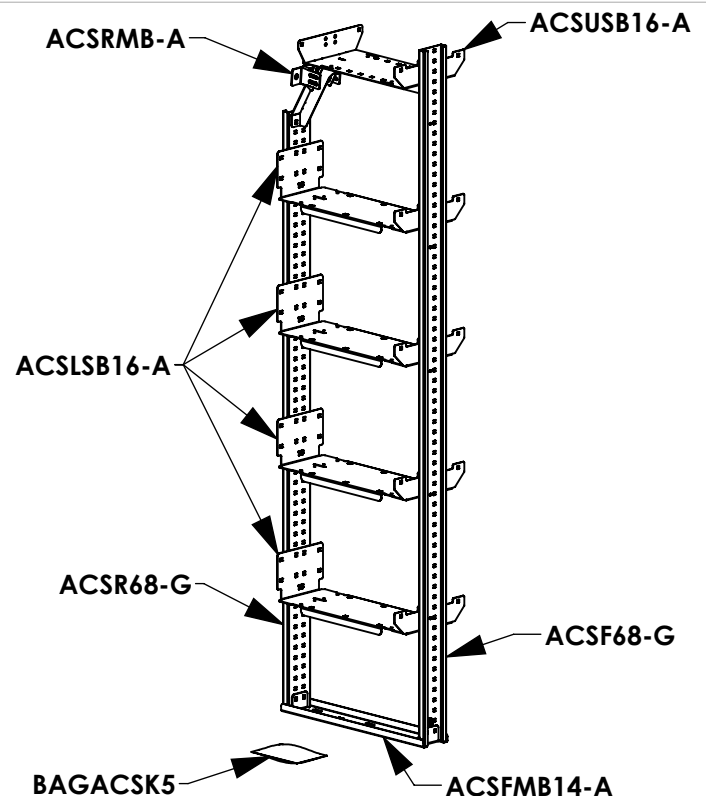**ACSK1649A3****ACSK1649-GMA3****ACSK1663A4****ACSK1668A5**


18 IN DEEP CENTER SUPPORT KIT PRODUCT STRUCTURES

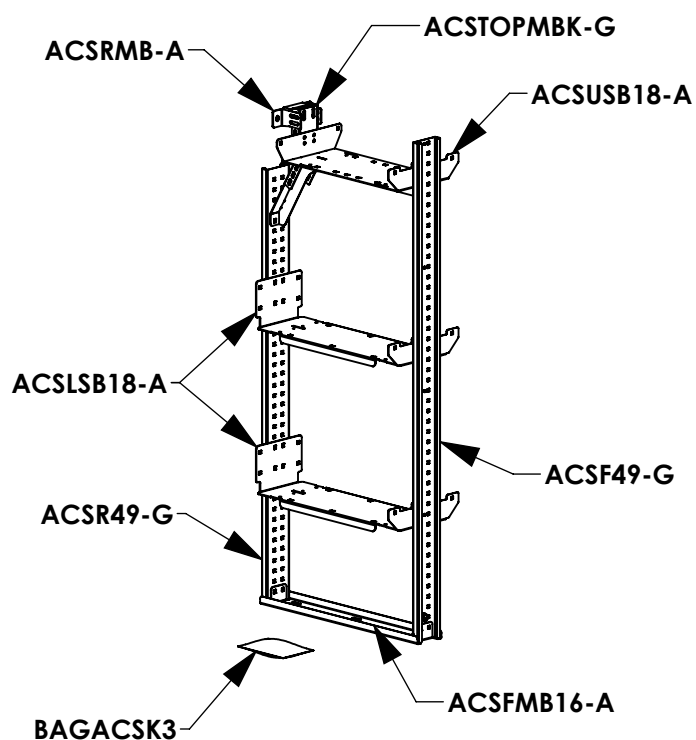


ACSK1849A3

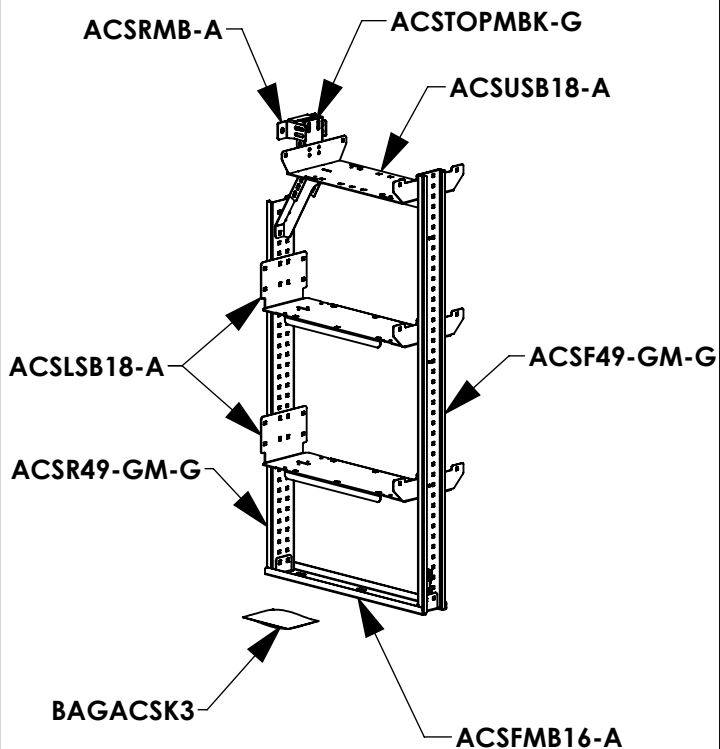

ACSK1849-GMA3


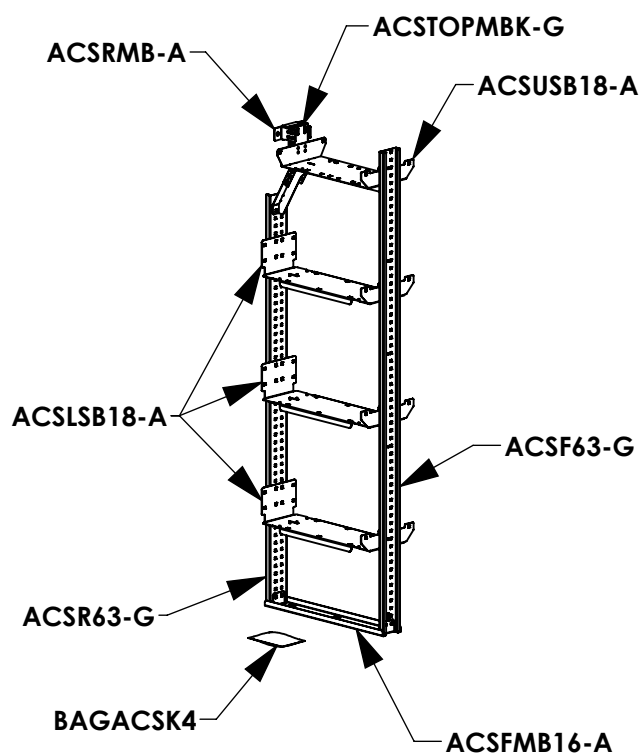


ACSK1863A4

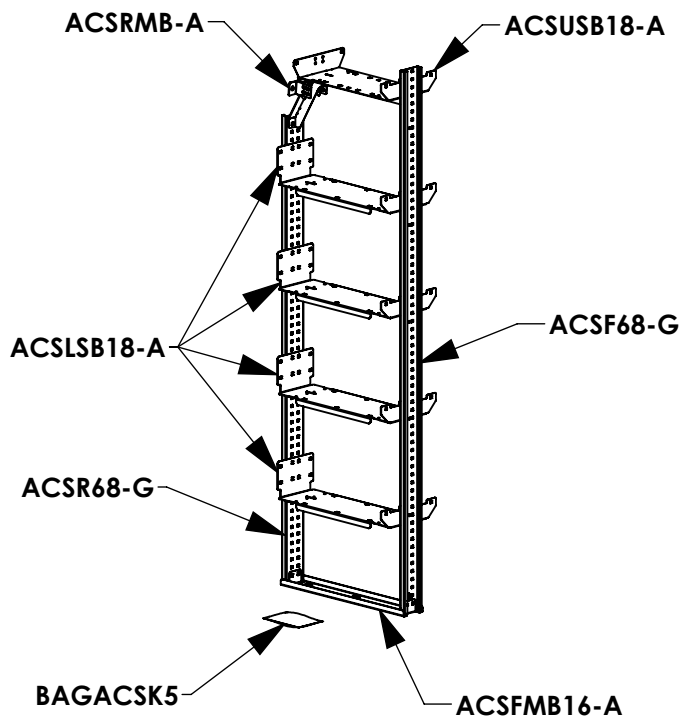

ACSK1868A5

SINGLE CENTER SUPPORT KITS AND DIMENSIONS


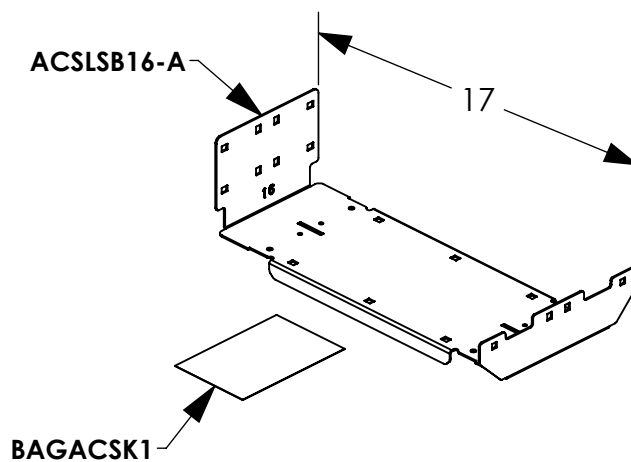
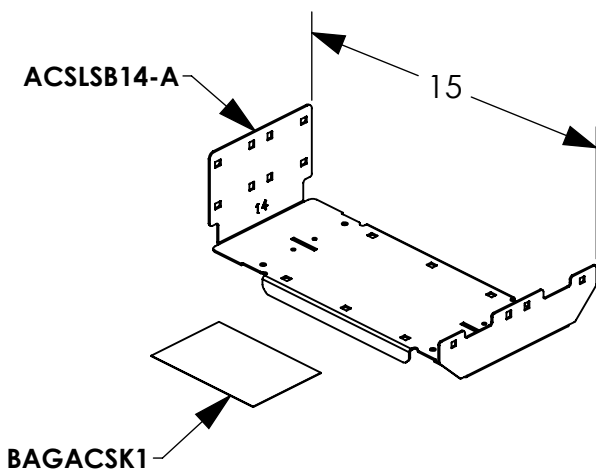


ACSK14A1


ACSK16A1

FRONT POSTS


REAR POSTS

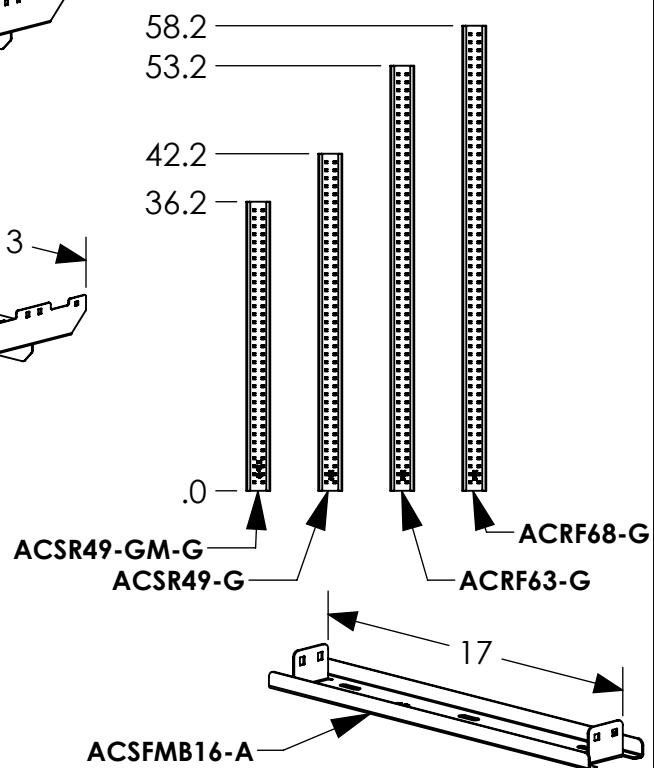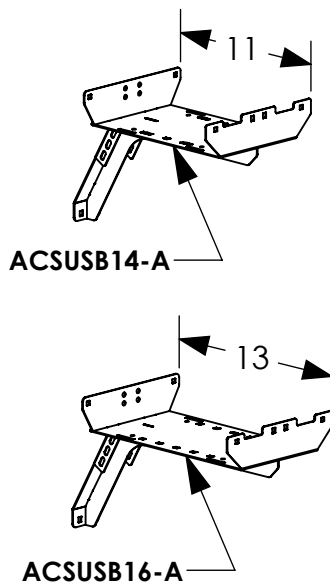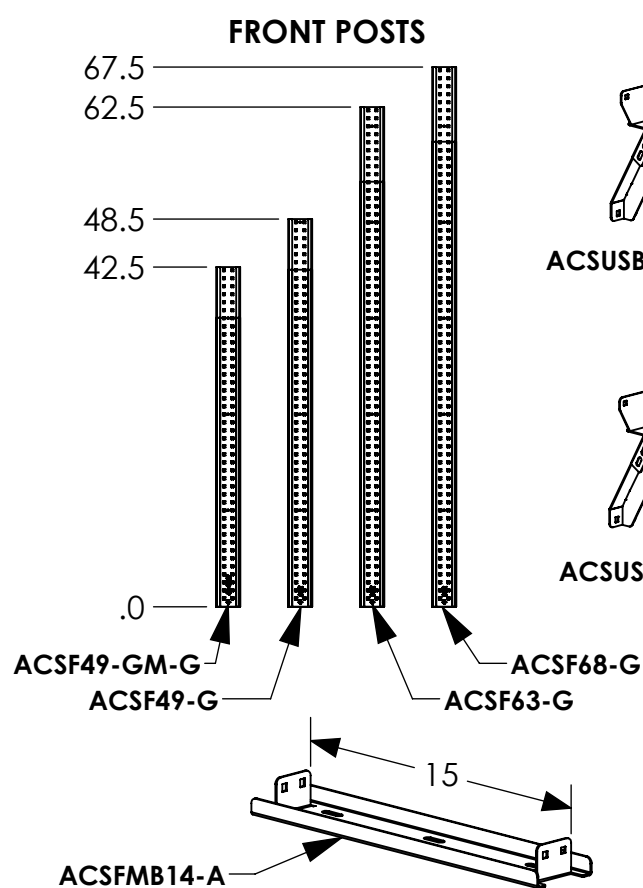


SINGLE CENTER SUPPORT KITS AND DIMENSIONS

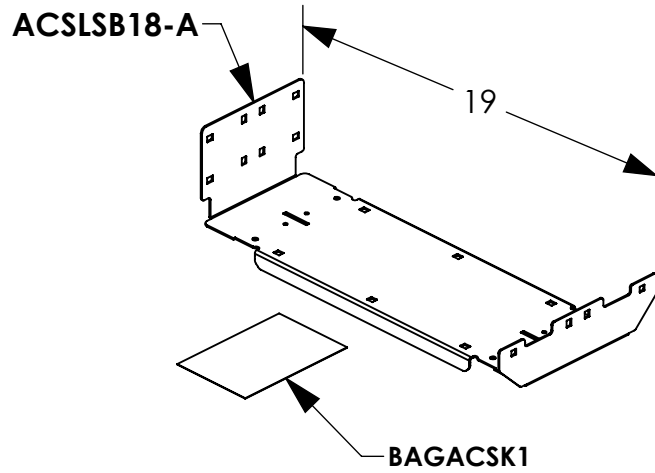

ACSK18A1




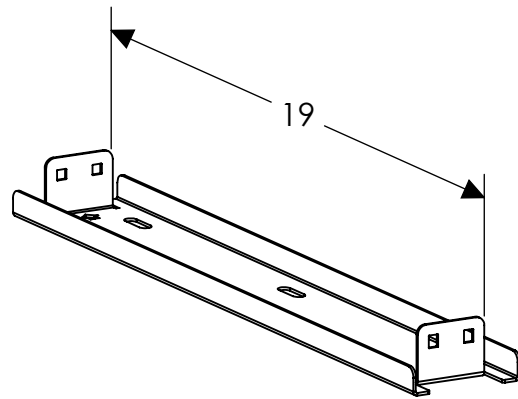


ACSFMB18-A

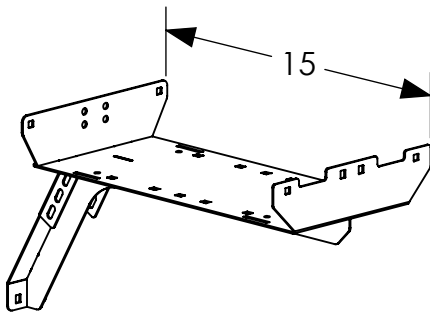


ACSUSB18-A


MOUNTING BRACKET KIT PRODUCT STRUCTURES

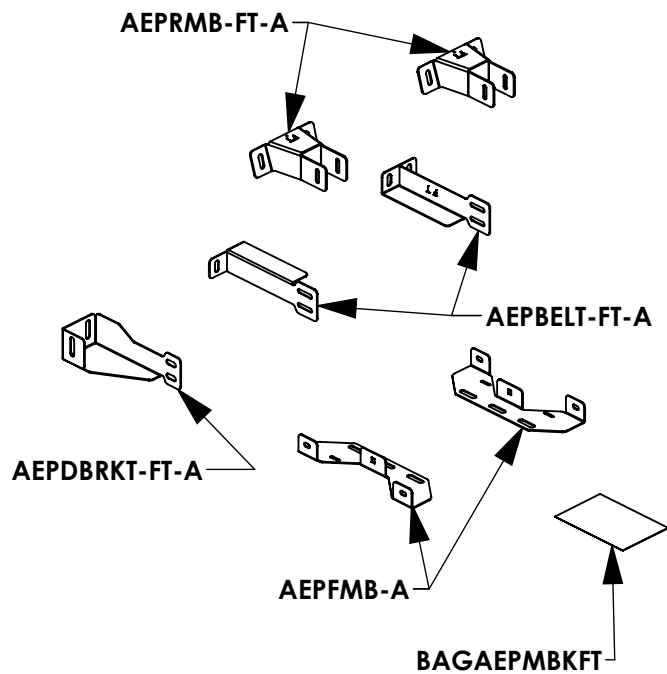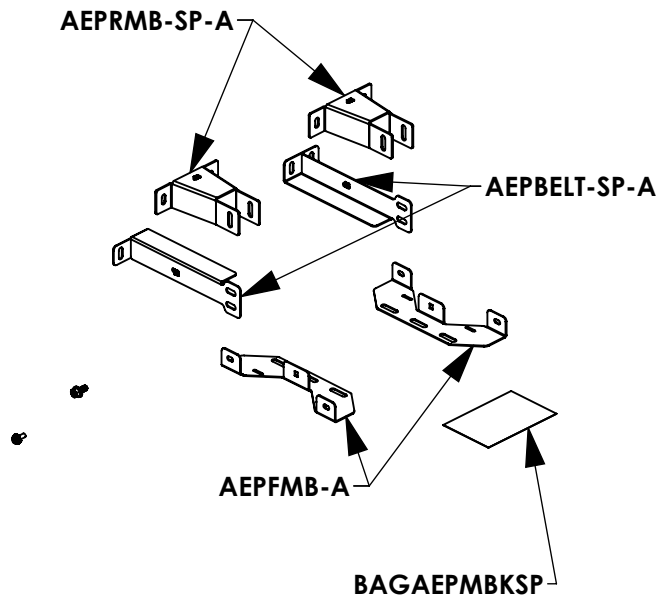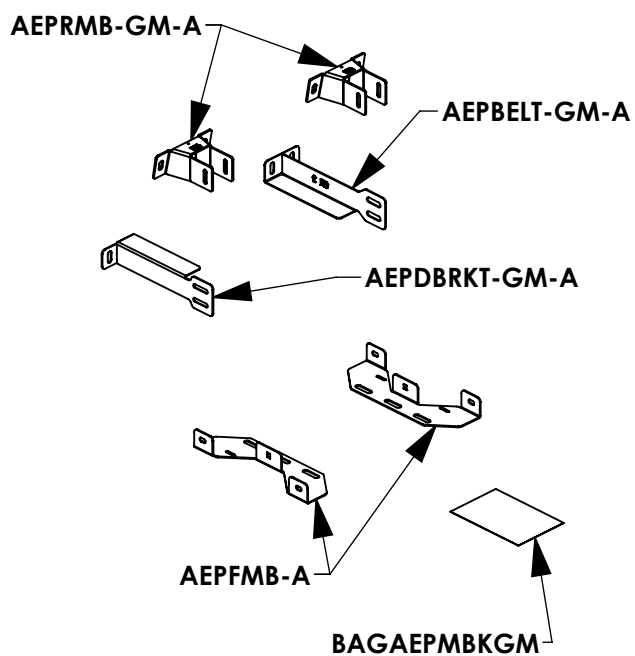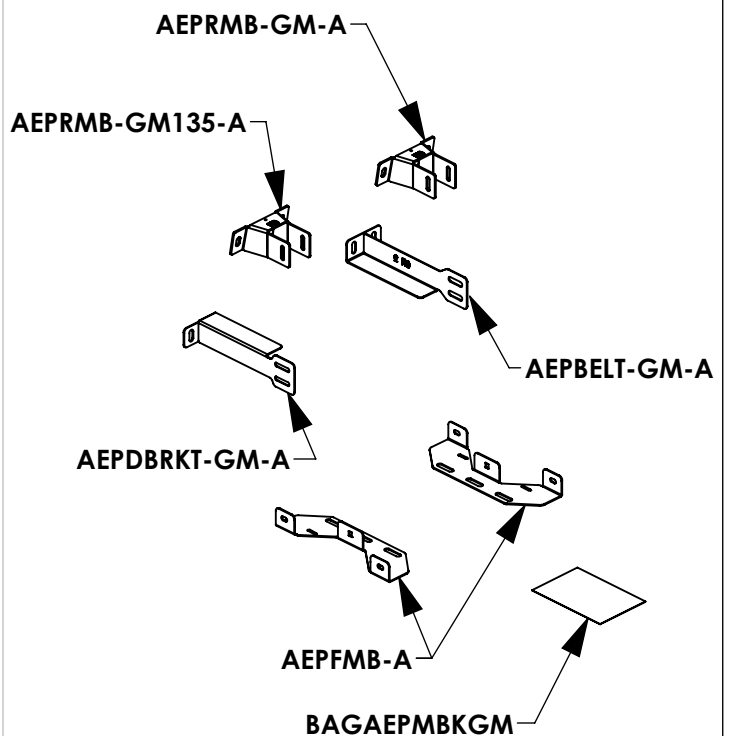**AEPMBKFTA****AEPMBKSPA****AEPMBKGMA****AEPMBKGM135PSA**


MOUNTING BRACKET KIT PRODUCT STRUCTURES

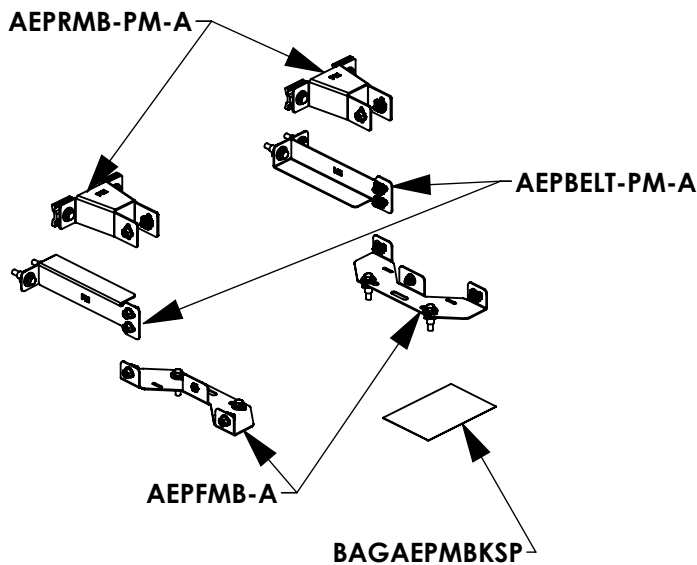

AEPMBKMA


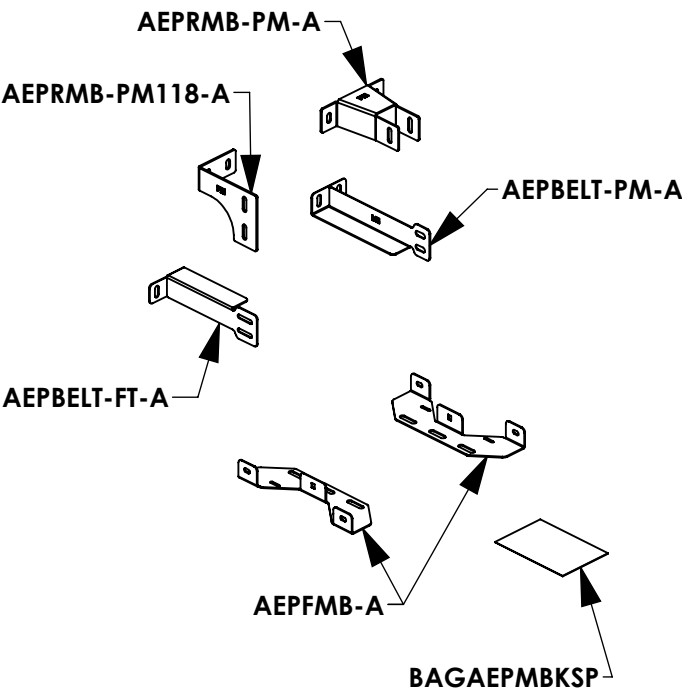


AEPMBKPM118PSA

INSTR. : INS-ASCH NUMBER	PG: 1	REV: A	AS-CHS1			
			ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART : SEE BOM NUMBER			1	ASCH2416-G	SHELF, CASE HOLDER, 24X16, GRAY	1
			2	BAGAS-CHS1	BAG FOR AS-CHS1	1
PART • CASE HOLDER TOWER DESC. • INSTRUCTION			1 2 			



AS-CH48FTLA			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH48	CASE HOLDER TOWER, 48	1
2	AEPMBKFTA	END PANL MNT BKT KIT, FT, A	1

AS-CH48GMA			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH48	CASE HOLDER TOWER, 48	1
2	AEPMBKGMA	END PANL MNT BKT, GM, A	1

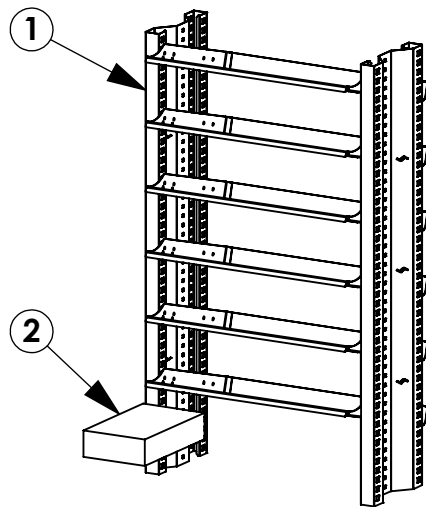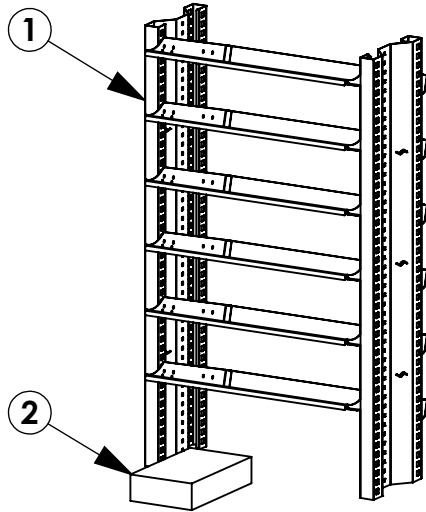

AS-CH48FTLAO			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH48AO	CASE HOLDER TOWER, ADD ON, 48	1
2	AEPMBKFT1A	END PANL MNT BKT KIT, FT, A	1

AS-CH48GMAO			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH48AO	CASE HOLDER TOWER, ADD ON, 48	1
2	AEPMBKGM1A	END PANL MNT BKT, GM, 1, A	1

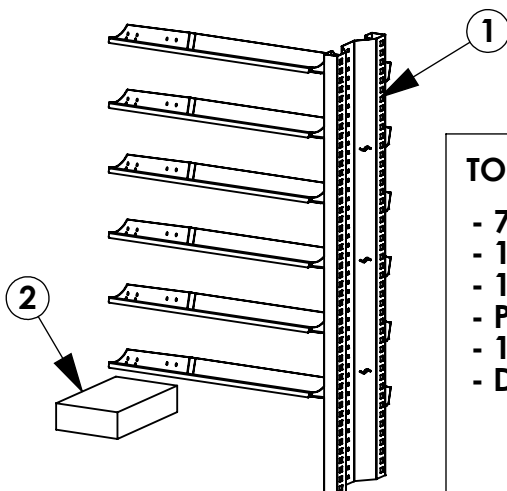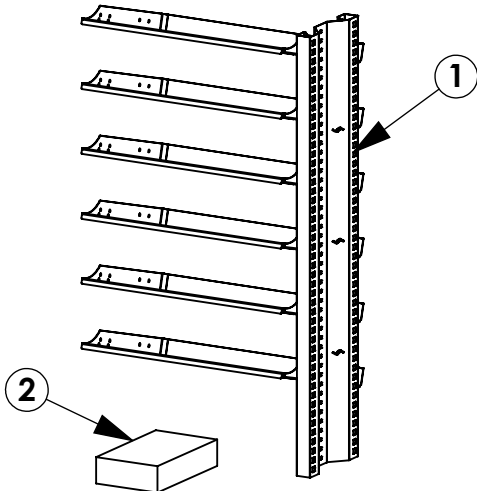


TOOLS NEEDED:


- 7/16" WRENCH
- 1/2" WRENCH
- 1/2" DRILL BIT
- PLUSNUT GUN
- 1 3/16" HOLE SAW
- DRILL

INSTR. NUMBER	: INS-ASCH	PG: 2	REV: A
PART NUMBER	: SEE BOM		
PART	• CASE HOLDER TOWER		
DESC.	• INSTRUCTION		


AS-CH63FTMA			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH63	CASE HOLDER TOWER, 63	1
2	AEPMBKFTA	END PANL MNT BKT KIT, FT, A	1

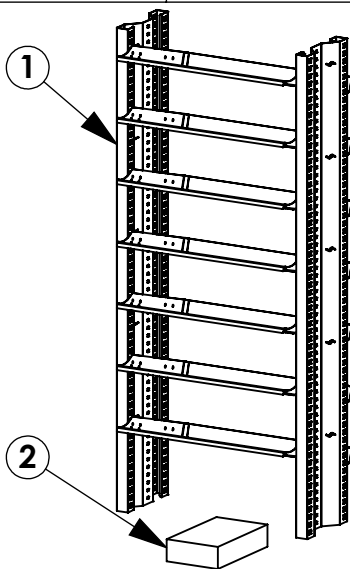


AS-CH63SPSA			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH63	CASE HOLDER TOWER, 63	1
2	AEPMBKSPA	END PANL MNT BKT KIT, SP, A	1

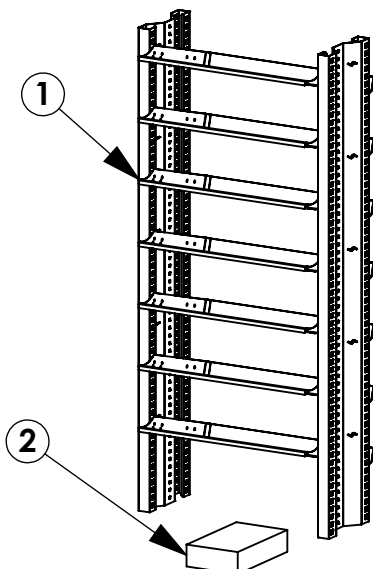

AS-CH63PMLA			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH63	CASE HOLDER TOWER, 63	1
2	AEPMBKPMA	END PANL MNT BKT KIT, PM, A	1

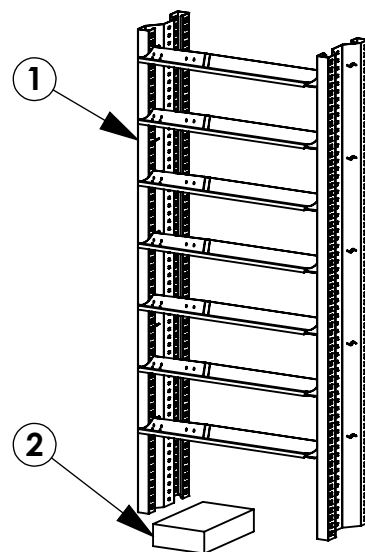


AS-CH63FTMAO			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH63AO	CASE HOLDER TOWER, 63, ADD ON	1
2	AEPMBKFT1A	END PANL MNT BKT KIT, FT, A	1

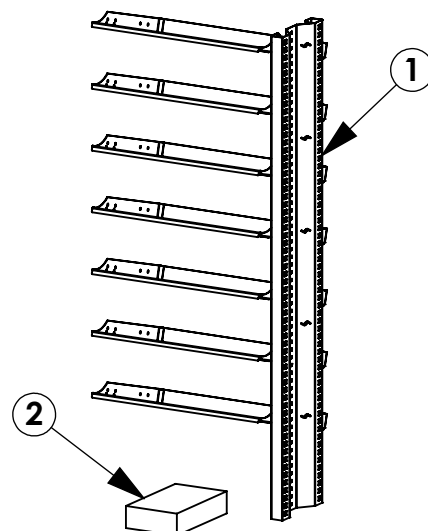


INSTR. : INS-ASCH NUMBER	PG: 3 REV: A
PART : SEE BOM NUMBER	
PART • CASE HOLDER TOWER DESC. • INSTRUCTION	


AS-CH63PMLAO			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH63AO	CASE HOLDER TOWER, 63, ADD ON	1
2	AEPMBKPM1A	END PANL MNT BKT KIT, PM,1,A	1

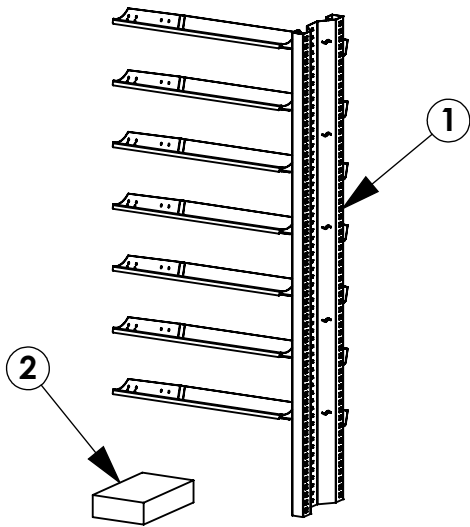


AS-CH63SPSAO			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH63AO	CASE HOLDER TOWER, 63, ADD ON	1
2	AEPMBKSP1A	END PANL MNT BKT KIT, SP,1,A	1

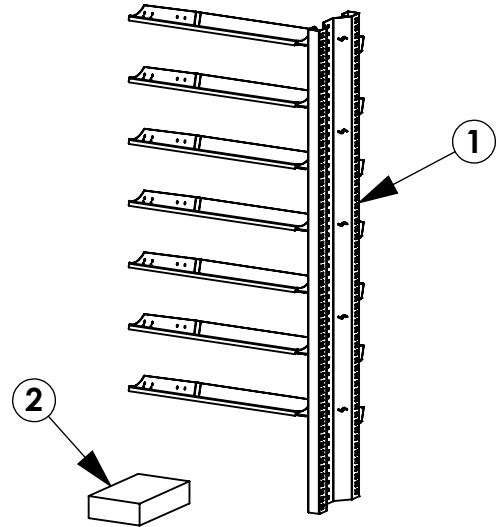

AS-CH68FTHA			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH68	CASE HOLDER TOWER, 68	1
2	AEPMBKFTHA	END PANL MNT BKT KIT, FT, A	1

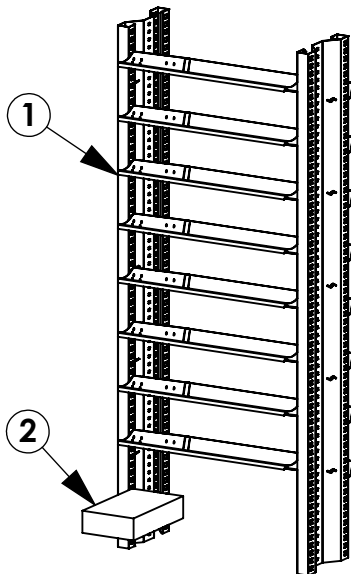


AS-CH68PMHA			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH68	CASE HOLDER TOWER, 68	1
2	AEPMBKPMA	END PANL MNT BKT KIT, PM, A	1

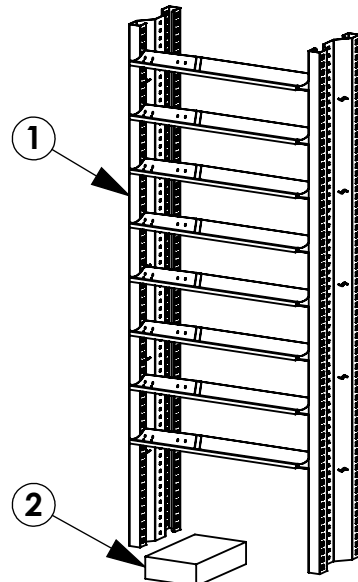


INSTR. : INS-ASCH NUMBER	PG: 4 REV: A
PART : SEE BOM NUMBER	
PART • CASE HOLDER TOWER DESC. • INSTRUCTION	


AS-CH68SPHA			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH68	CASE HOLDER TOWER, 68	1
2	AEPMBKSPA	END PANL MNT BKT KIT,SP,A	1

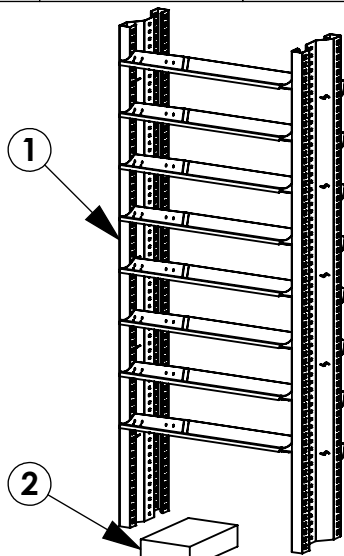


AS-CH68PMHAO			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH68AO	CASE HOLDER TOWER, ADD ON, 68	1
2	AEPMBKPM1A	END PANL MNT BKT KIT, PM,1,A	1

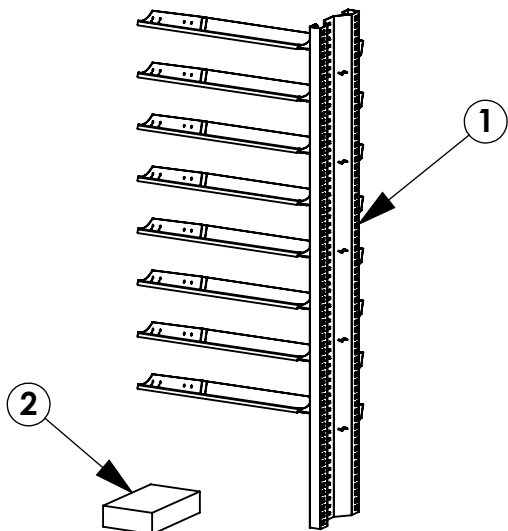

AS-CH68FTHAO			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH68AO	CASE HOLDER TOWER, ADD ON, 68	1
2	AEPMBKFT1A	END PANL MNT BKT KIT,FT,A	1

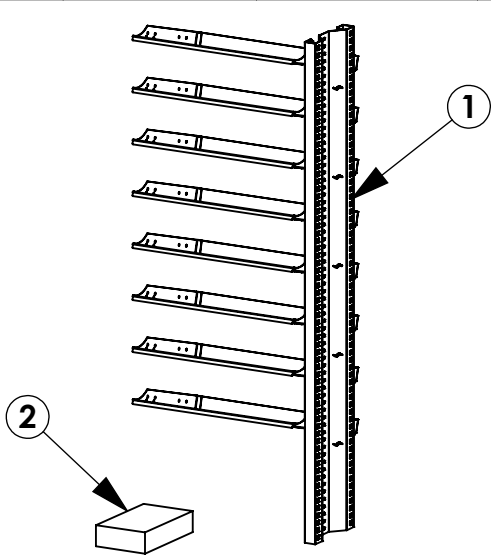

AS-CH68SPHAO			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AS-CH68AO	CASE HOLDER TOWER, ADD ON, 68	1
2	AEPMBKSP1A	END PANL MNT BKT KIT, SP,1,A	1

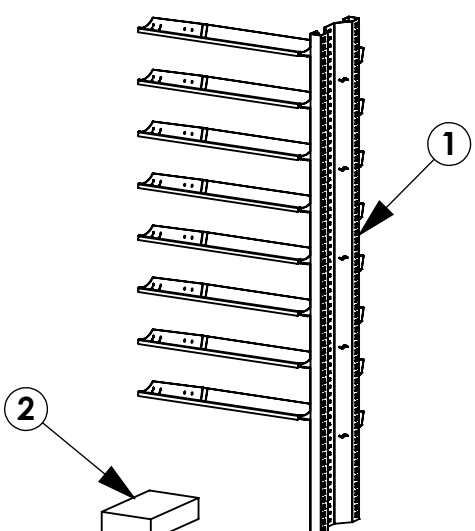

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).

THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

BEST PRACTICE: ORGANIZE ALL FASTENERS & VERIFY THAT ALL ARE ACCOUNTED FOR


PAGE:

6

FASTENERS USED

BAG REFERENCE: BAGAEPMBKFT1

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	35335-0	SLIDE, 1.5" / AD RAIL	2
2	FAS0060	WASHER,LCK SPLIT 1/4 ZP	1
3	FAS0067	WASHER,FLAT USS 1/4 ZP	1
4	FAS0085	WASHER,LCK EXT 5/16 ZP	2
5	03927-2	SPACER, FLR, 1010, 11/16 ZP	2
6	03927-1	SPACER,FLR,1010,11/32 ZP	2
7	FAS0440	NUT,HEX NLK FLG 5/16-18 - ZP	1
8	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	1
9	FAS0098	Washer, Lock, Split, 5/16, Zinc Plate	4
10	FAS0086	WASHER,FLAT USS 5/16 ZP	6

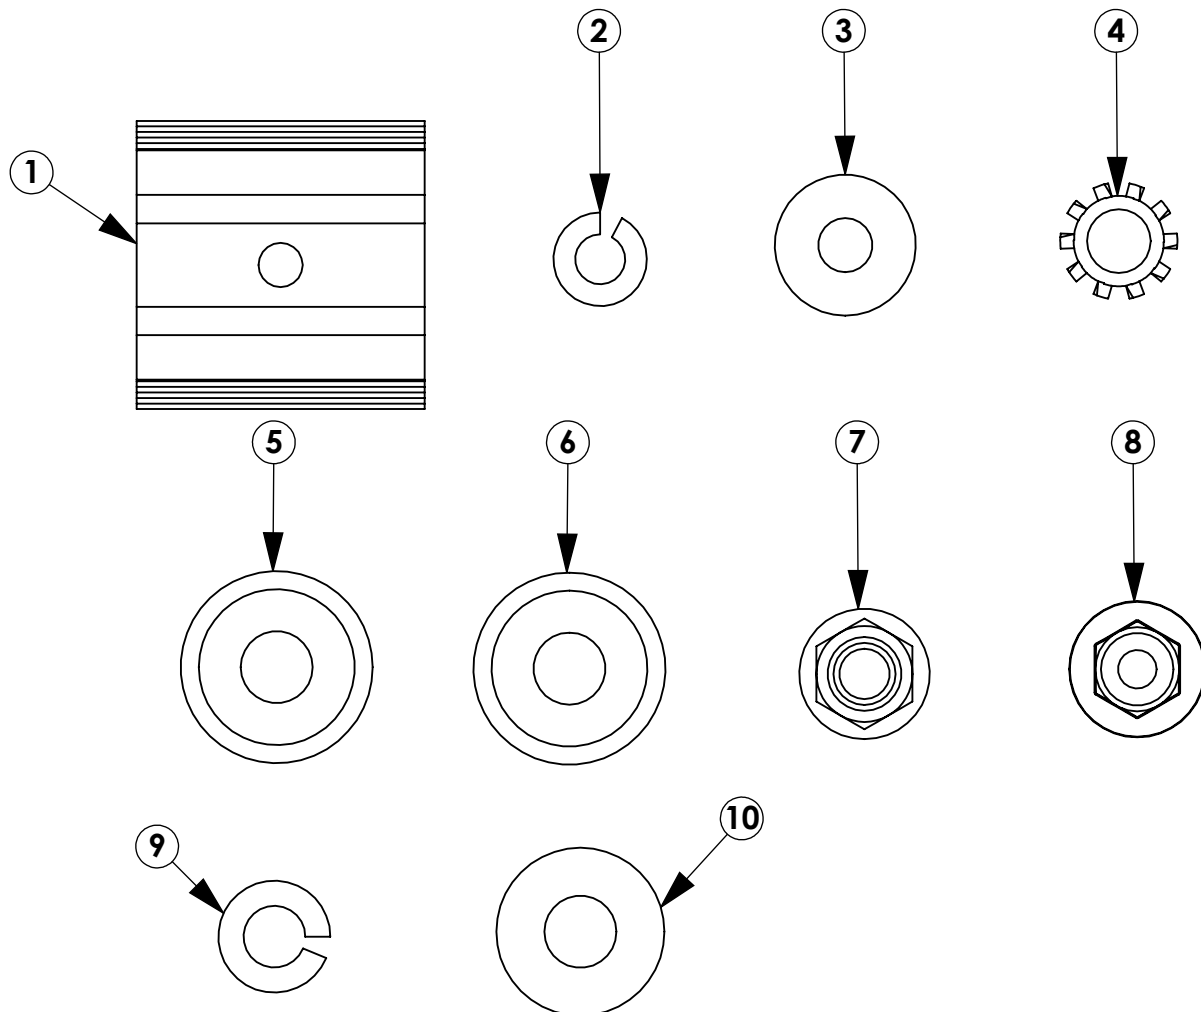

CONTINUE ON NEXT FASTENER PAGE


INTENTIONALLY LEFT BLANK

BEST PRACTICE: ORGANIZE ALL FASTENERS & VERIFY THAT ALL ARE ACCOUNTED FOR

PAGE:
8

FASTENERS USED
BAG REFERENCE: BAGAEPMBKFT1

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
11	FAS0091	Plusnut, 5/16	4
12	FAS0092	Screw, Hex Hd, 5/16-18x1.50 Zn Plate, G8	2
13	FAS0187	SCR,HH,M6-1.0X22	1
14	FAS0165	SCREW,HH 5/16-18X.62 ZN	2
15	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	6
16	FAS0994	U-NUT, 1/4-20, BO	6
17	FAS0924	BOLT,CRG 1/4-20X.62 FH ZP	1

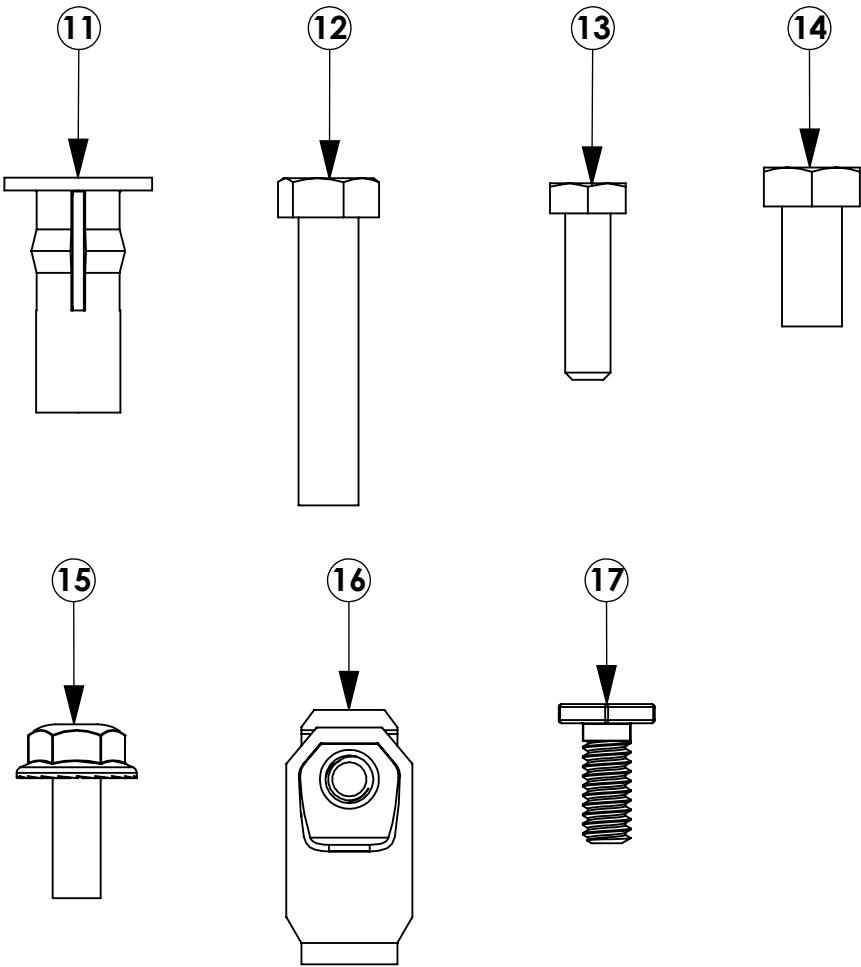

INTENTIONALLY LEFT BLANK

BEST PRACTICE: ORGANIZE ALL FASTENERS & VERIFY THAT ALL ARE ACCOUNTED FOR


PAGE:

10

FASTENERS USED

BAG REFERENCE: BAGAEPMBKGM1

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	35335-0	SLIDE, 1.5" / AD RAIL	4
2	FAS0085	WASHER,LCK EXT 5/16 ZP	4
3	FAS0098	Washer, Lock, Split, 5/16, Zinc Plate	2
4	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	1
5	03927-1	SPACER,FLR,1010,11/32 ZP	2
6	03927-2	SPACER, FLR, 1010, 11/16 ZP	2
7	FAS0924	BOLT,CRG 1/4-20X.62 FH ZP	1
8	FAS0091	Plusnut, 5/16	2
9	FAS0994	U-NUT, 1/4-20, BO	6
10	FAS0092	Screw, Hex Hd, 5/16-18x1.50 Zn Plate, G8	2
11	FAS0165	SCREW,HH 5/16-18X.62 ZN	4
12	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	6
13	FAS0086	WASHER,FLAT USS 5/16 ZP	6

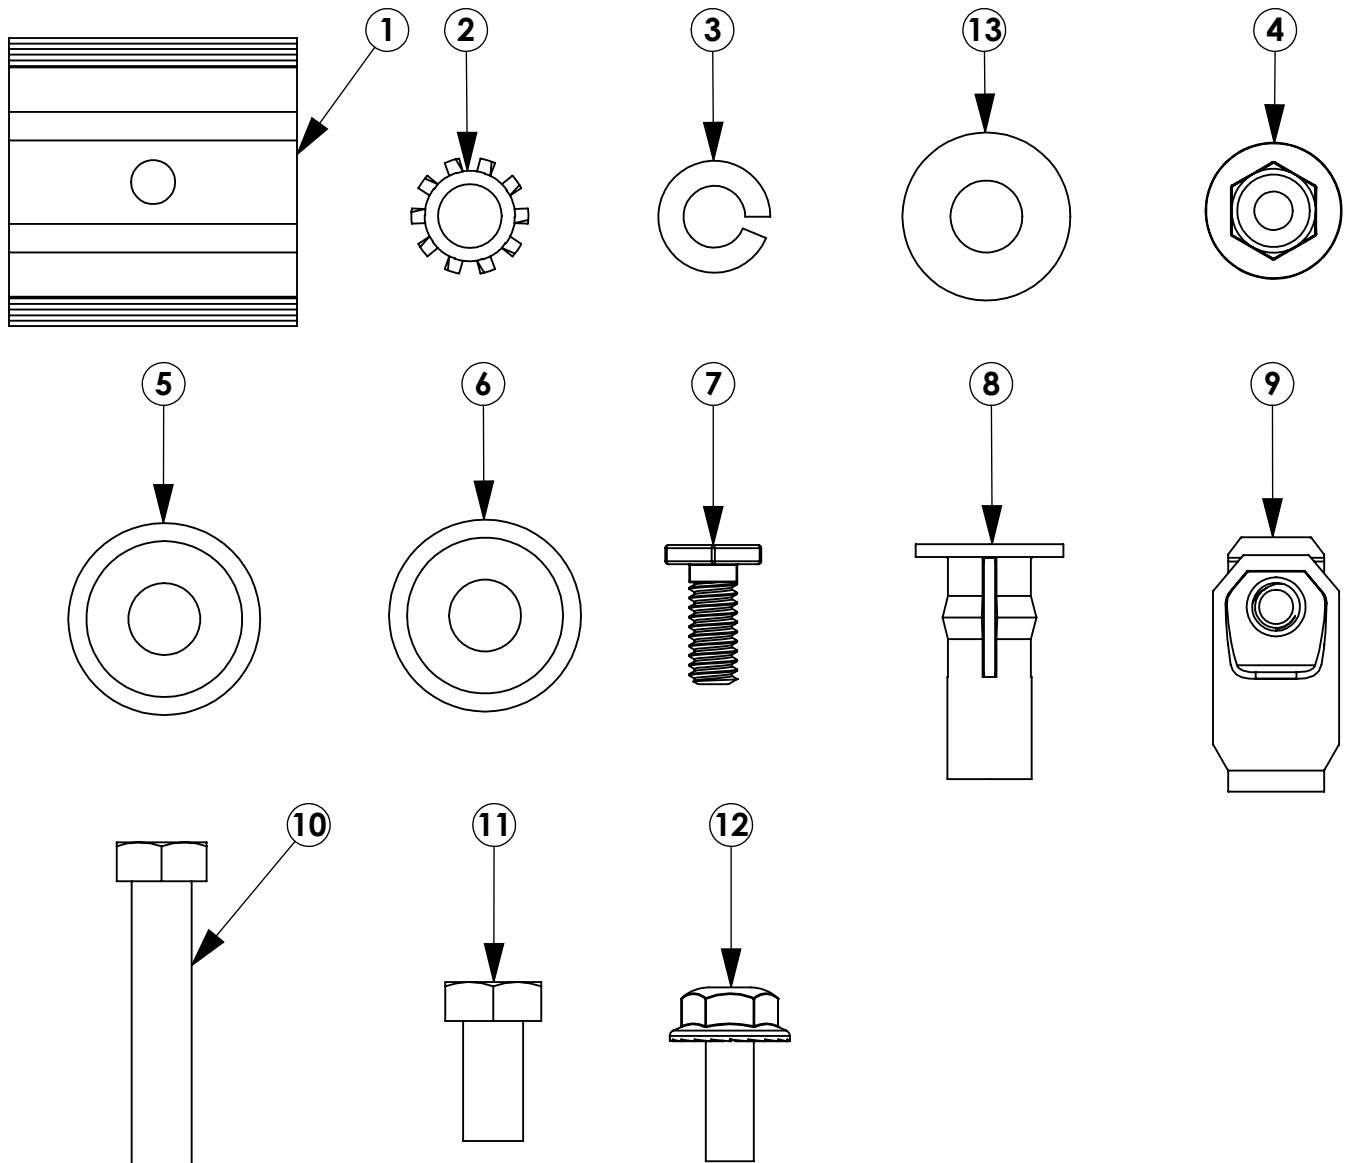

INTENTIONALLY LEFT BLANK

BEST PRACTICE: ORGANIZE ALL FASTENERS & VERIFY THAT ALL ARE ACCOUNTED FOR


PAGE:

12

FASTENERS USED

BAG REFERENCE: BAGAEPMBKSP1

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0092	Screw, Hex Hd, 5/16-18x1.50 Zn Plate, G8	4
2	FAS0165	SCREW,HH 5/16-18X.62 ZN	2
3	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	6
4	FAS0924	BOLT,CRG 1/4-20X.62 FH ZP	1
5	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	1
6	FAS0086	WASHER,FLAT USS 5/16 ZP	6
7	FAS0098	Washer, Lock, Split, 5/16, Zinc Plate	4
8	FAS0085	WASHER,LCK EXT 5/16 ZP	2
9	FAS0091	Plusnut, 5/16	4
10	35335-0	SLIDE, 1.5" / AD RAIL	2
11	03927-1	SPACER,FLR,1010,11/32 ZP	2
12	03927-2	SPACER,FLR, 1010, 11/16 ZP	2
13	FAS0994	U-NUT, 1/4-20, BO	6

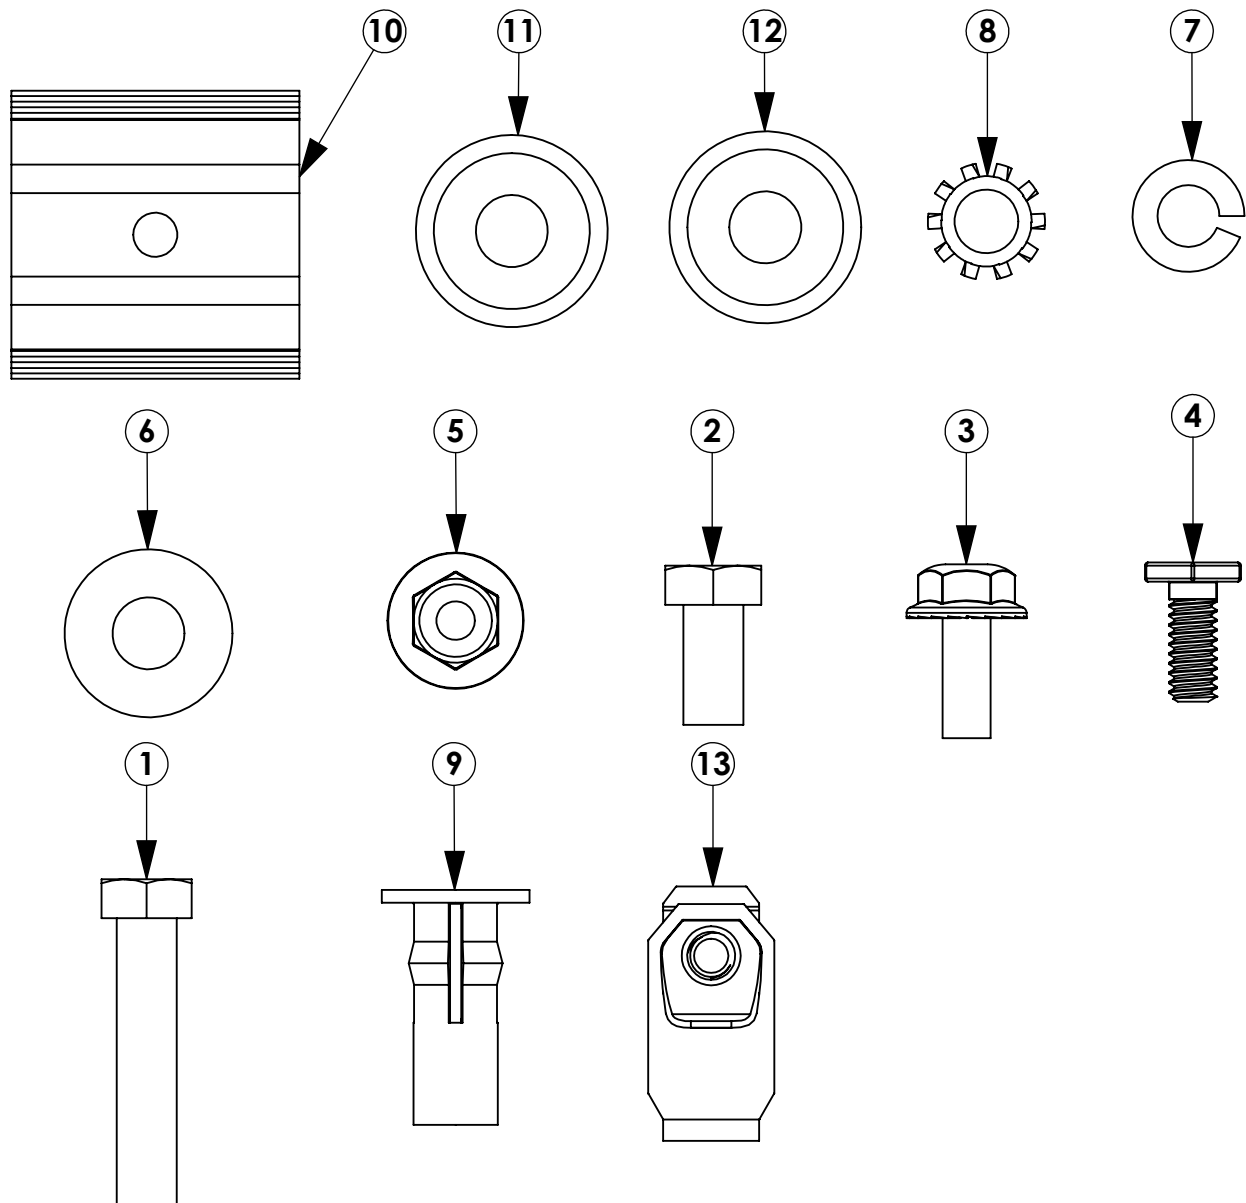

INTENTIONALLY LEFT BLANK

BEST PRACTICE: ORGANIZE ALL FASTENERS & VERIFY THAT ALL ARE ACCOUNTED FOR

PAGE:

14**FASTENERS USED****BAG REFERENCE: SEE BOM****BAGAS-CH68AO**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0994	U-NUT, 1/4-20, BO	32
2	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	32

BAGAS-CH63AO


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0994	U-NUT, 1/4-20, BO	28
2	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	28

BAGAS-CH48AO

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0994	U-NUT, 1/4-20, BO	24
2	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	24

BAGAS-CHS1


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAS0994	U-NUT, 1/4-20, BO	4
2	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	4

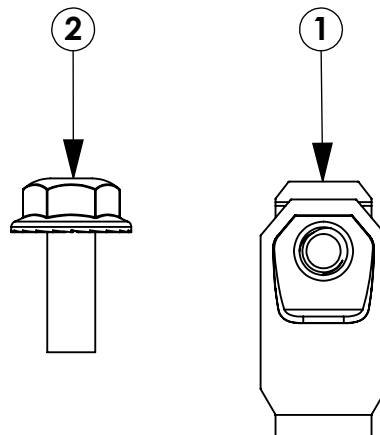

INTENTIONALLY LEFT BLANK

HARDWARE USED**HDW KIT REFERENCE: AEPMBKFT1**


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AEPFMB10-A	END PANEL FLR MNT,10,A	1
2	AEPBELT-FT-A	END PANEL BELT BRKT,FT,A	1
3	AEPRMB-FT-A	END PANEL RAIL MNT BKT,FT,A	1
4	BAGAEPMBKFT1	BAG FOR AEPMBKFT1A	1

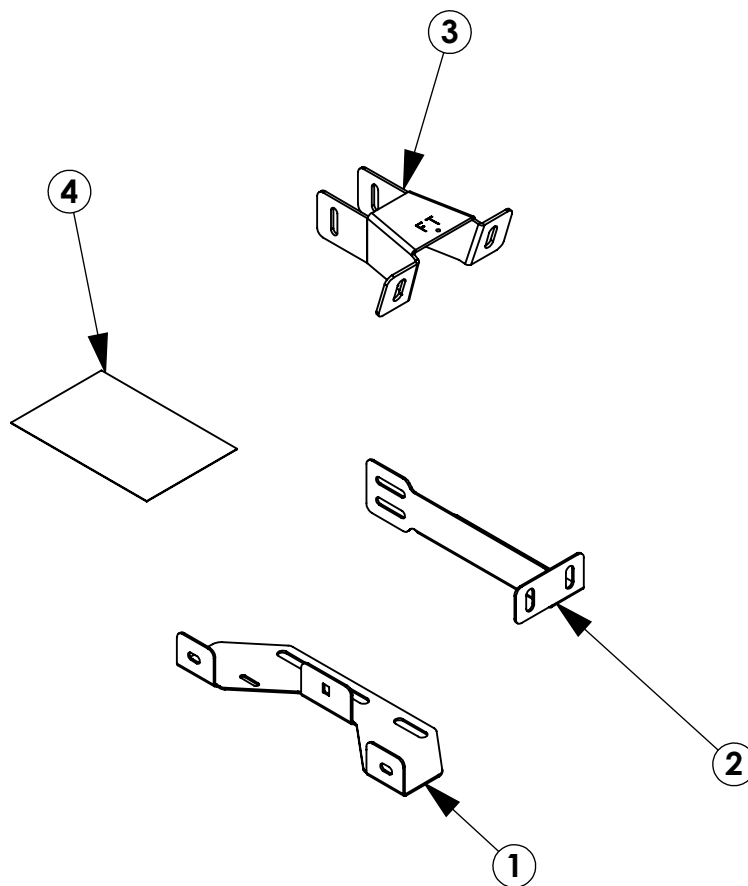


INTENTIONALLY LEFT BLANK

HARDWARE USED**HDW KIT REFERENCE: SEE BOM****AEPMBKGM1**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AEPFMB10-A	END PANEL FLR MNT,10,A	1
2	AEPRMB-GM	END PANEL RAIL MNT BKT,GM	1
3	AEPBELT-GM-A	END PANEL BELT BRKT,GM,A	1
4	BAGAEPMBKGM1	BAG FOR AEPMBKGM1A	1

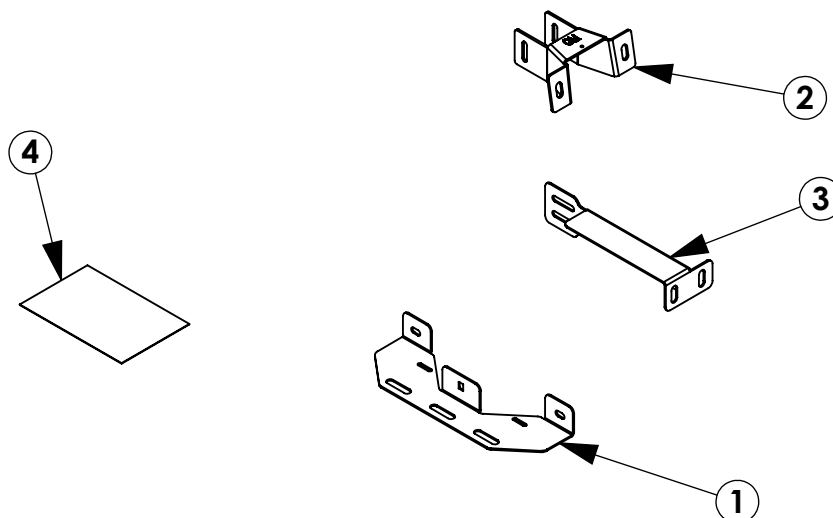**AEPMBKPM1**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	AEPFMB10-A	END PANEL FLR MNT,10,A	1
2	AEPRMB-PM-A	END PANEL RAIL MNT BKT,PM,A	1
3	AEPBELT-PM-A	END PANEL BELT BRKT,PM,A	1
4	BAGAEPMBKSP1	BAG FOR AEPMBKSP1A	1

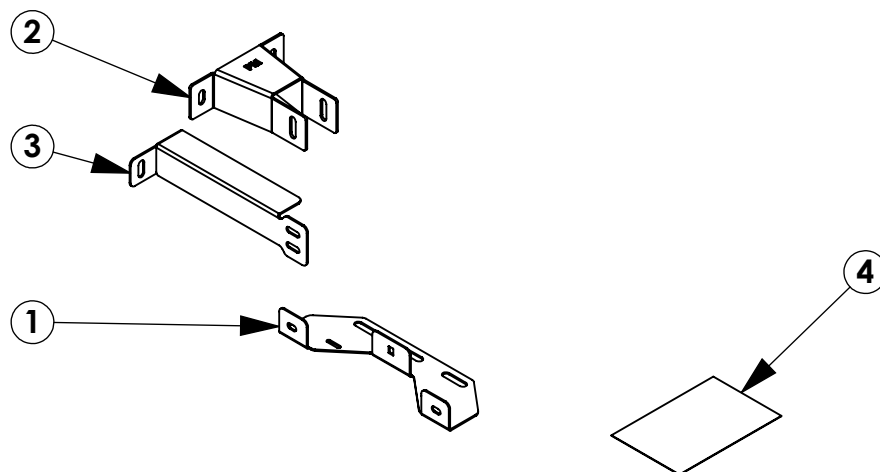

INTENTIONALLY LEFT BLANK

STEP 1 - ASSEMBLE CASE HOLDER SHELVING

Step 1.1
LOCATE DESIRED
HOLE HEIGHT FOR
SHELF'S.

USE REAR HOLE
ON SHELVING TO
DETERMINE IF
SHELVES WILL BE
AT AN ANGLE (AS
SHOWN BELOW)
EITHER AT 90 OR
16 DEGREES.


Step 1.2
SLIDE FAS0994
INTO SQUARE
HOLE, ALIGN
HOLES ON
SHELVING WITH
FAS0994. FULLY
TIGHTEN FAS0018

7/16 WRENCH

REPEAT ON
OTHER SIDE

NOTE:
FOLLOW INSTRUCTION
FOR BUILDINGCASE HOLDER
TOWER ADD ON SHELVING

NOTE:
WHEN USED TO
HOLD TOOLCASES,
SHELVES MUST BE
MOUNTED AT THE
ANGLE

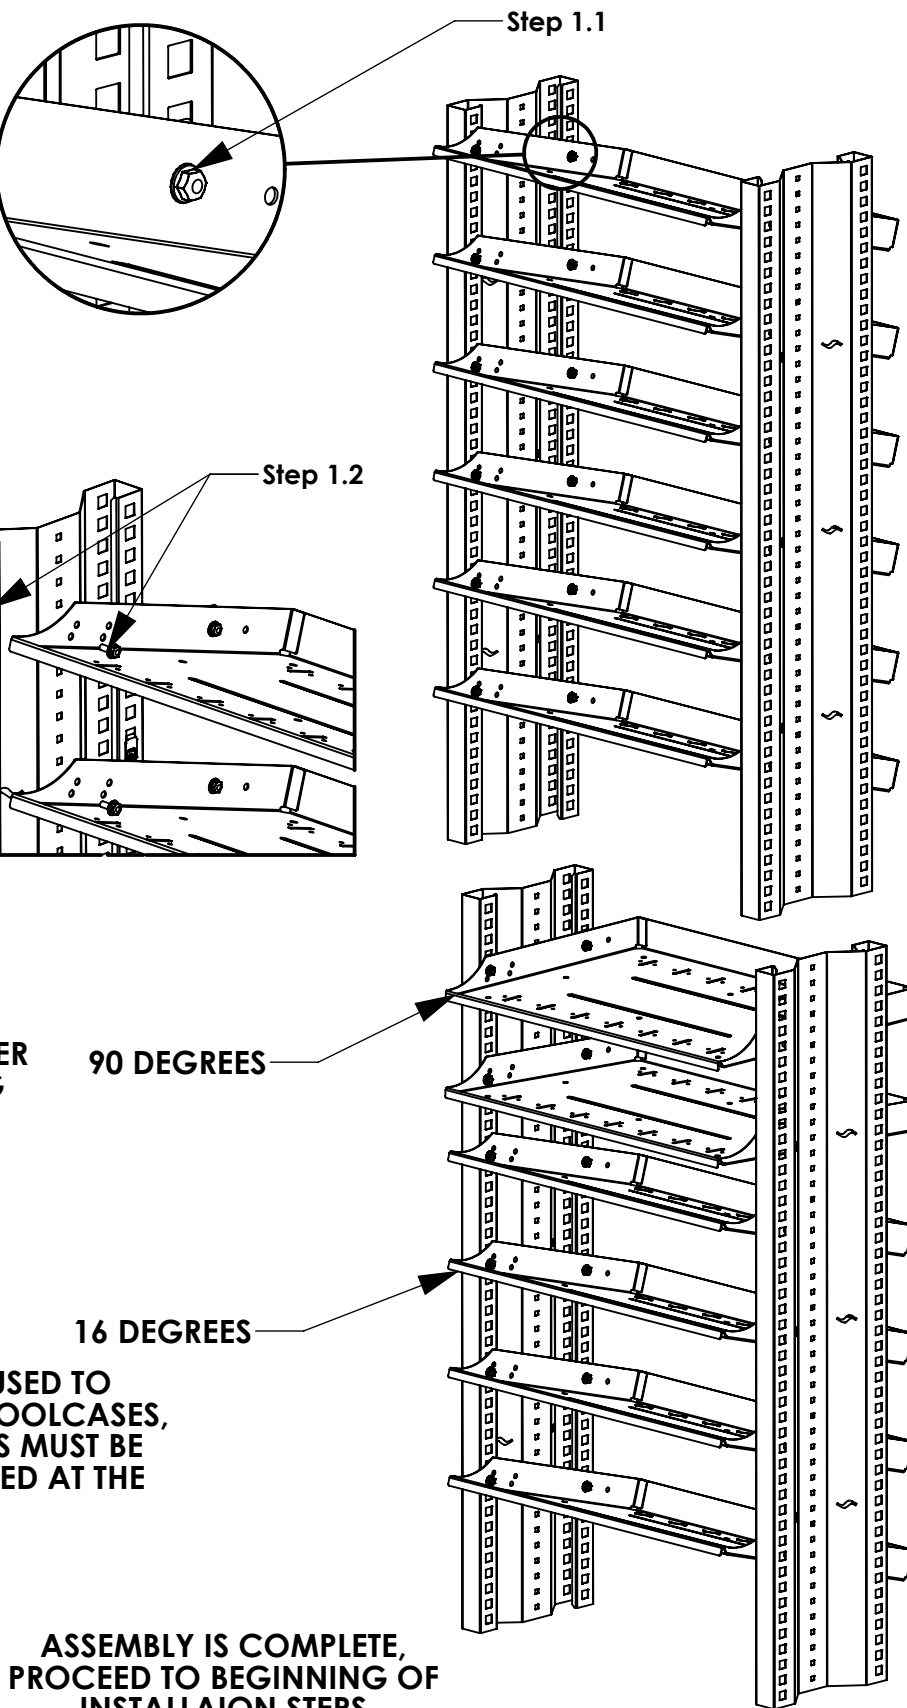

ASSEMBLY IS COMPLETE,
PROCEED TO BEGINNING OF
INSTALLATION STEPS

STEP 2 - ATTACH RAIL MOUNTING BRACKET TO VEHICLE UPPER RAIL KIT

Step 2.1
INSERT RAIL
SLIDES INTO
UPPER RAIL (IF
YOU HAVE NOT
DONE ALREADY)

**QTY 2 PER RAIL
MOUNTING
BRACKET (END
PANEL)**

Step 2.2
LOOSELY
ASSEMBLY UNTIL
AFTER Step 5.1,
(4)FAS0165,
(4)FAS0085,
(4)FAS0086,
(4)35335-0


1/2" WRENCH

Step 2.3
LOOSELY
ASSEMBLY UNTIL
AFTER Step 5.1,
(4)FAS0994 &
(4)FAS0018

7/16 WRENCH


**FAS0094 SHOULD
BE INSERTED INTO
THE HOLE THAT
BEST FITS YOUR
VEHICLE AND
YOU SELECTED
FLOOR OPTION**

**RAIL MOUNTING BRACKETS ARE VEHICLE SPECIFIC AND ARE
LABELED ACCORDINGLY. FORD TRANSIT BRACKETS ARE SHOWN
FOR THE PURPOSES OF THIS INSTRUCTION**

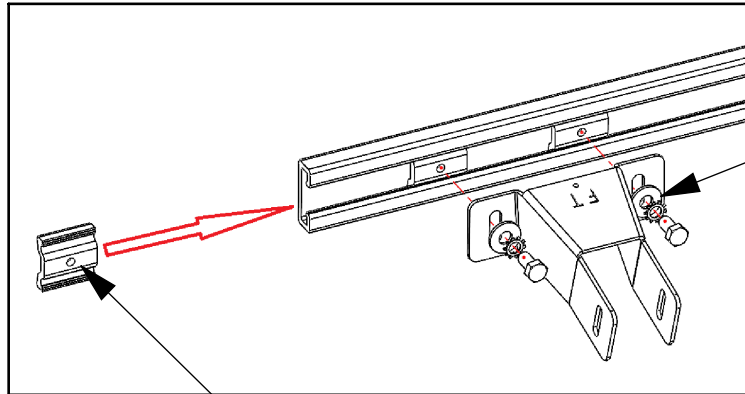


Step 2.1

Step 2.2

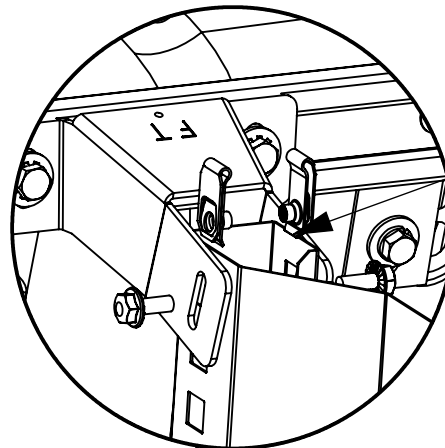

Step 2.3

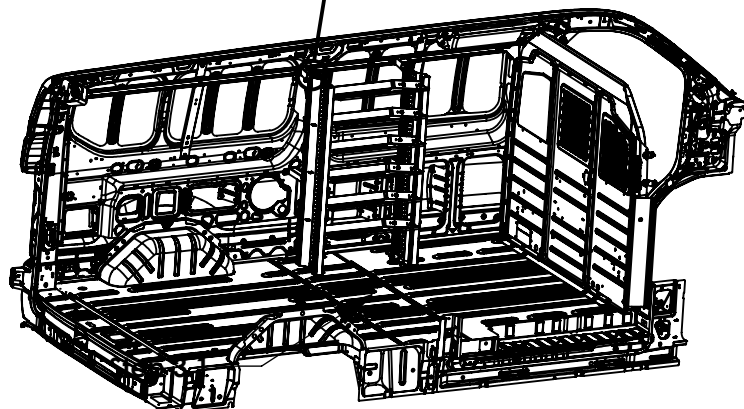

**STEP 3 - ATTACH BELTLINE BRACKETS TO SHELVING UNIT AND
INSTALL IN VEHICLE**

Step 3.1
FULLY TIGHTEN
(4)FAS0994 AND
(4)FAS0018

7/16 WRENCH



NOTE:
REPEAT BOTH STEPS
FOR FRONT OF
SHELVING

Step 3.2
MARK AND
DRILL 1/2" HOLE
IN BELTLINE OF
VEHICLE.

SET PLUSNUTS IN
DRILLED HOLES.

LOOSELY
ASSEMBLY UNTIL
Step 5.1,
(2)FAS0092,
(2)FAS0098,
(2)FAS0086,
(2)FAS0091

1/2" DRILL BIT
PLUSNUT GUN
1/2" SOCKET
DRILL

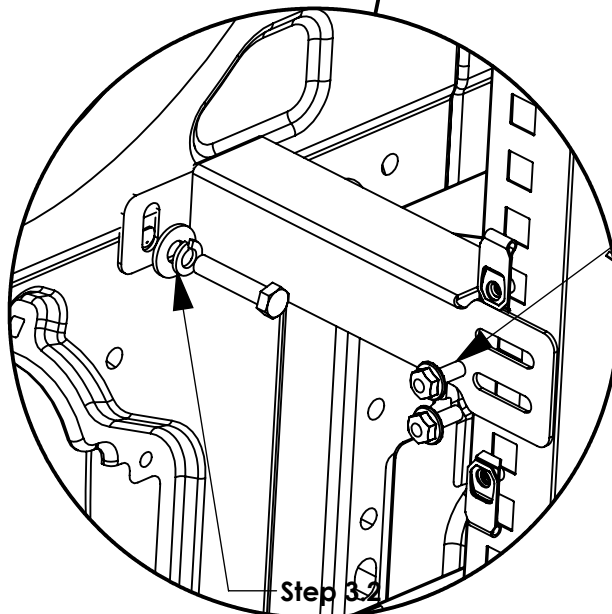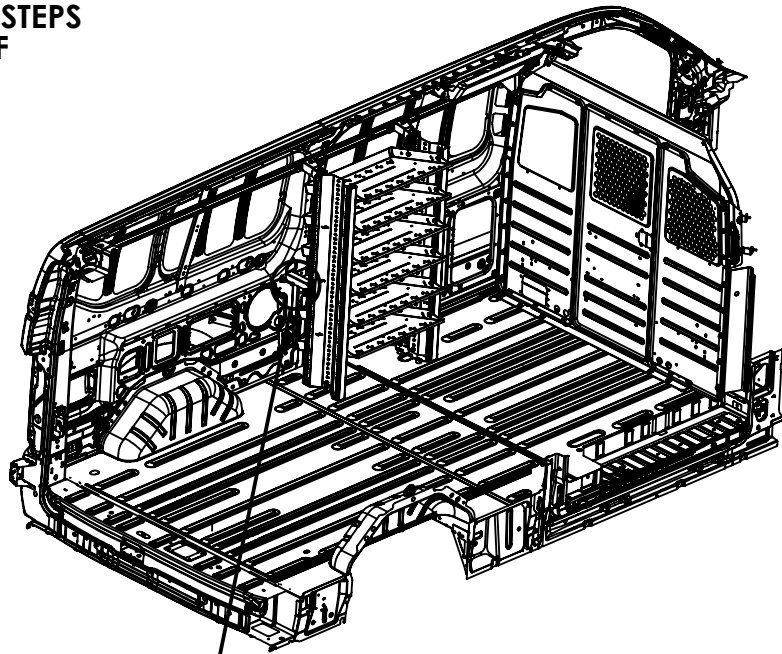

Step 3.1

Step 3.2

STEP 4 - MARK AND DRILL HOLES FOR FLOOR MOUNTING BRACKETS (GAS ONLY)

Step 4.1
PLACE BRACKET
AGAINST INSIDE
FACE OF END PANEL.

USING SMALL SLOT,
MARK HOLES IN
FLOOR FOR END
PANEL FLOOR
MOUNTING
BRACKET.

DRILL HOLE IN
VEHICLE FLOOR. IF
INSTALLING ON OEM
OR AFTERMARKET
FLOOR, USE HOLE
SAW FOR FLOOR
SPACER

(4) PLACES
1/2" DRILL BIT
1 3/16 HOLE SAW



Step 4.2
SET PLUSNUT IN
DRILL HOLES
FROM Step 4.1.

(4) FAS0091 END
PANEL FLOOR
MOUNTING
BRACKET

SHOWN ON
NEXT PAGE



Step 4.3
SLIGHTLY LIFT
SHELVING UNIT
AND PLACE
BRACKET UNDER
END PANEL.
FULLY TIGHTEN
(4) FAS0994,
(4) FAS0018,
(2) FAS0924 &
(2) FAS0055

7/16 SOCKET

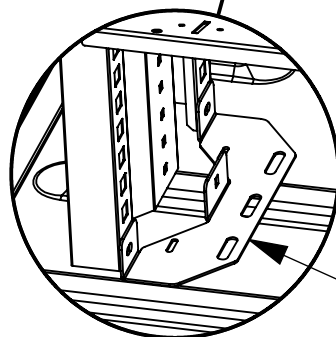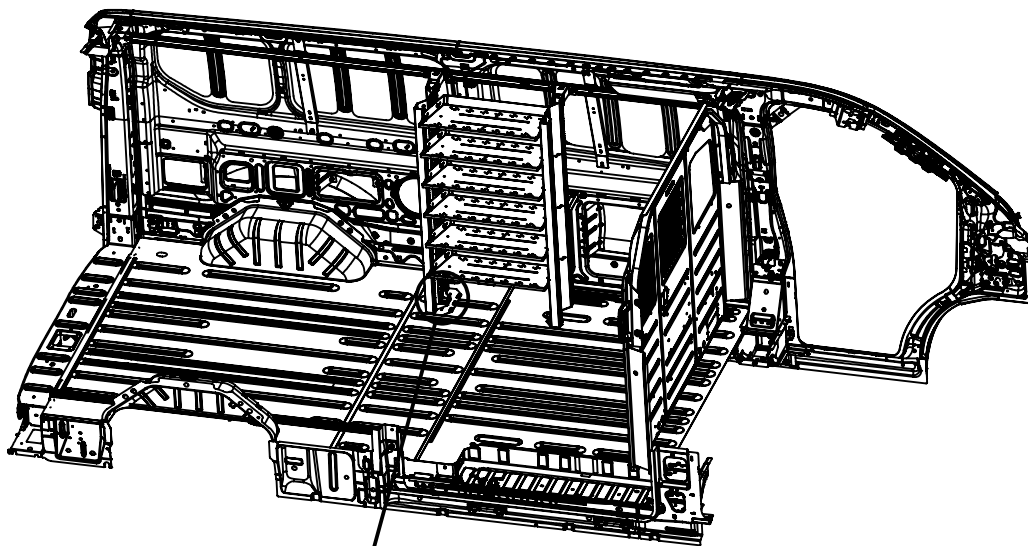

Step 4.1

Step 4.3

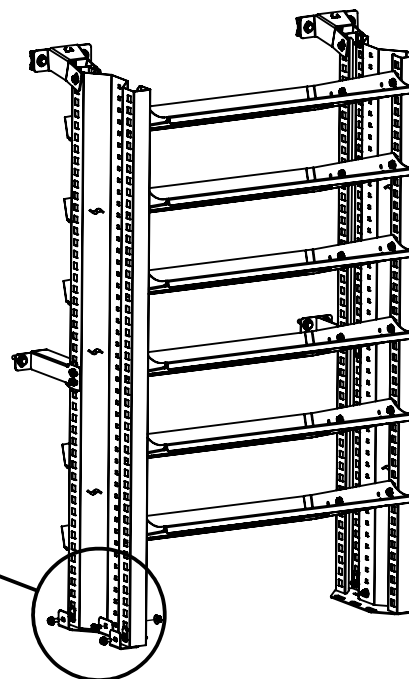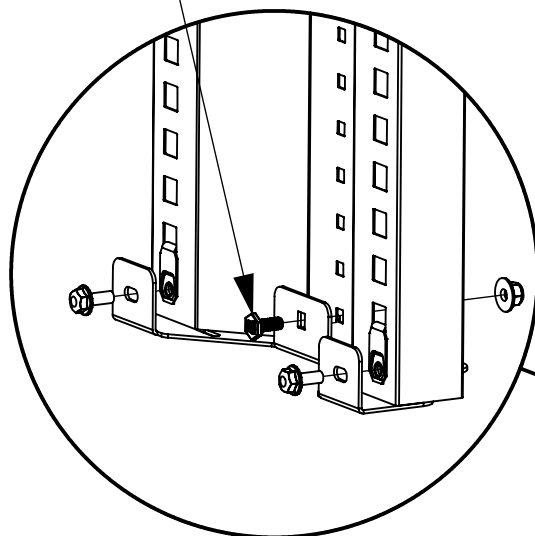

NOTE: VEHICLE HIDDEN FOR CLARITY

STEP 5 - ATTACH SHELVING UNIT TO VEHICLE FLOOR



Step 5.1
FULLY TIGHTEN
(4)FAS0092,
(4)FAS0098,
(4)FAS0086,
(4)FAS0091

1/2" SOCKET

**IF INSTALLING ON
AN OEM OR
AFTERMARKET
FLOOR, OR IF HOLE
IS IN RIB OF VEHICLE,
USE 03927-1 OR
03927-2 TO CREATE
LEVEL MOUNTING
SURFACE**

Step 5.2
FULLY TIGHTEN
BOLTS FROM
Steps 2.2, 2.3, &
3.2

NOTE: VEHICLE HIDDEN FOR CLARITY

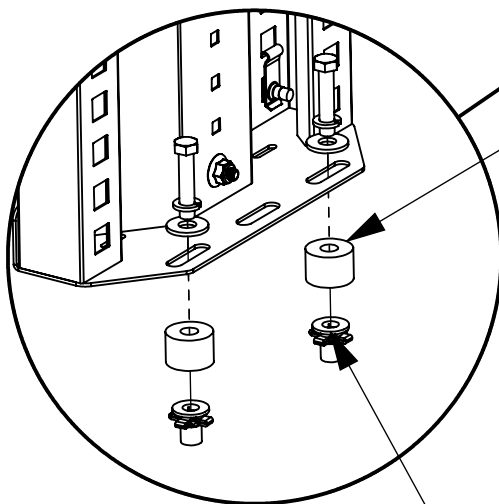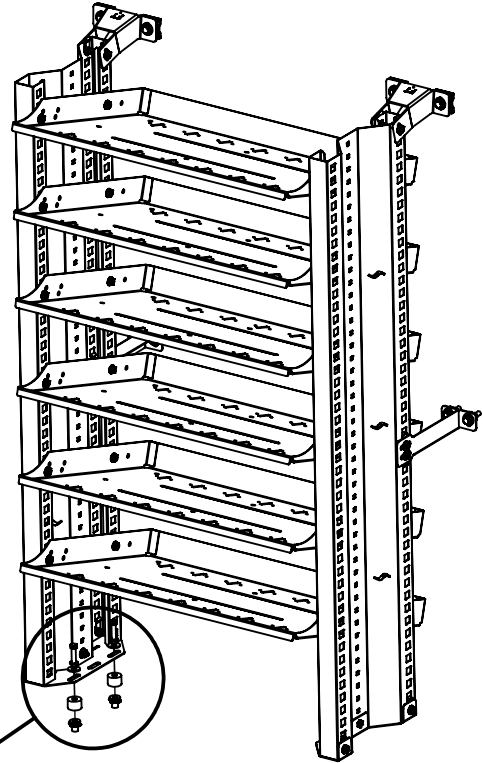

**03927-1 OR
03927-2**

Step 5.1

STEP 6 - ATTACH CASE HOLDER SHELVING ADD ON UNIT TO VEHICLE FLOOR

Step 6.1
FOLLOW Step 1.1 &
1.2 TO ASSEMBLY
CASE HOLDER
SHELVING.

IF NEEDED SLIDE
SHELVING TO
ANOTHER LOCATION
TO ALLOW FOR ADD-
ON TO BE ADDED
INSIDE VEHICLE BAY.


Step 6.2
PLACE CASE
HOLDER ADD
ON NEXT TO
SHELVING UNIT.
PLACE FAS0994
INTO END PANEL
LIKE SHOWN IN
Step 1.2, AND
FULLY TIGHTEN
FAS0018

1/2" WRENCH

Step 6.3
FOLLOW Step 2
TO FINISH BUILD
OF ADDING
ADD-ON TO
SHELVING.

FULLY TIGHTEN
ALL FASTENERS

Step 6.1 &
Step 6.3

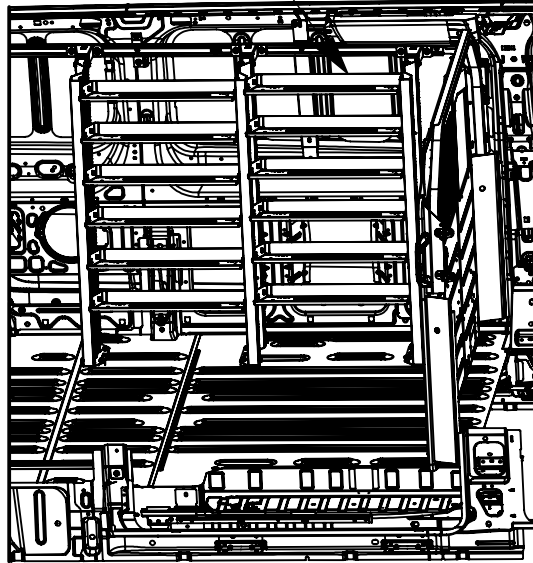

Step 6.2

