

**AD Series Accessory
Mounting Kit Assembly/Installation Instructions**

The following page(s) cover the installation of various Rail Adapter Kits used on the new ASCO AD Series Shelving Kits.

RKFSVLD, RKFSVLDWB "Rail Sys, AD Series, Left Hand Door"
 RKFSVLRWB "Rail Sys, AD Series, Long Wheel Base"
 RKFSVXLWB "Rail Sys, AD Series, Xtra-Long Wheel Base"

BRK1AEP3 "Accessory Bracket Kit, End Panel"

WU1: 43 "Catalog File, 3-Shell, 12 DX34" Hx6"W"
 (Requires (2) RKABRK2 per install)

BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket,
 Phillips Screwdriver, Torque Wrench

Attach both End Panel Mounting Weldments (BKABRK2) to the 43 with fasteners supplied with the kit. Note, the upper weldment will use existing holes, while the lower weldment will require marking and drilling (2) 9/32" dia. thru mounting holes in the side wall of the unit. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.

43



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

**AD Series Accessory
Mounting Kit Assembly/Installation Instructions**


WU1: ACT3 "Aerosol Can Tray, 3-Hole"
 ACT4 "Aerosol Can Tray, 4-Hole"
 (Requires (2) RKABRK2 per install)

BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket,
 Phillips Screwdriver, Torque Wrench

Attach both End Panel Mounting Weldments (BKABRK2) to the ACT3 & ACT4 with fasteners supplied with the WRHS kit. When attaching accessory to the mounting weldments use existing holes in the accessory, aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

**AD Series Accessory
 Mounting Kit Assembly/Installation Instructions**
BRK1AEP3 "Accessory Bracket Kit, End Panel"
WUJ: AGSCH2 "Suction Cup Holder"

BEFORE YOU START

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

**YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO
 COMPLETE THIS JOB.**

*7/16" End Wrench, Ratchet w/7/16" Socket
 Phillips Screwdriver, Torque Wrench*


AGSCH2

Attach one End Panel Mounting Weldment (BKABRK2) to the AGSCH2 with fasteners supplied with the accessory kit. When attaching AGSCH2 to mounting weldment use the upper holes in the AGSCH2, aligning them with holes in the mounting weldment. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldment to shelf end panel.




**YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN
 THE VEHICLE FOR FUTURE REFERENCE!**

**AD Series Accessory
 Mounting Kit Assembly/Installation Instructions**
BRK1AEP3 "Accessory Bracket Kit, End Panel"
WUJ: BH4 "Binder Holder, 4-Pocket"
 CBS "Literature Holder, 5-Slot"
(Requires (2) RKABRK2 per install)
BEFORE YOU START

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

**YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO
 COMPLETE THIS JOB.**

*7/16" End Wrench, Ratchet w/7/16" Socket
 Phillips Screwdriver, Torque Wrench*


BH4
CBS

Attach both End Panel Mounting Weldments (BKABRK2) to the WRH5 with fasteners supplied with the WRH5 kit. When attaching WRH5 to mounting weldments use existing holes in the WRH5 aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.



**YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN
 THE VEHICLE FOR FUTURE REFERENCE!**

BRK1AEP5 "Accessory Bracket Kit, End Panel"


- PA7 "Reflector Flare Kit, 5" (Requires (2) PKA8RK2 per install)
- PA8 "Fire Ext. IAL10BC 2.5# (Requires (2) PKA8RK2 per install)
- PA9 "First Aid Tray, 11"x4.5"x3.125"
- PA10 "Practice Holder"
- PA11 "Cabinet File Box, 3.75"Dx12"Wx10"H"


BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY.

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket,
Phillips Screwdriver, Torque Wrench

Attach both End Panel Mounting Weldments (PKA8RW2) to the PA7 & PA8 with fasteners supplied with the accessory kit. Please note that only one mounting weldment is required when attaching the PA9, PA10, & PA11 to the mounting weldment use existing holes in the accessory, aligning them with holes in the mounting weldments. Then attach assembly to the AD Shell End Panel in desired location. See photo's below for details on mounting weldments to shell end panel.

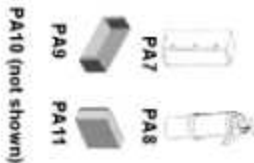

YOUR INSTALLATION IS NOW COMPLETE! SHOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

BRK1AEP5 "Accessory Bracket Kit, End Panel"


- TH30 "Tank Holder, 30# Sgl (Requires (2) PKA8RK2 per install)
- TH50 "Tank Holder, 50# Sgl (Requires (2) PKA8RK2 per install)

BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY.

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

7/16" End Wrench, Ratchet w/7/16" Socket,
Phillips Screwdriver, Torque Wrench

Attach both End Panel Mounting Weldments (PKA8RW2) to the PA7 & PA8 with fasteners supplied with the accessory kit. Please note that only one mounting weldment is required when attaching the PA9, PA10, & PA11 to the mounting weldment use existing holes in the accessory, aligning them with holes in the mounting weldments. Then attach assembly to the AD Shell End Panel in desired location. See photo's below for details on mounting weldments to shell end panel.



YOUR INSTALLATION IS NOW COMPLETE! SHOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

BRK1AEP5 "Accessory Bracket Kit, End Panel"

WUJ:


- UH10 "Utility Hook, 1", Single"
- UH25 "Utility Hook, 2.5", Single"
- UH50 "Utility Hook, 5", Single"
- TA1 "Four Hook Bar"
- TA2 "Hard Hat Holder"

BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

- 7/16" End Wrench, Ratchet w/7/16" Socket,
- Phillips Screwdriver, Torque Wrench

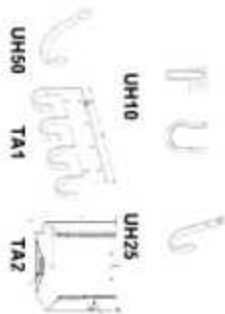

Attach one End Panel Mounting Weldments (BKABRK2) to the accessory with fasteners supplied with the accessory kit. When attaching accessory to mounting weldment use existing holes in the accessory, aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE

BRK1AEP5 "Accessory Bracket Kit, End Panel"

WUJ:

- WRH5 "Spool Holder, 6", 5-Bar"
(Requires (2) BKABRK2 per install)

BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

- 9/16" End Wrench, Ratchet w/9/16" socket, Torque Wrench



WRH5

Attach both End Panel Mounting Weldments (BKABRK2) to the WRH5 with fasteners supplied with the WRH5 kit. When attaching WRH5 to mounting weldments use existing holes in the WRH5 aligning them with holes in the mounting weldments. Then attach assembly to the AD Shelf End Panel in desired location. See photo's below for details on mounting weldments to shelf end panel.



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!