



ADRIAN STEEL

Cargo Management Solutions for Commercial Vehicles

CCD12 CENTER CONSOLE DESK

PRODUCT WEIGHT

45 lbs.

WIDTH x DEPTH x HEIGHT


12.15 x 22.38 x 18.35

COLOR

GRAY

CATALOG NUMBER

CCD12

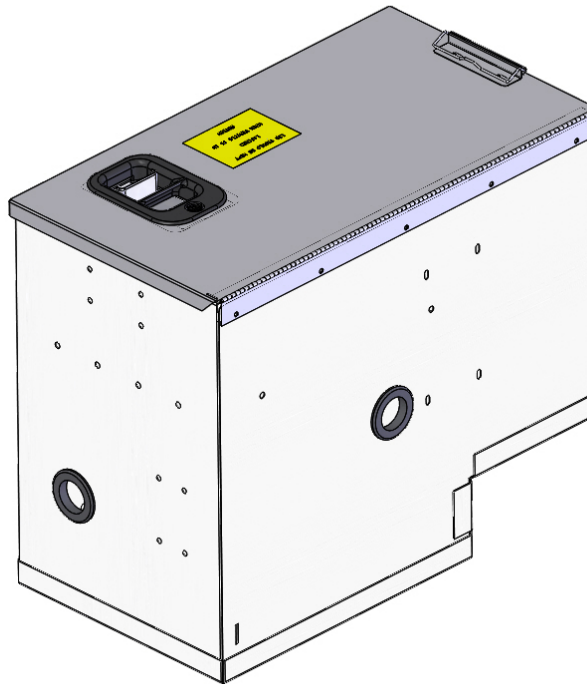

PRODUCT FEATURES

Center console desk is designed to be used with optional powerstrip, PA9, hanging file kit CCDHF12, and laptop holder CCDLTH

PAGE 1 of 1


The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.

Introduction / Comments:

This Center Console Desk is designed for storage of chargers, power strip, CCDHF12, CCDLTH, AND PA9.

Note:

It is advised that all fasteners used in this assembly and installation should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your Center Console gives you long service life.

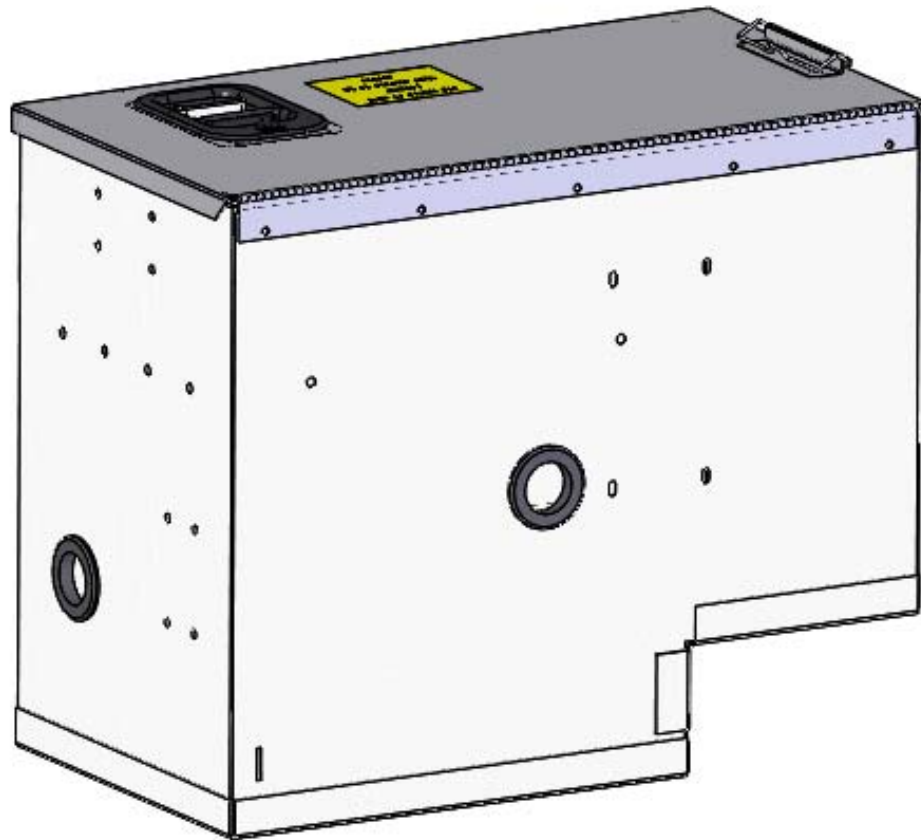

CENTER CONSOLE DESK FOR MISC USE.

- PRECAUTIONS -



CAUTION



**THE USE OF AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!**



CAUTION



**ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



DANGER



**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



CAUTION



**TO AVOID DAMAGING THE VEHICLE ALWAYS
USE DRILL STOPS WHEN DRILLING ANY IN-
STALLATION HOLES!**



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP



RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS




MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting location. Position the product to be installed into the vehicle and once you are satisfied with the mounting locations, mark the mounting locations. Using a 1-3/16" diameter carpet cutter (P/N: 31183-0). Select the appropriate floor spacers as shown in the illustration. Set those aside for use later into the installation process. Using the correct drill bit size for the selected plusnut, drill the mounting holes in the vehicle sheet metal to prepare for installing the plusnuts.

If you are thru-bolting at any of the locations simply drill a hole that is 1/16" larger than the bolt size(s) for those locations.

Once you have drilled the holes into the vehicle, the raw metal edges should be sealed using a self-etching primer to resist corrosion and potential fastener point failure.

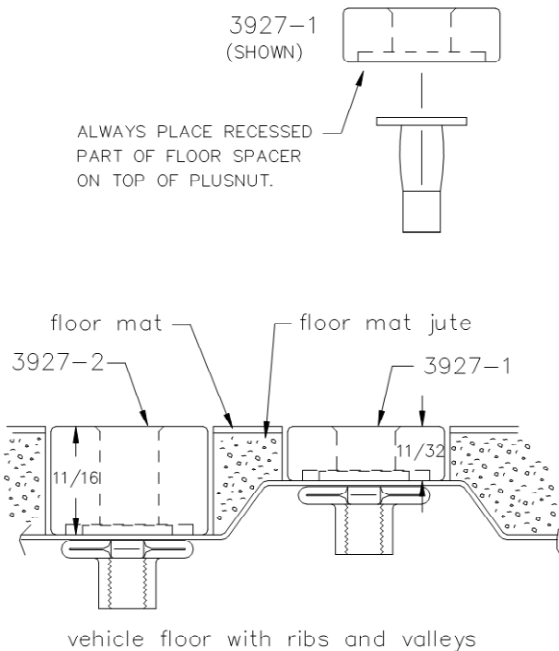


A PLUSNUT (RIVNUT) SETTING TOOL IS REQUIRED FOR PLUSNUT (RIVNUT) INSTALLATION AND IS SUPPLIED WITH THIS KIT. OR USE AN AIR POWERED PLUSNUT SETTING GUN.

1/4-20UNC Plusnut (FAS0052) Use 3/8" dia. drill w/stop

FAS0080 SCREW, HXHD, 1/4-20UNCx2.00", G8
FAS0067 WASHER, FLAT, 1/4"ID
22200-0 PLUSNUT TOOL

5/16-18UNC Plusnut (FAS0091) Use 1/2" dia. drill w/stop

FAS0095 SCREW, HXHD, 5/16-18UNCx2.00", G8
FAS0086 WASHER, FLAT, 5/16"ID
22200-0 PLUSNUT TOOL

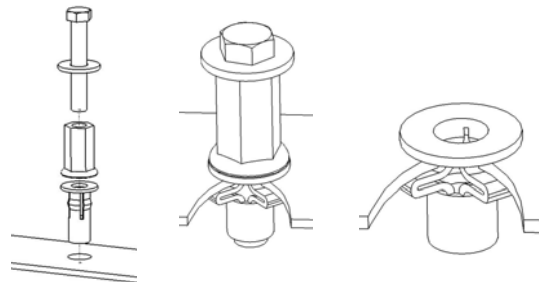


Place barrel of the plusnut body in sheet metal thru hole until flange is flush with sheet metal.

Using a 9/16" combination wrench of plusnut tool body and a second hand wrench, ratchet, or air tool, rotate the hex bolt head CW to draw plus nut flanges up (set the plusnut).


CCD12 CENTER CONSOLE DESK

ITEM NO.	PART NUMBER	DESCRIPTION	CCD12/QT Y.
1	37760-G	LID WELDMENT, CCD12	1
2	50045-G	BODY WELDMENT, CCD12	1
3	HDWCCD12	CCD12 HARDWARE CARTON	1
4	25011-0	DECAL LID... LATCHED	1

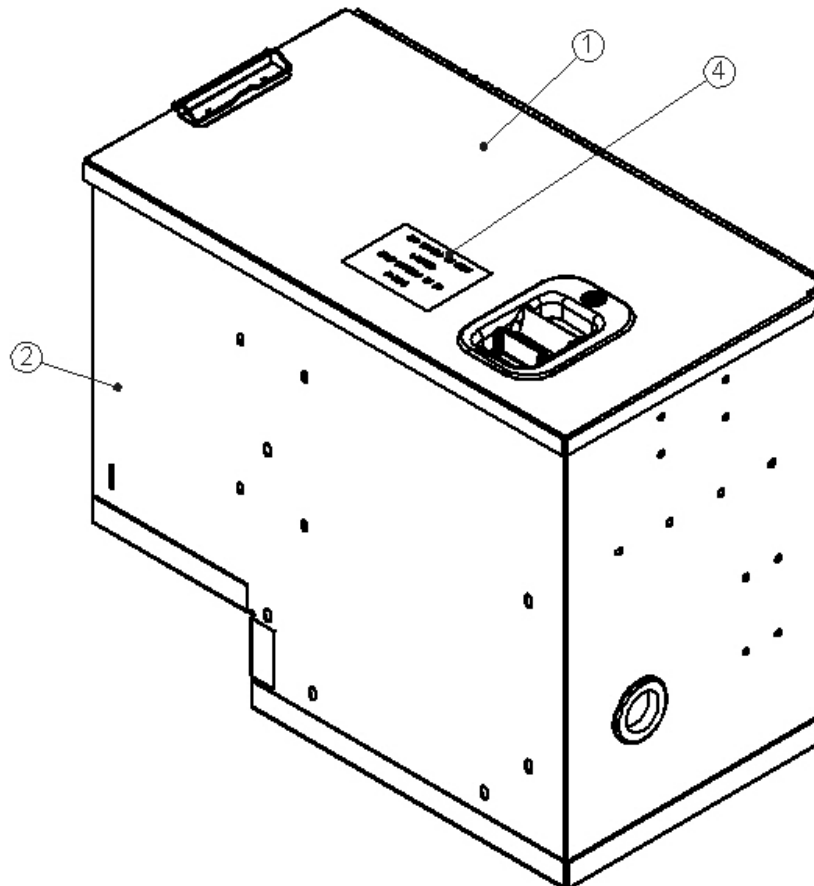


HDWCCD12 CCD12 HARD WARE KIT

ITEM NO.	PART NUMBER	DESCRIPTION	HDWCCD 12/QTY.
1	BAG50050	FASTENER BAG FOR CCD12	1
2	HDW50050	HARDWARE BAG FOR CCD10 AND CCD12	1
3	44388	GROMMET,RUBBER, 1.5" ID	3
4	35295-B	MOLDED SLAM LATCH	1
5	CRT25386-1	HARDWARE BOX FOR CCD	1

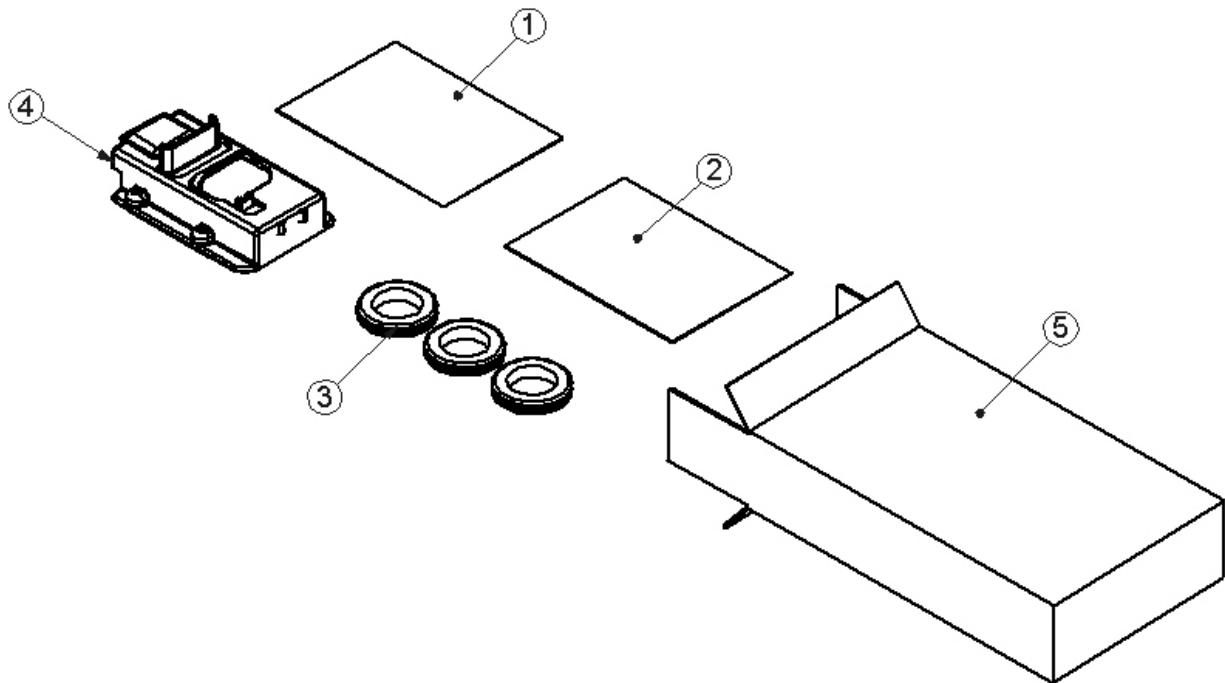


HDW50050 HARDWARE BAG FOR CCD10 & CCD12

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	5" x 7" 3MIL AUTOBAG	1
2	FAS0137	Screw, Round Phillips Head, #6-32x0.375, Zinc plate	2
3	FAS0138	Nut, Hex Flange, #6-32, Zinc Plate	2
4	34341-0	9309K16 MCMaster CARR BUMPER	2
5	25384-0	SPRING CLIP, CCD	1
6	FAS0030	Screw, Round Phillips Head, #10-24x0.375	5

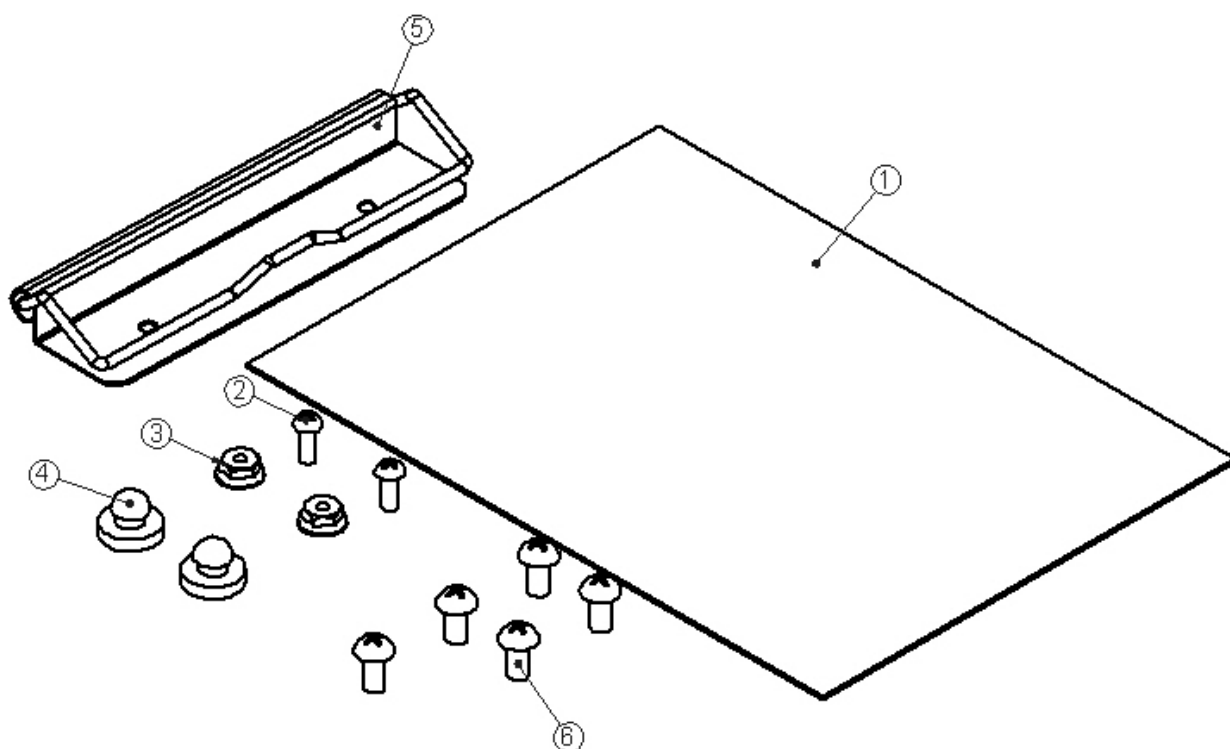


BAG50050 FASTENER BAG FOR CCD12


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	5" x 7" 3MIL AUTOBAG	1
2	FAS0020	Nut, Hex Flange, #10-24	5
3	FAS0091	Plusnut, 5/16	4
4	FAS0092	Screw, Hex Hd, 5/16-18x1.50 Zn Plate, G8	4
5	21166-0	ECCENTRIC WASHER	4
6	03927-1	Floor Spacer Short	4
7	03927-2	Tall Floor Spacer	4
8	FAS0098	Washer, Lock, Split, 5/16, Zinc Plate	4

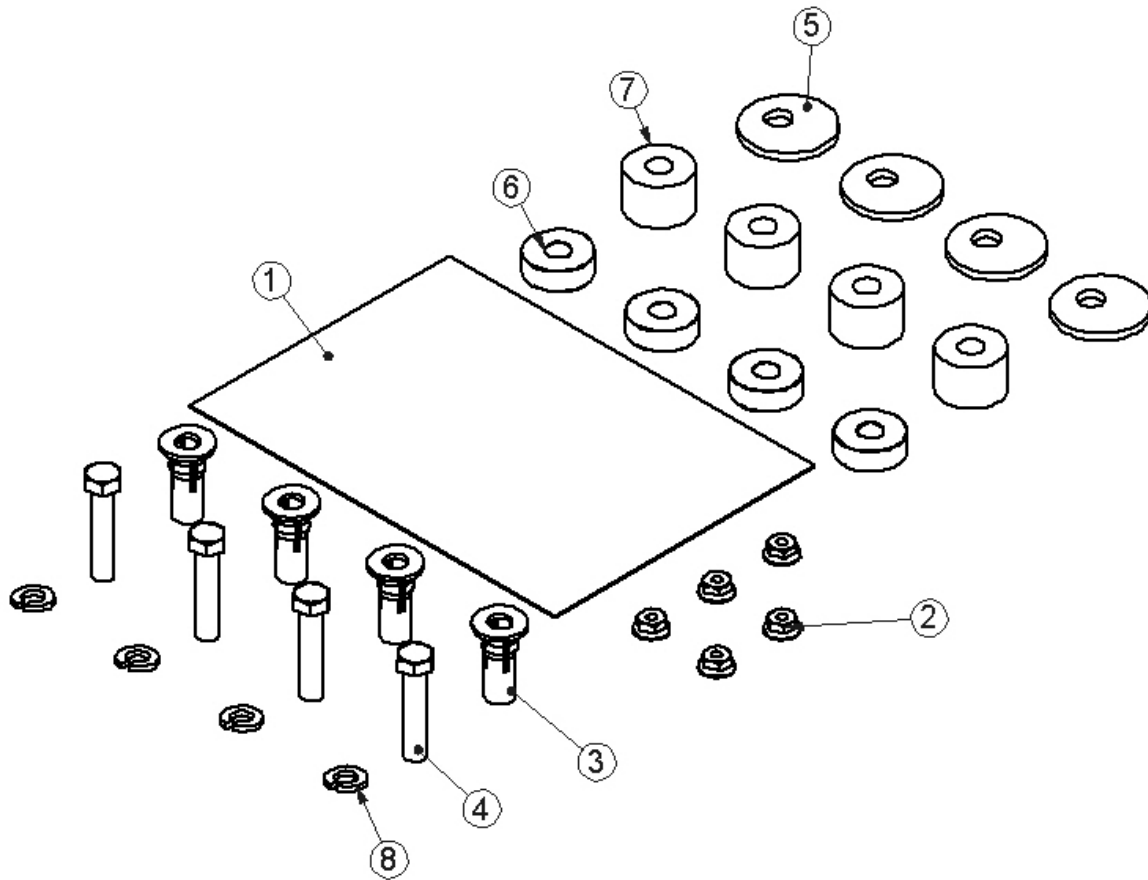

LID ASSEMBLY INSTALL

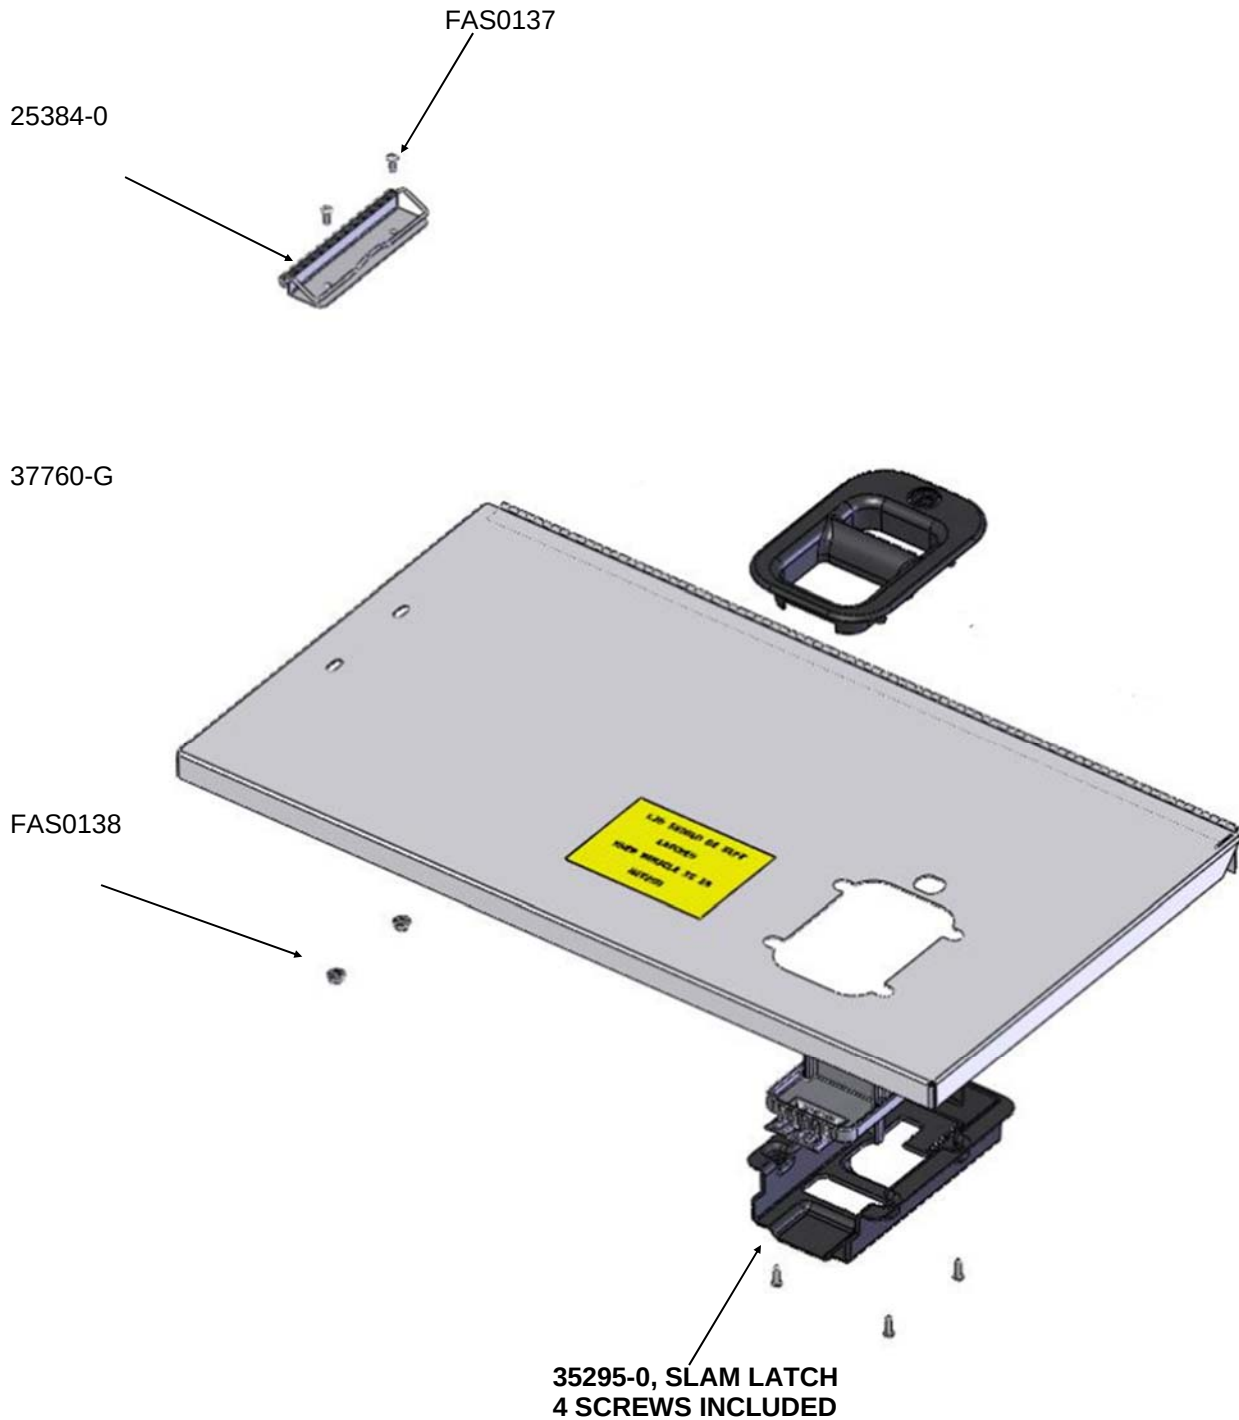


INSTALL CENTER FILE, AND GROMMETS

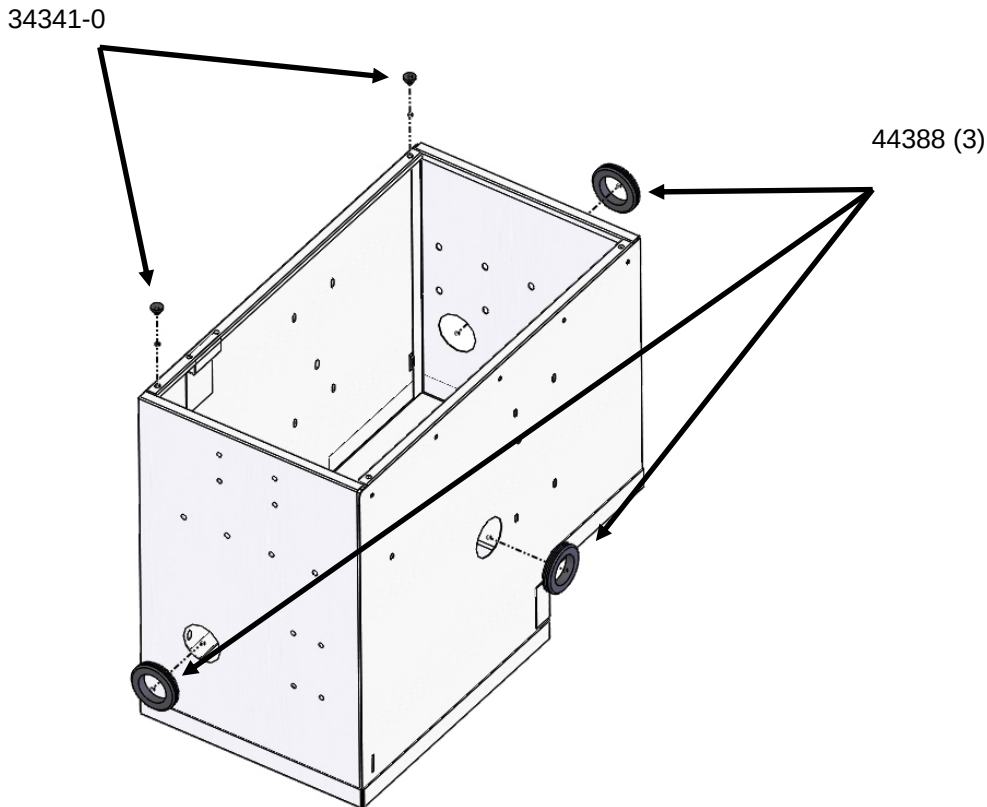


PRIOR TO INSTALLING LID, INSTALL ANY ACCESSORIES INSIDE CCD WITH INSTRUCTIONS SUPPLIED WITH ACCESSORIES.

INSTALL LID ASSEMBLY

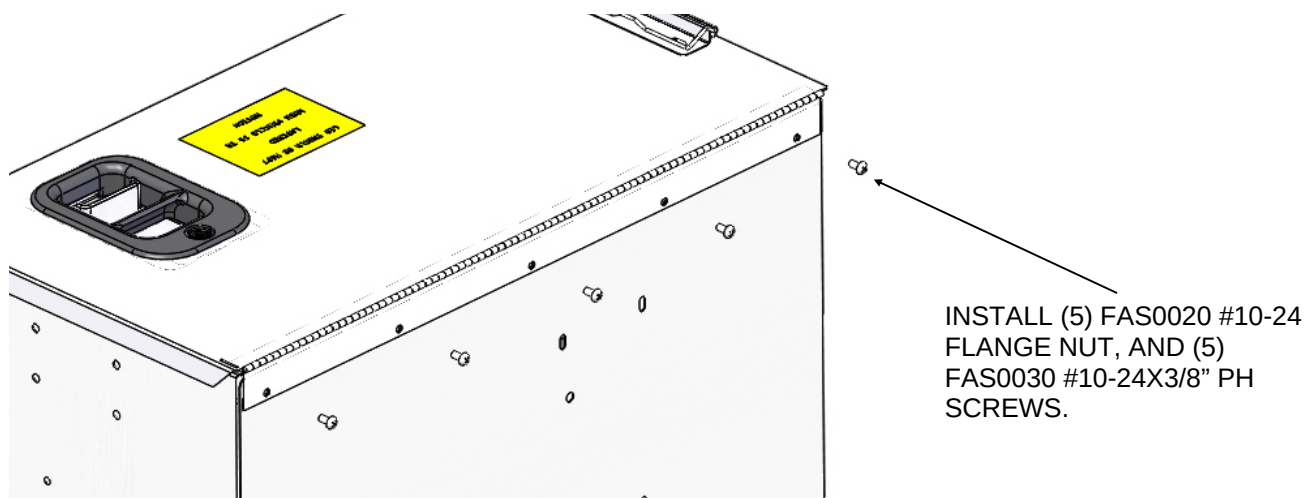

INSTALL INTO VEHICLE

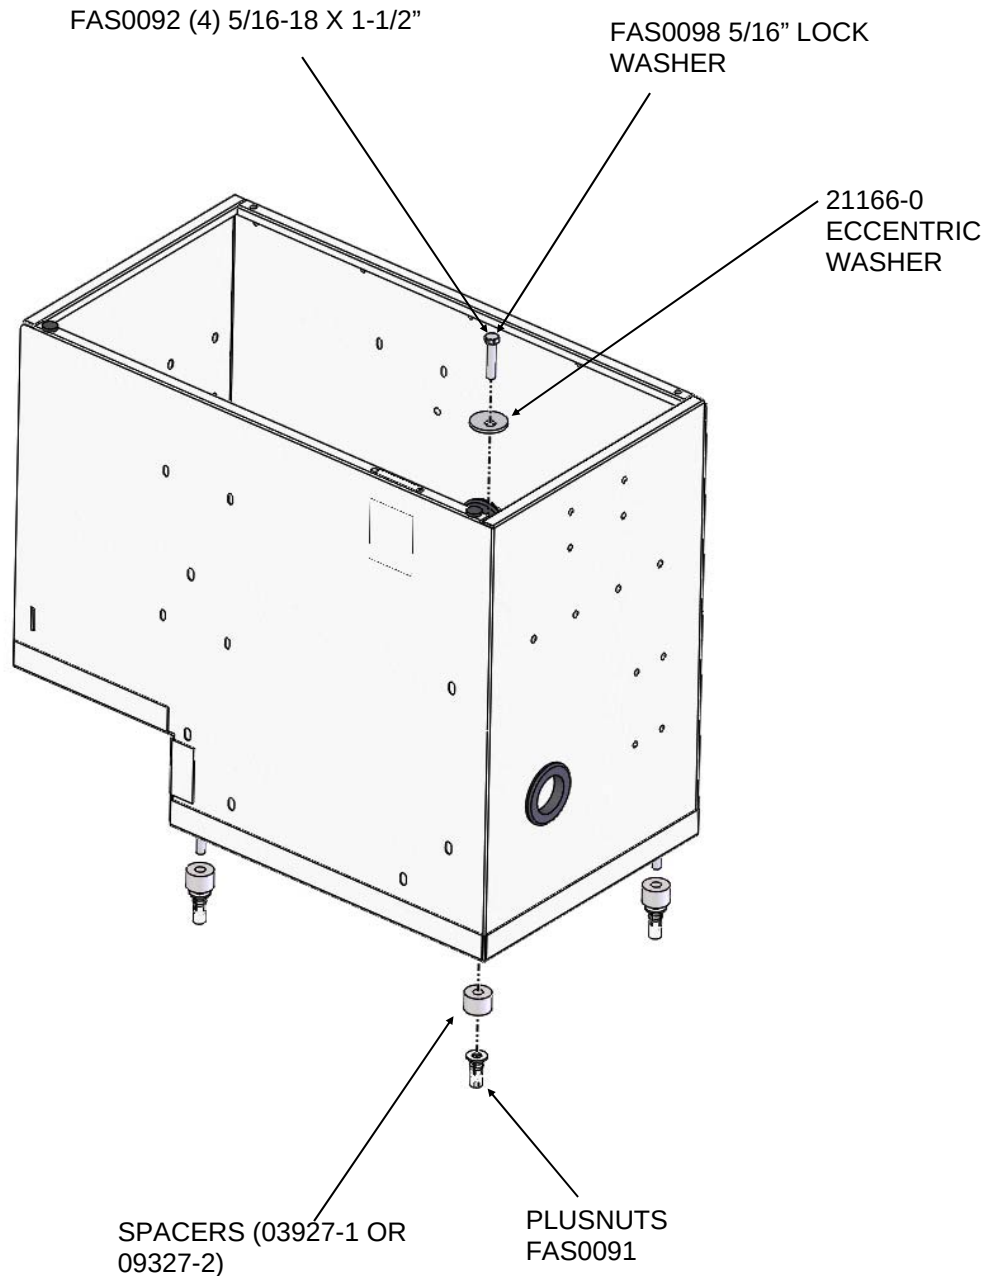

**DOUBLE CHECK ALL FASTENERS LOCATIONS TO BE SURE THAT ALL
FASTENERS ARE TIGHTENED TO SPECIFICATIONS.
YOUR INSTALLATION IS NOW COMPLETE!
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!**