


CNT,CONSOL,HANG FILE, 12"

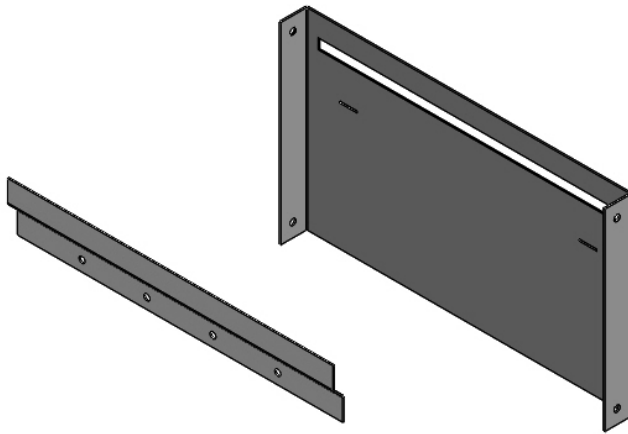

PRODUCT WEIGHT
3.00 LBS

WIDTH x DEPTH x HEIGHT
11.8" x 1" x 7"

CAPACITY

COLOR

GRAY

CATALOG NUMBER

CCDHF12

PRODUCT FEATURES

HANGING FILE KIT IS DESIGNED TO HOLD LEGAL AND LETTER SIZE HANGING FILES IN THE CCD12.

CAN BE USED WITH CCDLTH IF THE FILE HANGER IS INSTALLED IN THE LEGAL FILE SIZE.


Introduction / Comments:

**CCDHF12 HANGING FILE BRKT KIT FOR CCD12,
DESIGNED TO HOLD LETTER OR LEGAL FILES.**

Note:

It is advised that all fasteners used in this assembly and installation should be checked for tightness at the following intervals: @ 2-weeks and again @ 6-weeks of operation. This preventive maintenance step must be completed to ensure your Product gives you long service life.

SHOWN TRANSPARENT
FOR CLARITY

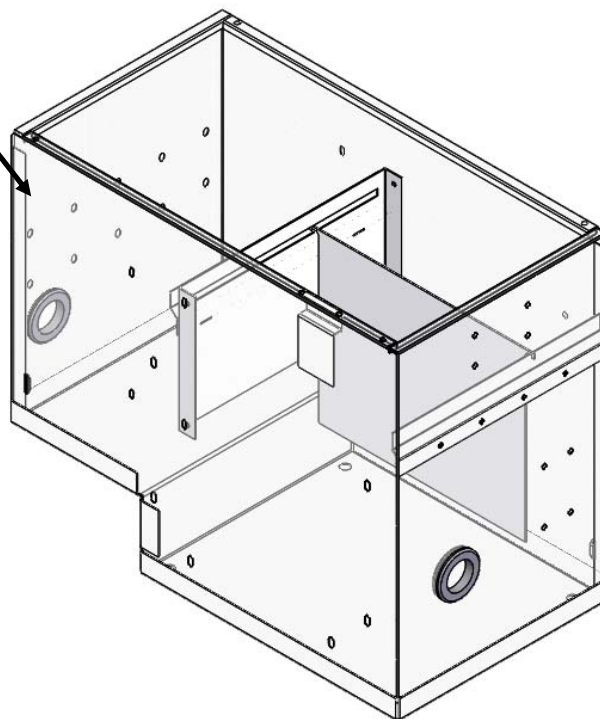

CCDHF12 HANGING FILE BRKT KIT FOR CCD12

- PRECAUTIONS -



CAUTION



**THE USE OF AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!**



CAUTION



**ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



DANGER



**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



CAUTION



**TO AVOID DAMAGING THE VEHICLE ALWAYS USE DRILL
STOPS WHEN DRILLING ANY INSTALLATION HOLES!
ADRIAN AVAILABLE PART #'S 31121-0 (1/2" DEEP),
31122-0 (3/4" DEEP)**



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP



RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS



MEASURING TAPE


ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting location. Position the product to be installed into the vehicle and once you are satisfied with the mounting locations, mark the mounting locations. Using a 1-3/16" diameter carpet cutter (P/N: 31183-0). Select the appropriate floor spacers as shown in the illustration. Set those aside for use later into the installation process.

Using the correct drill bit size for the selected plusnut, drill the mounting holes in the vehicle sheet metal to prepare for installing the plusnuts.

If you are thru-bolting at any of the locations simply drill a hole that is 1/16" larger than the bolt size(s) for those locations.

Once you have drilled the holes into the vehicle, the raw metal edges should be sealed using a self-etching primer to resist corrosion and potential fastener point failure.

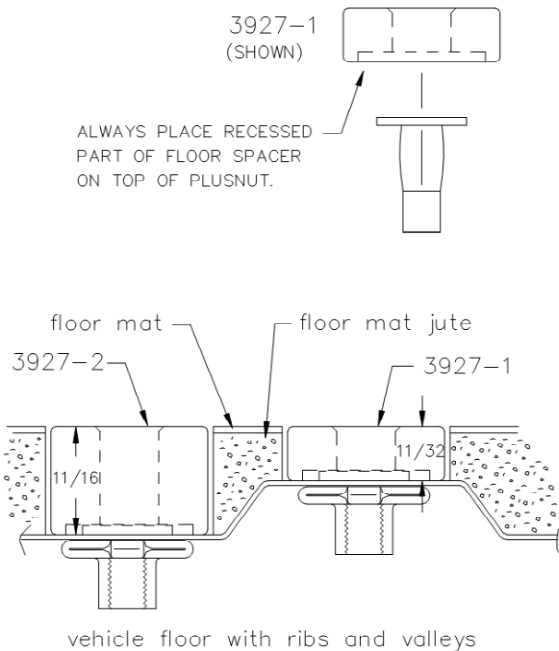

A PLUSNUT (RIVNUT) SETTING TOOL IS REQUIRED FOR PLUSNUT (RIVNUT) INSTALLATION AND IS SUPPLIED WITH THIS KIT. OR USE AN AIR POWERED PLUSNUT SETTING GUN.

1/4-20UNC Plusnut (FAS0052) Use 3/8" dia. drill w/stop

FAS0080 SCREW, HXHD, 1/4-20UNCx2.00", G8

FAS0067 WASHER, FLAT, 1/4"ID


22200-0 PLUSNUT TOOL

5/16-18UNC Plusnut (FAS0091) Use 1/2" dia. drill w/stop

FAS0095 SCREW, HXHD, 5/16-18UNCx2.00", G8

FAS0086 WASHER, FLAT, 5/16"ID

22200-0 PLUSNUT TOOL

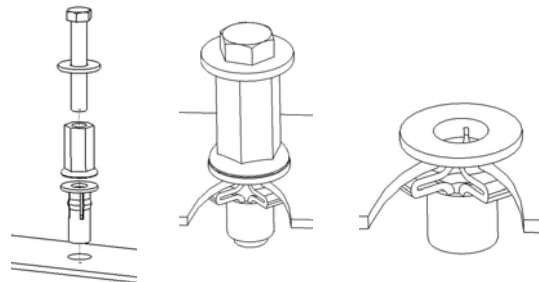


Place barrel of the plusnut body in sheet metal thru hole until flange is flush with sheet metal.

Using a 9/16" combination wrench of plusnut tool body and a second hand wrench, ratchet, or air tool, rotate the hex bolt head CW to draw plus nut flanges up (set the plusnut).


CCDHF12 FILE HANGING BRKT KIT

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CRT25386-1	HARDWARE BOX FOR CCD	1
2	BAG50036	BAG FOR CCD FILE HANGER	1
3	25394-0	CENTER FILE SUPPORT ASM	1
4	50003-G	FILE DEFLECTOR 12"	1
5	50057	INSTALL INSTRUCTIONS FOR CCDHF12	1

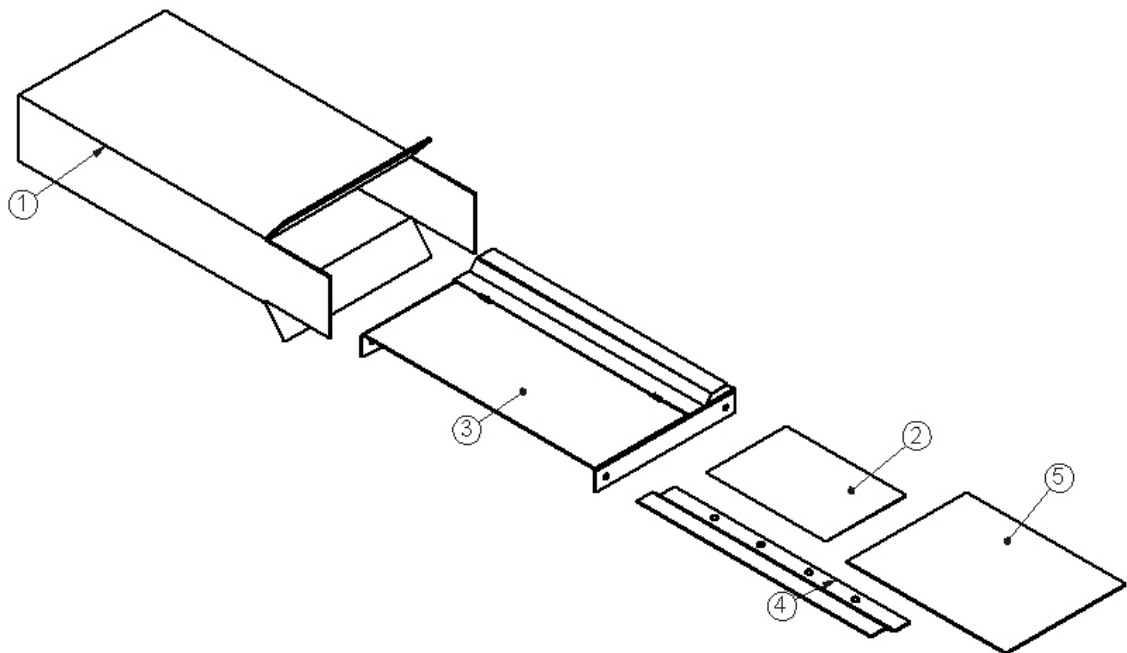


BAG50036 BAG FOR CCD FILE HOLDER


ITEM NO.	PART NUMBER	DESCRIPTION	BAG50036/QTY.
1	BAG0406-A	4" x 6" 3MIL AUTOBAG	1
2	FAS0030	Screw, Round Phillips Head, #10-24x0.375	8
3	FAS0020	Nut, Hex Flange, #10-24	8

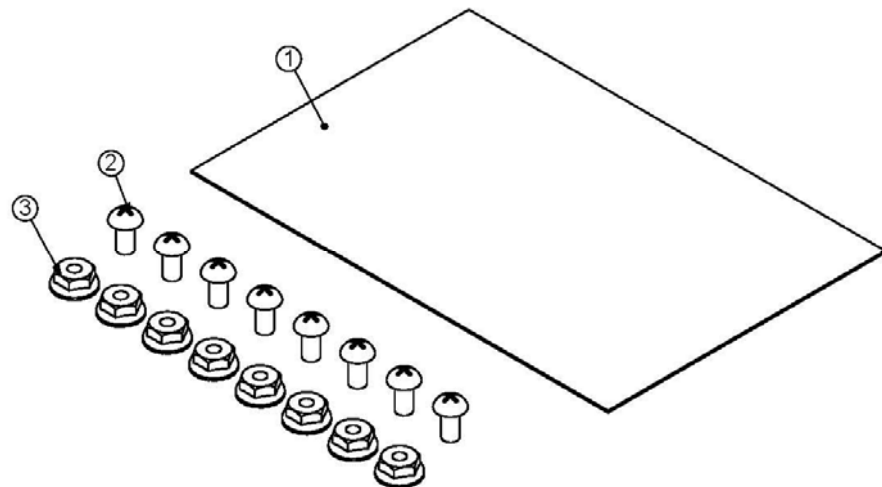

INSTALL 25394-0 FILE HANGING BRKTS AS SHOWN

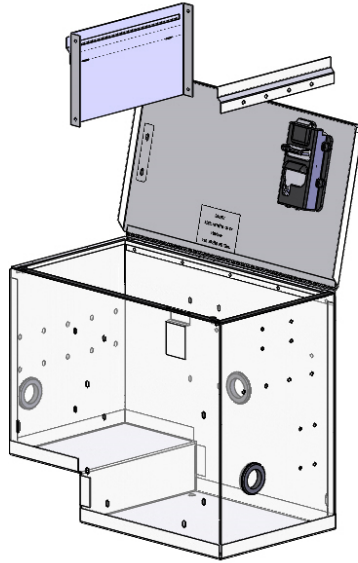



ATTACH 25394-0 USING
(4) FAS0030 AND (4) FAS0020

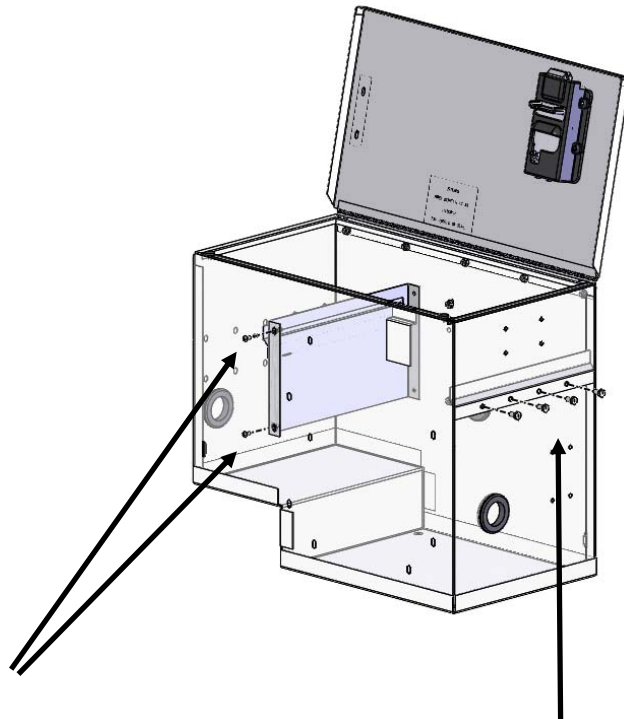

ATTACH 50003-G USING
(4) FAS0030 AND (4) FAS0020


FOR LEGAL SIZE
FILE ATTACH HERE

FOR LETTER SIZE
FILE ATTACH HERE

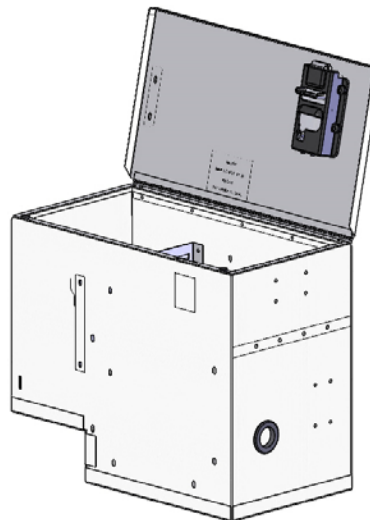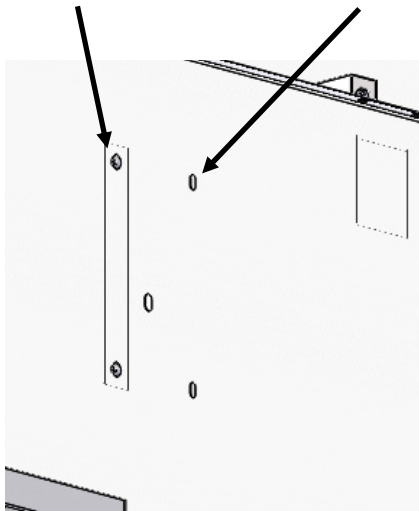

REAR OF UNIT

YOUR INSTALLATION IS COMPLETE!

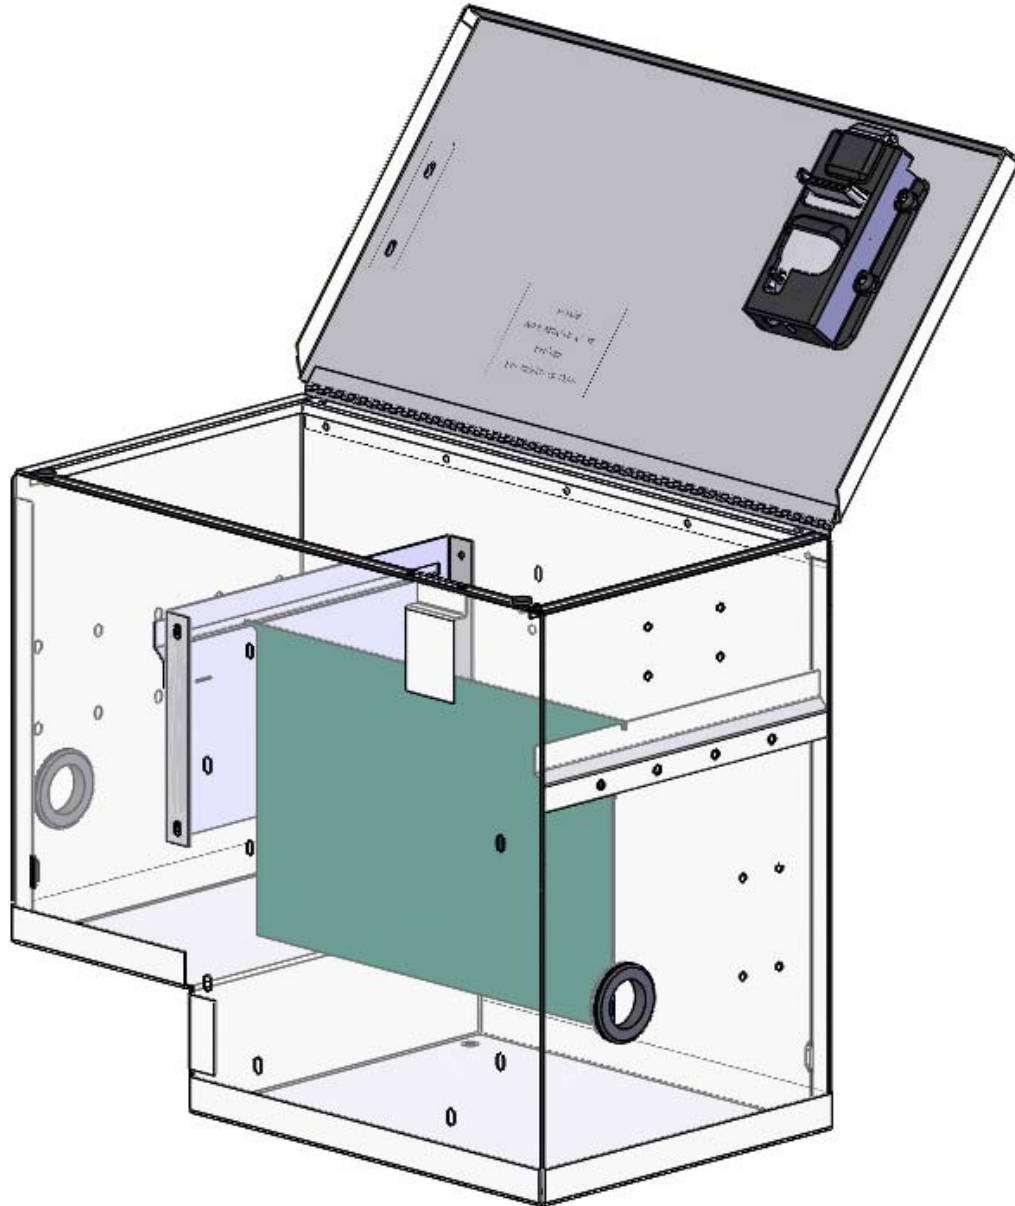

**DOUBLE CHECK ALL FASTENERS LOCATIONS TO BE SURE THAT ALL
FASTENERS ARE TIGHTENED TO SPECIFICATIONS.
YOUR INSTALLATION IS NOW COMPLETE!
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!**