


Large Caulk Holder 10.58"H X 14"W

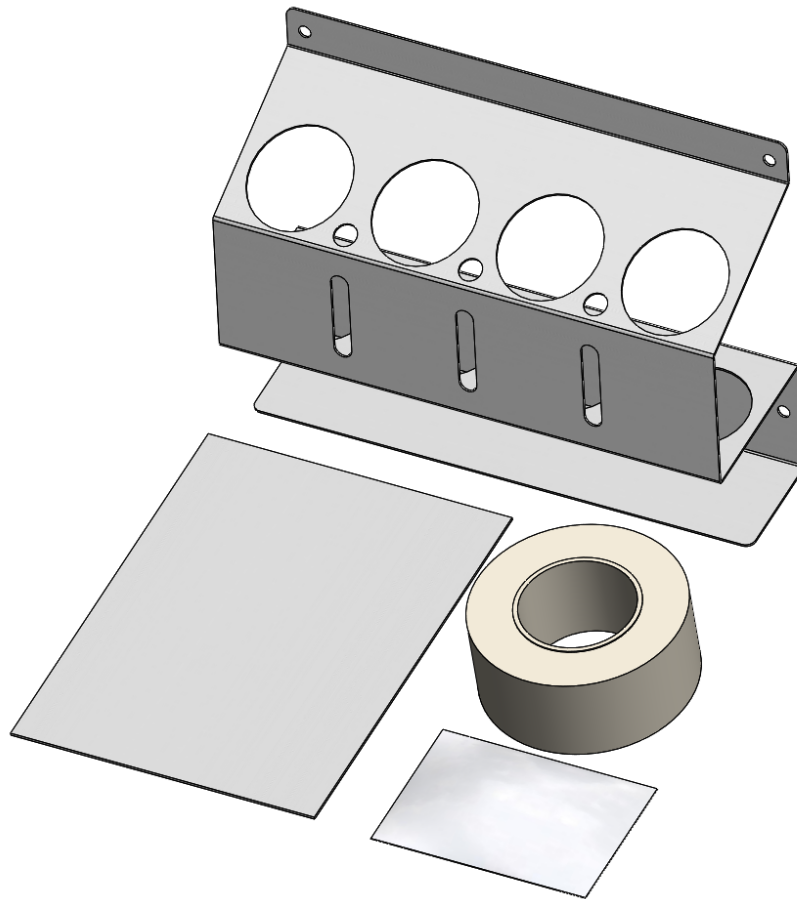

PRODUCT WEIGHT

7 LBS

WIDTH x DEPTH x HEIGHT

14" X 4.39" X 10.58"

CAPACITY

**4 - 2.75 DIAMETER
TUBES**

COLOR

GRAY


CATALOG NUMBER

CHL4

PRODUCT FEATURES

Large caulk holder that holds 4 industrial size caulk tubes 2.75" diameter or smaller. Foam tape along bottom edge provides noise reduction. It is designed to be used in areas such as end panels, partition, doors, etc.

<i>INSTR. NUMBER</i> : 65527	<i>PG:</i> 1	<i>REV:</i> A	ITEM NO.	PART NUMBER	DESCRIPTION	
			1	65525-G	LARGE CAULK HOLDER 14", GRAY	1
<i>PART NUMBER</i> : CHL4 & CHS5			2	26650-0	Foam Tape, 0.25x2.5x40.0	1
			3	BAG65529	Bag For Short Caulk Holders	1
<i>PART •</i> <i>DESC. •</i> CAULK HOLDER, LARGE 4-HOLE 14"			4	65527	Install Instr. For CHL4 & CHS5	1

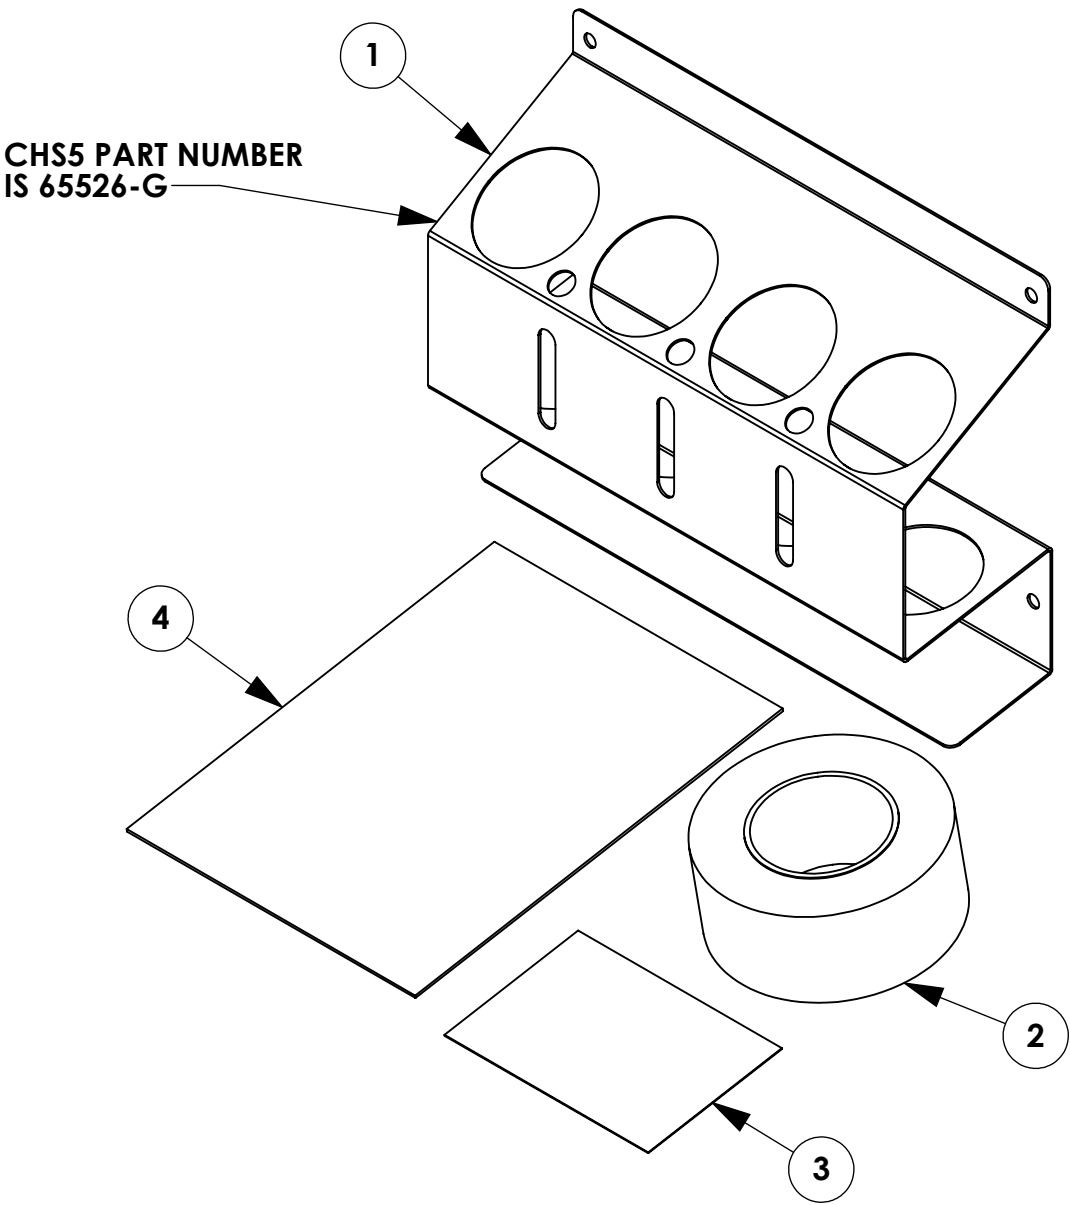

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.


PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.


PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).

THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

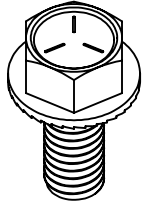

FAS0438
5/16-18X.75 ZP
SCREW, HFLNG
QTY: 4



FAS0135
5/16-18 ZN
NUT, HEX FLNG
QTY: 4

BEGIN ASSEMBLY

STEP 1 - CUT FOAM STRIP TO 14" & INSTALL ON BOTTOM LIP

26650-0
SCISSORS



STEP 2 - INSTALL HOLDER TO END PANEL, PARTITION, ETC

FAS0438
FAS0135
11/32 DRILL

DRILL HOLES & INSTALL
FASTENERS IN END
PANEL, PARTITION, ETC

