



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

CASE HOLDER, (2) SMALL

PRODUCT WEIGHT

23.87 LBS

WIDTH X DEPTH X HEIGHT

15" X 13" X 16"

CAPACITY


50 lbs

COLOR

GRAY

CATALOG NUMBER

CHPPC2S-AS

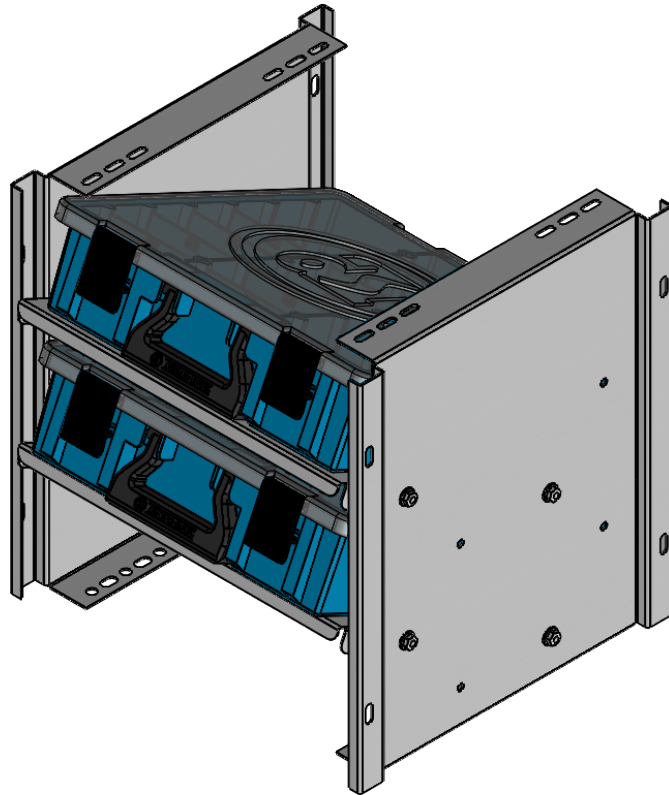

PRODUCT FEATURES

This case holder keeps two cases positioned at an angle for easy access and organization. Will work with any vehicle and designed to be placed between 14" shelving in the next generation shelving along with being mounting to the floor and secured on the sides to the end panels.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



CASE HOLDER, (2) SMALL

CATALOG NUMBER **CHPPC2S-AS**

PRODUCT APPLICATION

This case holder keeps two cases positioned at an angle for easy access and organization. Will work with any vehicle and designed to be placed between 14" shelving in the next generation shelving along with being mounting to the floor and secured on the sides to the end panels.


ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION (smart)</i>
DVPPCS	DIVIDER KITS PPCS, 9 QTY

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

<i>INSTR. NUMBER</i> : INSCHPPC2S-AS		<i>PG:</i> 1	<i>REV:</i> A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
<i>PART NUMBER</i> : CHPPC2S-AS				1	77663-G	CHPPC2S-AS EP, GRAY	2
				2	54189-G	CASE HOLDER SHELF ASM, RIV	2
<i>PART DESC.</i> : CASE HOLDER, 2, SMALL				3	PPCS	PPCS	2
NOTE: THIS INSTRUCTION IS VALID FOR THE FOLLOWING KITS				4	BAGCHPPC2S-AS	FAS BAG FOR CHPPC2S-AS	1
				5	CRT77773	CARTON FOR CHPPC2S-AS	1

NOTE: THIS INSTRUCTION IS
VALID FOR THE FOLLOWING
KITS:
- CHPPC2S-AS

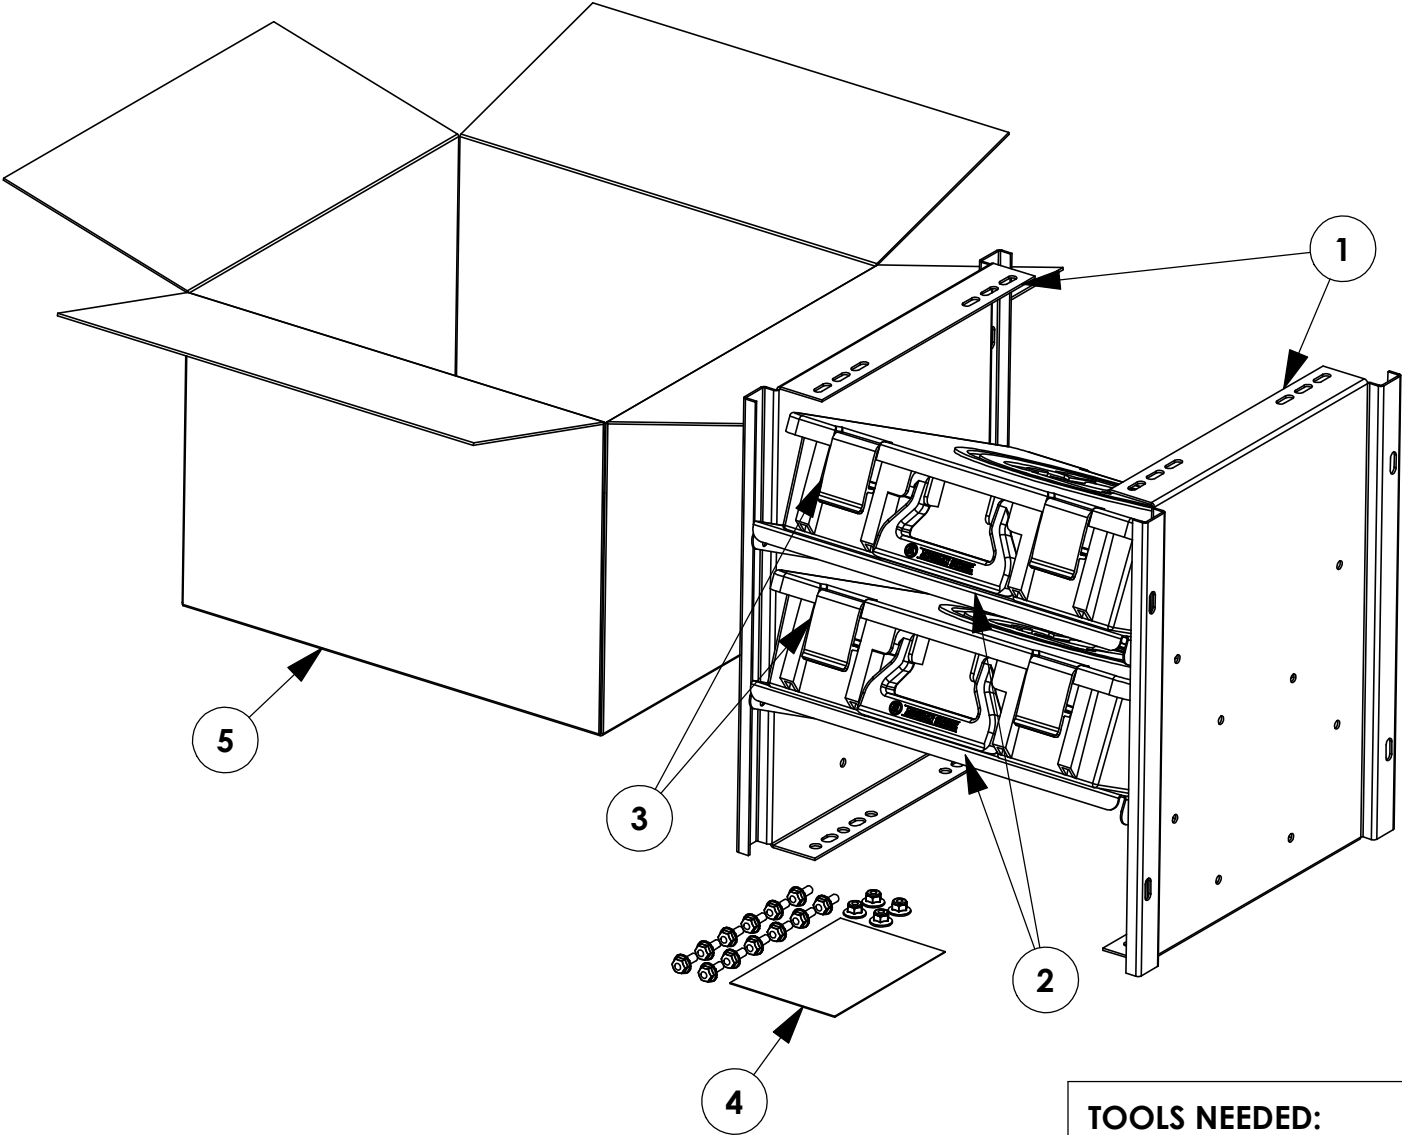

TOOLS NEEDED:
- 7/16" SOCKET OR
WRENCH (Qty:2)

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

BAG REFERENCE: BAGCHPPC2S-AS

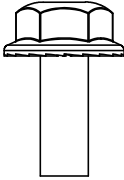

FAS0018
SCREW,HFLNG
1/4-20X.62 ZP
QTY: 12



FAS0055
NUT,HEX NLK
FLG 1/4-20 ZP
QTY: 4

INTENTIONALLY LEFT BLANK


STEP 1 - ASSEMBLE CHPPC2S-AS

Step 1.1
ALIGN SHELF
ASSEMBLY WITH
ANGLED HOLE
PATTERN ON
END PANEL.
(2 SHELVES, 4 HOLES)


Step 1.2
LOOSELY
ASSEMBLE UNTIL
AFTER STEP 1.4
FAS0018 AND
RIVNUTS IN
SHELF
ASSEMBLIES
(4 PLACES)
7/16 WRENCH
OR SOCKET

Step 1.3
FLIP OVER AND
REPEAT
STEP 1.1 WITH
SECOND END
PANEL


Step 1.4
INSERT AND
FULLY TIGHTEN
(4) FAS0018
INTO RIVNUTS
IN SHELF
ASSEMBLY.
FULLY TIGHTEN
ALL FASTENERS.

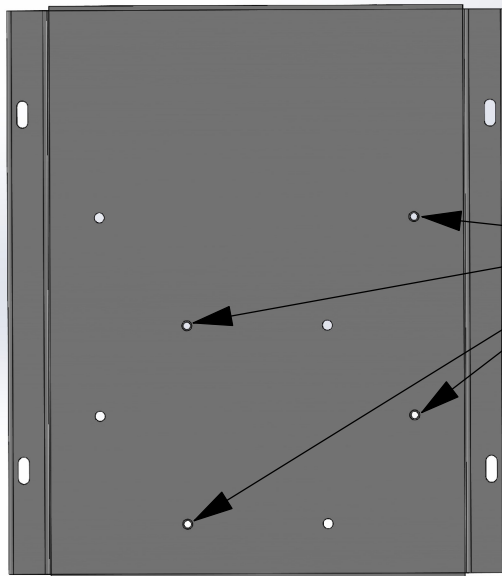

Step 1.1 and 1.2

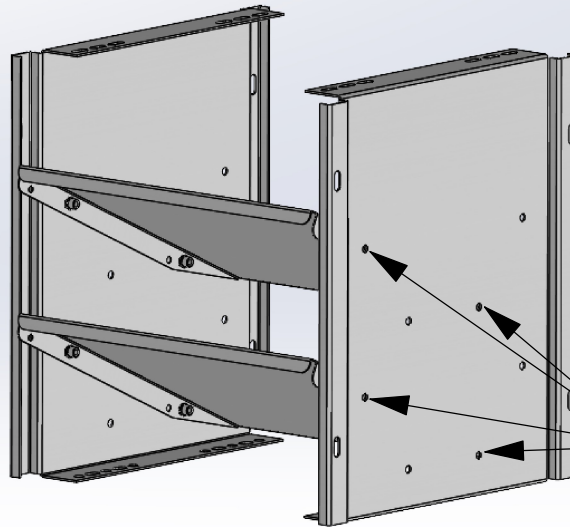

Step 1.3 and 1.4

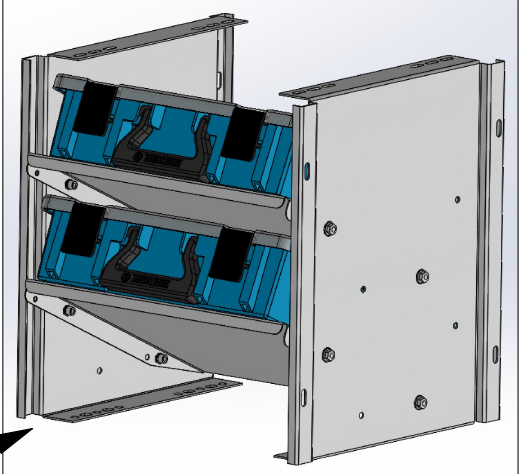

FINAL PRODUCT SHOULD LOOK
LIKE THIS WHEN PPCS ARE ADDED


STEP 2 - INSTALLING ON FIXED SHELVING

Step 2.1
PLACE CASE
HOLDER IN
DESIRED SHELF


Step 2.2
ALIGN BOTTOM
SLOTS OR HOLES
IN CASE
HOLDER
WITH
MOUNTING
HOLES IN SHELF
(4 PLACES)

Step 2.3
FASTEN
FAS0018 AND
FAS0055
(4 PLACES)
7/16 WRENCH
7/16 SOCKET

Step 2.4
ENSURE ALL
FASTENERS ARE
FULLY
TIGHTENED
7/16 WRENCH
7/16 SOCKET
AND CHECK
THAT CASE
HOLDER IS
SECURE

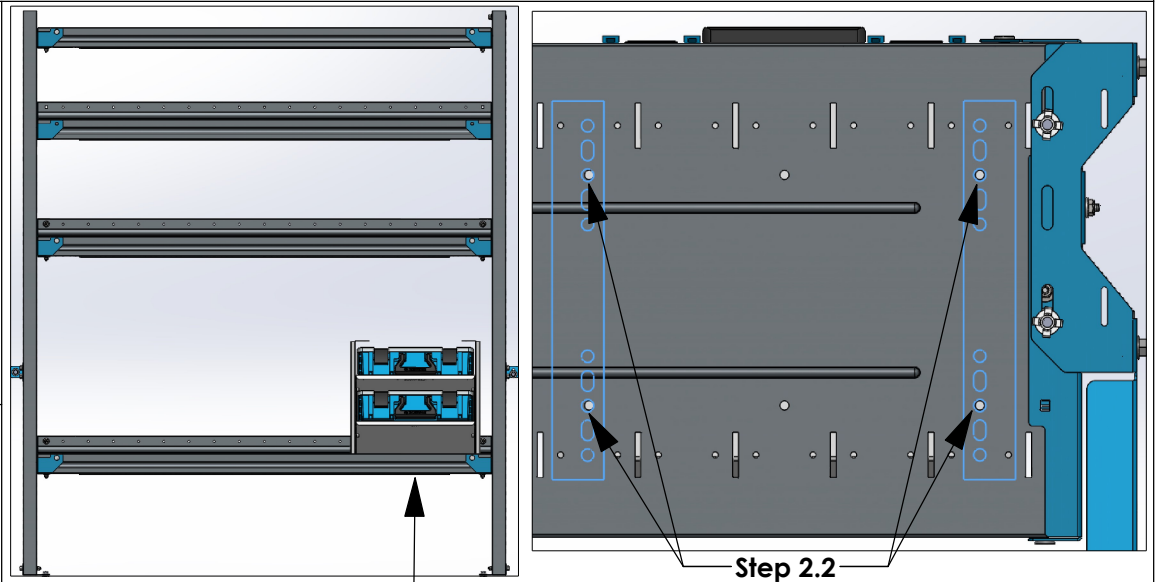

Step 2.3
and 2.4

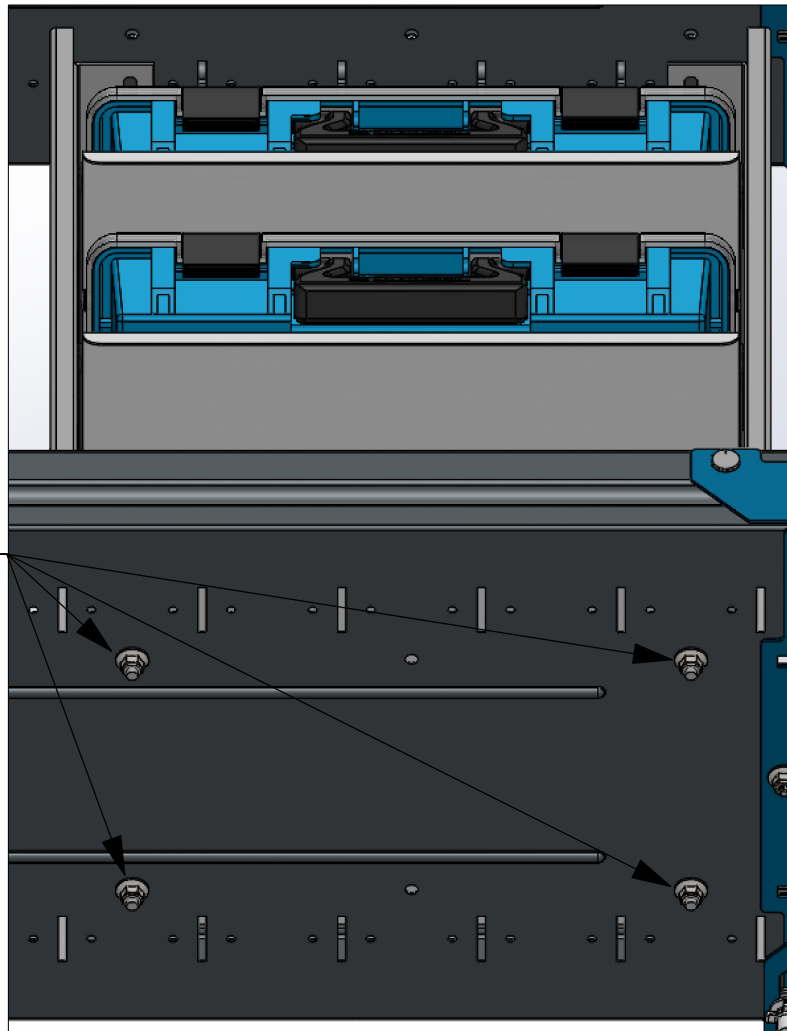

INSTALLATION IS COMPLETE