

10" DOOR KIT FOR 40" SHELVES



PRODUCT WEIGHT

9.35 LBS

WIDTH x HEIGHT


38" x 10"

COLOR

Gray

CATALOG NUMBER

DK3810

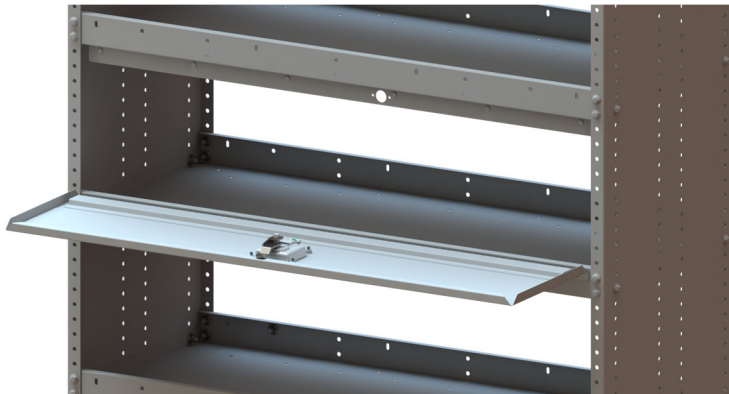

PRODUCT FEATURES

The 38" door kit can be mounted to the 40" shelving units to create a lockable storage compartment. The door latches with a T-handle that can be locked to protect valuable tools and consumables. Pair the door kit with a back panel for enclosed storage on all sides.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.

PAGE 1 of 2

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time without prior notification.



CATALOG NUMBER DK3810

PRODUCT APPLICATION


This door kit mounts to 40" shelving units.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION
BP1240-G	BACK PANEL 12X40
HD-1640HR	UNIT 16X40X63 FTMH/SPR
HD-1640HRC	UNIT 16X40X63 FTMH/SPR WITH CONDUIT
HD-1640GM	UNIT 16X40X63 GMFSV
HD-1640GMC	UNIT 16X40X63 GMFSV WITH CONDUIT
HD-1640FL	UNIT 16X40X63 FTL
HD-1640FLC	UNIT 16X40X63 FTL WITH CONDUIT

SPECIAL APPLICATION NOTES

<i>INSTR. NUMBER</i> : 67210 <i>PART NUMBER</i> : DK3810 <i>PART DESC.</i> : 10" DOOR KIT FOR 40" SHELVING	<i>PG:</i> 1	<i>REV:</i> B	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
			1	67205-G	DOOR STOP, 40, GRAY	1
			2	67206-G	DOOR PANEL WLDMNT, 40, GRAY	1
			3	21000-0	Folding T-Handle	1

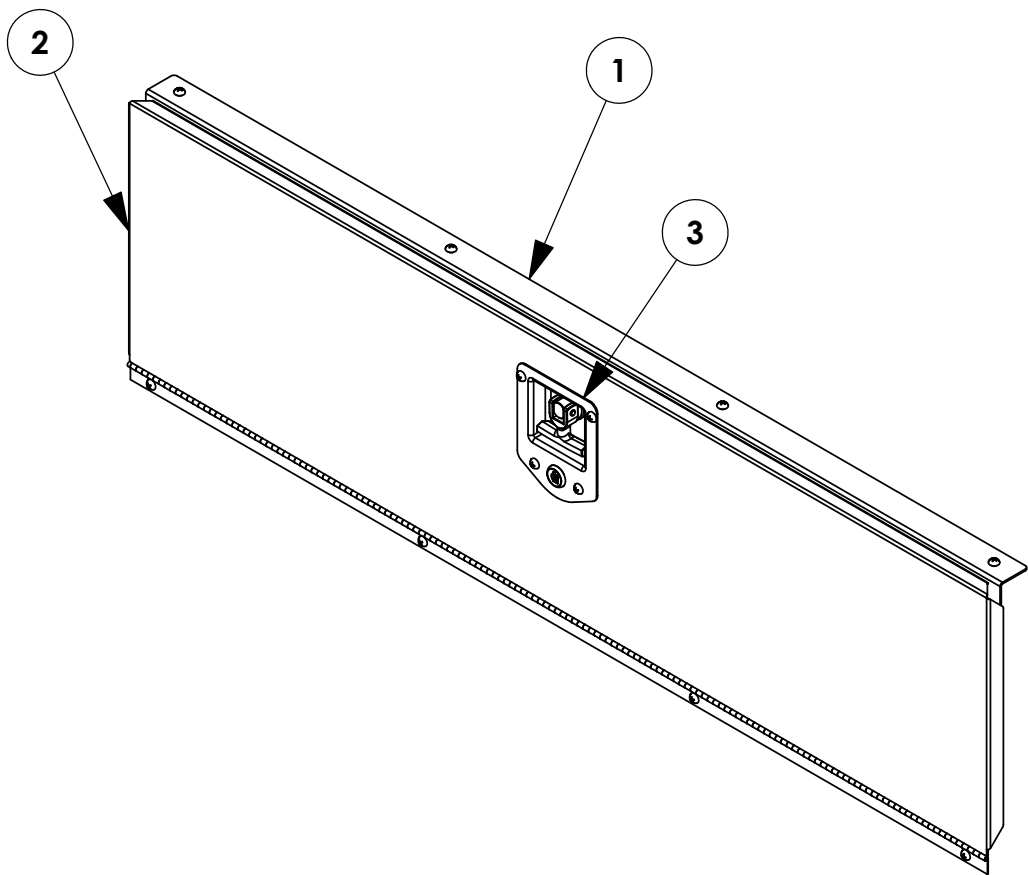

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.


MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).

THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

FAS0021
SCREW RHP 10-24X.50
QTY: 12



FAS0029
NUT, HEX NLK 10-24
QTY: 12





29951-0
BUMPER
QTY: 6

NOTE: 4X FAS0021 AND FAS0029 ARE LOCATED WITH THE T-HANDLE BAG

BEGIN ASSEMBLY



STEP 1 - FASTEN T-HANDLE LATCH TO DOOR PANEL.

USE FAS0021 AND FAS0029
(4 PLACES)
PHILIPS DRIVER
3/8 SOCKET

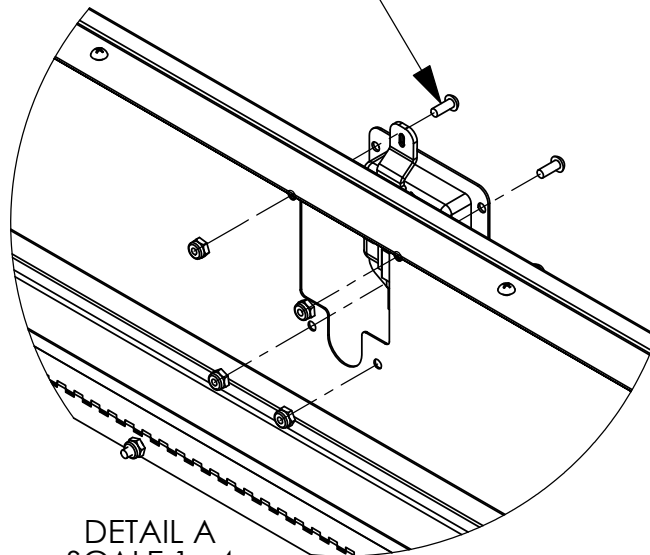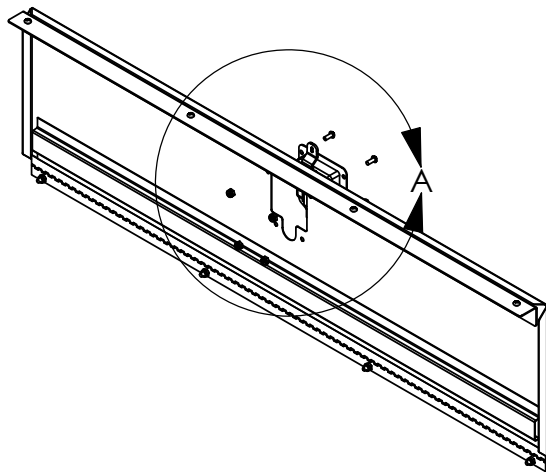

DETAIL A
SCALE 1 : 4

STEP 2 - INSTALL RUBBER BUMPER INTO THE DOOR STOP

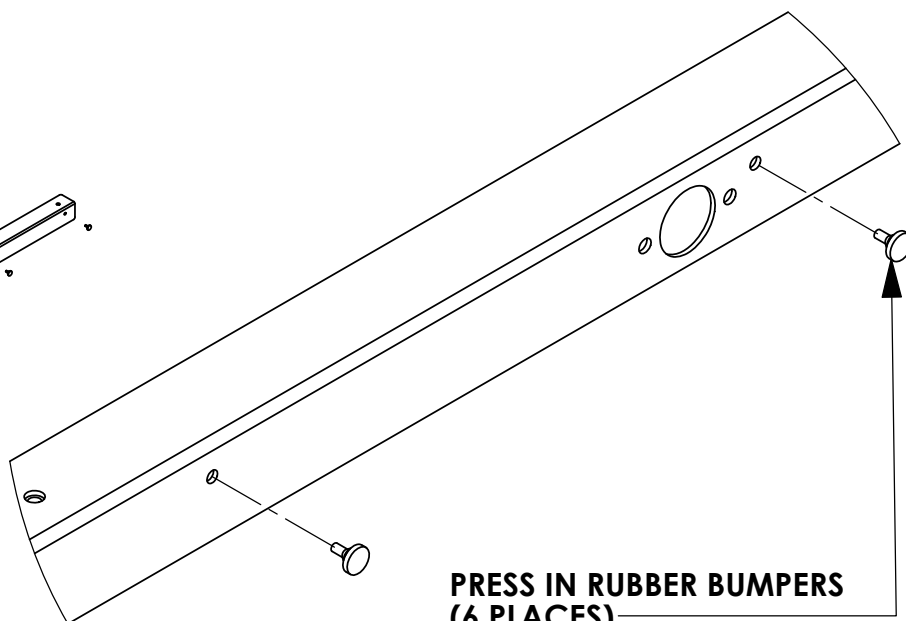
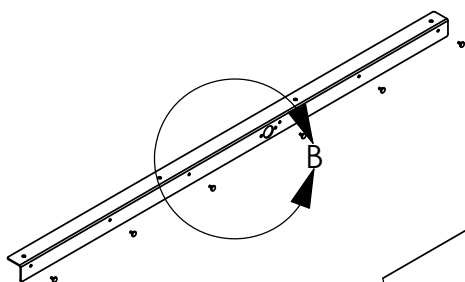


**PRESS IN RUBBER BUMPERS
(6 PLACES)**


DETAIL B
SCALE 1 : 2

BEGIN INSTALLATION

STEP 3 - FASTEN DOOR STOP TO THE UNDERSIDE OF THE UPPER CORRESPONDING SHELF

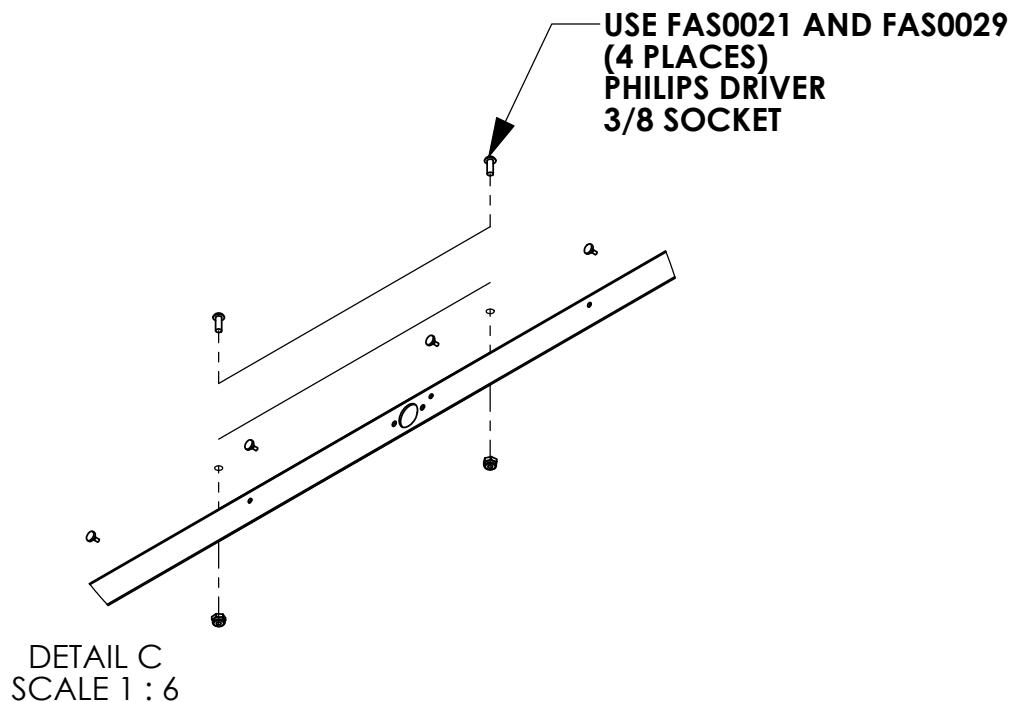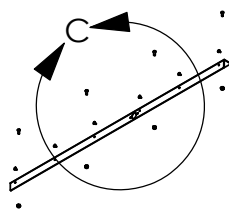

STEP 4 - FASTEN THE DOOR PANEL TO THE APPROPRIATE SHELF BELOW THE DOOR STOP.

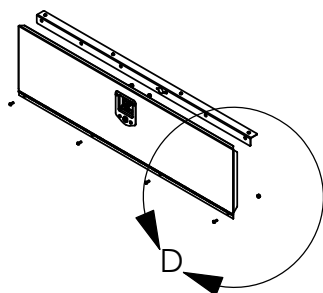

USE FAS0021 AND FAS0029
(4 PLACES)
PHILIPS DRIVER
3/8 SOCKET

DETAIL D
SCALE 1 : 8