

FASTENER GROUPS LISTED BELOW ARE USED FOR ASSEMBLY AND INSTALLATION. **SOME ASSEMBLY DRILLING IS REQUIRED.** PARTITION INSTRUCTIONS & FASTENERS ARE WITH THAT UNIT. USE KD UNIT DRAWINGS TO IDENTIFY THEIR SEPARATE PARTS. CUSTOMER SPECIFIED SHELF DIMENSIONS ARE SHOWN HERE.


SYM.	FASTENERS	QTY	DRILL
●	ASSEMBLY FASTENERS		
	{ 10-24 x 1/2 RHP.SCW.	(8) }	3/16
	{ 10-24 HX. FLANGE NUT	(8) }	
ⓔ	{ 10-24 x 1/2 RHP.SCW.	(4) }	3/16
	{ 10-24 ELASTIC L'NUT	(4) }	

ADRIAN STEEL CO.
908 JAMES STREET
ADRIAN, MI 49221
517/265-6194

50-32 DOOR KIT
FLOOR LEVEL

DWG BY	ECN#	DATE	CHK BY	PACKAGE#	ISS.
BDS	6071	6/6/02	101	S/L DK532A	A
PACKAGE WEIGHT-		7.84 #	REF 16583	HCG= 00	VCG= 00
ITEM	PART NO.	DESCRIPTION	QTY.		

1	16577	DOOR ASSEMBLY (32")	1
2	16581	DOOR STOP 31"	1
3	21000	LOCKING T HNDL W/KEY ASCO	1
BAG1306B-0 FAS FOR MISC DR KITS			1
CRT00002-0 CARTON			1

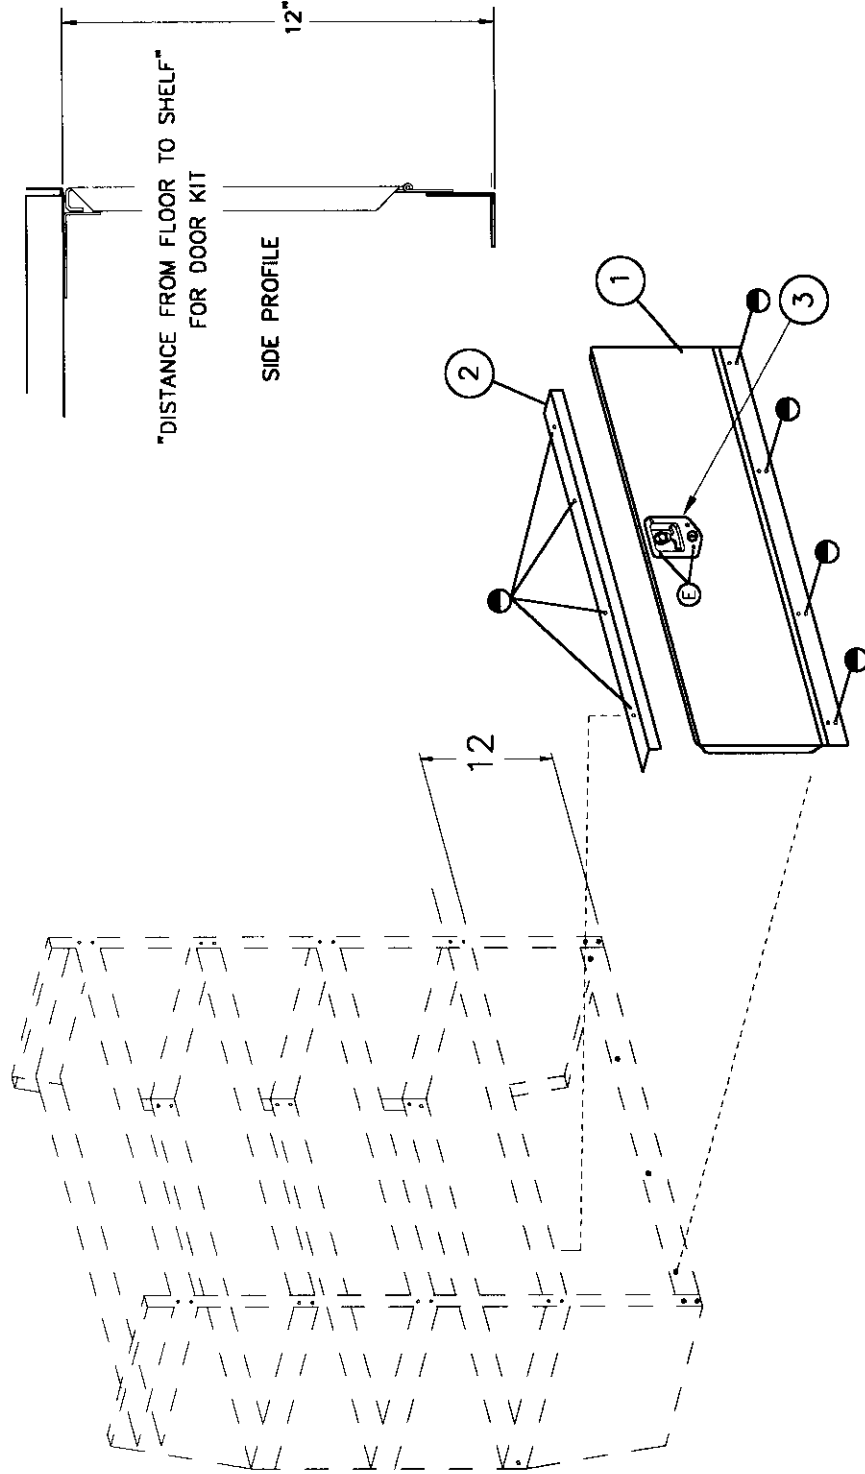

FASTENING PROCEDURES

1. USE NUT & BOLT THRU WHEREVER POSSIBLE.
2. USE PLUSNUTS FOR BLIND FASTENING.
3. USE SHEET METAL SCREWS IN SHEAR ONLY.

CAUTION:
DRILL THRU FLOOR WITH CARE
WATCH FOR GAS TANK, CONTROL
LINES, & ELECTRICAL WIRING.

A- DK532A