

FASTENER GROUPS LISTED BELOW ARE USED FOR ASSEMBLY AND INSTALLATION. **SOME ASSEMBLY DRILLING IS REQUIRED.** PARTITION INSTRUCTIONS & FASTENERS ARE WITH THAT UNIT. USE KD UNIT DRAWINGS TO IDENTIFY THEIR SEPARATE PARTS. CUSTOMER SPECIFIED SHELF DIMENSIONS ARE SHOWN HERE.

SYM.	FASTENERS	QTY	DRILL
⊙	ASSEMBLY FASTENERS		
⊙	{ 1/4-20 x 1/2" THP.SCW.	{ (16) }	{ 9/32 }
⊙	{ 1/4-20 HX. FLANGE NUT	{ (16) }	
⊙	{ 10-24 x 1/2 RHP.SCW.	{ (8) }	{ 3/16 }
⊙	{ 10-24 HX. FLANGE NUT	{ (8) }	
⊙	{ 10-24 x 1/2 RHP.SCW.	{ (4) }	{ 3/16 }
⊙	{ 10-24 ELASTIC L'NUT	{ (4) }	

ADRIAN STEEL CO.
906 JAMES STREET
ADRIAN, MI 49221
517/265-6194


LOCKING DOOR KIT WITH BACK, FOR SPRINTER HD KD

DWG BY	JLC	ECN#	8767	DATE	1/19/06	CHK BY	S/L DK542SPR	ISS.	A
PACKAGE WEIGHT--	16.13 #		REF	16576		HCG=	00		VCG= 00

PLEASE REFER TO THE INTERIOR INSTALLATION SHEET FOR CORRECT SHELF HEIGHT BEFORE ASSEMBLY.

ITEM	PART NO.	DESCRIPTION	QTY.
1	09311	DOOR ASSEMBLY (42")	1
2	12988	DOOR STOP 41"	1
3	BP1542	BACK PANEL - 15 x 42"	1
4	21000	LOCKING T HNDL W/KEY ASCO	1

BAG00032-0 FAS FOR MISC DR KITS
CRT32SPR CARTON 1

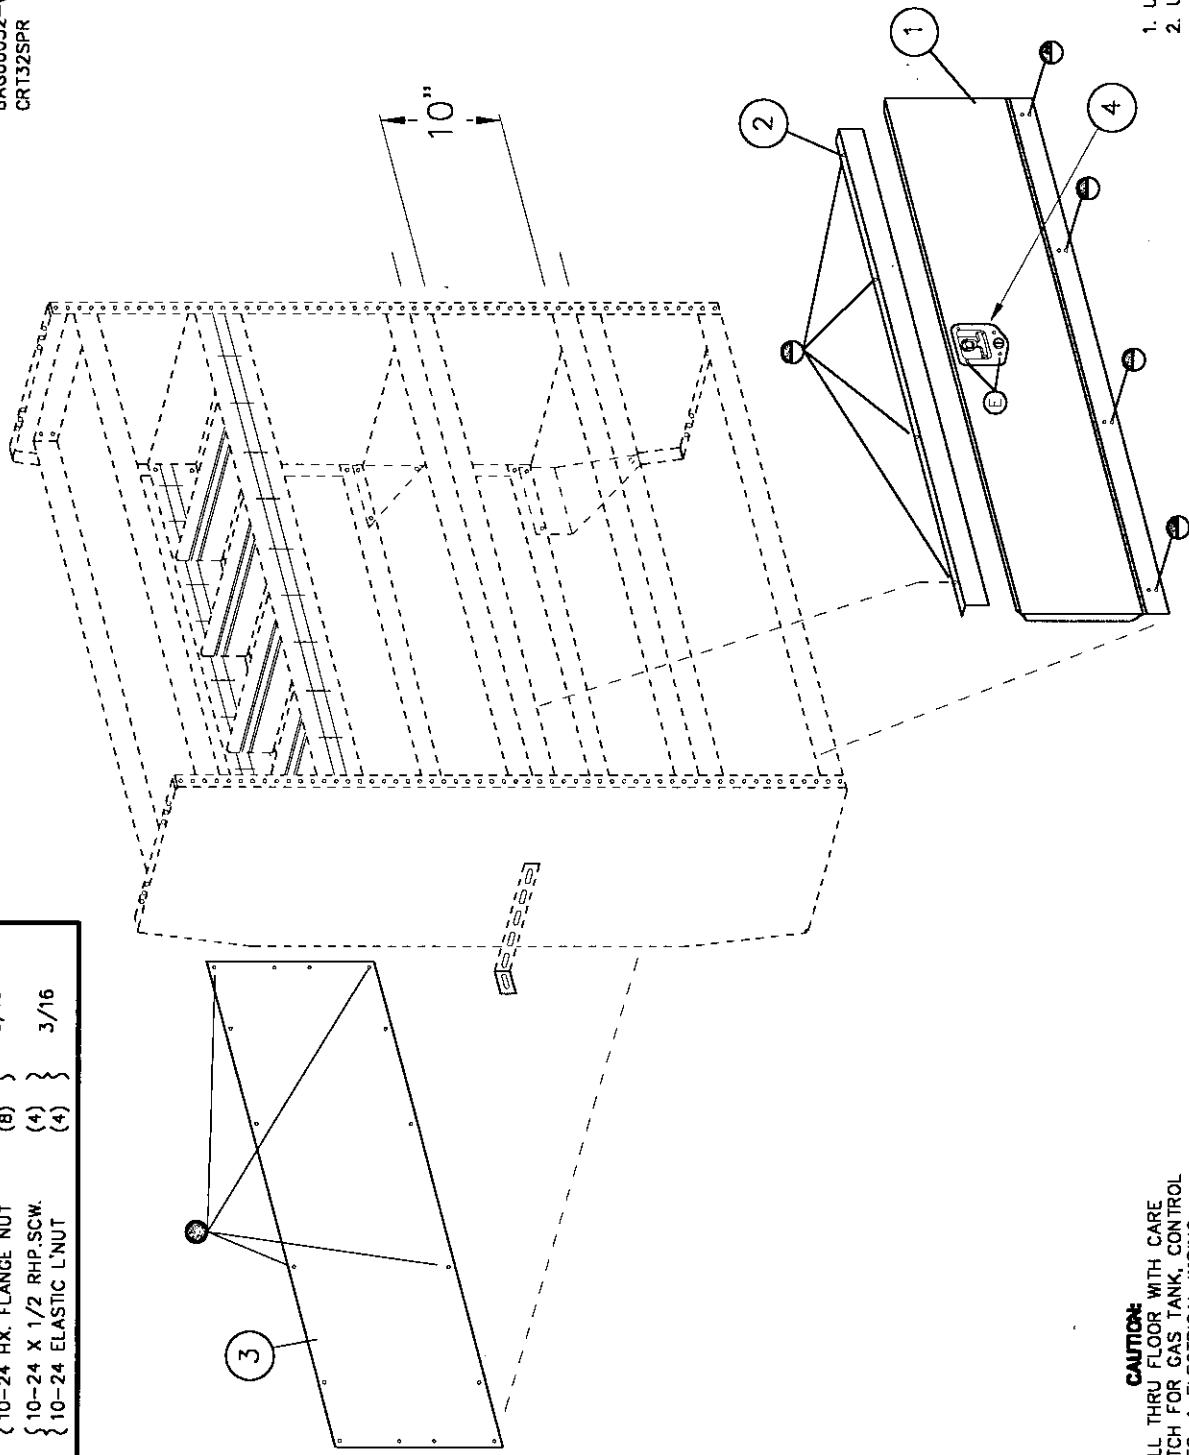

CAUTION:
DRILL THRU FLOOR WITH CARE
WATCH FOR GAS TANK, CONTROL
LINES, & ELECTRICAL WIRING.

FASTENING PROCEDURES

1. USE NUT & BOLT THRU WHEREVER POSSIBLE.
2. USE PLUSNUTS FOR BLIND FASTENING.
3. USE SHEET METAL SCREWS IN SHEAR ONLY.