

FASTENER GROUPS LISTED BELOW ARE USED FOR ASSEMBLY AND INSTALLATION. **SOME ASSEMBLY DRILLING IS REQUIRED.** PARTITION INSTRUCTIONS & FASTENERS ARE WITH THAT UNIT. USE KD UNIT DRAWINGS TO IDENTIFY THEIR SEPARATE PARTS. CUSTOMER SPECIFIED SHELF DIMENSIONS ARE SHOWN HERE.

SYM.	FASTENERS	QTY	DRILL
●	ASSEMBLY FASTENERS		
	{ 10-24 x 1/2 RHP.SCW.	(8) }	3/16
	{ 10-24 HX. FLANGE NUT	(8) }	
ⓔ	{ 10-24 x 1/2 RHP.SCW.	(4) }	3/16
	{ 10-24 ELASTIC L'NUT	(4) }	






ADRIAN STEEL CO.
906 JAMES STREET
ADRIAN, MI 49221
517/265-6194

DOOR KIT
for 52" LONG KD'S
FLOOR LEVEL

DWG BY	ECN#	DATE	CHK BY	PACKAGE#	ISS.
BDS	6071	6/6/02	BL	S/L DK552A	A
PACKAGE WEIGHT-	12.70 #	REF 16593	HCC= 00	VCG= 00	

ITEM	PART NO.	DESCRIPTION	QTY.
1	16362	DOOR ASM. 52" (49-5/8)	1
2	16366	DOOR STOP 51"	1
3	21000	LOCKING T HNDL W/KEY ASCO	1
BAG13068-0 FAS FOR MISC DR KITS			1
CRT00003-0 CARTON			1

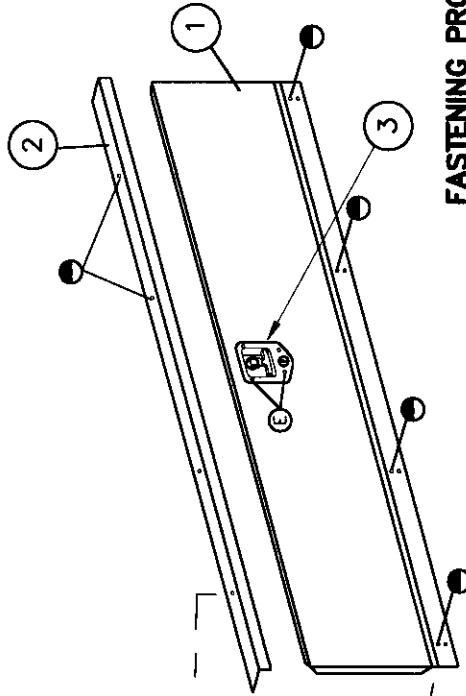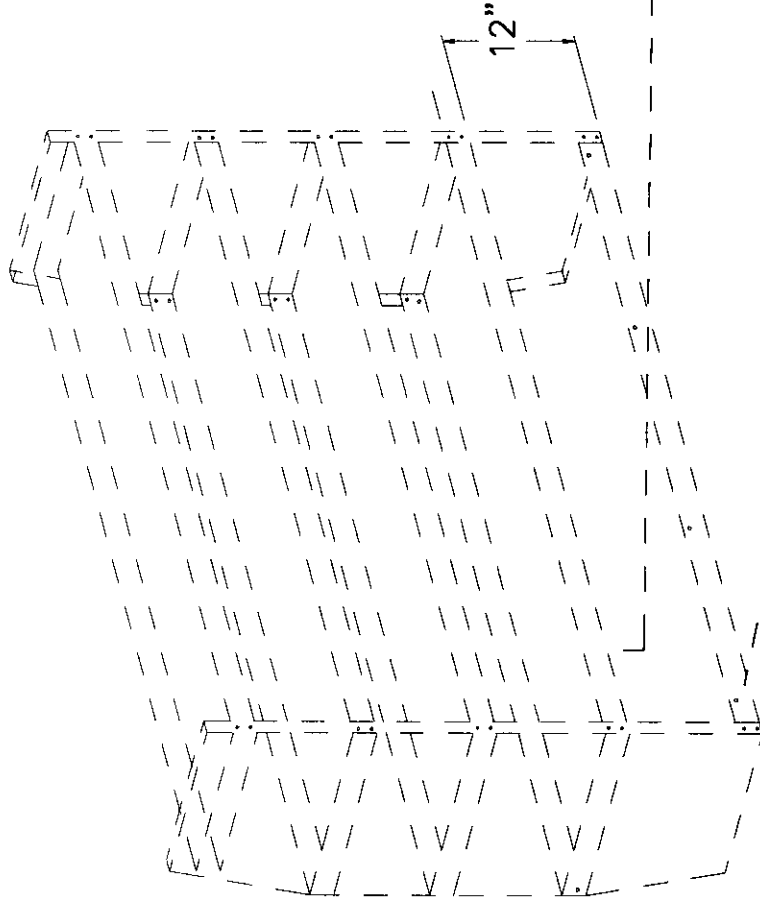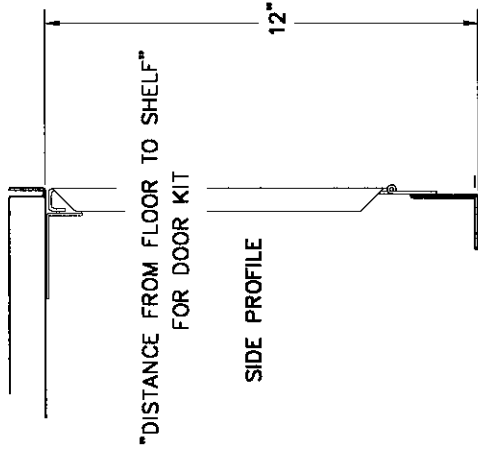

- FASTENING PROCEDURES**
1. USE NUT & BOLT THRU WHEREVER POSSIBLE.
 2. USE PLUSNUTS FOR BLIND FASTENING.
 3. USE SHEET METAL SCREWS IN SHEAR ONLY.

CAUTION:
DRILL THRU FLOOR WITH CARE
WATCH FOR GAS TANK, CONTROL
LINES, & ELECTRICAL WIRING.