




ADRIAN STEEL




906 JAMES ST.
ADRIAN, MI 49221
(517) 265-6194

THIS DRAWING IS THE PROPERTY OF
ADRIAN STEEL Co.

THIS DRAWING IS NOT TO BE USED IN ANY
MANNER DETRIMENTAL TO THE INTERESTS
OF ADRIAN STEEL Co.

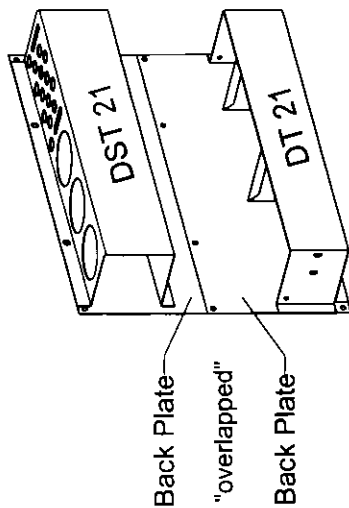

★ DST 21 Door Trays can be installed with the Back Plates overlapping other Door Trays, but, this decreases access space and could restrict the length of tools to be stored in the DST 21 !

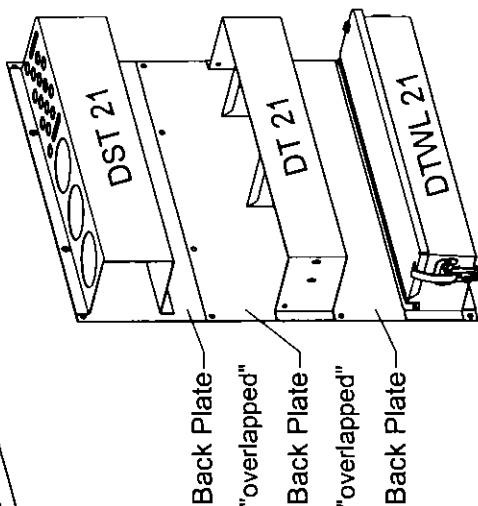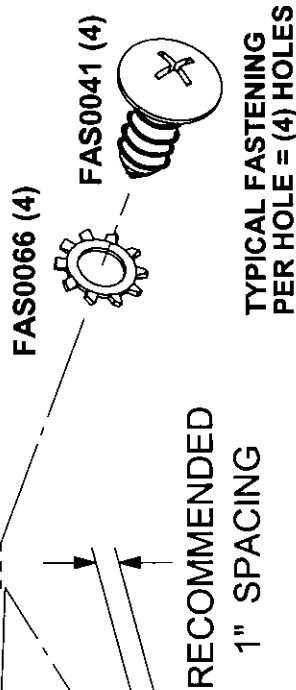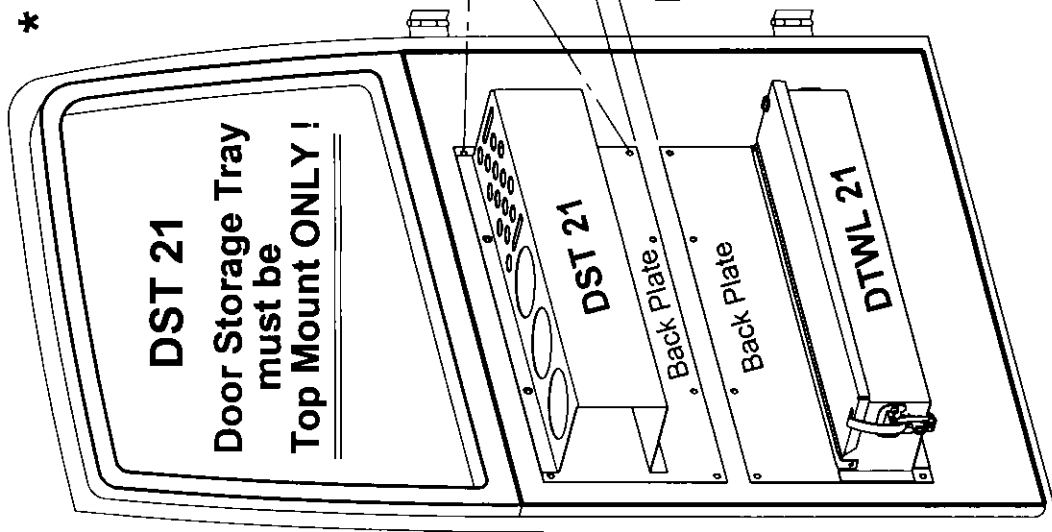

NOTE: The 1" spacing between Back Plates is recommended for general tool use allowing clearance for DTWL 21 lid opening and better access to lower Door Trays.

This spacing may need to increase or the Back Plates can be "overlapped" depending on the length of tools intended to be stored in the DST 21 Door Tray.

GM full size vans:

the plastic door panels must be removed before installing the DST 21 !!

INSTALLATION STEPS

TOOLS: Drill Motor, 3/16" Drill Bit, Tape Measure, Lg. Phillips Screw Driver, Safety Glasses.

STEP - 1) Position the Door Tray (s) on the van door as close to the opening edge as possible still allowing the van doors to open and close properly. Next mark the van door through (4) holes in the Back Plate you select for the best installation. Now set the Door Tray (s) aside.

STEP - 2) Drill van door at the marks you just made using a 3/16" drill bit * CAUTION: be careful not to touch the outside door skin of van when drilling & clean up any burrs or debris after drilling ! *

STEP - 3) Securely fasten Door Tray (s) to the van door using a #14-10 x 3/4 Screw (FAS0041) and a 1/4" External Tooth Lock Washer (FAS0066) at each hole.

ECN#	DRAWN BY	CHECKED BY
7178	KAS	RB
DATE: 2/21/04		
INSTRUCTIONS		
DST 21 Door Storage Tray		
Print Number	Issue	
29399-0	A	