

for reference only!

REVISION LEVEL: **D**

Part Number: **DV14C1**

PRINTED DOCUMENT IS UNCONTROLLED

THIS PRODUCT IS SUBJECT TO CHANGE. ADRIAN STEEL COMPANY RESERVES THE RIGHT TO CHANGE THE PRODUCT OF IT'S DESIGN WITHOUT PRIOR NOTICE.

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY.

Shipping Wt. (Lbs.):

0.34

Coating/Finish:

GRAY

Do Not Scale This Drawing!



ADRIAN STEEL
VAN AND PICKUP EQUIPMENT
906 James St.
Adrian, MI 49221
517.265.6194

Part Description: **DIVIDER KIT OF (1) 35317-G DIVIDER**

Part Number: **DV14C1**

REVISION LEVEL: **D**

DIVIDER 35317-G Assembly Instructions FOR AD SERIES SHELVING

P.N.: 35306-0


ISSUE: C

CHK.BY: DWC

REV.BY:BDS

DWG.BY: JLC

DATE: 07/29/2016

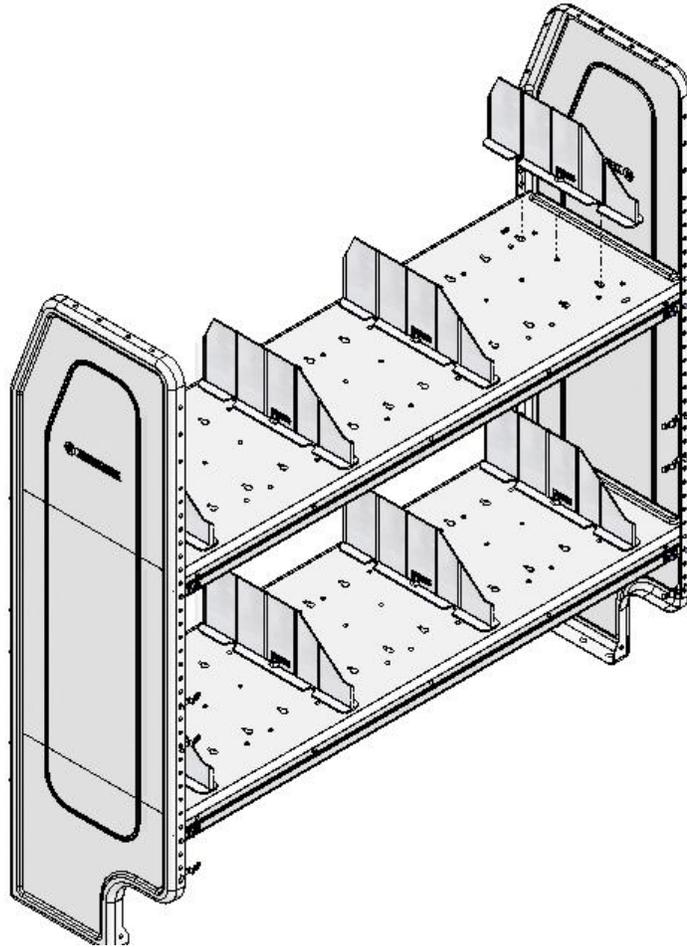

BEFORE YOU START!

IMPORTANT INSTALLATION STEPS ARE DENOTED USING A STOP SIGN. THESE STEPS MUST BE PERFORMED AS SPECIFIED IN ORDER TO ENSURE A PROPER INSTALLATION AND MUST BE FOLLOWED IN ORDER TO MAINTAIN YOUR PRODUCT WARRANTY!



CRITICAL INFORMATION PERTAINING TO USER AND/OR VEHICLE SAFETY IS DENOTED USING A CAUTION SIGN. SAFETY ITEMS MUST BE STRICTLY ADHERED TO IN ORDER TO ENSURE A SAFE WORKING ENVIROMENT!



YOU WILL NEED NO TOOLS TO INSTALL DIVIDERS.



THE USE OF AIR OR ELECTRIC IMPACT TOOLS FOR THE ASSEMBLY OF FASTENERS IS NOT RECOMMENDED AND COULD CAUSE FASTENER FAILURE!



WARNING



THE USE OF DRILLS WITH INTEGRAL DRILL STOPS ALONG WITH PROPER INSPECTION FOR GAS TANK, GAS LINES, BRAKE LINES AND ELECTRICAL LINES PRIOR TO DRILLING ANY MOUNTING HOLES IS STRONGLY RECOMMENDED TO ENSURE THAT VEHICLE DAMAGE IS AVOIDED!



THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

ALL DRILLED HOLES IN THE VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE!

SHELF DIVIDER 35317-G

VEHICLE PREPARATION, BEFORE YOU START


Unpack dividers. Make sure that you have the correct number of dividers for the number of shelves, or the kit ordered DV14C8 or DC14C1 kit of (1).



STEP – 01

INSERT 35317-G DIVIDER END PINS INTO SLOTTED HOLES


Dividers should be evenly Spaced on Shelf unless otherwise specified by customer

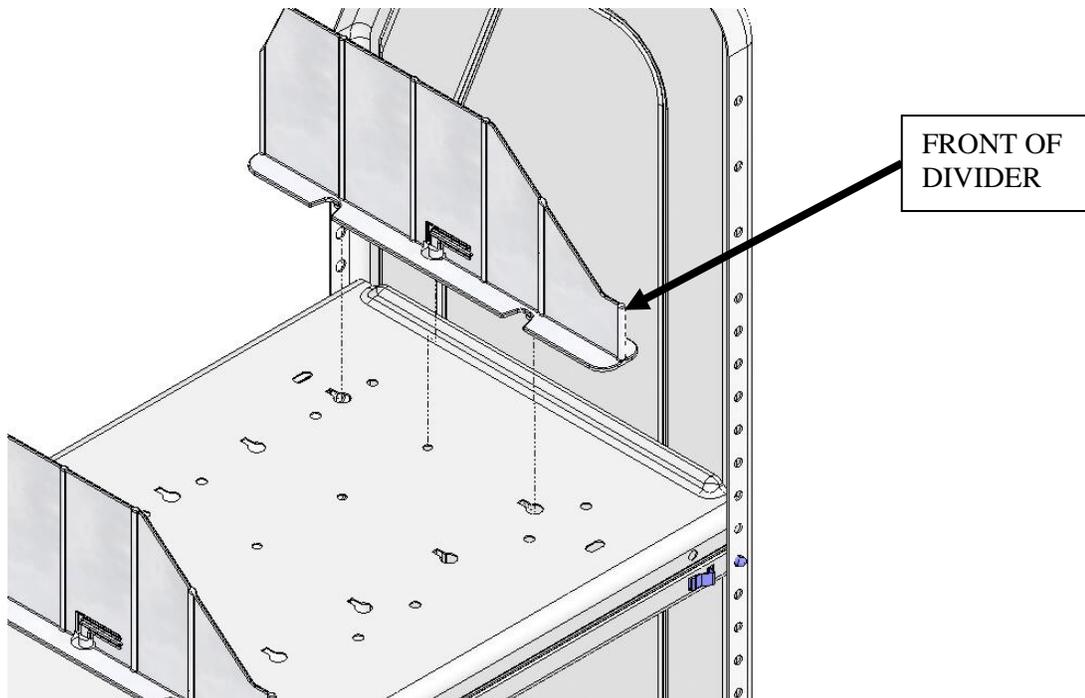

SHELF DIVIDER 35317-G



STEP – 02

SLIDE DIVIDER BACK IN SLOT UNTIL CENTER PIN ENTERS HOLE

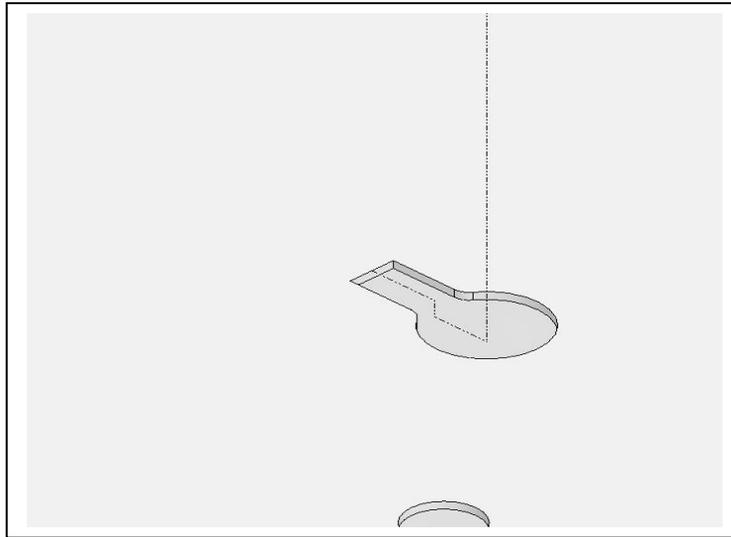

STEP – 03

CHECK TO MAKE SURE CENTER PIN IS LOCKED IN HOLE

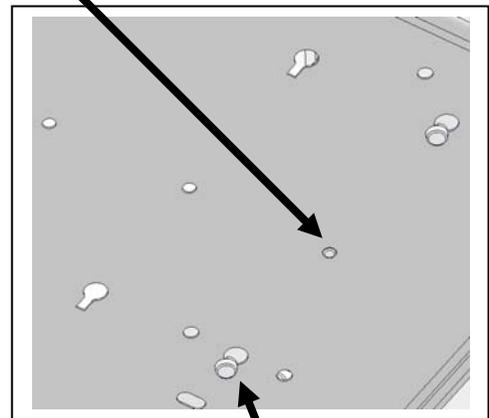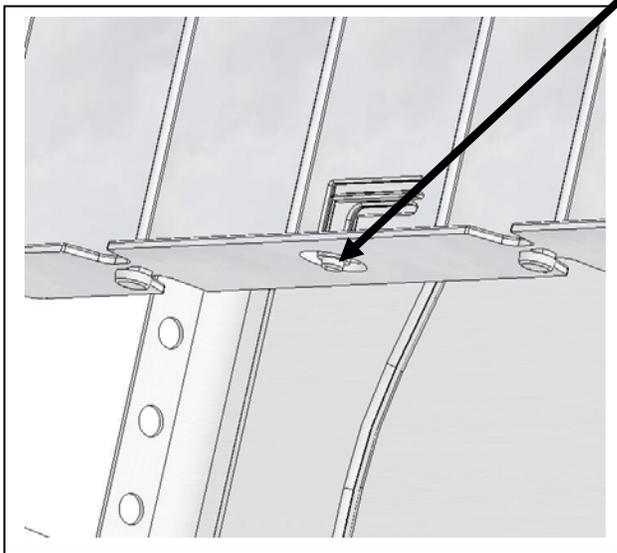


BOTTOM VIEW OF SHELF
SHOWING PINS LOCKED
THROUGH SHELF

DIVIDER IS COMPLETELY INSTALLED.

STEP – 04

REMOVAL OR RE-POSITION OF DIVIDERS

IF DIVIDERS NEED TO BE REMOVED, GENTLY LIFT UP ON SMALL EARS ON CENTER PIN TAB, THEN SLIDE DIVIDER TO THE FRONT, AND LIFT OFF SHELF.

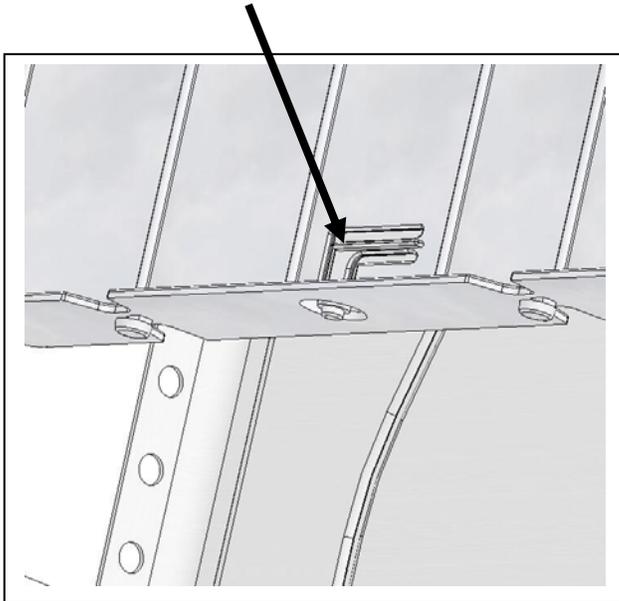

DOUBLE-CHECK ALL DIVIDER LOCATIONS TO BE SURE THAT ALL TABS ARE IN PLACE, AND TIGHTENED TO PREVENT LOSS OF DIVIDER OR PRODUCT SHIFT!



YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCE!

ADRIAN STEEL COMPANY • 906 JAMES ST. • ADRIAN, MI. 49221 • (517) 265-6194