



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

EXTENDED 41" BACK PANEL

PRODUCT WEIGHT

7.19 LBS

WIDTH X DEPTH X HEIGHT

41" X 8"

CAPACITY



25 lbs per D-Ring

COLOR

GRAY

CATALOG NUMBER

EBLBPK4108

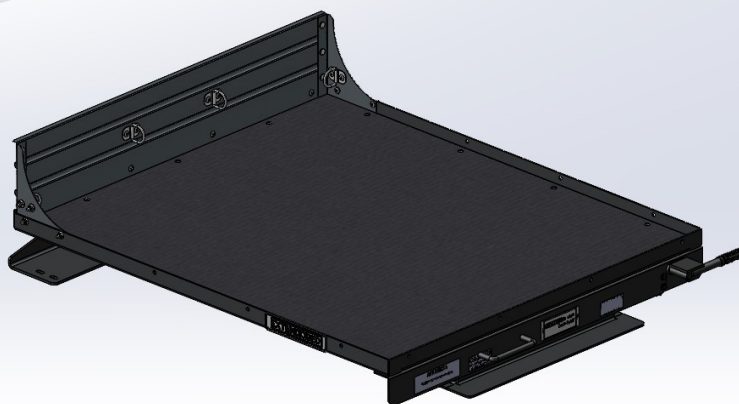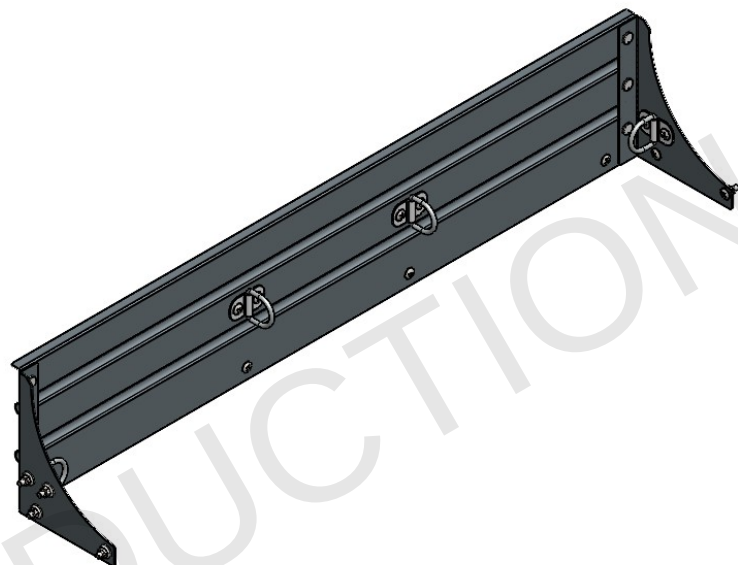

PRODUCT FEATURES

This product mounts to EBL1048. It creates a taller rear surface to prevent items from falling off the Extended when the vehicle experiences rough terrain. The back panel kit is fastened to the perimeter frame of the EBL and contains four D-Rings for cargo security.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



EXTENDEBED 41" BACK PANEL

CATALOG NUMBER EBLBPK4108

PRODUCT APPLICATION


This product is designed to be installed on the EBL1048 to create a tall rear surface to prevent itens from falling off.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
EBL1048	EXTENDEBED 1000LB 41WX48L

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

INSTR. NUMBER : 72672	PG: 1	REV: B	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART NUMBER : EBLBPKxxxx			1	EBLBPK4808	EBL BACK PANEL KIT, 48X08	1
PART DESC. • EXTENDO BED BACK PANEL KITS			2	EBLBPK4308	EBL BACK PANEL KIT, 43X08	1
NOTE: THIS INSTRUCTION IS VALID FOR THE FOLLOWING KITS: - EBLBPK4808 - EBLBPK4308 - EBLBPK4108			3	EBLBPK4108	EBL BACK PANEL KIT, 41X08	1

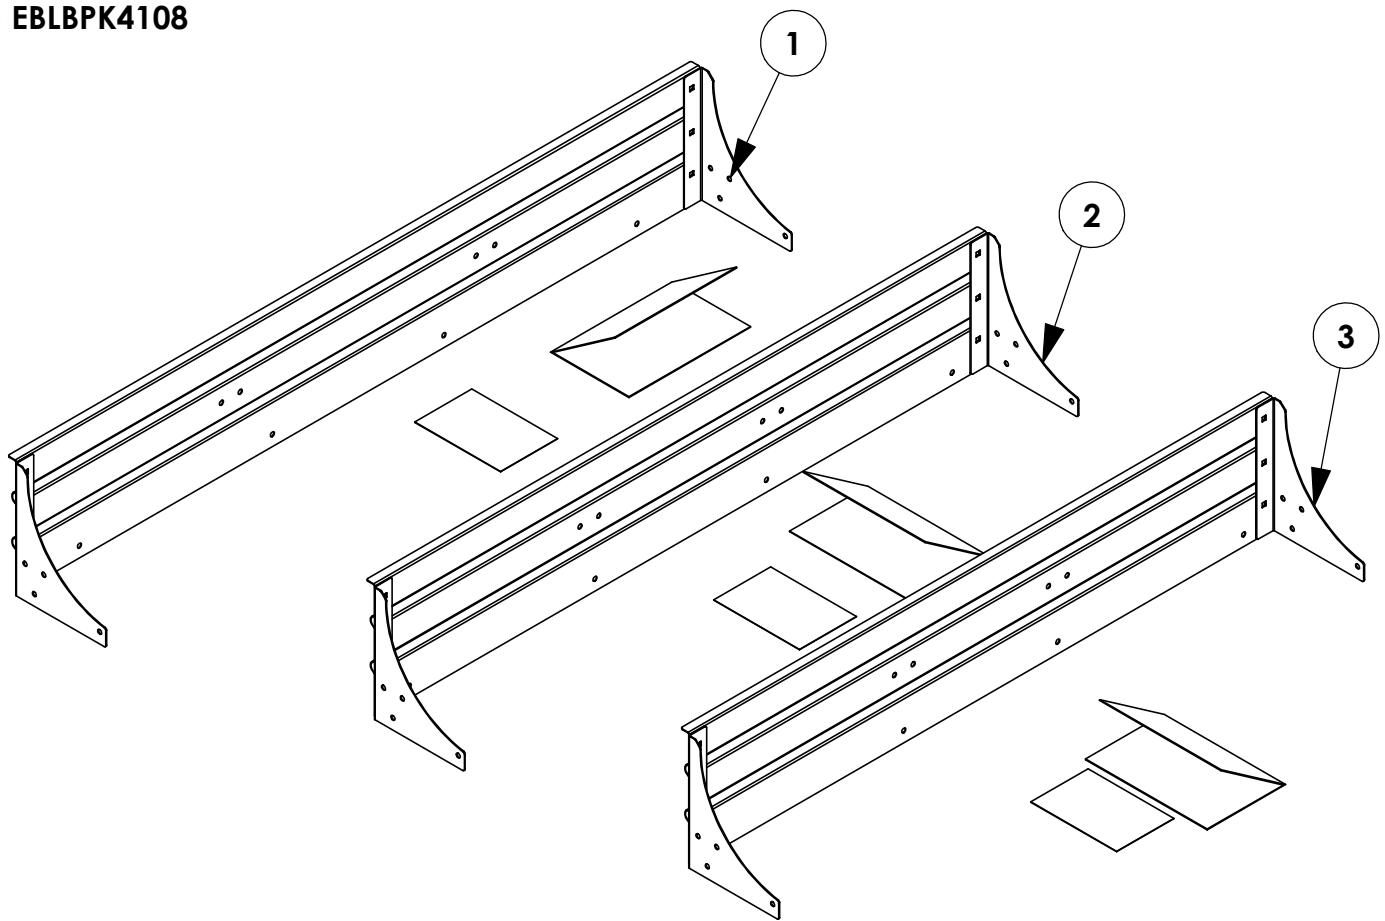

TOOLS NEEDED:

- 7/16" SOCKET
- 7/16" WRENCH
- #2 PHILLIPS
- 9/32" (0.281") Drill Bit
- Drill
- Ratchet/Impact

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED



BAG REFERENCE: BAGBAGEBLBPK4808




FAS0924
BOLT,CRG 1/4-20X.62 FH ZP
QTY: 6

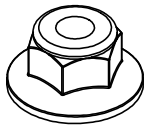

FAS0055
NUT,HEX NLK FLG 1/4-20 ZP
QTY: 22



FAS0062
SCREW,THP 1/4-20X.75 G5ZP
QTY: 16

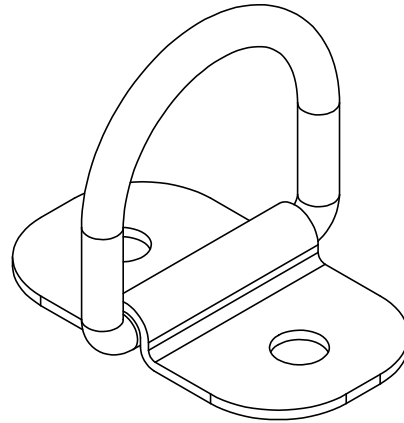


24760-0
CGO, TIEDOWN, D-RING
QTY: 4

INTENTIONALLY LEFT BLANK

STEP 1 - ASSEMBLE THE PANELS AND MOUNT D-RINGS


Step 1.1
FULLY TIGHTEN
FAS0924 AND
FAS0055
(3 PLACES PER
SIDE)
7/16" SOCKET

Step 1.2
FULLY TIGHTEN
FAS0062 AND
FAS0055
(08 PLACES)
7/16" WRENCH
#2 PHILLIPS

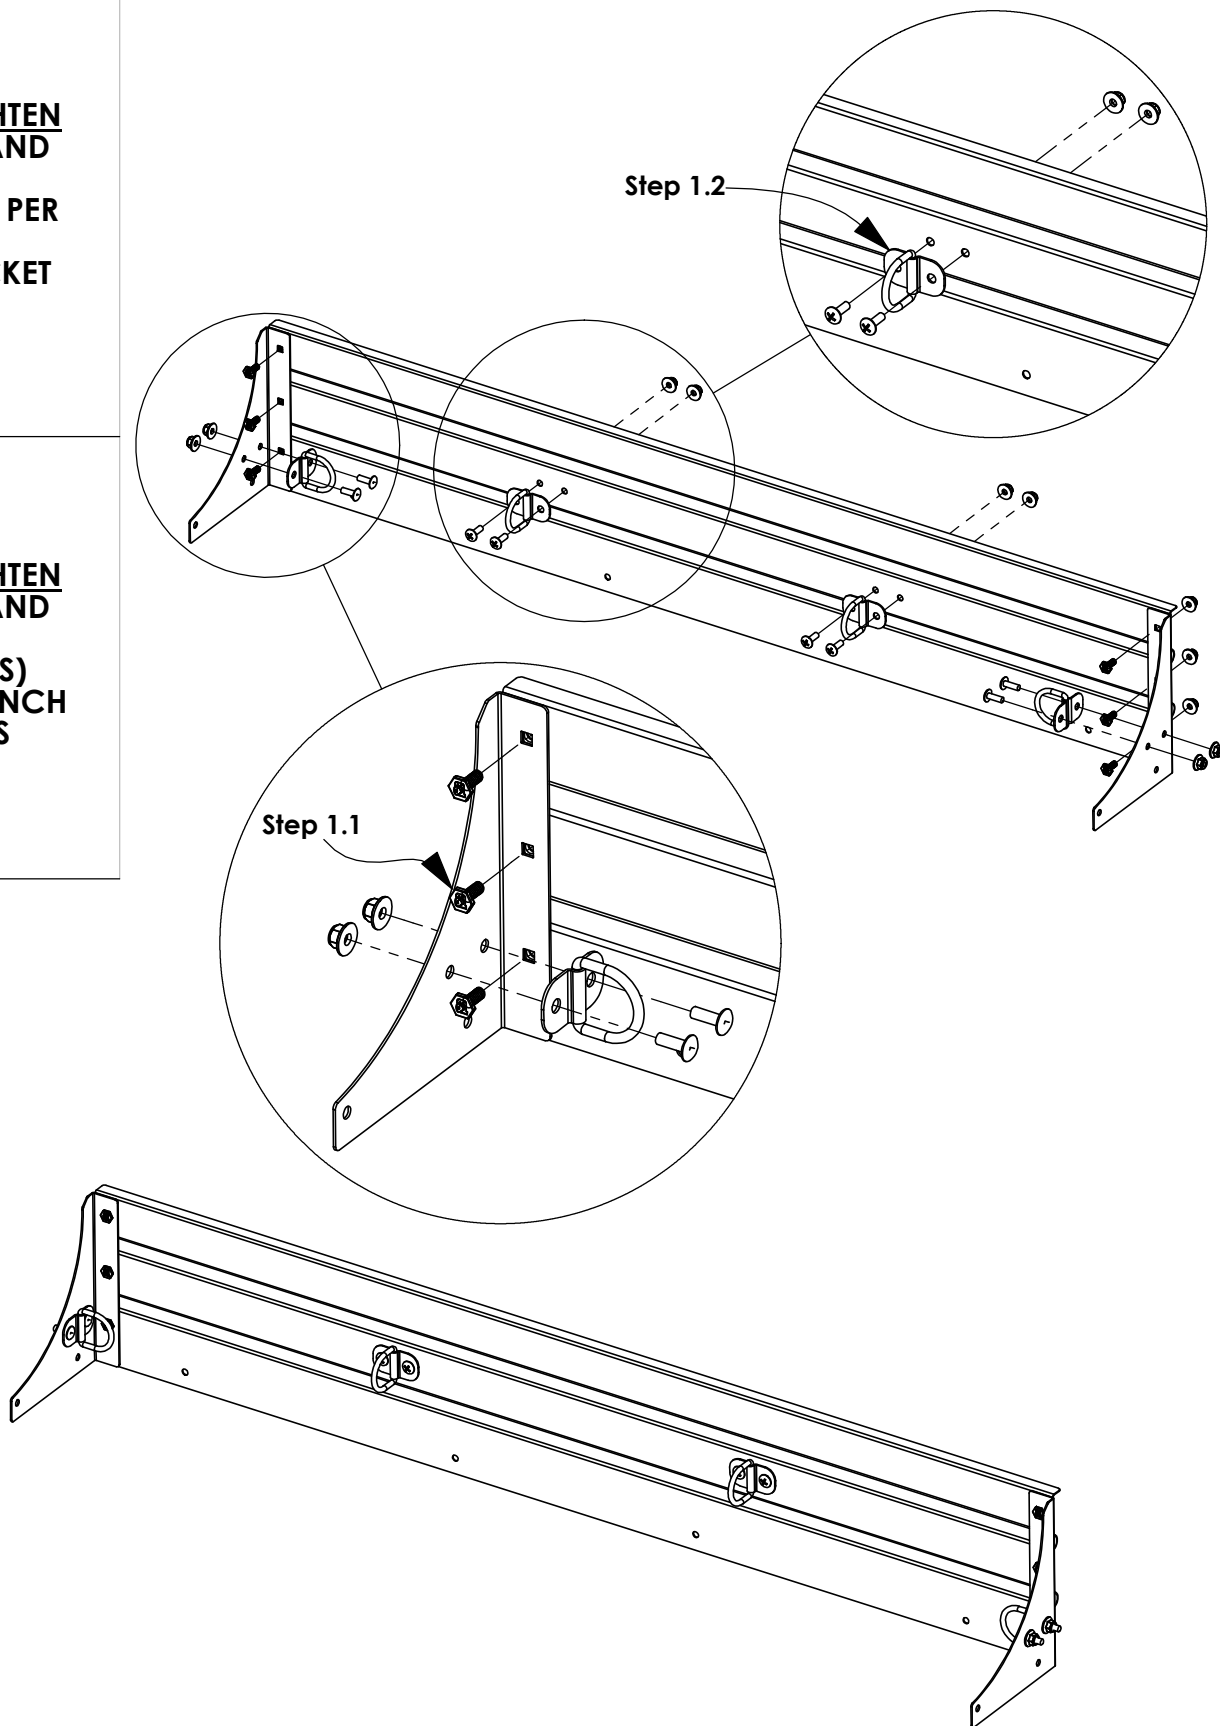

STEP 2 - MOUNT THE BACK PANEL ASSEMBLY TO THE EXTENDED FRAME.

Step 2.1
FULLY TIGHTEN
FAS0062 AND
FAS0055
(8 PLACES)
7/16" WRENCH
#2 PHILLIP

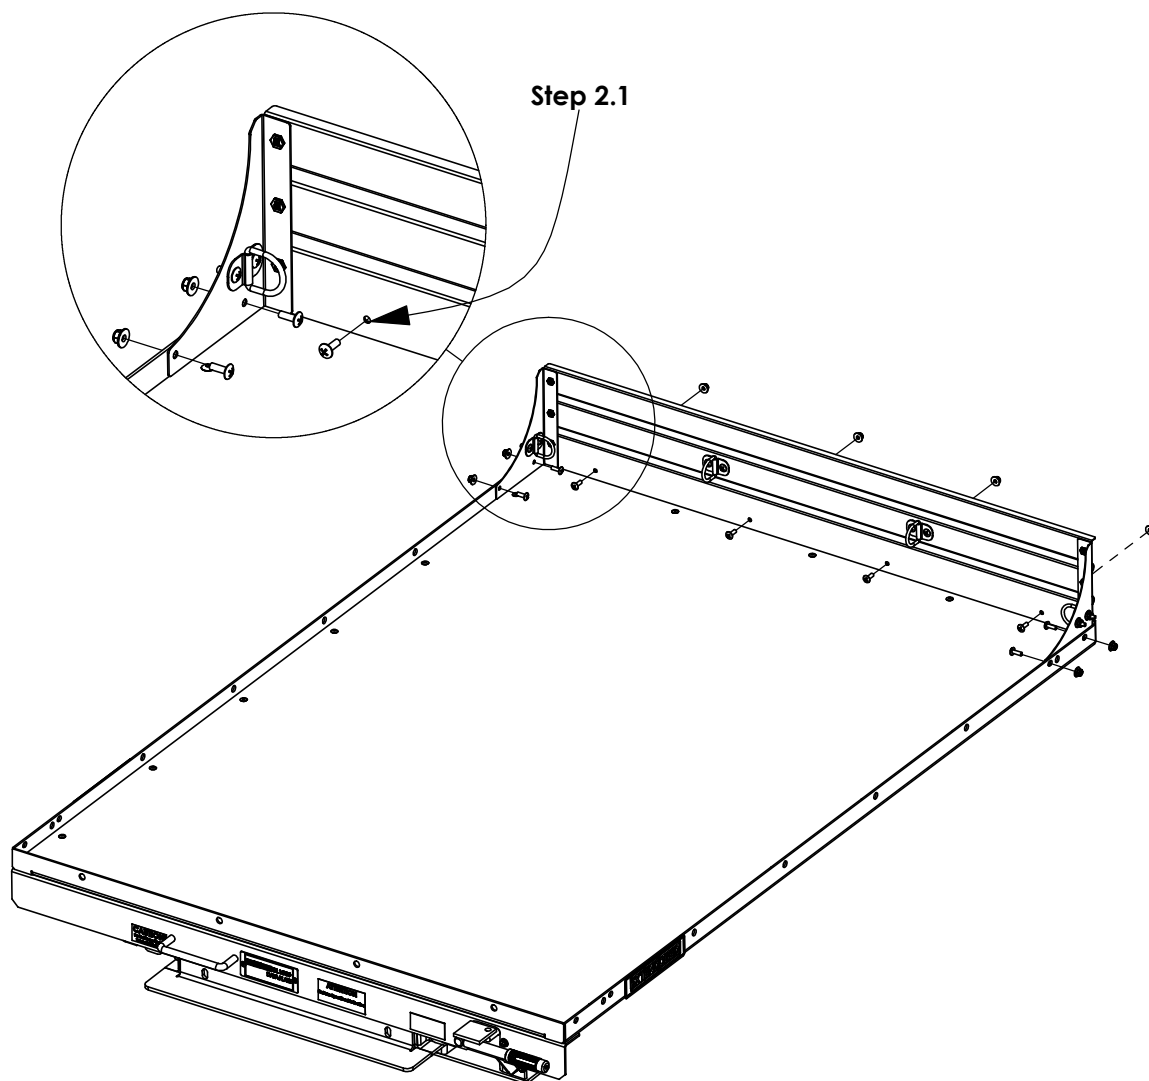

ASSEMBLY COMPLETE

