



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

EXTENDEBED MOUNTING KIT FOR CHEVROLET SILVERADO EV 5.75' BED

PRODUCT WEIGHT

56.53 LBS.

WIDTH X DEPTH X HEIGHT

65.80" X 4.57" X 5.76"

CAPACITY



5.75' BED

COLOR

BLACK

CATALOG NUMBER

EMBK-GMEV-6

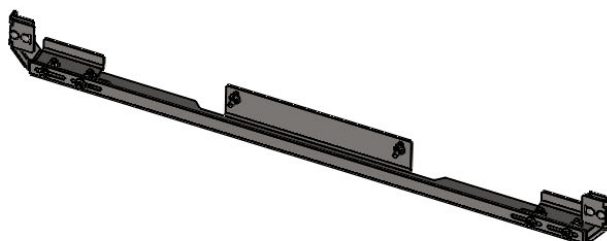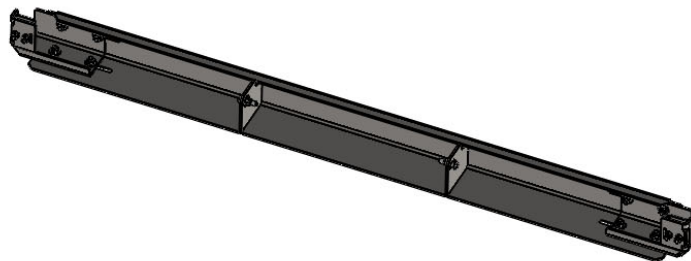

PRODUCT FEATURES

NO-DRILL MOUNTING KIT FOR EBL1260

CHEVROLET SILVERADO EV 5.75' BED

NO-DRILL SOLUTION ALLOWS FOR EASY INSTALLATION, AS WELL AS FOR PRODUCT TO BE UNINSTALLED WITHOUT VEHICLE MODIFICATIONS.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.

**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

EXTENDOBED MOUNTING KIT FOR CHEVROLET SILVERADO EV 5.75' BED

CATALOG NUMBER EBMK-GMEV-6

PRODUCT APPLICATION


**MOUNTING KIT FOR EBL1260 IN A CHEVROLET SILVERADO EV
WITH A 5.75' BED.**

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
EBL1260	EXTENDOBED 1200LB 48W X 60L

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

INSTR. : INS76555 NUMBER		PG: 1	REV: B	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART : EBMK-GMEV-6 NUMBER PART • DESC. • EBL NO-DRILL MTG KIT GMEV				1	76552-B	EB,GMEV,FRONT CROSS BRACE, BLK	1
				2	76551-B	EB,GMEV,REAR CROSS BRACE, BLK	1
				3	76557-B	EB,GMEV,FRONT DS BRACKET, BLACK	1
				4	76556-B	EB,BRACKET CLAMP, BLACK	4
				5	76558-B	EB,GMEV,FRONT PS BRACKET, BLACK	1
				6	76559-B	EB,GMEV,REAR DS BRACKET, BLACK	1
				7	76560-B	EB,GMEV,REAR PS BRACKET, BLACK	1

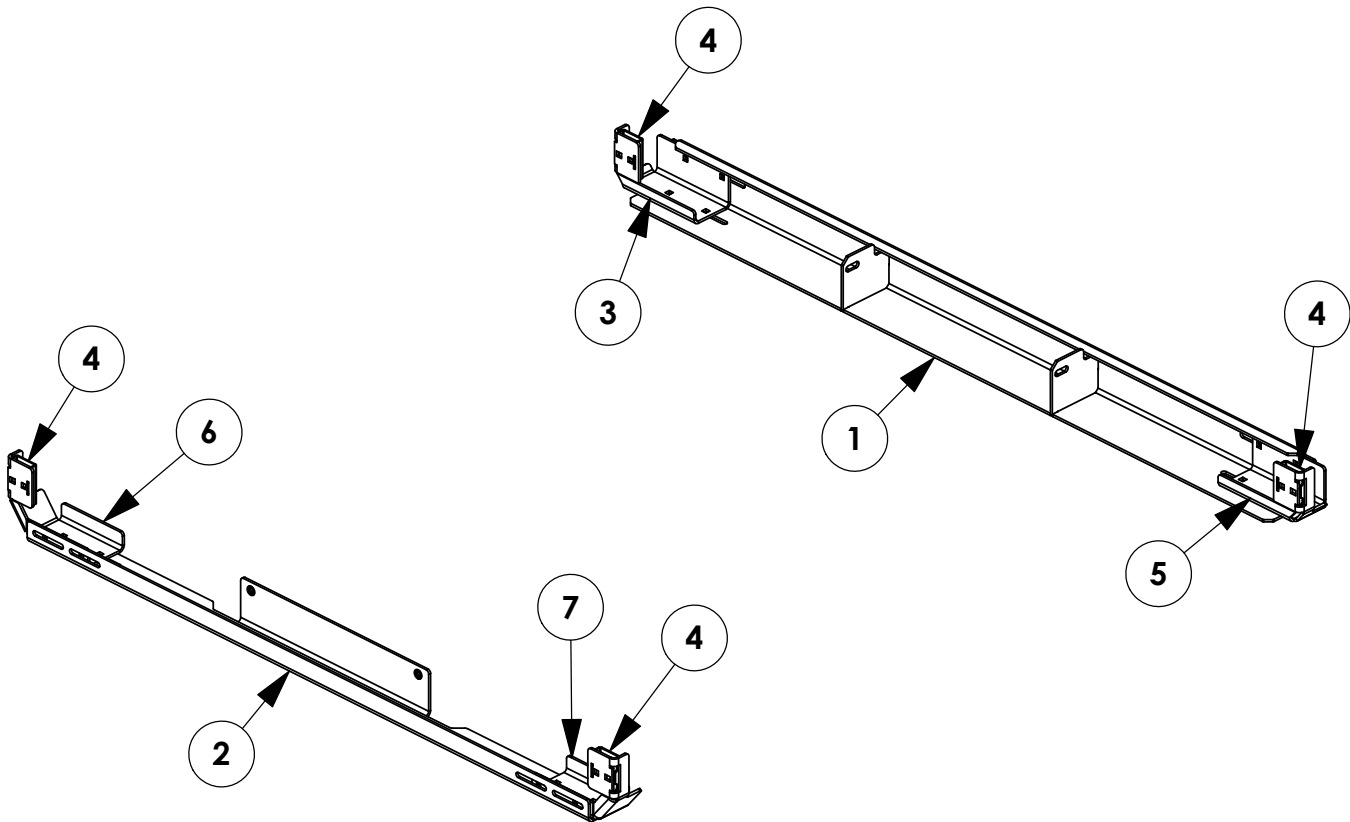

TOOLS NEEDED:
9/16 SOCKET
IMPACT DRIVER
7/32 ALLEN
ANGLE CUTTERS/KNIFE

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED


BAG REFERENCE: BAG76555

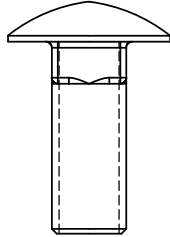


FAS0102
BOLT,CRG
3/8-16X1 G5 ZN
QTY: 16

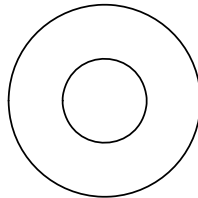


FAS0104
WASHER,FLAT USS
3/8 ZN
QTY: 20



FAS0604
NUT,HEX NLK
3/8-16 ZP
QTY: 26

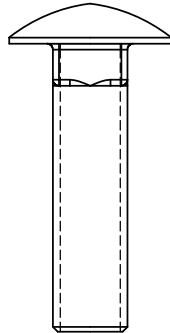

FAS0117
BOLT,CRG
3/8-16X1.5 G5 ZN
QTY: 08

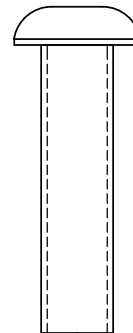

FAS0577
SCREW,BHCS
3/8-16X1.5 ZN
QTY: 04

INTENTIONALLY LEFT BLANK

STEP 1 - MODIFY SPARE TIRE ACCESS CAPS IN REAR OF BED

Step 1.1
LOCATE THE TWO
SPARE TIRE
ACCESS CAPS.
THEY ARE AT THE
REAR OF THE BED.

Step 1.1 & Step 1.5



Step 1.2
REMOVE EACH
CAP FROM BED.

Step 1.2



Step 1.3
LOCATE THE
DIRECTIONAL PIN
ON THE CAP.

Step 1.4
CUT THE
DIRECTIONAL PIN
OFF OF EACH
CAP. THIS IS TO
ALLOW IT TO BE
REMOVED WITH
THE NO-DRILL KIT
INSTALLED. THIS
DOES NOT AFFECT
THE CAP'S
PERFORMANCE.

Step 1.3




Step 1.4




Step 1.5
REPLACE EACH
CAP.

STEP 2 - ASSEMBLE FRONT CROSS-MOUNT

Step 2.1
LOOSELY
ASSEMBLE IN
ORIENTATION
SHOWN
 FAS0102,
 FAS0104 AND
 FAS604
 (04 PLACES
 EACH END)

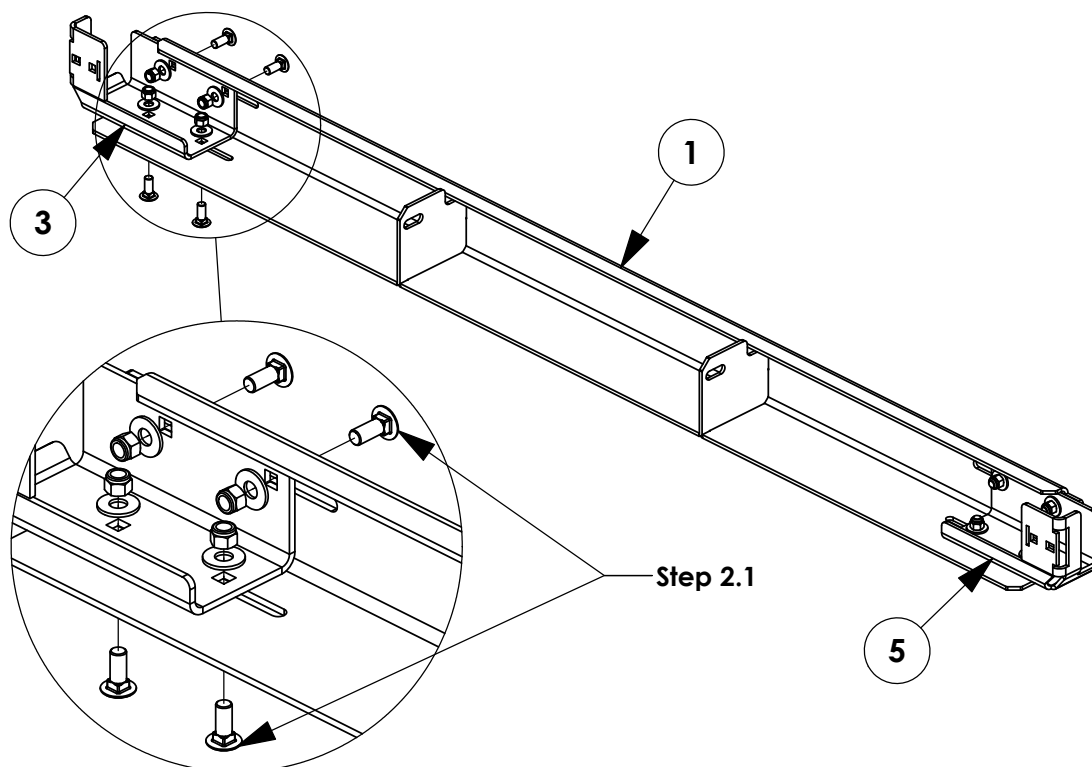
**STEP 3 - ASSEMBLE REAR CROSS-MOUNT**

Step 3.1
LOOSELY
ASSEMBLE IN
ORIENTATION
SHOWN
 FAS0102,
 FAS0104 AND
 FAS604
 (04 PLACES
 EACH END)

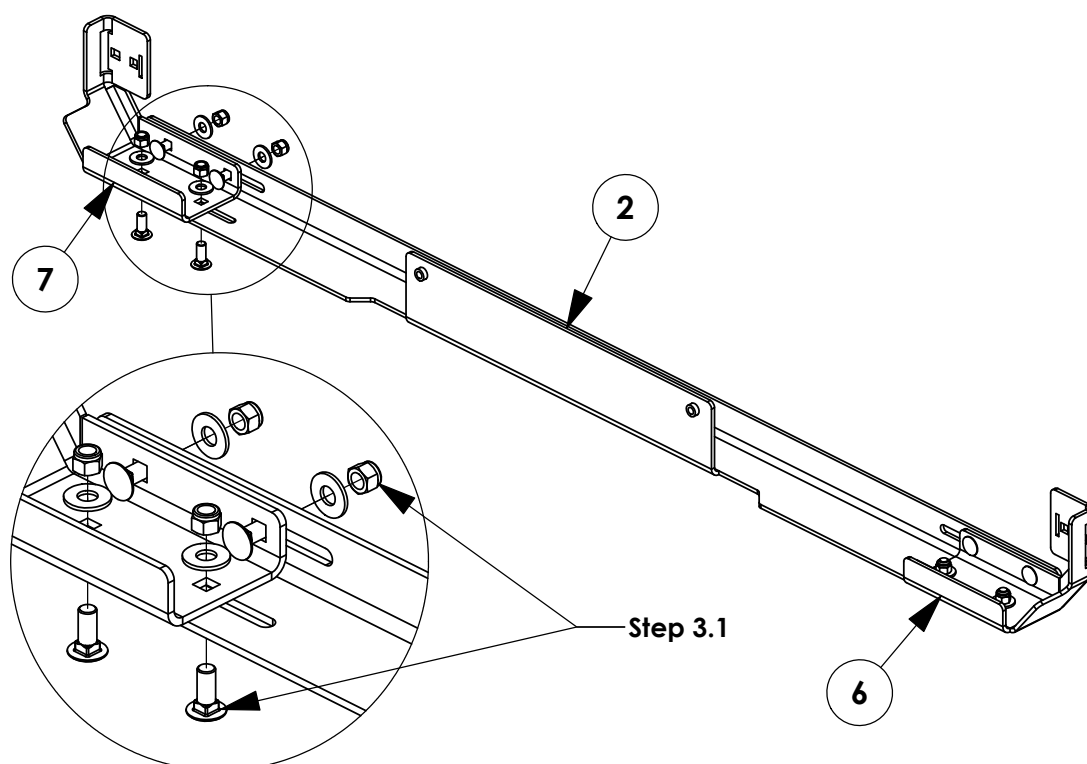


STEP 4 - POSITION CROSS-MOUNTS AND TIGHTEN

Step 4.1
CENTER CROSS-MOUNTS,
EXTEND OUTER
BRACKETS,
FULLY TIGHTEN
FAS0104
(04 PLACES ALL
FOUR CORNERS)
9/16 SOCKET

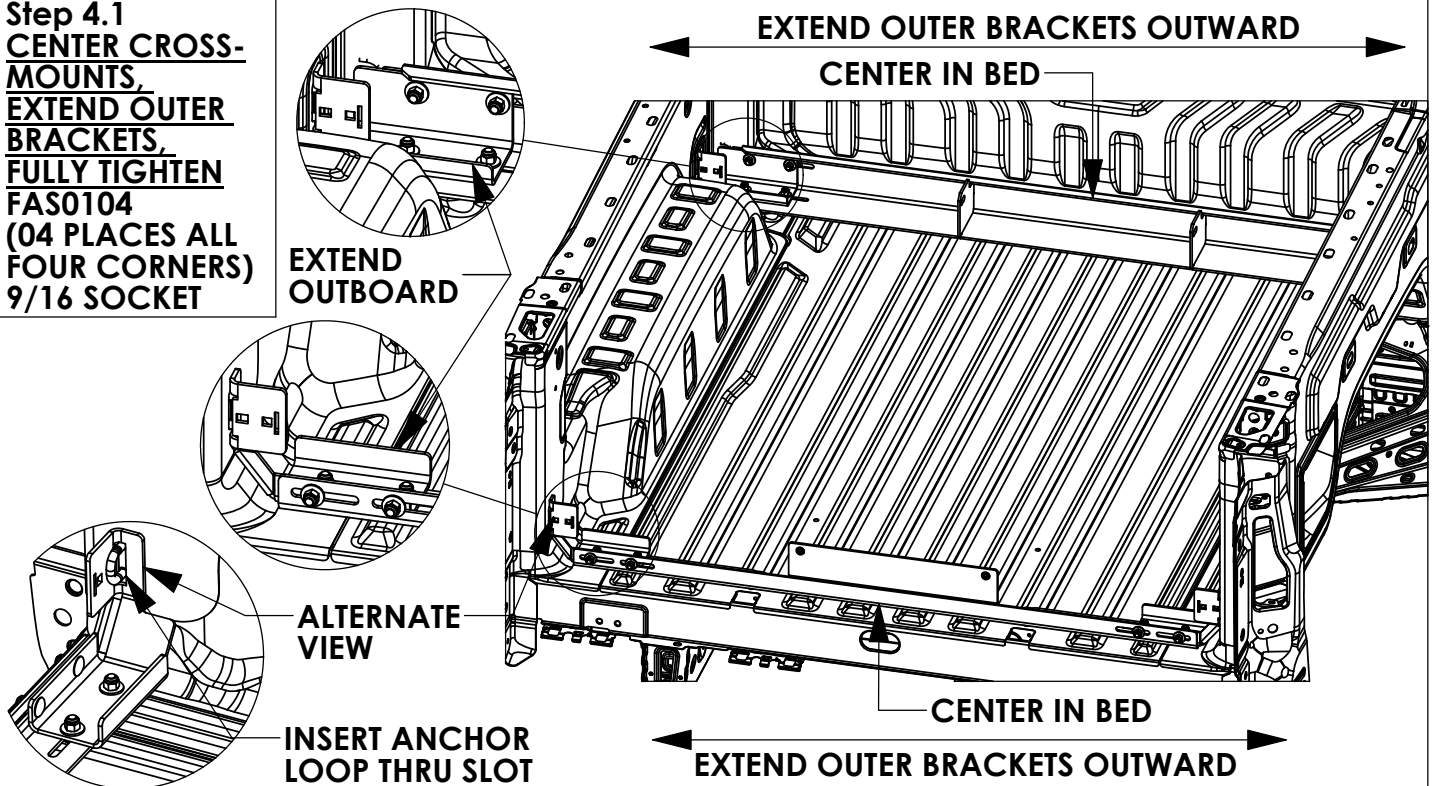**STEP 5 - ATTACH CRUSH BRACKETS**

Step 5.1
FULLY TIGHTEN
FAS0117 AND
FAS0604
(02 PLACES ALL
FOUR CORNERS)
9/16 SOCKET

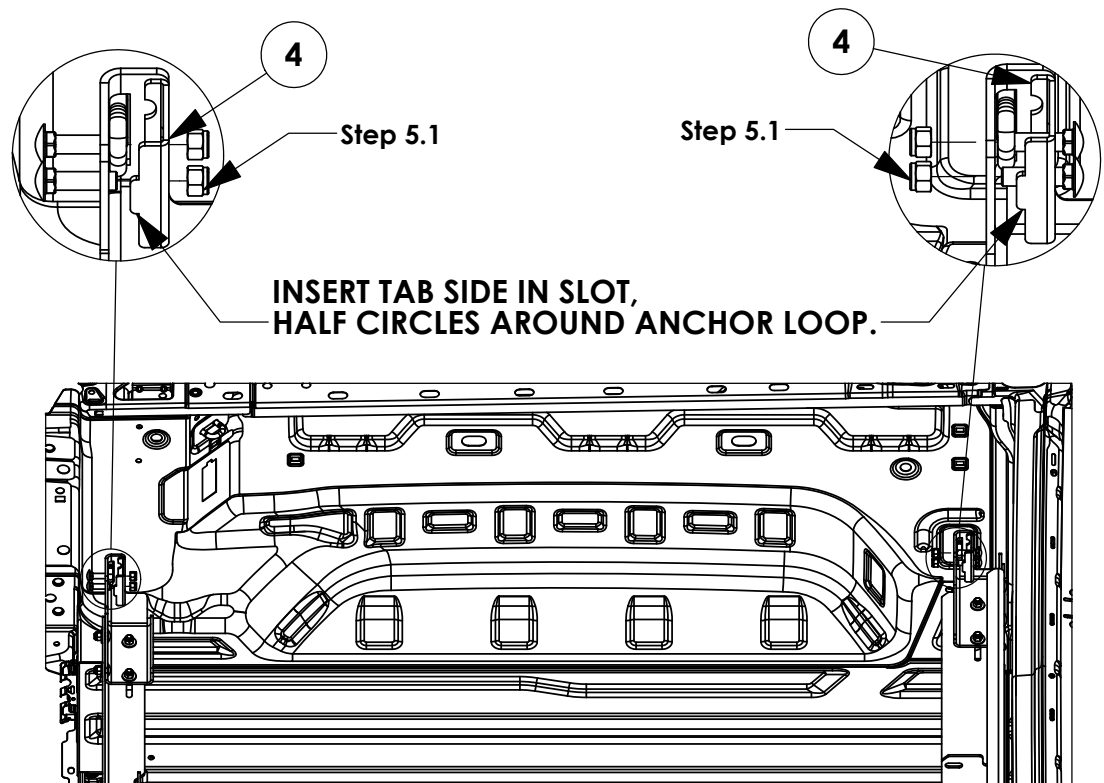


STEP 6 - ATTACH THE EXTENDEBED TO THE MOUNTING PLATES

Step 6.1
SLIGHTLY
EXTEND TO
EXPOSE FRONT
HOLES, LOOSELY
ASSEMBLE
FAS0577,
FAS0104 AND
FAS0604
(02 PLACES)


Step 6.2
FULLY TIGHTEN
FAS0117 AND
FAS0104
(02 PLACES)
7/32 ALLEN

Step 6.3
FULLY TIGHTEN
FAS0577,
FAS0104 AND
FAS0604
(02 PLACES)
7/32 ALLEN
9/16 SOCKET

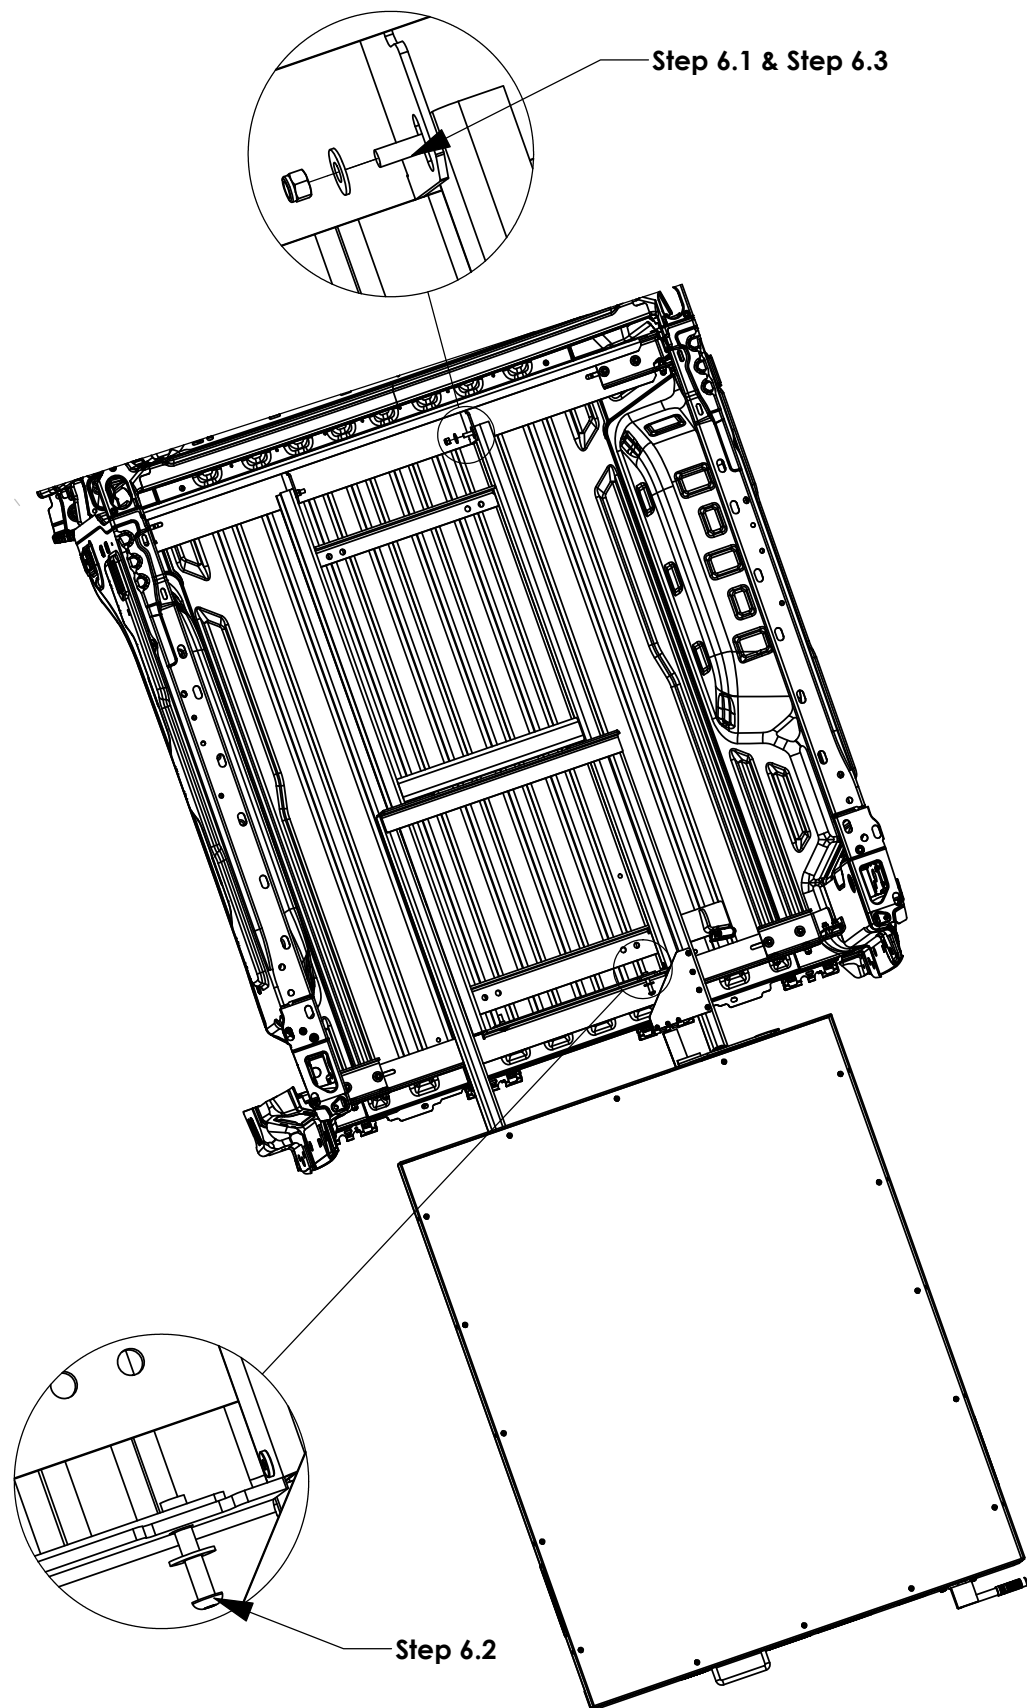

STEP 7 - CHECK THAT ALL FASTENERS ARE TIGHTENED, CYCLE TEST

Step 7.1
CHECK THAT ALL
FASTENERS ARE
TIGHTENED.
CYCLE THE
EXTENDEBED TO
ENSURE PROPER
OPERATION.

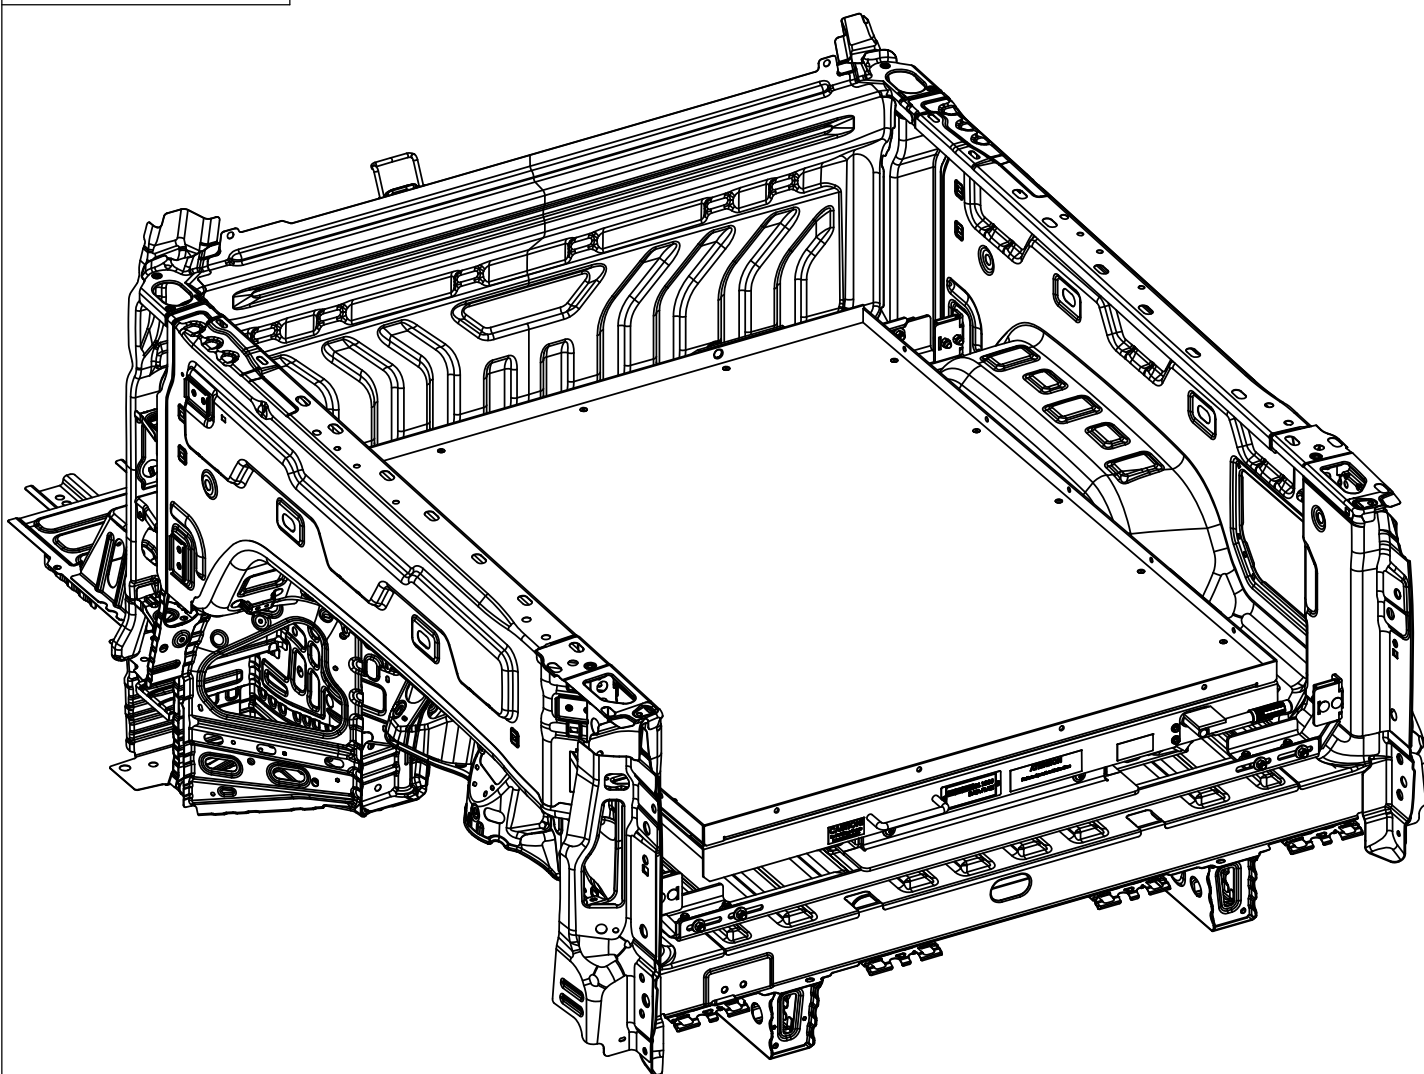

INSTALLATION IS COMPLETE