



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

EXTENDO BED MOUNTING KIT FOR MAVERICK 4.5' BED

PRODUCT WEIGHT

9.703 LBS.

WIDTH X DEPTH X HEIGHT

1.50" X 52.64" X 5.79"

CAPACITY


4.5' BED

COLOR

BLACK

CATALOG NUMBER

EBMK-MAV-4.5

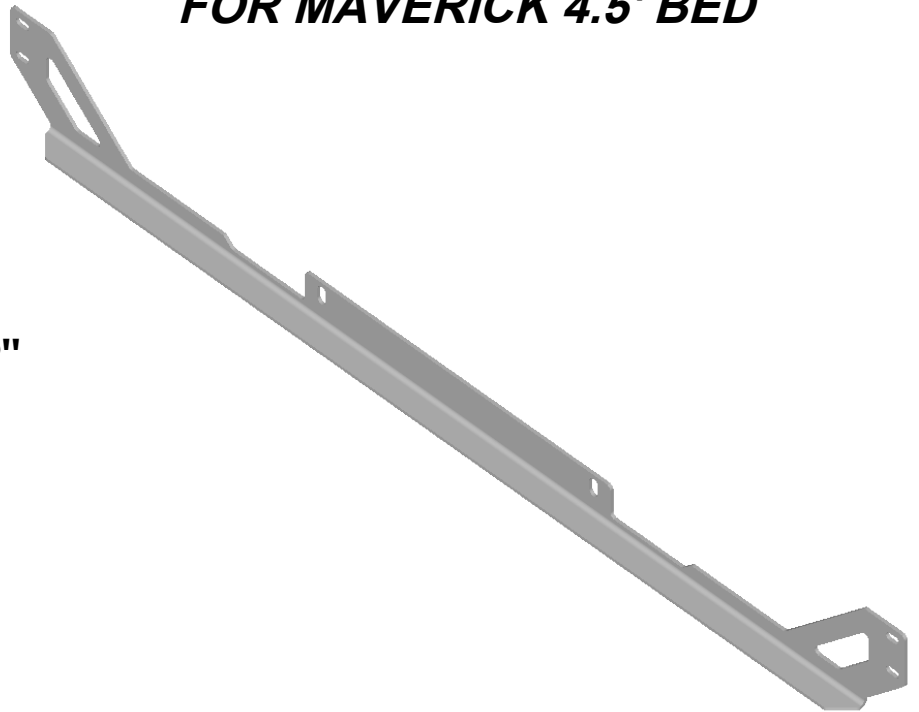

PRODUCT FEATURES

MOUNTING KIT FOR EBL1048

MAVERICK 4.5' BED

NO DRILLING REQUIRED TO INSTALL EXTENDO BED EBL1048

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

EXTENDOBED MOUNTING KIT FOR MAVERICK 4.5' BED

CATALOG NUMBER EBMK-MAV-4.5

PRODUCT APPLICATION


MOUNTING KIT FOR EBL1048 IN A 4.5' BED MAVERICK

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION (smart)</i>
EBL1048	EXTENDOBED 1000LB 41W X 48L

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

INSTR. NUMBER : 75912 PART NUMBER : EBMK-MAV-4.5 PART • EBL NO-DRILL MOUNTING DESC. • KIT, MAVERICK 4.5'	PG: 1	REV: B	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
			1	75657-B	REAR BRACKET, BLK	1
			2	BAG75657	FAS BAG FOR EBMK-MAV-4.5	1
			3	75912	ASM INS FOR EBMK-MAV-4.5	1

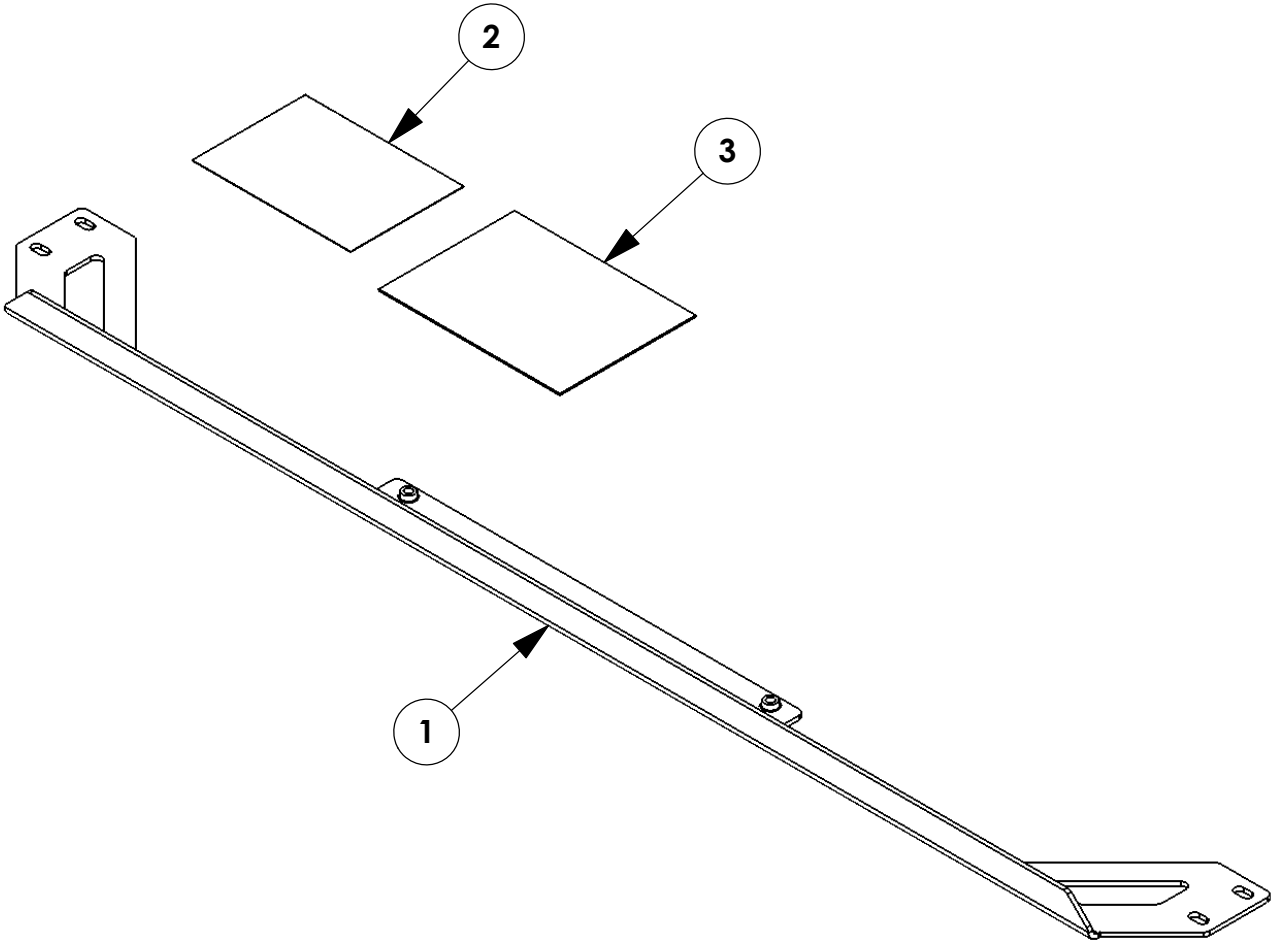

TOOLS NEEDED:

- T30 TORX BIT
- T40 TORX BIT
- 7/32 ALLEN BIT
- 9/16 SOCKET
- 10mm SOCKET
- 13mm SOCKET

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED


BAG REFERENCE: BAG75657




FAS0273
SCREW, HH
M6-1.0X50
QTY: 4




FAS0351
SCREW, HH
M8-1.25X40
QTY: 4

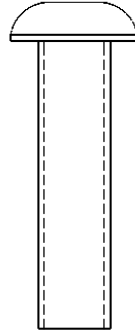


FAS0577
SCREW, BHCS
3/8-16X1.5
QTY: 2

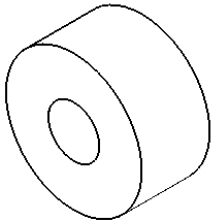


FAS0831
SPACER, FLR
1/2"
QTY: 4

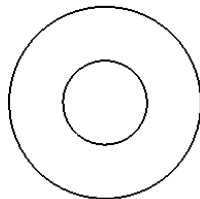

FAS0104
WASHER, FLAT
3/8"
QTY: 2

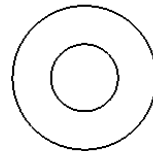

FAS0552
WASHER, FLAT
5/16"
QTY: 4

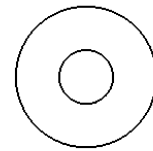

FAS0067
WASHER, FLAT
1/4"
QTY: 4



FAS0588
WASHER, LOCK
5/16"
QTY: 4




FAS0060
WASHER, FLAT
1/4"
QTY: 4

INTENTIONALLY LEFT BLANK

STEP 1 - PREP PICKUP BED - FORD MAVERICK 4.5' BED


Step 1.1
REMOVE ALL
DEBRIS FROM BED
OF VEHICLE

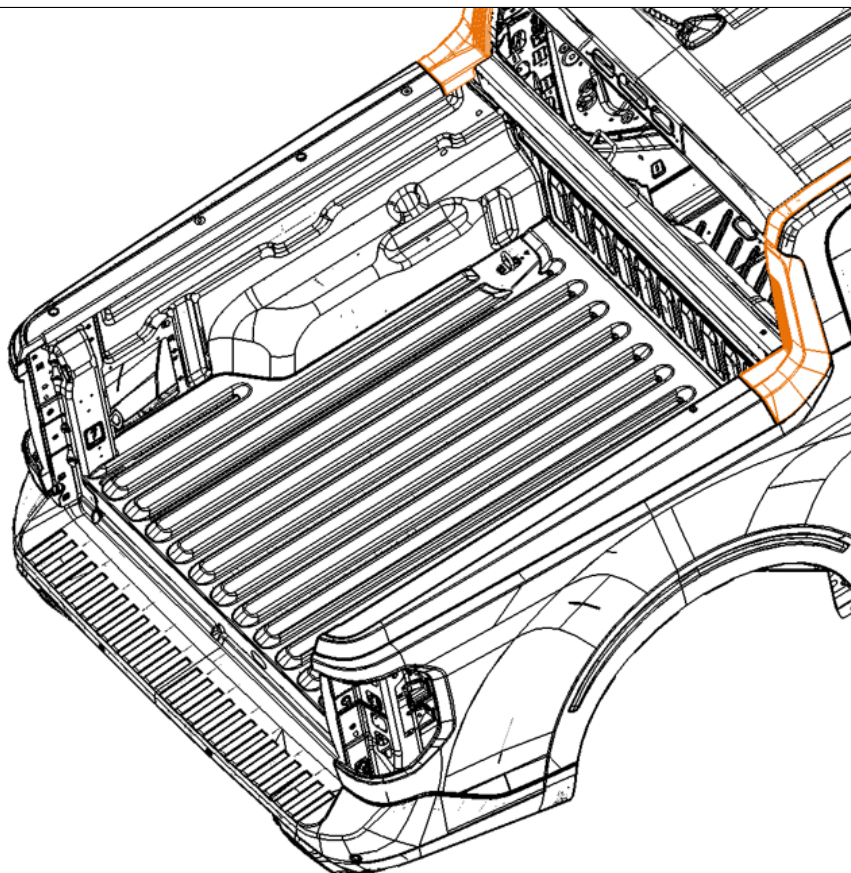

Step 1.2
REMOVE OEM D-
RINGS FROM
VEHICLE - SET
ASIDE THE 2 REAR
D RINGS FOR
RE-INSTALLATION.

REPEAT FOR BOTH
SIDES.


USE T40 TORX TO REMOVE
2 BOLTS PER TIE DOWN

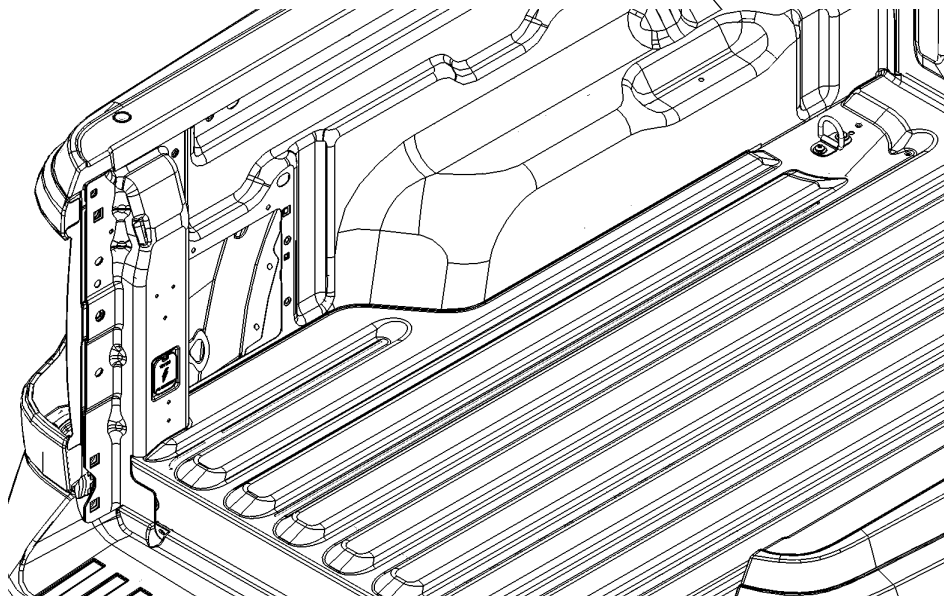


USE T30 TORX TO REMOVE
2 BOLTS PER TIE DOWN

STEP 2 - INSTALL REAR BRACKET**Step 2.1**

INSERT REAR BRACKET INTO POSITION AT THE TAILGATE END OF THE BED.

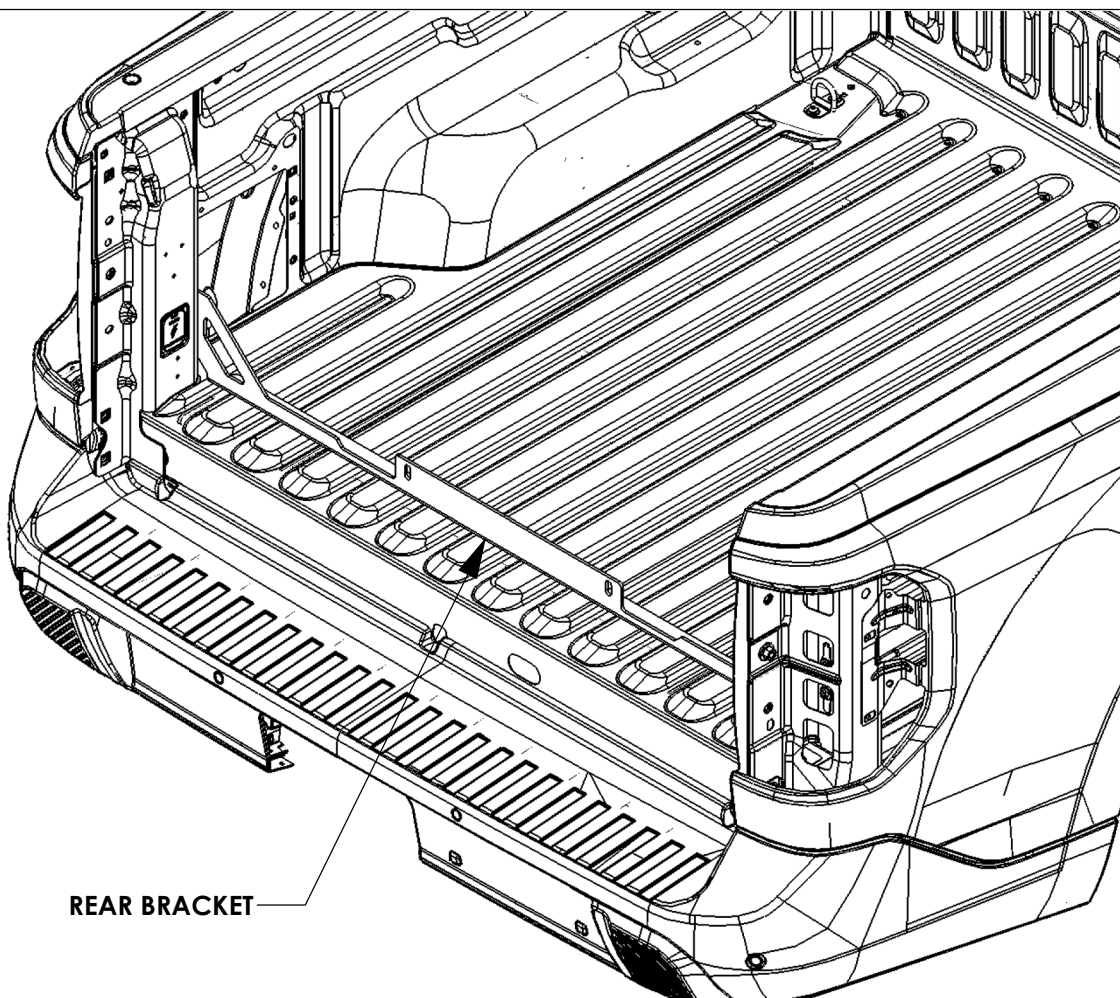
**Step 2.2**

INSTALL FAS0273 HEX BOLTS, FAS0060 LOCKWASHERS AND FAS0067 FLATWASHERS ONTO OEM D-RING AND THROUGH THE REAR BRACKET INTO THE D-RING ATTACHMENTS IN THE BED.
USE LOCTITE ON THE BOLTS.
REPEAT FOR THE OTHER SIDE.

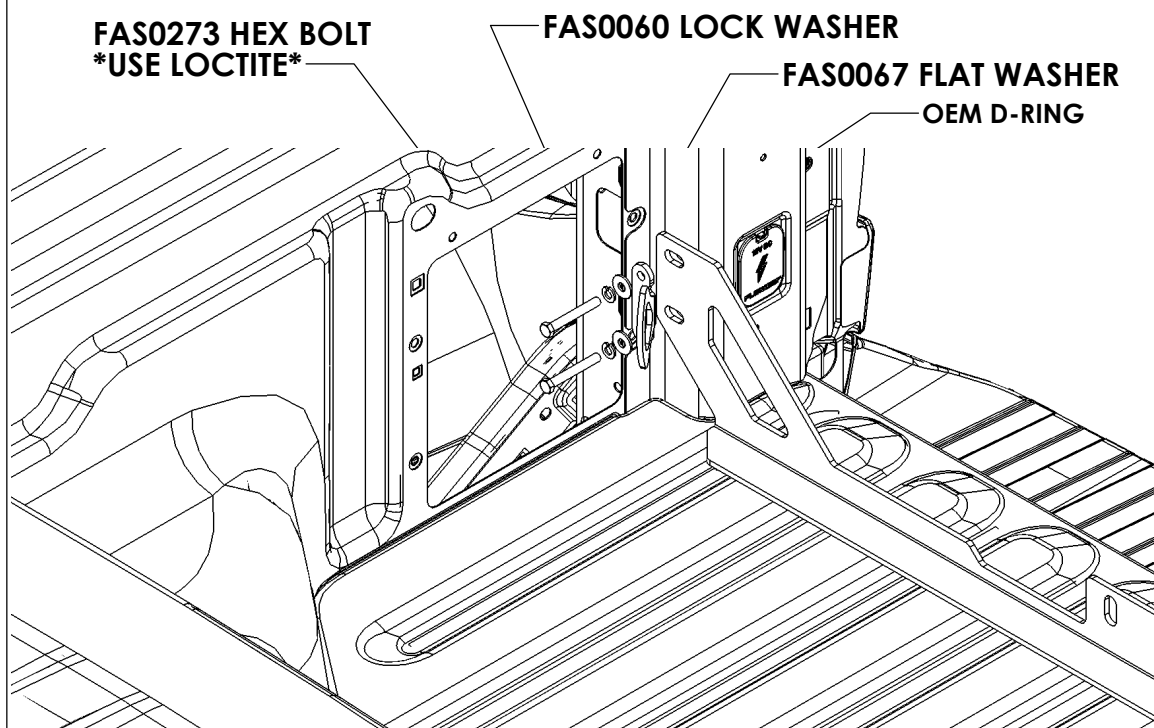


REFER TO EBL1048 INSTRUCTIONS**STEP 3 - INSTALL EBL1048****Step 3.1**

ASSURE THE EXTENDEBED IS IN THE FULLY CLOSED AND LOCKED POSITION PRIOR TO LIFTING TO AVOID MOVEMENT AND POTENTIAL FOR INJURY.

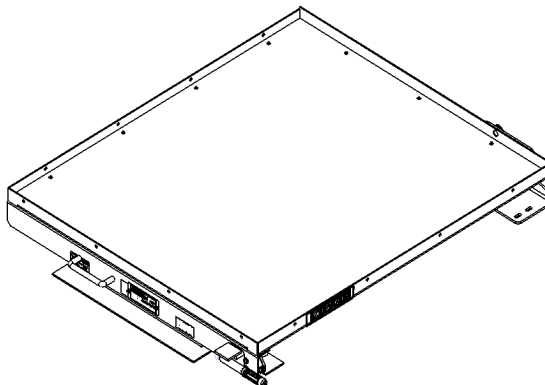**Step 3.2**

PLACE FAS0831 SPACERS ONTO THE BED AT THE FORWARD D-RING ATTACHMENT LOCATIONS. BOTH SIDES.

FAS0831
SPACER

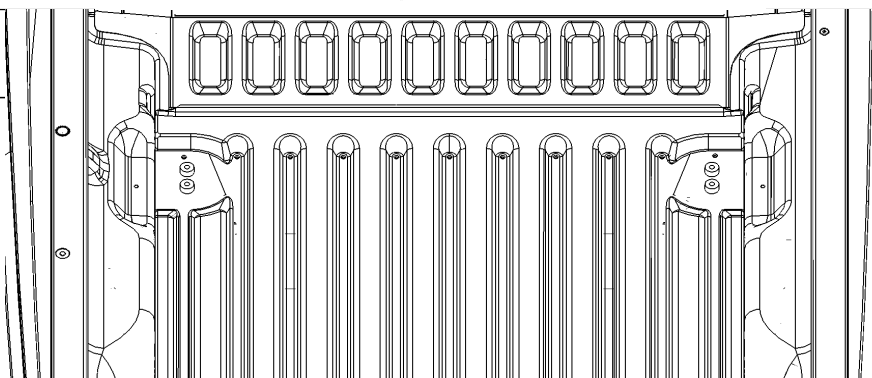


FAS0831
SPACER

Step 3.3

LIFT EXTENDEBED INTO VEHICLE USING PROPERLY RATED LIFT AND CAREFULLY ALIGN WITH ATTACHMENTS AT THE FRONT OF THE BED AND THE REAR BKT.

Step 3.4

INSTALL FAS0351 HEX BOLTS, FAS0588 LOCKWASHERS AND FAS0552 FLATWASHERS THRU EBL1048 ATTACHMENT AND FAS0831 SPACERS INTO THE D-RING ATTACHMENT HOLES. USE LOCTITE ON BOLTS.

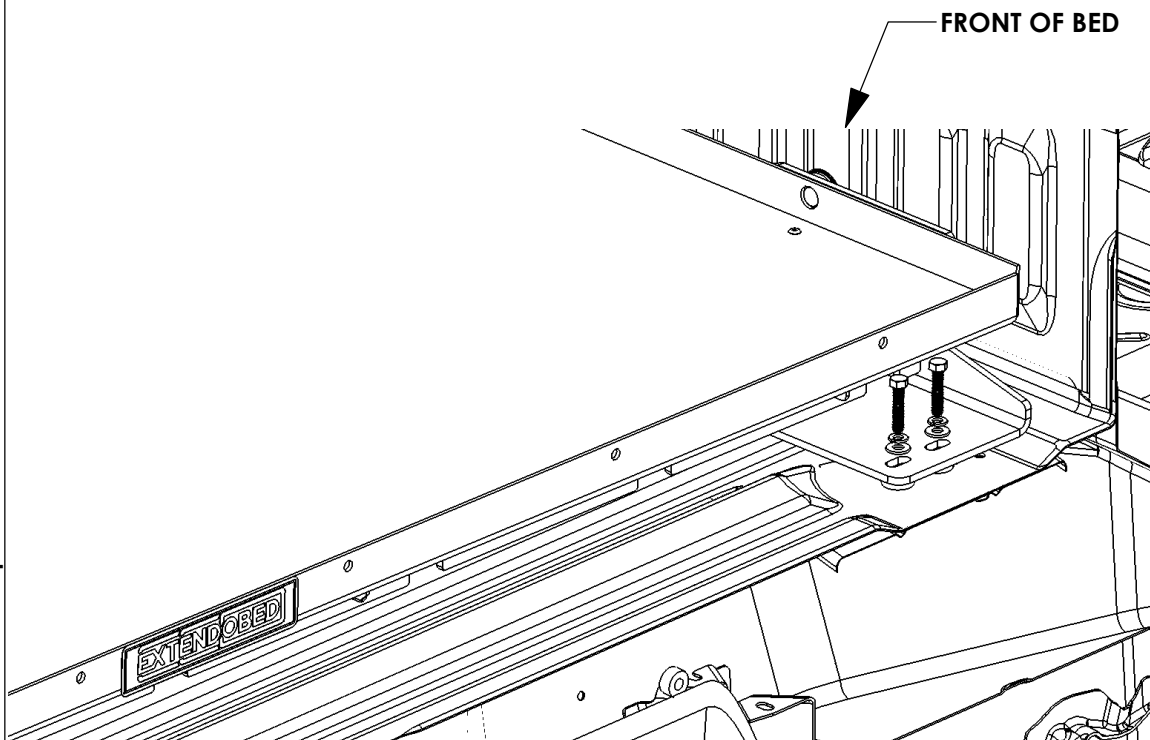


FRONT OF BED

***SHOWN CUT-AWAY FOR CLARITY**

STEP 3 - INSTALL EBL1048 CONTINUED

Step 3.5
INSERT FAS0577
BOLT THRU THE
FAS0104
FLATWASHER
AND FULLY
TIGHTEN

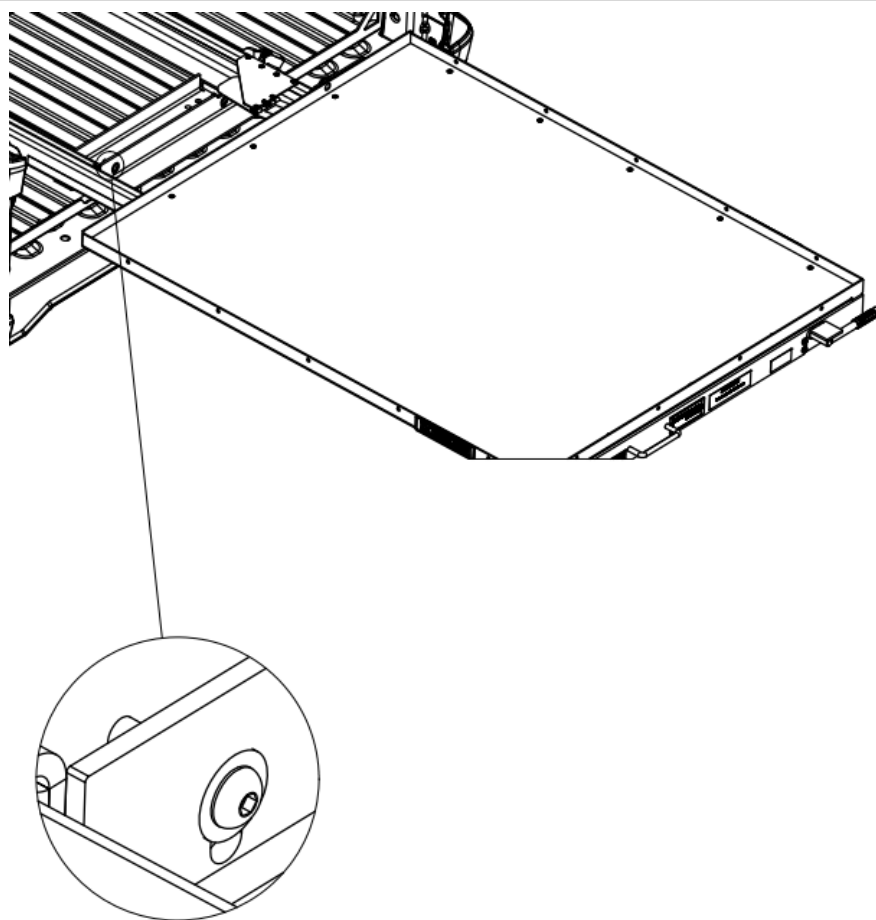

***FULLY TIGHTEN**
ALL FASTENERS*

INSTALLATION IS
NOW COMPLETE