


DETAIL A
SCALE 1 : 2

THE TOP PANEL COVERS ALL VERTICAL PIECES, & LEG BRACES. LEG BRACES ARE ASSEMBLED INSIDE THE END PANELS.

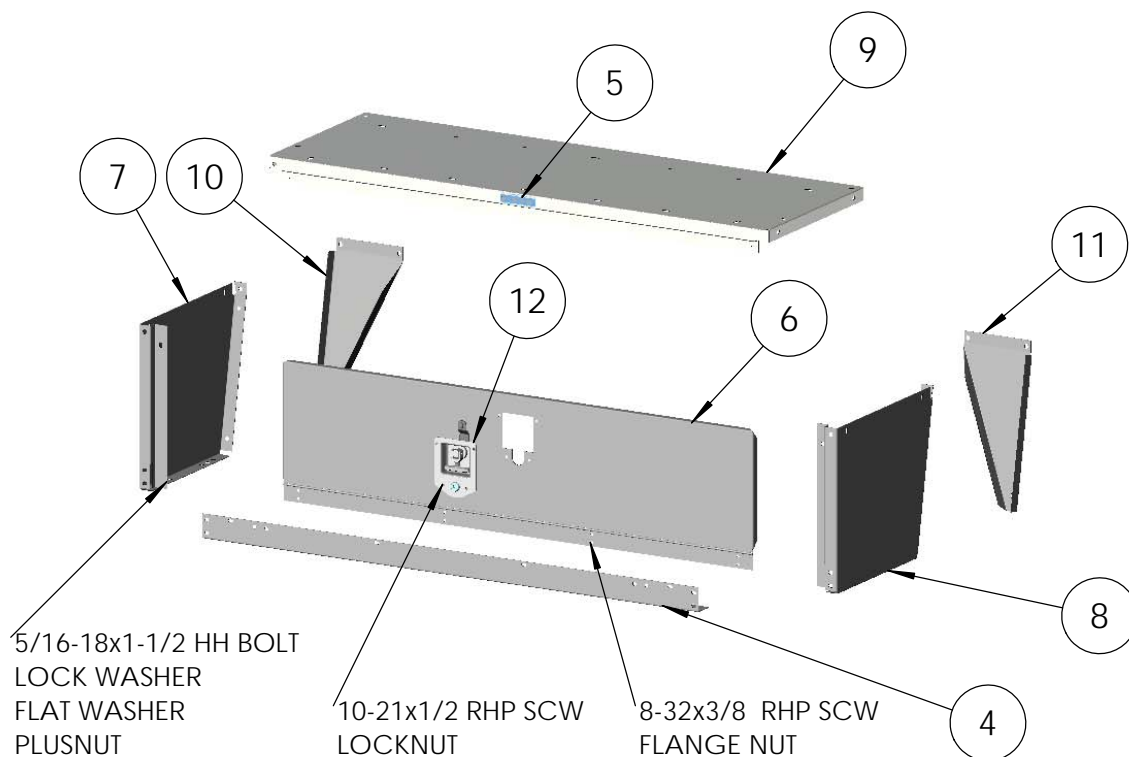


5/16-18x1-1/2 HH BOLT
LOCK WASHER
FLAT WASHER
PLUSNUT

10-21x1/2 RHP SCW
LOCKNUT

8-32x3/8 RHP SCW
FLANGE NUT

ITEM	PART #	DESCRIPTION	QTY
1	BAG00004-0	#4 BAG FOR #40 BIN/KD	1
2	CRT11946-A	CARTON, PAD FOR 11946	1
3	CRT11946-0	CARTON FOR #11946-0	1
4	FR42	FLOOR RAIL, 42"	1
5	LOGO-SM	0.875X3.00 ADRIAN LOGO	1
6	09311-0	DOOR ASM. 42" (39-5/8)	1
7	11947-0	END PANEL 14" LEFT	1
8	11948-0	END PANEL 14" RIGHT	1
9	11949-0	TOP PANEL 14X42	1
10	12072-0	LEG BRACE/,LEFT	1
11	12073-0	LEG BRACE/,RIGHT	1
12	21000-0	LOCKING T HNDL W/KEY ASCO	1

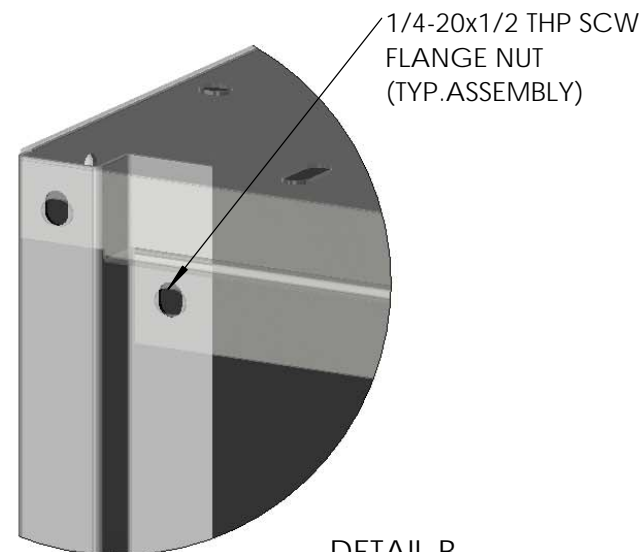

DETAIL B
SCALE 1 : 2

CAUTION: DRILL THRU FLOOR WITH CARE! WATCH FOR GAS TANK, CONTROL LINES, & ELECTRICAL WIRING.




906 James Street
Adrian, Michigan 49221
517.265.6194
WWW.ADRIANSTEEL.COM

ALL DESIGNS AND DESIGN CONCEPTS ARE THE INTELLECTUAL PROPERTY OF ADRIAN STEEL COMPANY AND ARE NOT TO BE COPIED, DISTRIBUTED OR COMMUNICATED TO OUTSIDE PARTIES WITHOUT THE WRITTEN PERMISSION OF ADRIAN STEEL COMPANY.
THE MATERIAL/CONCEPTS/DESIGNS CONTAINED WITHIN THIS DOCUMENT ARE FOR THE PURPOSE OF SUPPLYING PRODUCT TO POTENTIAL ADRIAN STEEL COMPANY CUSTOMERS.

Drawn By: **BDS**
Date: **03/09/2015**
ECN No: **12861**
PART No: **40**

DESCRIPTION
WHEELHOUSE BIN - KD
14 X 12.5 X 42

Part Weight: 27.58	CG Horizontal & Vertical: HCG= 21.00 VCG= 6.25	Sheet: 1 of 1	Rev.: E
------------------------------	---	-------------------------	-------------------

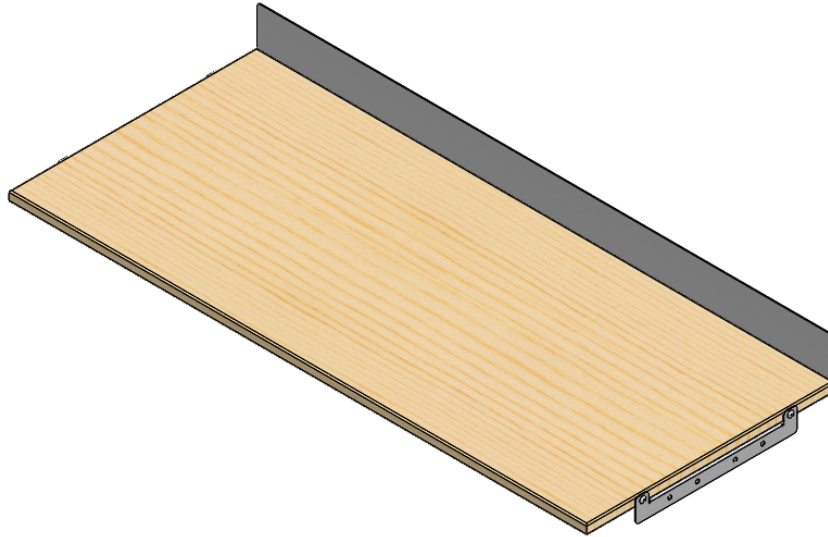

PRODUCT WEIGHT

11 lbs

WIDTH x DEPTH x HEIGHT

42" X 18" X 3 5/8"

CAPACITY

N/A

COLOR

BALTIC BIRCH / GRAY

CATALOG NUMBER

60105

PRODUCT FEATURES

This Workbench top is designed to mount atop any 12X42 module arrangement and/or framework of KD parts


Some drilling may be required.



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual

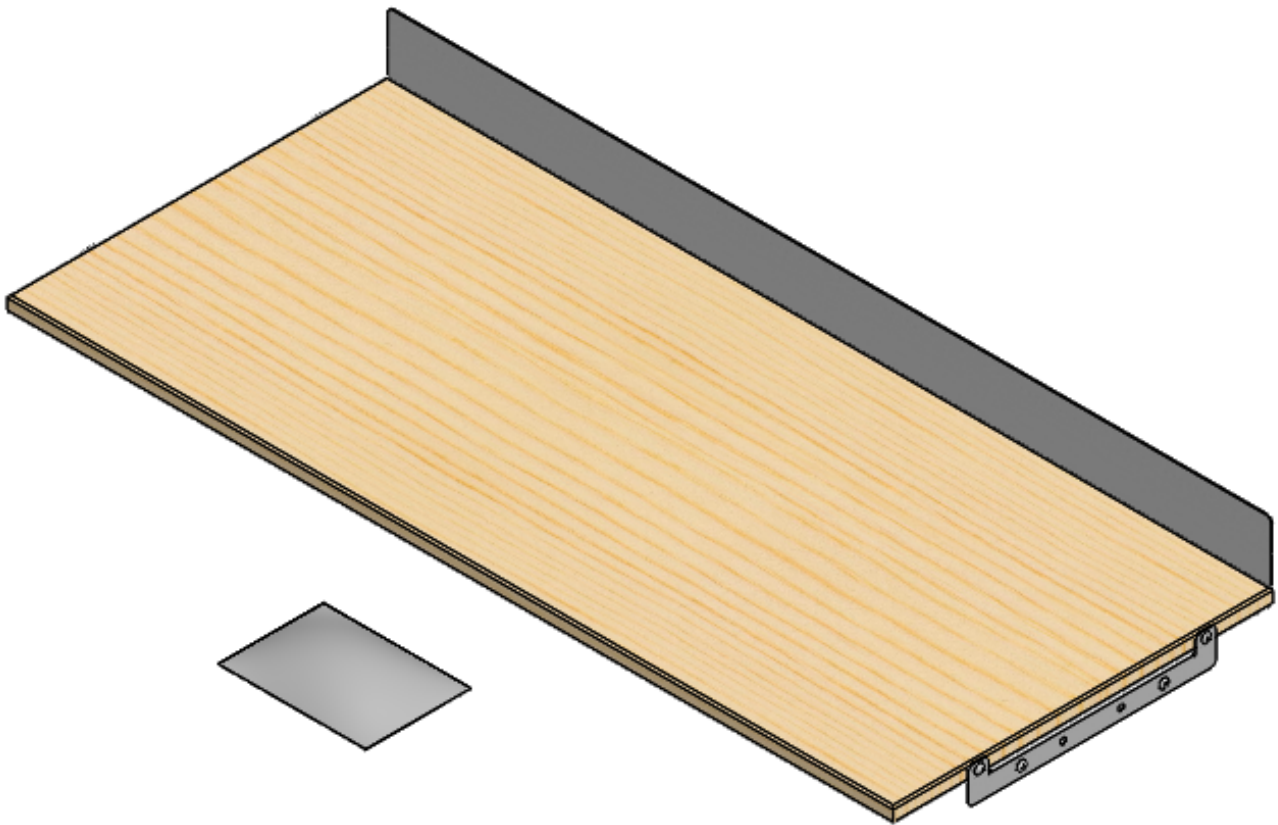

60105 **WORKBENCH TOP 18" x 42"**

- PRECAUTIONS -





 **CAUTION** 
**THE USE AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!**



 **CAUTION** 
**ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



 **DANGER** 
**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



 **CAUTION** 
**TO AVOID DAMAGING THE VEHICLE ALWAYS
USE DRILL STOPS WHEN DRILLING ANY IN-
STALLATION HOLES!**



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP



RATCHET, SOCKETS
AND/OR WRENCHES








SCREWDRIVERS




MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.

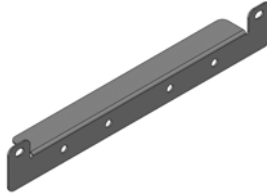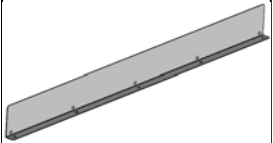PARTS YOU WILL USE FOR STEP 01	FAS0691, SCREW, THP T(13) REQUIRED	PHILLIPS HEAD DRILL	60102-G, WORKBENCH SIDE BRACKET, GRAY	60100-G, WORKBENCH BACK RAIL, GRAY
				
	60101, RUSSIAN BIRCH 18 X 42			
				

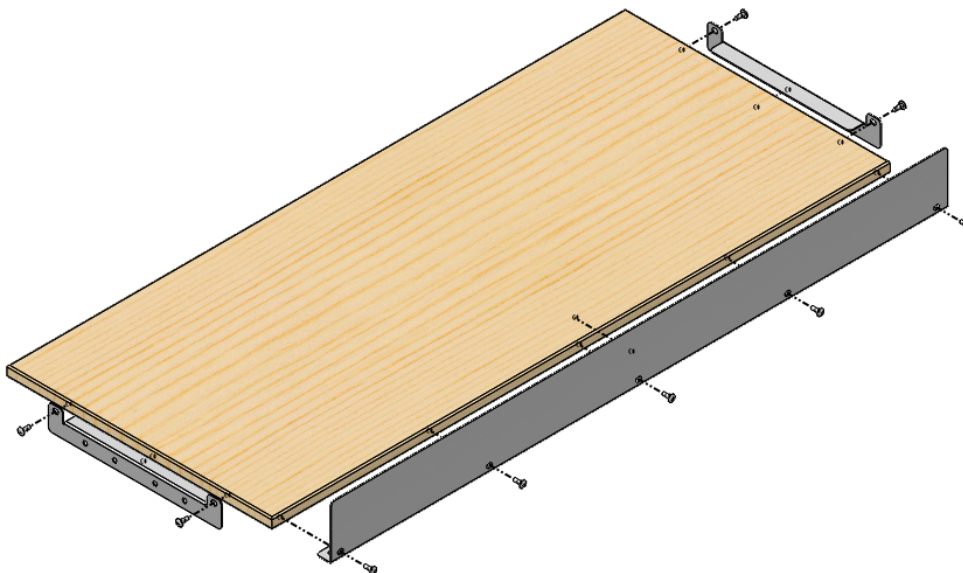




Instructions for Step 01




Install 60100-G back rail to 60101 Russian Birch using FAS0691 (x5).

Install 60102-G side bracket to each end of 60101 Russian Birch; Install side brackets based upon desired lip length.





There should be four (4) FAS0691 Screw, THP TEK left over in which you may use to install workbench top to supporting structure.

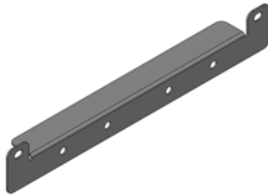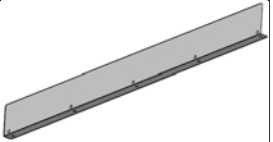PARTS YOU WILL USE FOR STEP 01	FAS0691, SCREW, THP T(13) REQUIRED	PHILLIPS HEAD DRILL	60102-G, WORKBENCH SIDE BRACKET, GRAY	60100-G, WORKBENCH BACK RAIL, GRAY
				
	60101, RUSSIAN BIRCH 18 X 42			
				

INSTALLATION COMPLETE

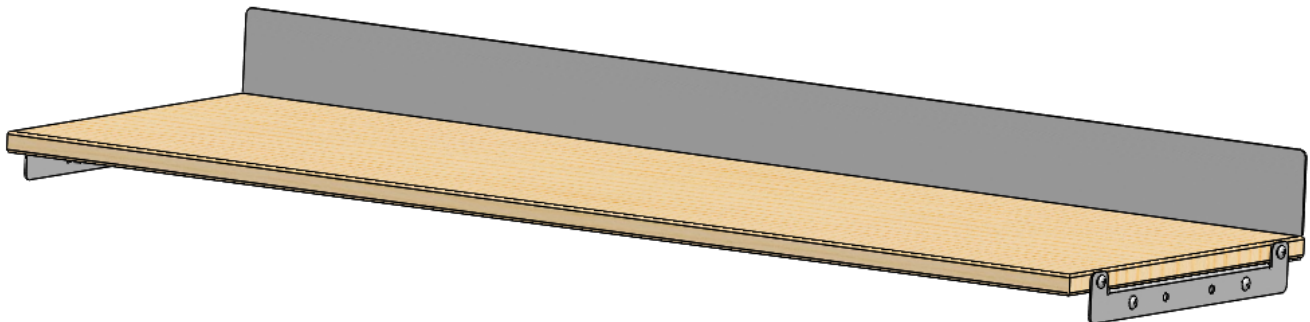

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	03836-0	WELDMENT, #8 CABINET (16640)	1
2	09233-0	HINGE, LOCK #8 CABINET	1
3	16536-0	DRAWER, #8, 1PC, 5x12x16	3
4	LOGO-SM	.875"X3.0"ADRIAN STEEL LO	1
5	BAG0002-0	#2 BAG FOR #12, 38, 43, 51, CBS #7	1
6	CRT03846-0	CARTON #8 / SPECIAL PKG	1
7	FAS0736	Rivet, Blind, Buttonhead, 1/8x.125 Grip, Alum	4

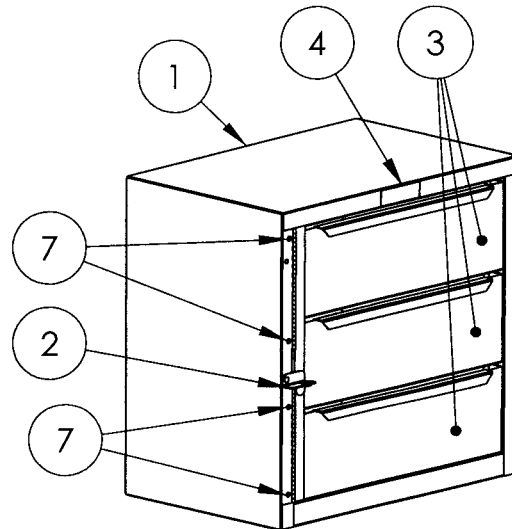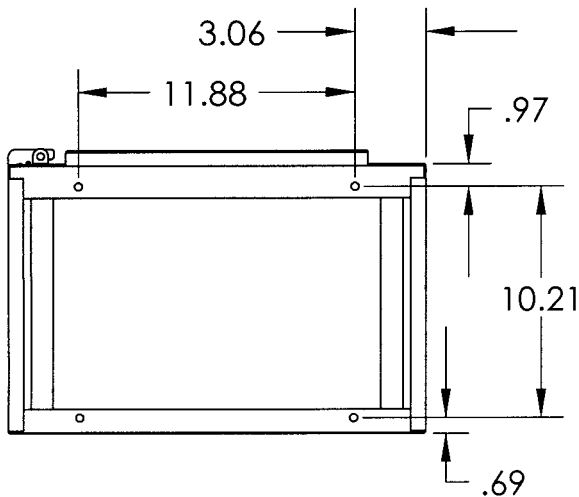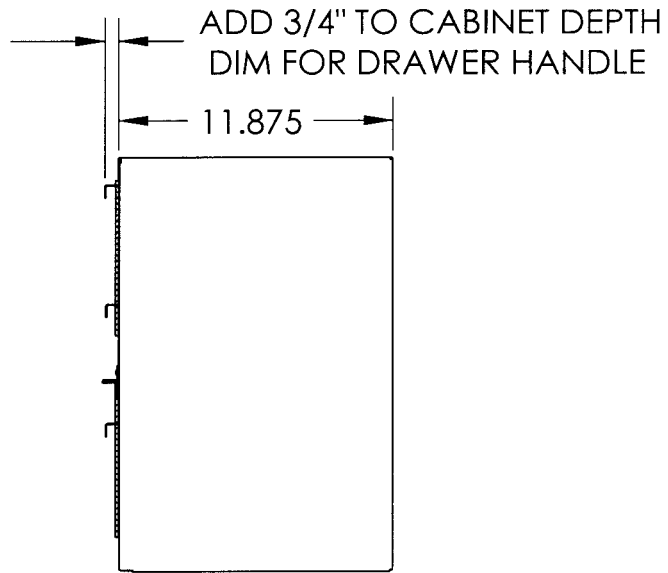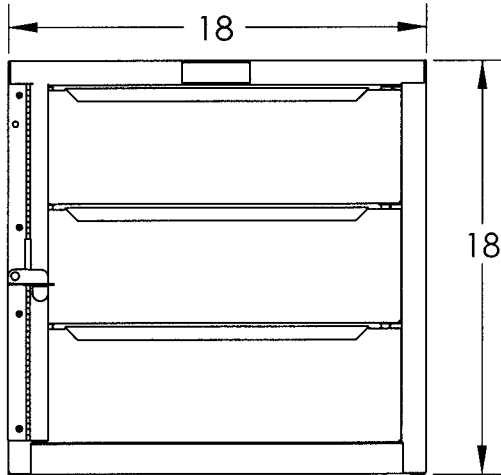

CHECK ALIGNMENT AND SMOOTHNESS OF DRAWER OPERATION. CORRECT AS REQ'D

printed document is uncontrolled

Sheet 1 of 1

for reference only!

REVISION LEVEL: C

Part Number: 8

THIS PRODUCT IS SUBJECT TO CHANGE. ADRIAN STEEL COMPANY RESERVES THE RIGHT TO CHANGE THE PRODUCT OF IT'S DESIGN WITHOUT PRIOR NOTICE.

THIS DRAWING IS THE PROPERTY OF ADRIAN STEEL COMPANY AND IS NOT TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTERESTS OF ADRIAN STEEL COMPANY.

Shipping Wt. (Lbs.):

30.7

Coating/Finish:

GrayPwdct

Do Not Scale This Drawing!

ADRIAN STEEL
VAN AND PICKUP EQUIPMENT

906 James St.
Adrian, MI 49221
517.265.6194

Part Description: CABINET ASM, #8, 3-DRW MED

Part Number: 8

REVISION LEVEL:

C