



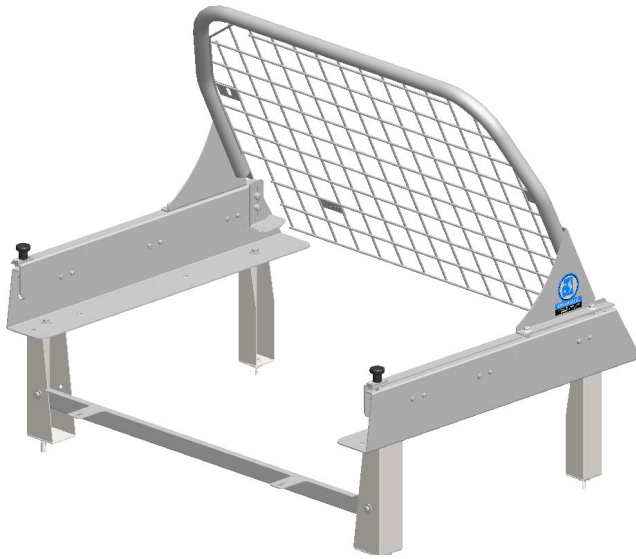

PRODUCT WEIGHT
54 LBS

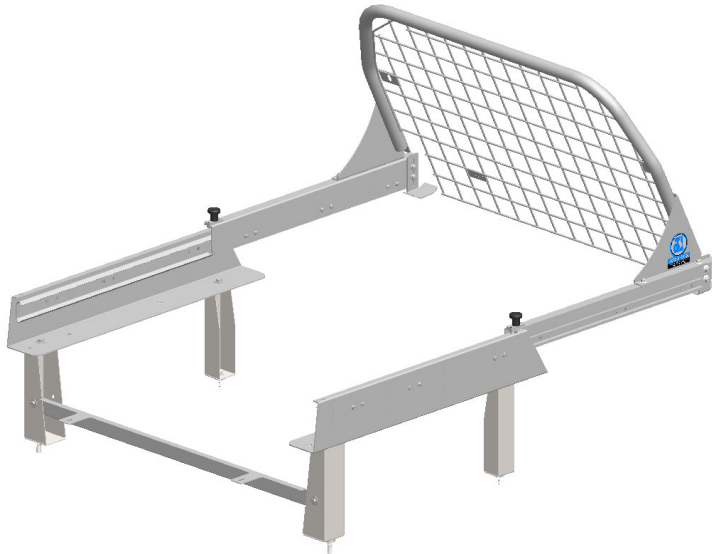

COLOR
BLACK

CATALOG NUMBER
P22PEQNX20

PRODUCT FEATURES

This adjustable partition is design to fit in model year 2018 thru 2024 Chevy Equinox. It mounts to the vehicle in six places. The adjustable partition allows for the second row seating to be folded down for when extra cargo space is needed. When in the rear position, the second row seating retains full seat adjustability. Use this partition with the folding floor kit, 89-EQNX20A, to create a flat cargo floor.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.



CATALOG NUMBER P22PEQNX20

PRODUCT APPLICATION


This product is designed to be in model year 2018 thru 2024 Chevy Equinox

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION</i>
------------------------------	---------------------------

89-EQNX20A	FOLDING FLOOR, P22PEQNX20
-------------------	----------------------------------


SPECIAL APPLICATION NOTES

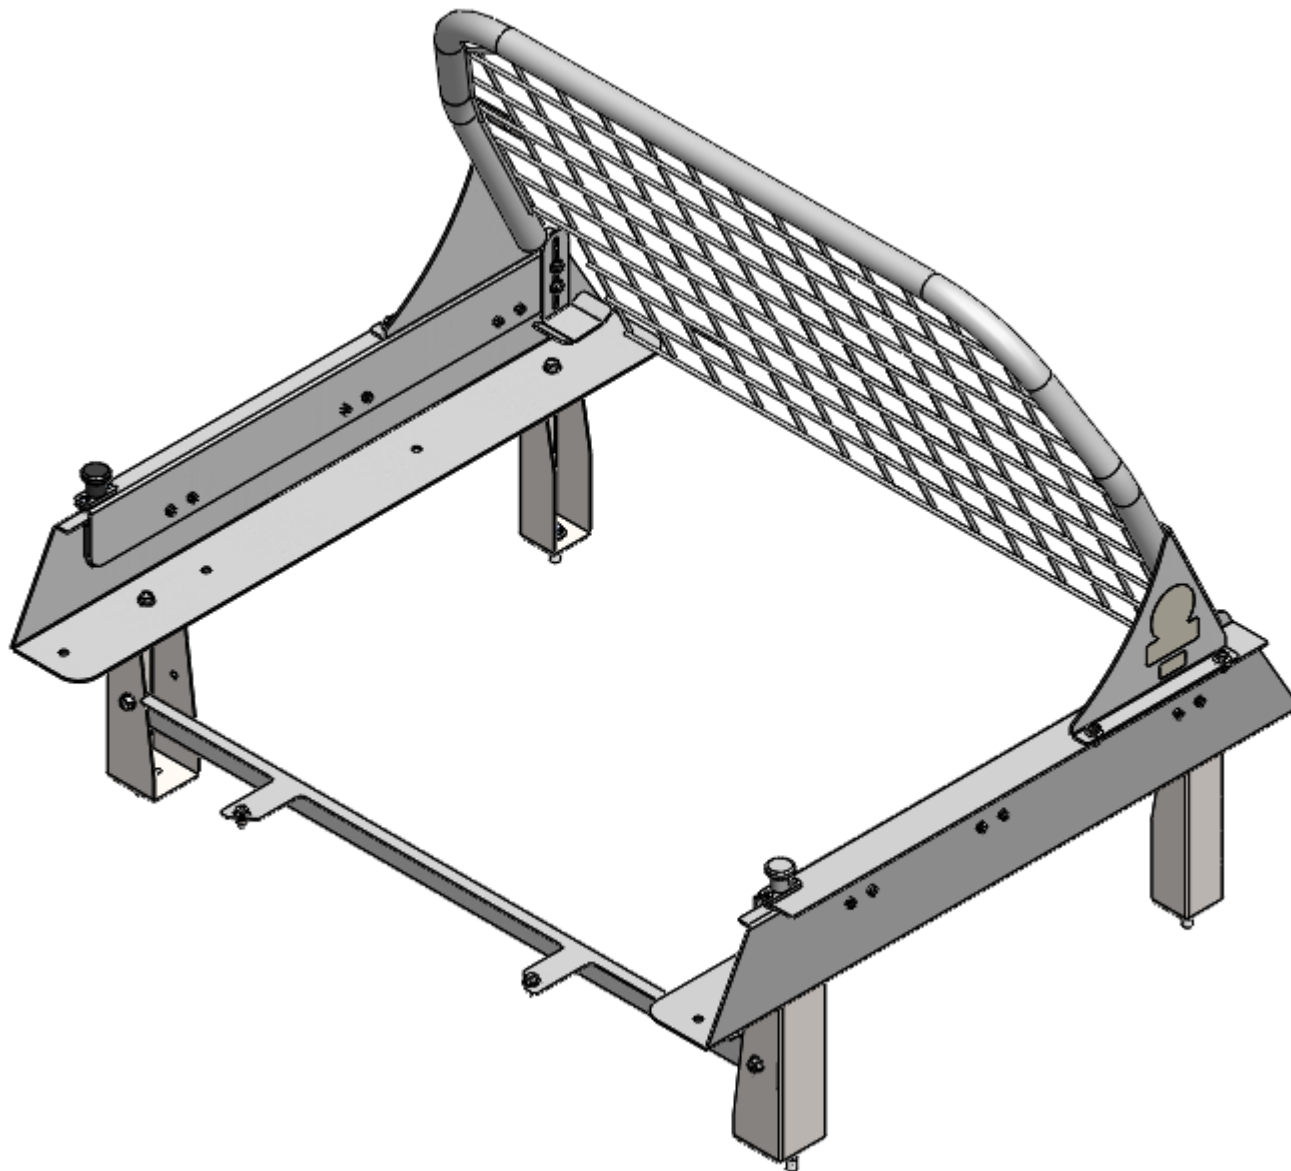**ADRIAN STEEL®***Cargo Management Solutions for Commercial Vehicles***P22PEQNX20**
ADJ PARTITION, EQUINOX20

- PRECAUTIONS -



CAUTION
 THE USE AIR IMPACT TOOLS CAN
 OVER-TORQUE FASTENERS AND
 CAUSE FASTENER FAILURE!

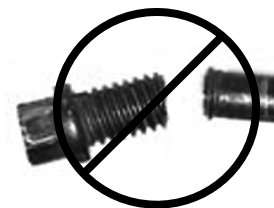

CAUTION
 ALL INSTALLATION HOLES SHOULD BE SEALED
 WITH SILICON OR BUTYL SEALANT TO PREVENT
 EXHAUST FUMES FROM ENTERING THE VEHICLE!



DANGER
 INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
 VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
 DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
 OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!



CAUTION
 TO AVOID DAMAGING THE VEHICLE ALWAYS
 USE DRILL STOPS WHEN DRILLING ANY IN-
 STALLATION HOLES!



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.


THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP

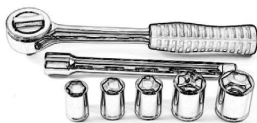

RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS



MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.



ADRIAN STEEL®




Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual P22PEQNX20 - ADJ PARTITION, EQUINOX20




WHEN INSTALLING PLUSNUTS MAKE SURE YOU USE THE CORRECT DRILL BIT WITH A STOP!

PLUSNUT SIZE	DRILL BIT SIZE
1/4-20 PLUSNUT, FAS0052	USE A 3/8" DIAMETER DRILL BIT WITH A STOP.
5/16-18 PLUSNUT, FAS0091	USE A 1/2" DIAMETER DRILL BIT WITH A STOP.
 OR  NOTE: A PLUSNUT SETTING TOOL IS REQUIRED FOR PLUSNUT INSTALLATION AND IS NOT SUPPLIED WITH THIS KIT. ORDER PLUSNUT TOOLS FROM ADRIAN STEEL (P.N. 22200-0) OR USE AN AIR POWERED PLUSNUT SETTING GUN.	
NOTE: If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting locations using a 1-3/16" carpet cutter.	1-3/16" DIAMETER CARPET CUTTER P.N. 31183-0. 

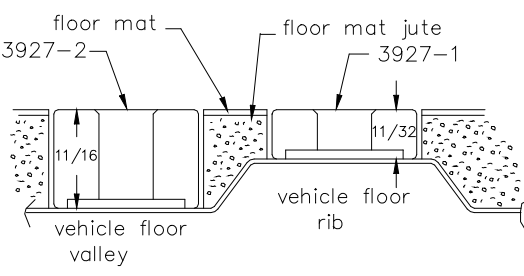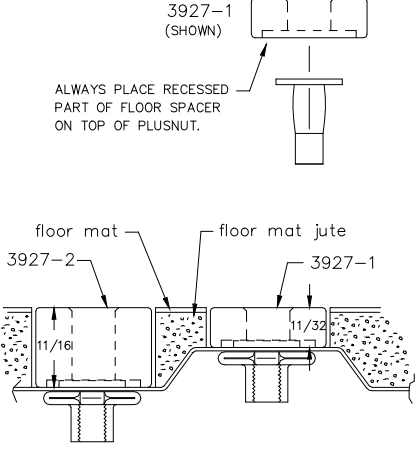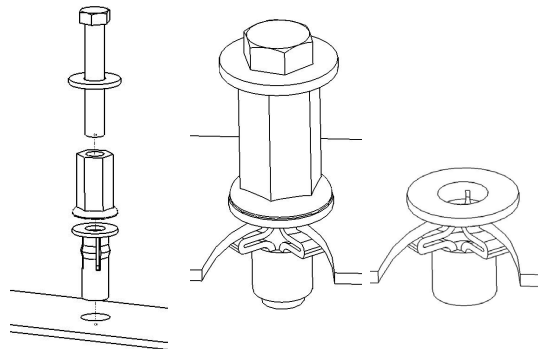	Step 01 Optional Based on Vehicle	If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting locations. (if not, skip to STEP 02) Position the product to be installed into the vehicle and once you are satisfied with the mounting locations, mark the mounting locations. Using a 1-3/16" diameter carpet cutter. Select the appropriate floor spacers as shown in the illustration to the left. Set those aside for use later into the installation process. Once you have prepared the carpet/floor mat for mounting, proceed to STEP 02.
	Step 02 Prepare Mounting Locations	Using a drill and drill bit (<i>see table at top of page for correct size</i>) drill the mounting holes in the vehicle sheet metal to prepare for installing the plusnuts. If you are thru-bolting at any of the locations simply drill a hole that is 1/16" larger than the bolt size(s) for those locations. Once you have drilled the holes into the vehicle, the raw metal edges should be sealed using a self-etching primer to resist corrosion and potential fastener point failure.
	Step 03 Setting Plusnuts	Use a Air Powered Plusnut Setting Gun to "set the plusnut" or if installing manually with hand tools, assembly the following. 1/4-20UNC Plusnut (FAS0052) FAS0080 SCREW, HXHD, 1/4-20UNCx2.00", G8 FAS0067 WASHER, FLAT, 1/4"ID 22200-0 PLUSNUT TOOL 5/16-18UNC Plusnut (FAS0091) FAS0095 SCREW, HXHD, 5/16-18UNCx2.00", G8 FAS0086 WASHER, FLAT, 5/16"ID 22200-0 PLUSNUT TOOL Place barrel of the plusnut body in sheet metal thru hole until flange is flush with sheet metal. Using a 9/16" combination wrench of plusnut tool body and a second hand wrench, ratchet, or air tool, rotate the hex bolt head CW to draw plus nut flanges up (set the plusnut). Remove hex bolt, washer, and plusnut. Inspect installation.


BAG FOR P22PEQNX20, BAG71042

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	5" x 7" 3MIL AUTOBAG	1
2	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	10
3	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	10
4	FAS0438	SCREW,HFLNG 5/16-18X.75 ZP	6
5	FAS0440	NUT,HEX NLK FLG 5/16-18 - ZP	6
6	FAS0092	Screw, Hex Hd, 5/16-18x1.50 Zn Plate, G8	4
7	FAS0098	Washer, Lock, Split, 5/16, Zinc Plate	4
8	FAS0086	WASHER,FLAT USS 5/16 ZP	4
9	FAS0091	Plusnut, 5/16	4

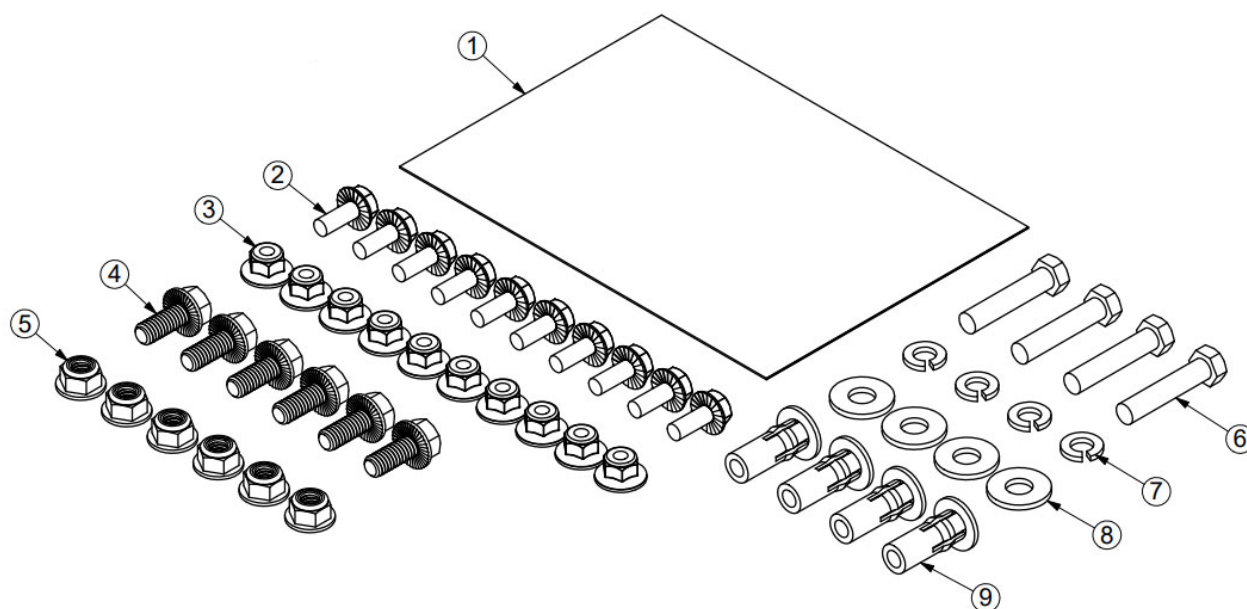


HDW71042

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CRT44477	Carton, Final Asm Parts	1
2	71041	ASM INS FOR P22PEQNX20	1
3	BAG71042	BAG FOR P22ESC20	1
4	71045-B	PAR FOOT,REAR,EQNX20, BLACK	2
5	71044-B	PAR FOOT,FRONT,EQNX20, BLACK	2
6	61626-B	PAR SLIDE FOOT, ESC20, SS	1
7	61630-B	PAR SLIDE FOOT, ESC20, CS	1

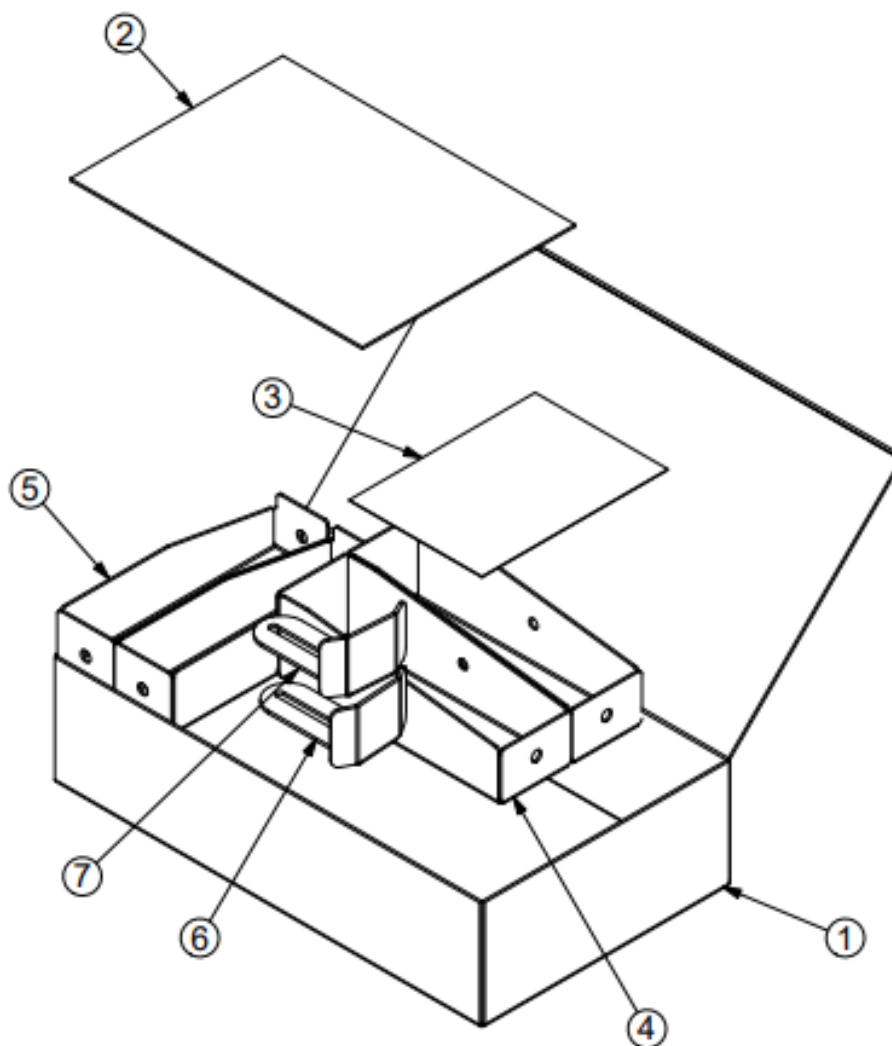


STEP 1 - Fasten the slide feet to the slide assemblies as shown. Leave the fasteners loose for adjustment later.


Note: Pay special attention to the orientation of the feet angle shown in detail below

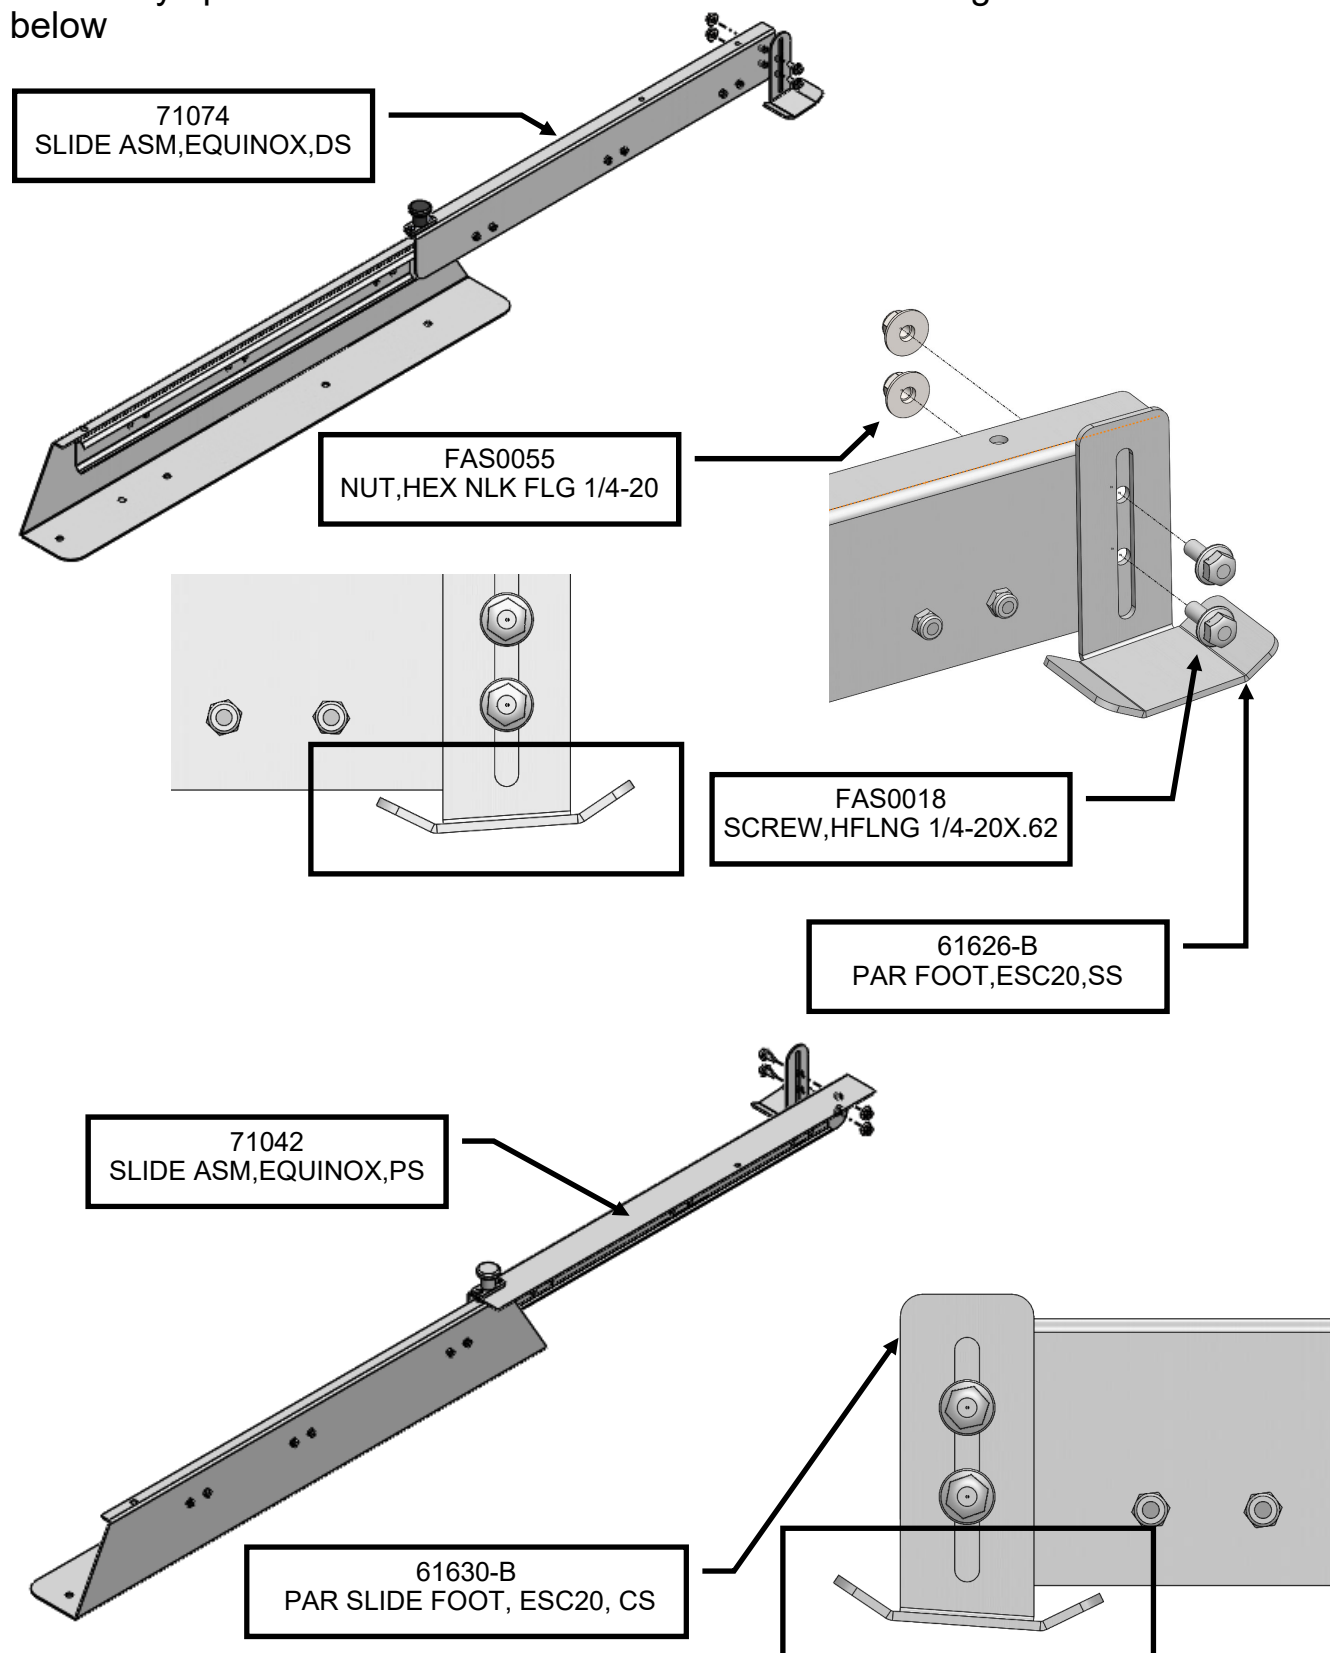


STEP 2 - Fasten the partition screen to the slide assemblies. Snug fasteners but do not fully tighten for adjustment later.

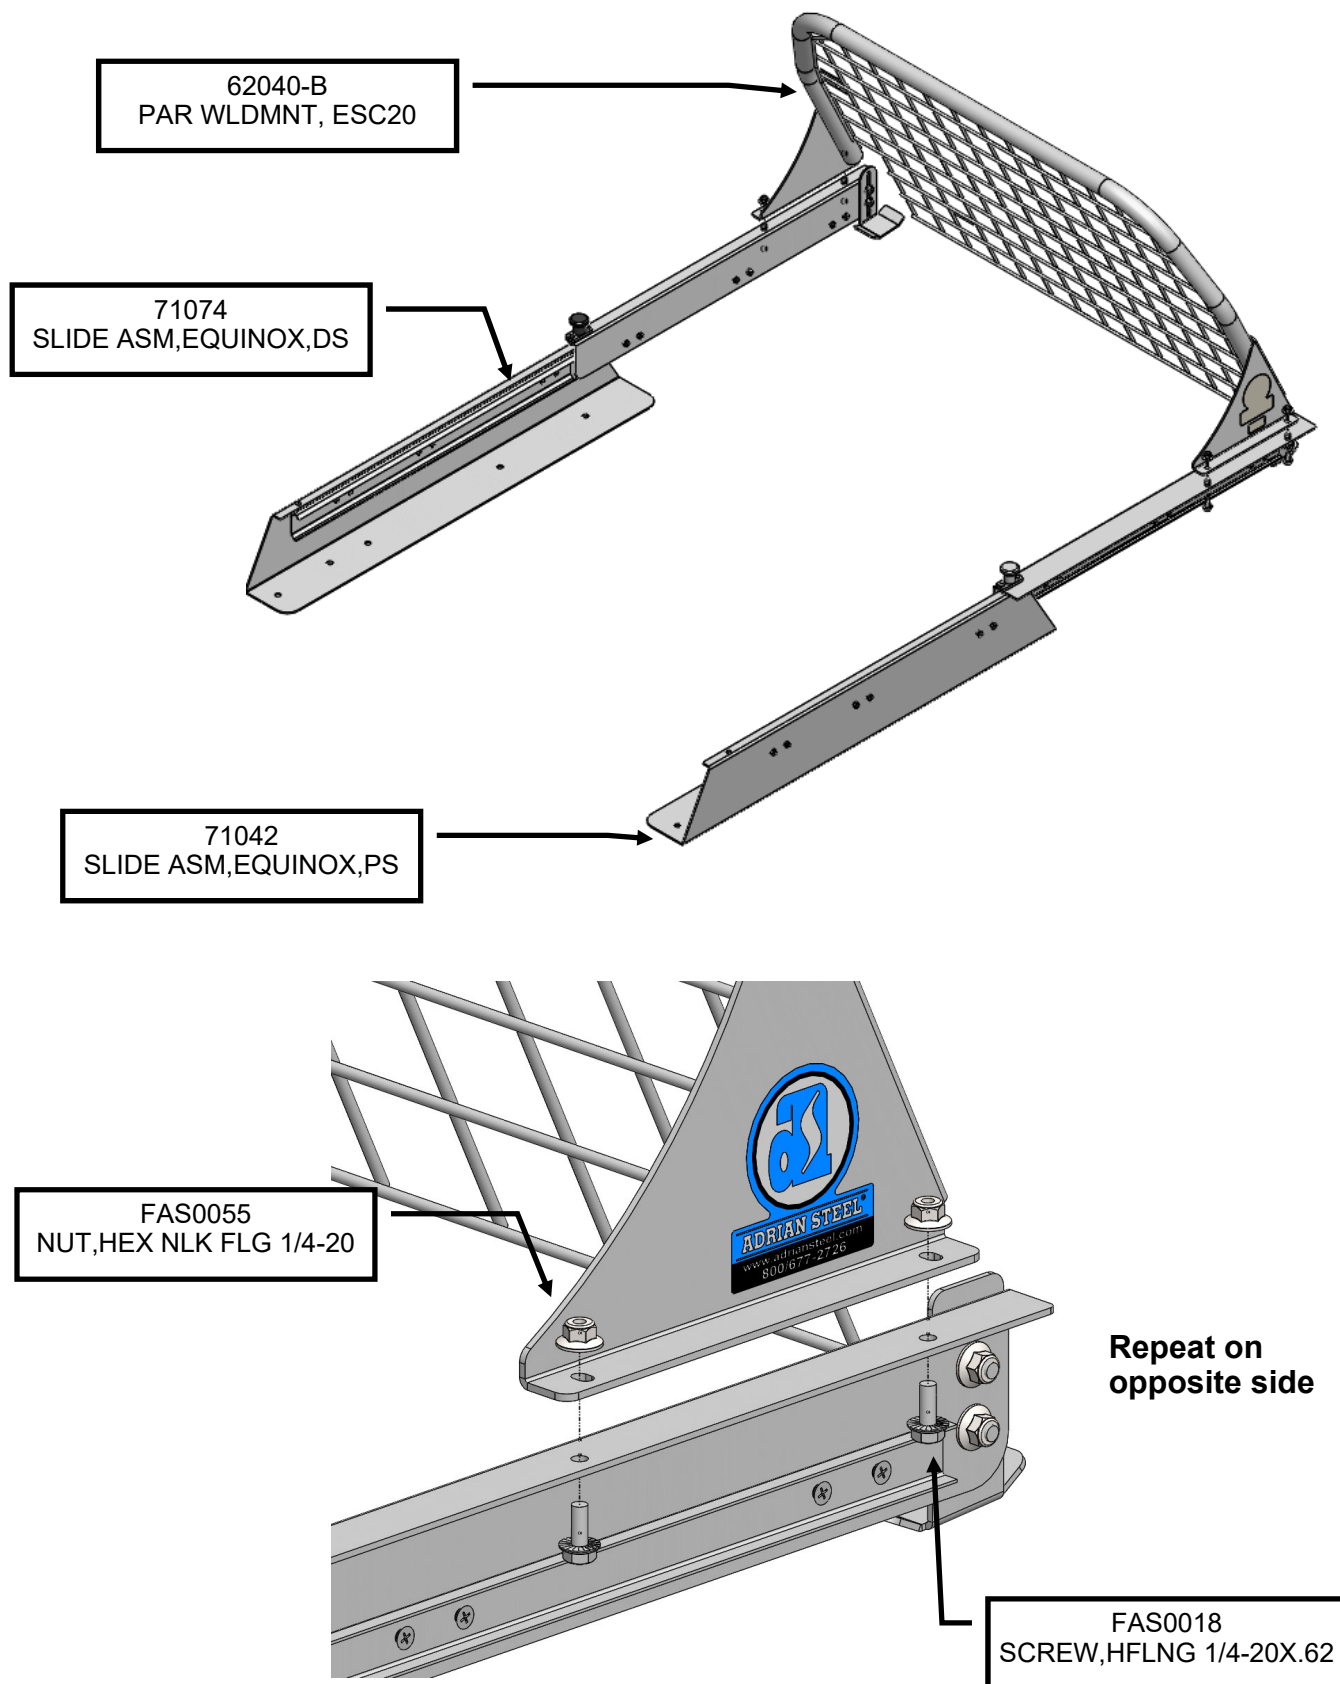


STEP 3 - Fasten the mounting legs to the slide assemblies. Before fully tightening, attach the cross mount to the legs in next step.

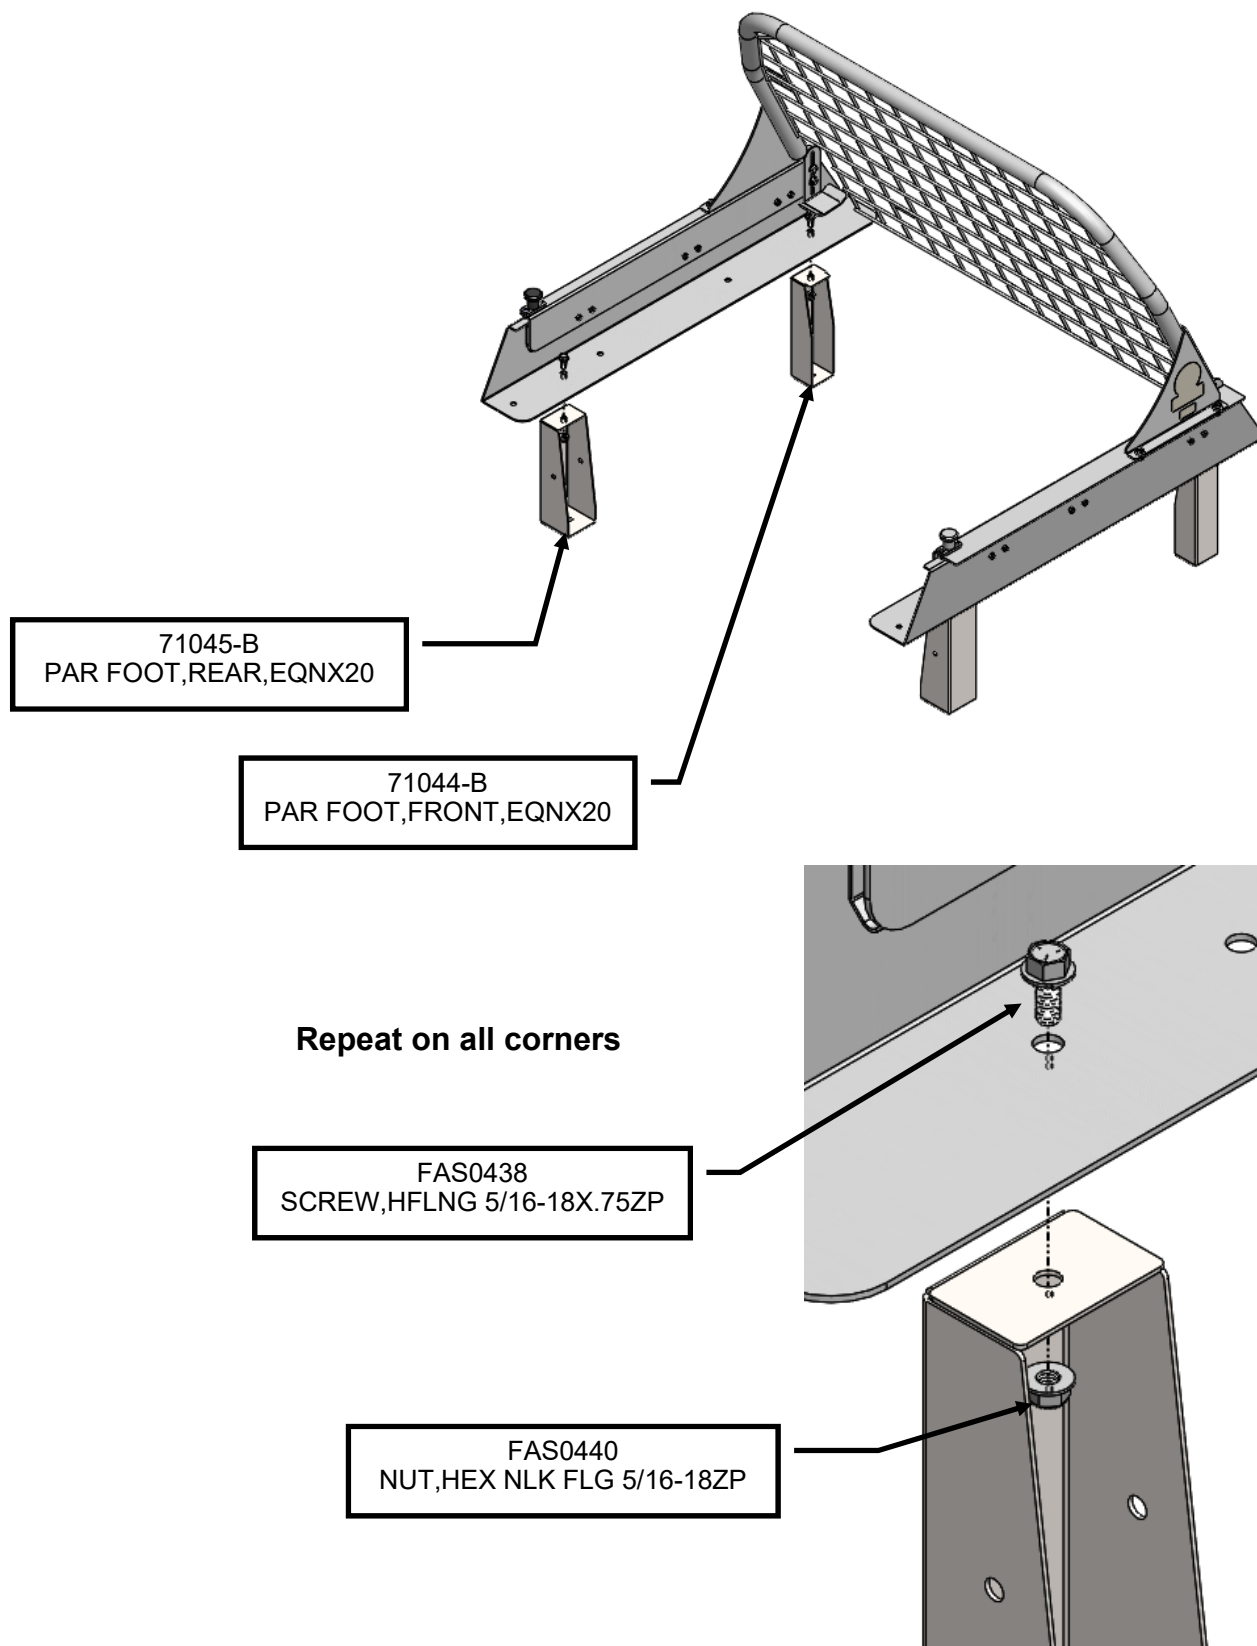


STEP 4 - Attach the cross mount to the legs. Then, fully tighten the fasteners. Extend the partition to access the front fasteners.

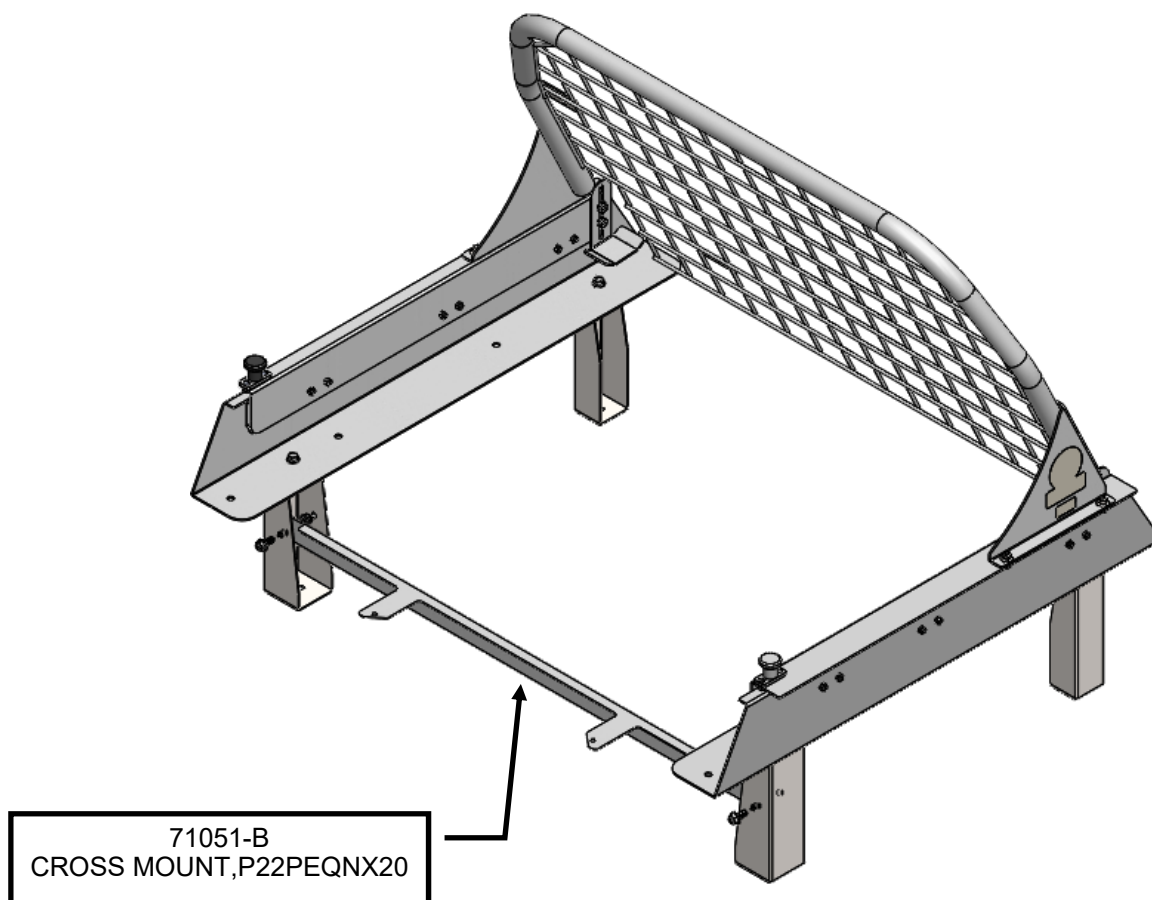


Repeat on opposite side

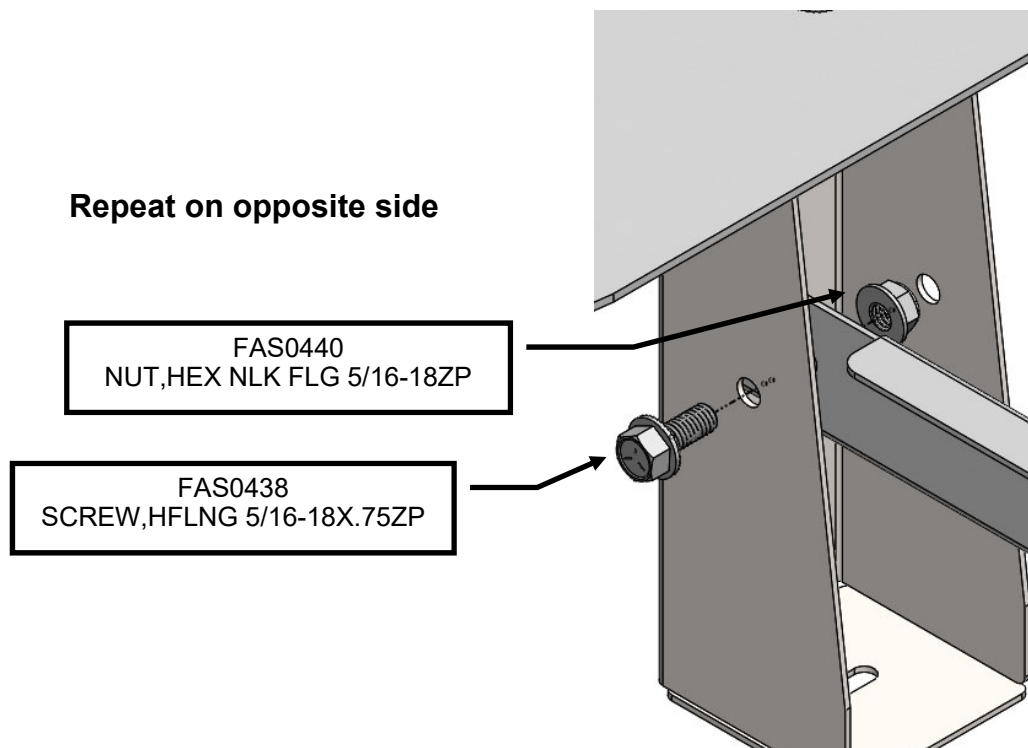

STEP 5A - Remove the floor covering over the spare tire to expose the plastic housing surrounding the tire.
It will **NOT** be reinstalled.

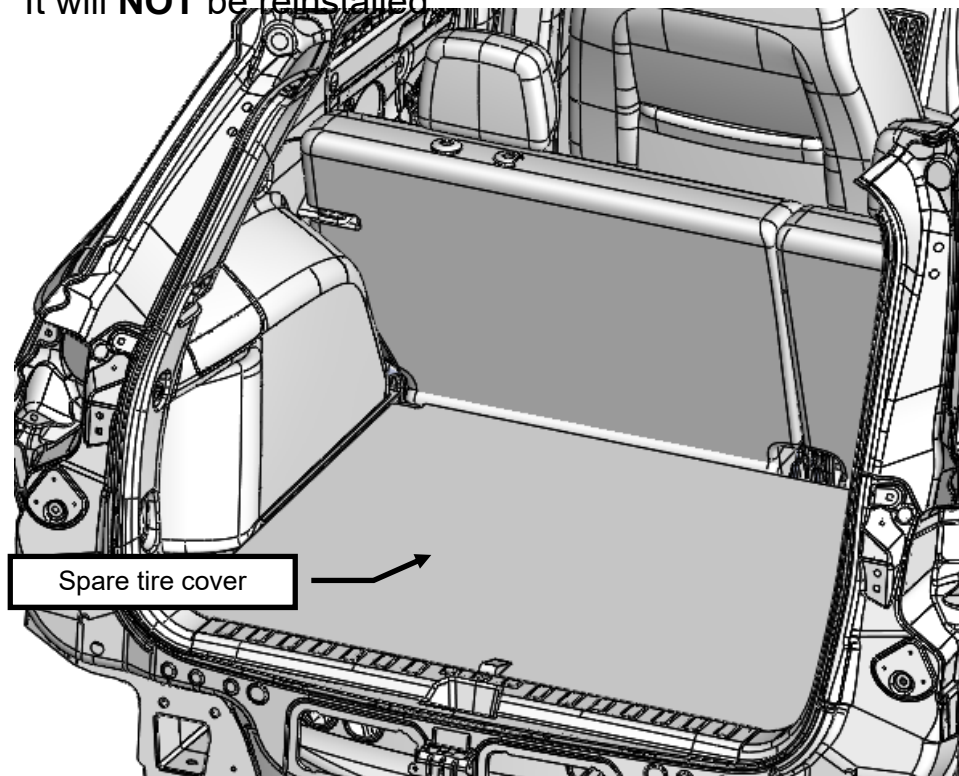


STEP 5B - Remove the plastic housing surrounding the tire.
It will **NOT** be reinstalled.

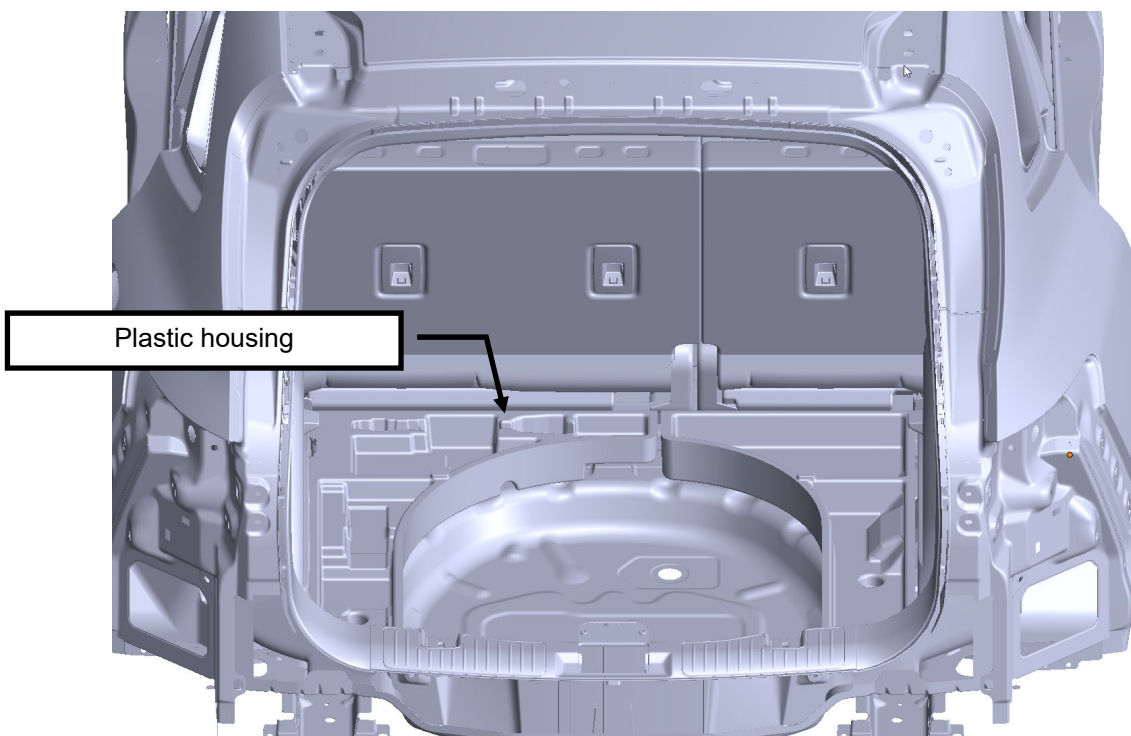


STEP 6 - Remove rear bumper trim.

 It **WILL** be reinstalled.


Place the partition in the vehicle. The partition mounts in six locations. Position with the crossmount tabs **UNDER** the vehicles trim brackets on the rear bumper. The holes will line up with the inner slots. Insert FAS0018 bolts thru each crossmount hole to help with alignment. Once partition is centered in vehicle, mark thru all four corner feet holes. Drill and set all four plusnuts FAS0091 using 1/2" drill bit.

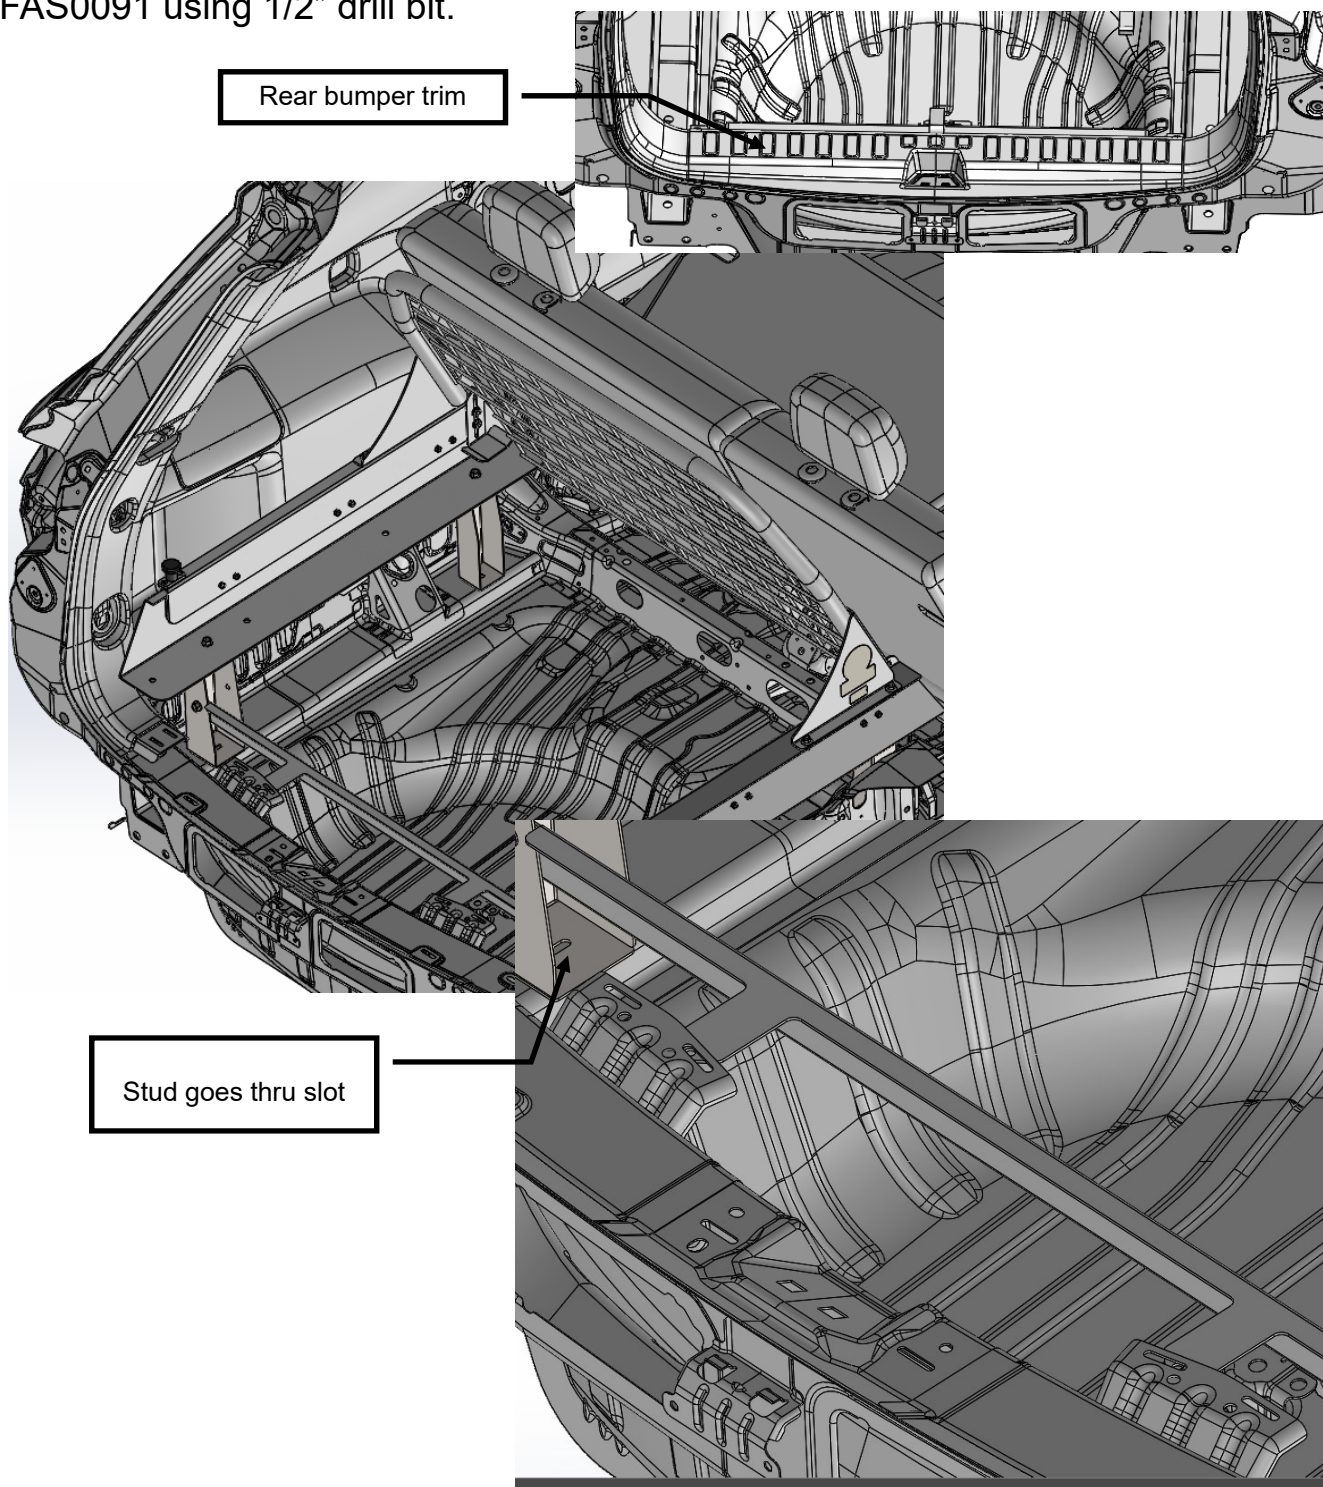


STEP 7 - Fasten the legs and crossmount to the vehicle using the fasteners below. **Reinstall the bumper trim.**

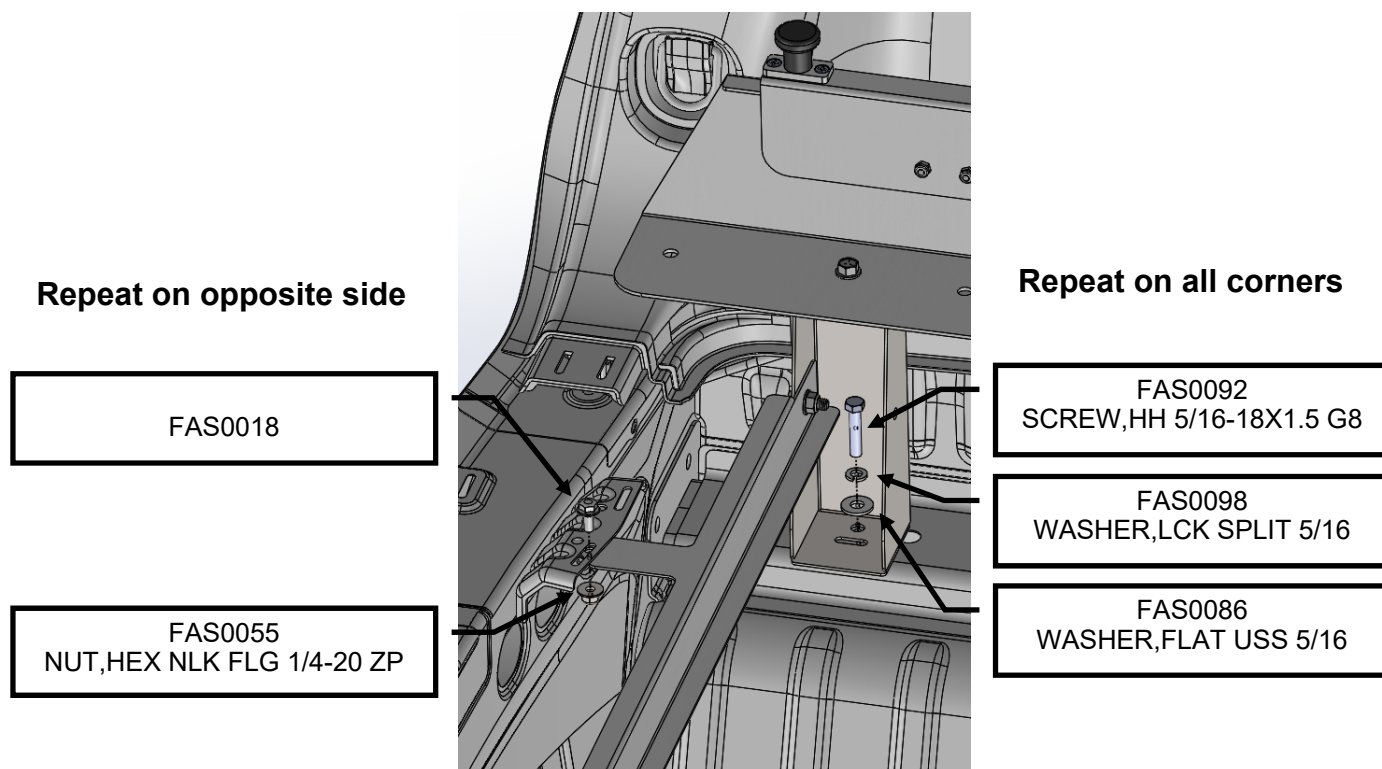

STEP 8 - Extend the partition over the second row seating. Adjust the slide feet until they contact the seats and fully tighten.

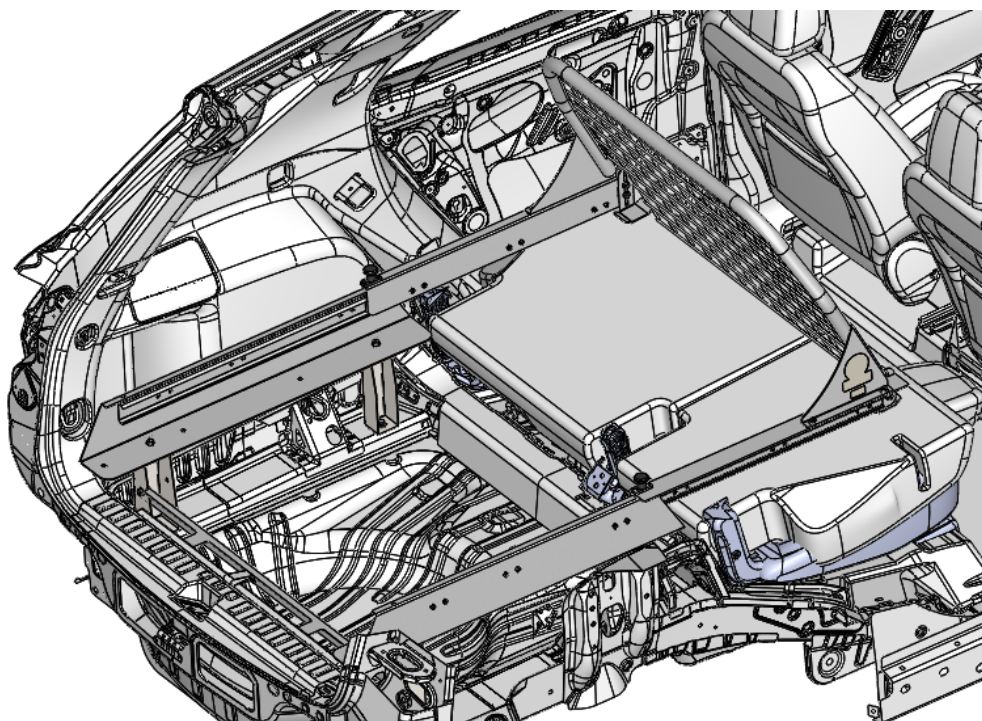

**YOUR INSTALLATION IS NOW COMPLETE!
LOCK PARTITION IN REAR POSITION AS SHOWN
FOR DELIVERY**

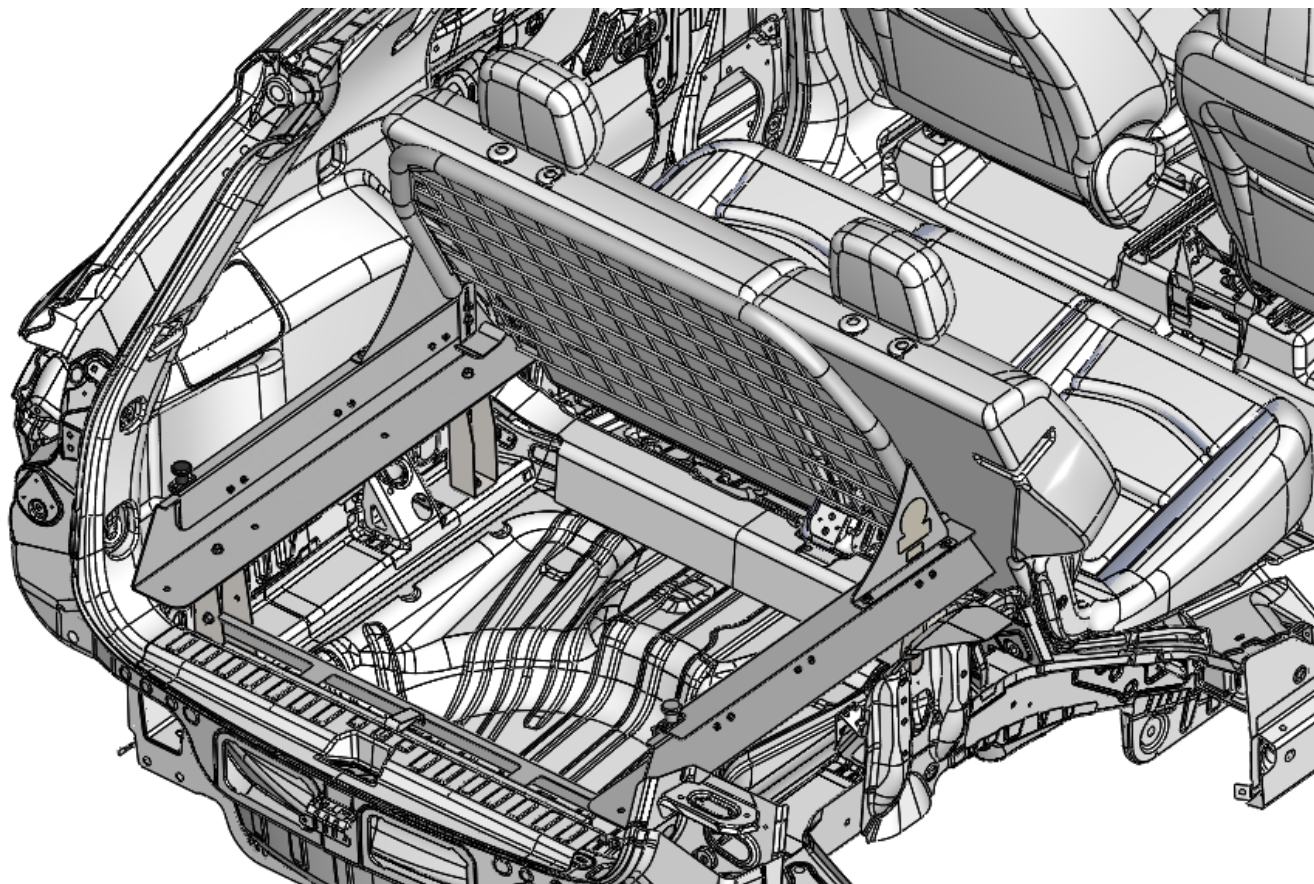

**DOUBLE CHECK ALL FASTENER LOCATIONS TO BE SURE THAT
ALL FASTENERS ARE TIGHTENED TO SPECIFICATIONS.
YOUR INSTALLATIONS IS NOW COMPLETE!
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!**