


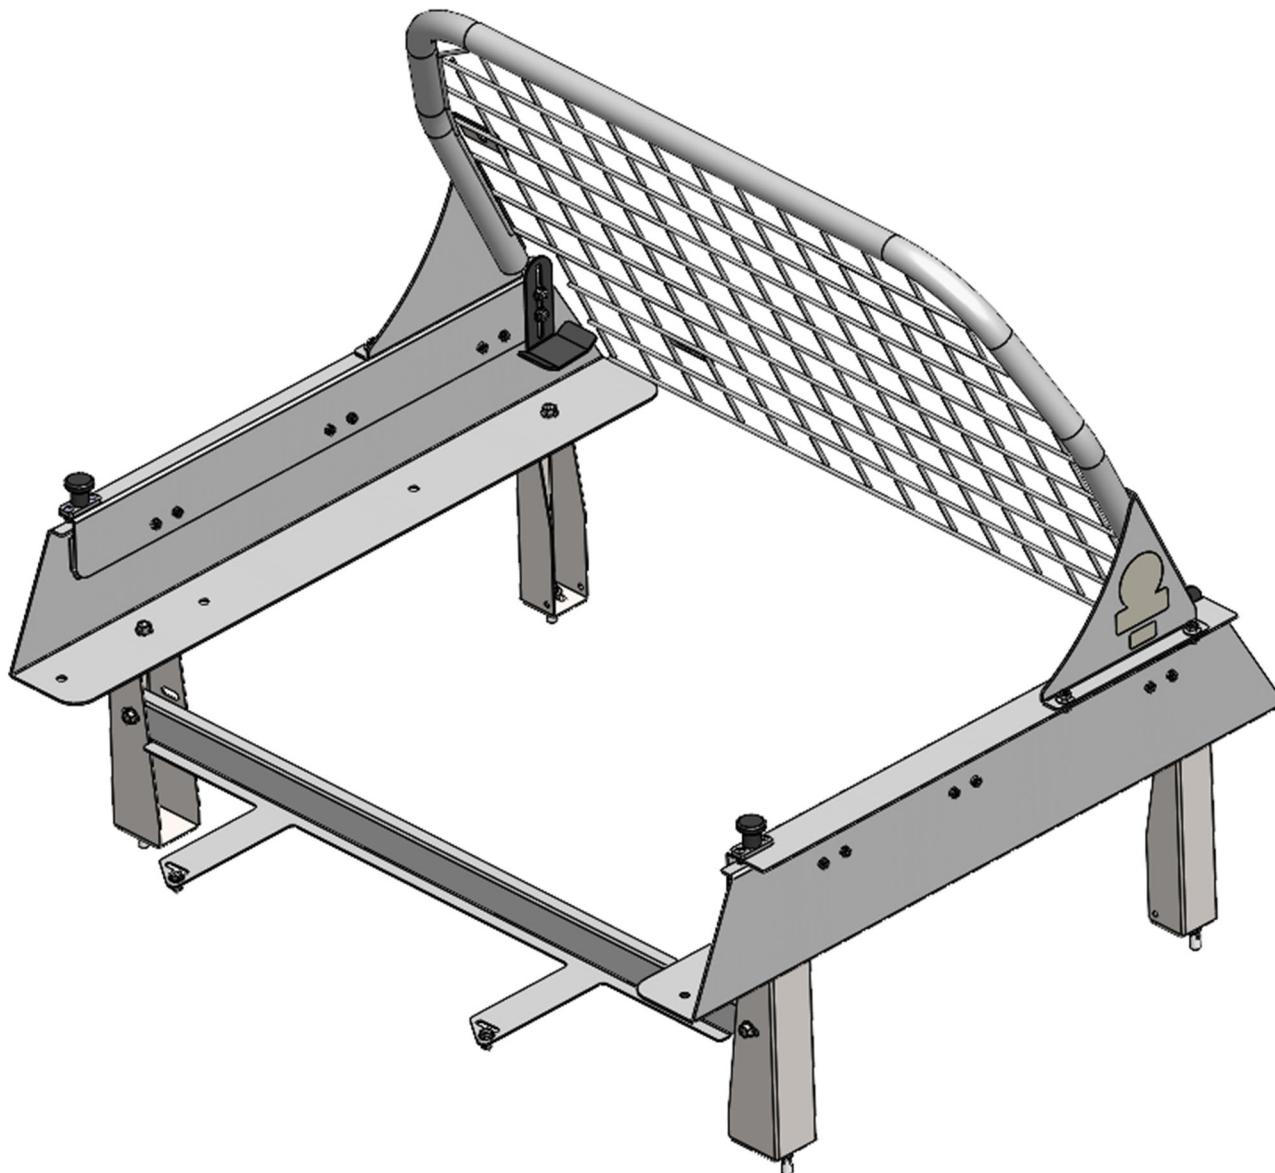


P22PEQNX25
ADJ PARTITION, EQUINOX25

- PRECAUTIONS -



CAUTION
 THE USE AIR IMPACT TOOLS CAN
 OVER-TORQUE FASTENERS AND
 CAUSE FASTENER FAILURE!

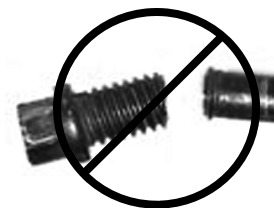

CAUTION
 ALL INSTALLATION HOLES SHOULD BE SEALED
 WITH SILICON OR BUTYL SEALANT TO PREVENT
 EXHAUST FUMES FROM ENTERING THE VEHICLE!



DANGER
 INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
 VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
 DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
 OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!



CAUTION
 TO AVOID DAMAGING THE VEHICLE ALWAYS
 USE DRILL STOPS WHEN DRILLING ANY IN-
 STALLATION HOLES!




- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL

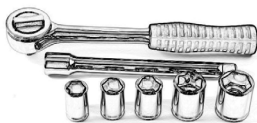DRILL BIT WITH
STOPRATCHET, SOCKETS
AND/OR WRENCHES

SCREWDRIVERS



MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.



ADRIAN STEEL®




Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual P22PEQNX25 - ADJ PARTITION, EQUINOX25




WHEN INSTALLING PLUSNUTS MAKE SURE YOU USE THE CORRECT DRILL BIT WITH A STOP!

PLUSNUT SIZE	DRILL BIT SIZE
1/4-20 PLUSNUT, FAS0052	USE A 3/8" DIAMETER DRILL BIT WITH A STOP.
5/16-18 PLUSNUT, FAS0091	USE A 1/2" DIAMETER DRILL BIT WITH A STOP.
 OR  NOTE: A PLUSNUT SETTING TOOL IS REQUIRED FOR PLUSNUT INSTALLATION AND IS NOT SUPPLIED WITH THIS KIT. ORDER PLUSNUT TOOLS FROM ADRIAN STEEL (P.N. 22200-0) OR USE AN AIR POWERED PLUSNUT SETTING GUN.	
NOTE: If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting locations using a 1-3/16" carpet cutter.	
1-3/16" DIAMETER CARPET CUTTER P.N. 31183-0. 	

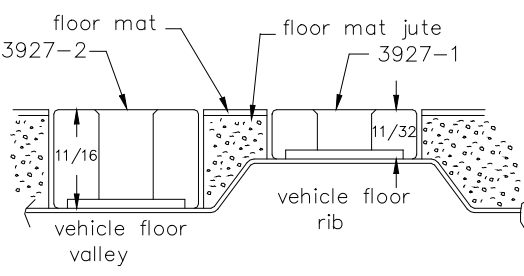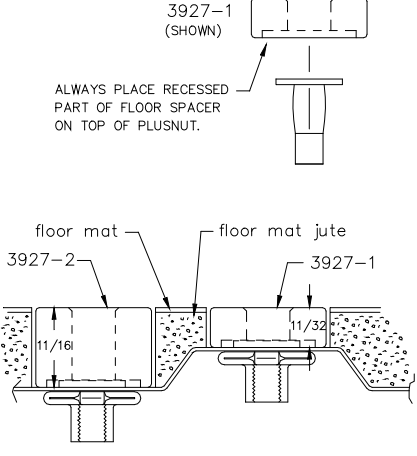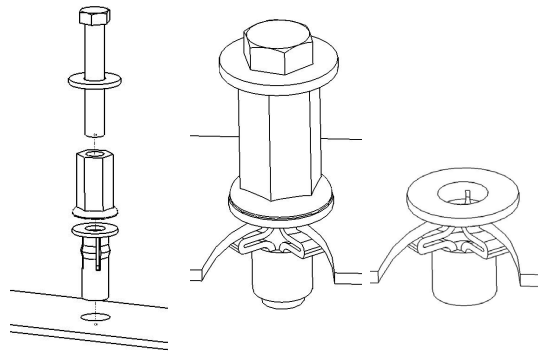	Step 01 Optional Based on Vehicle	If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting locations. (if not, skip to STEP 02) Position the product to be installed into the vehicle and once you are satisfied with the mounting locations, mark the mounting locations. Using a 1-3/16" diameter carpet cutter. Select the appropriate floor spacers as shown in the illustration to the left. Set those aside for use later into the installation process. Once you have prepared the carpet/floor mat for mounting, proceed to STEP 02.
	Step 02 Prepare Mounting Locations	Using a drill and drill bit (<i>see table at top of page for correct size</i>) drill the mounting holes in the vehicle sheet metal to prepare for installing the plusnuts. If you are thru-bolting at any of the locations simply drill a hole that is 1/16" larger than the bolt size(s) for those locations. Once you have drilled the holes into the vehicle, the raw metal edges should be sealed using a self-etching primer to resist corrosion and potential fastener point failure.
	Step 03 Setting Plusnuts	Use a Air Powered Plusnut Setting Gun to "set the plusnut" or if installing manually with hand tools, assembly the following. 1/4-20UNC Plusnut (FAS0052) FAS0080 SCREW, HXHD, 1/4-20UNCx2.00", G8 FAS0067 WASHER, FLAT, 1/4"ID 22200-0 PLUSNUT TOOL 5/16-18UNC Plusnut (FAS0091) FAS0095 SCREW, HXHD, 5/16-18UNCx2.00", G8 FAS0086 WASHER, FLAT, 5/16"ID 22200-0 PLUSNUT TOOL Place barrel of the plusnut body in sheet metal thru hole until flange is flush with sheet metal. Using a 9/16" combination wrench of plusnut tool body and a second hand wrench, ratchet, or air tool, rotate the hex bolt head CW to draw plus nut flanges up (set the plusnut). Remove hex bolt, washer, and plusnut. Inspect installation.


HDWP22PEQNX25

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CRT44477	CARTON, FINAL ASM PARTS	1
2	INSP22PEQNX25	ASM INS FOR P22PEQNX20	1
3	BAGP22PEQNX25	BAG FOR P22ESC20	1
4	77614-B	PAR FOOT, REAR, EQNX25, BLACK	2
5	77615-B	PAR FOOT, FRONT DS , EQNX25, BLACK	1
6	77618-B	PAR FOOT, FRONT PS, EQNX25, BLACK	1
7	61626-B	PAR SLIDE FOOT, ESC20, SS	1
8	61630-B	PAR SLIDE FOOT, ESC20, CS	1

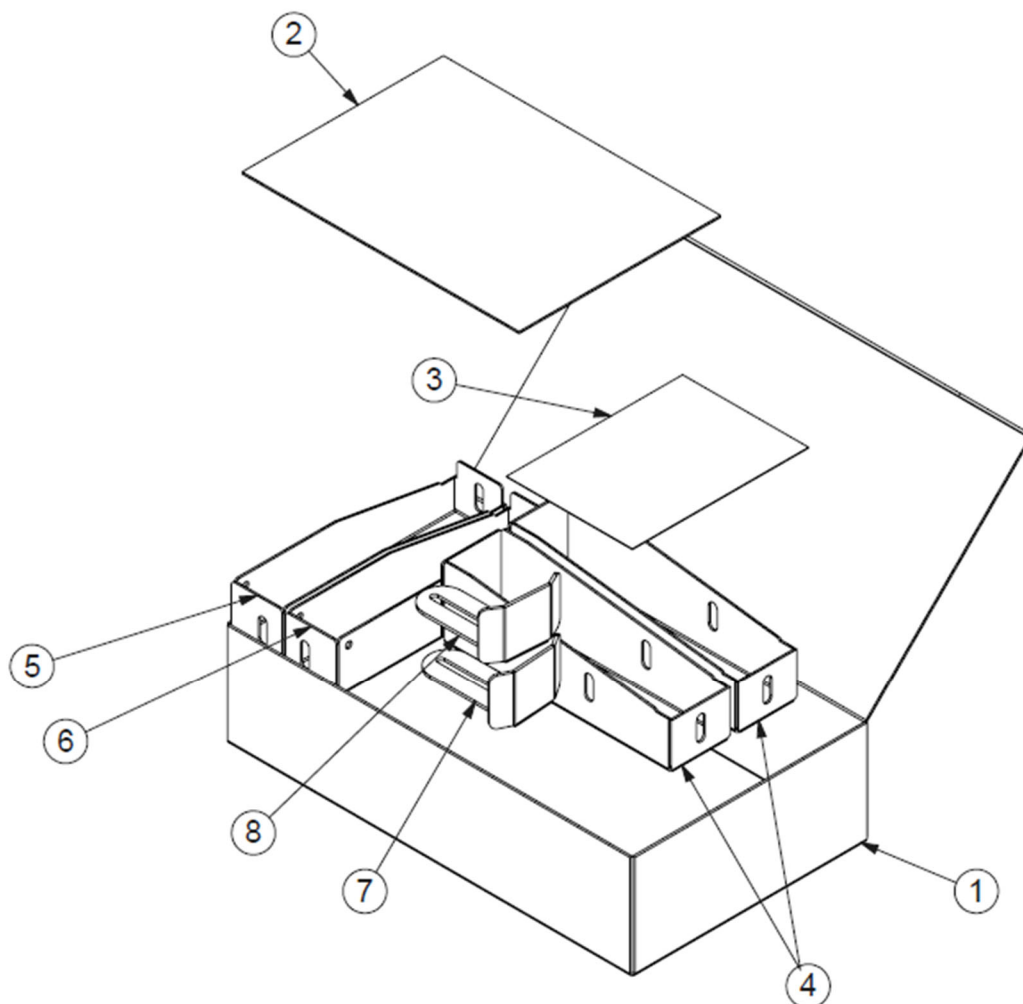


BAGP22PEQNX25

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	5" X 7" 3MIL AUTOBAG	1
2	FAS0018	SCREW,HH SFLNG 1/4-20X.62 ZP	10
3	FAS0055	NUT,HEX NLK FLG 1/4-20 ZP	10
4	FAS0438	SCREW,HFLNG 5/16-18X.75 ZP	6
5	FAS0440	NUT,HEX NLK FLG 5/16-18 - ZP	6
6	FAS0092	SCREW, HEX HD, 5/16-18X1.50 ZN PLATE, G8	4
7	FAS0098	WASHER, LOCK, SPLIT, 5/16, ZINC PLATE	4
8	FAS0086	WASHER,FLAT USS 5/16 ZP	4
9	FAS0091	PLUSNUT, 5/16	4


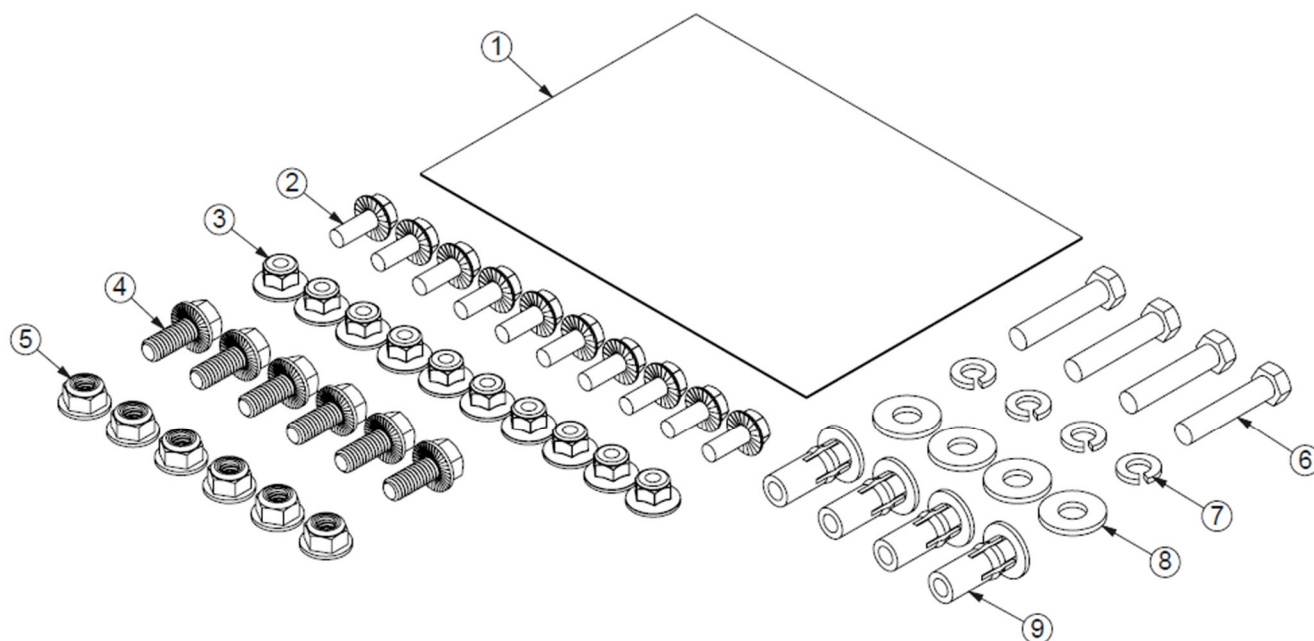


STEP 1 - Fasten the slide feet to the slide assemblies as shown. Leave the fasteners loose for adjustment later.


Note: Pay special attention to the orientation of the feet angle shown in detail below

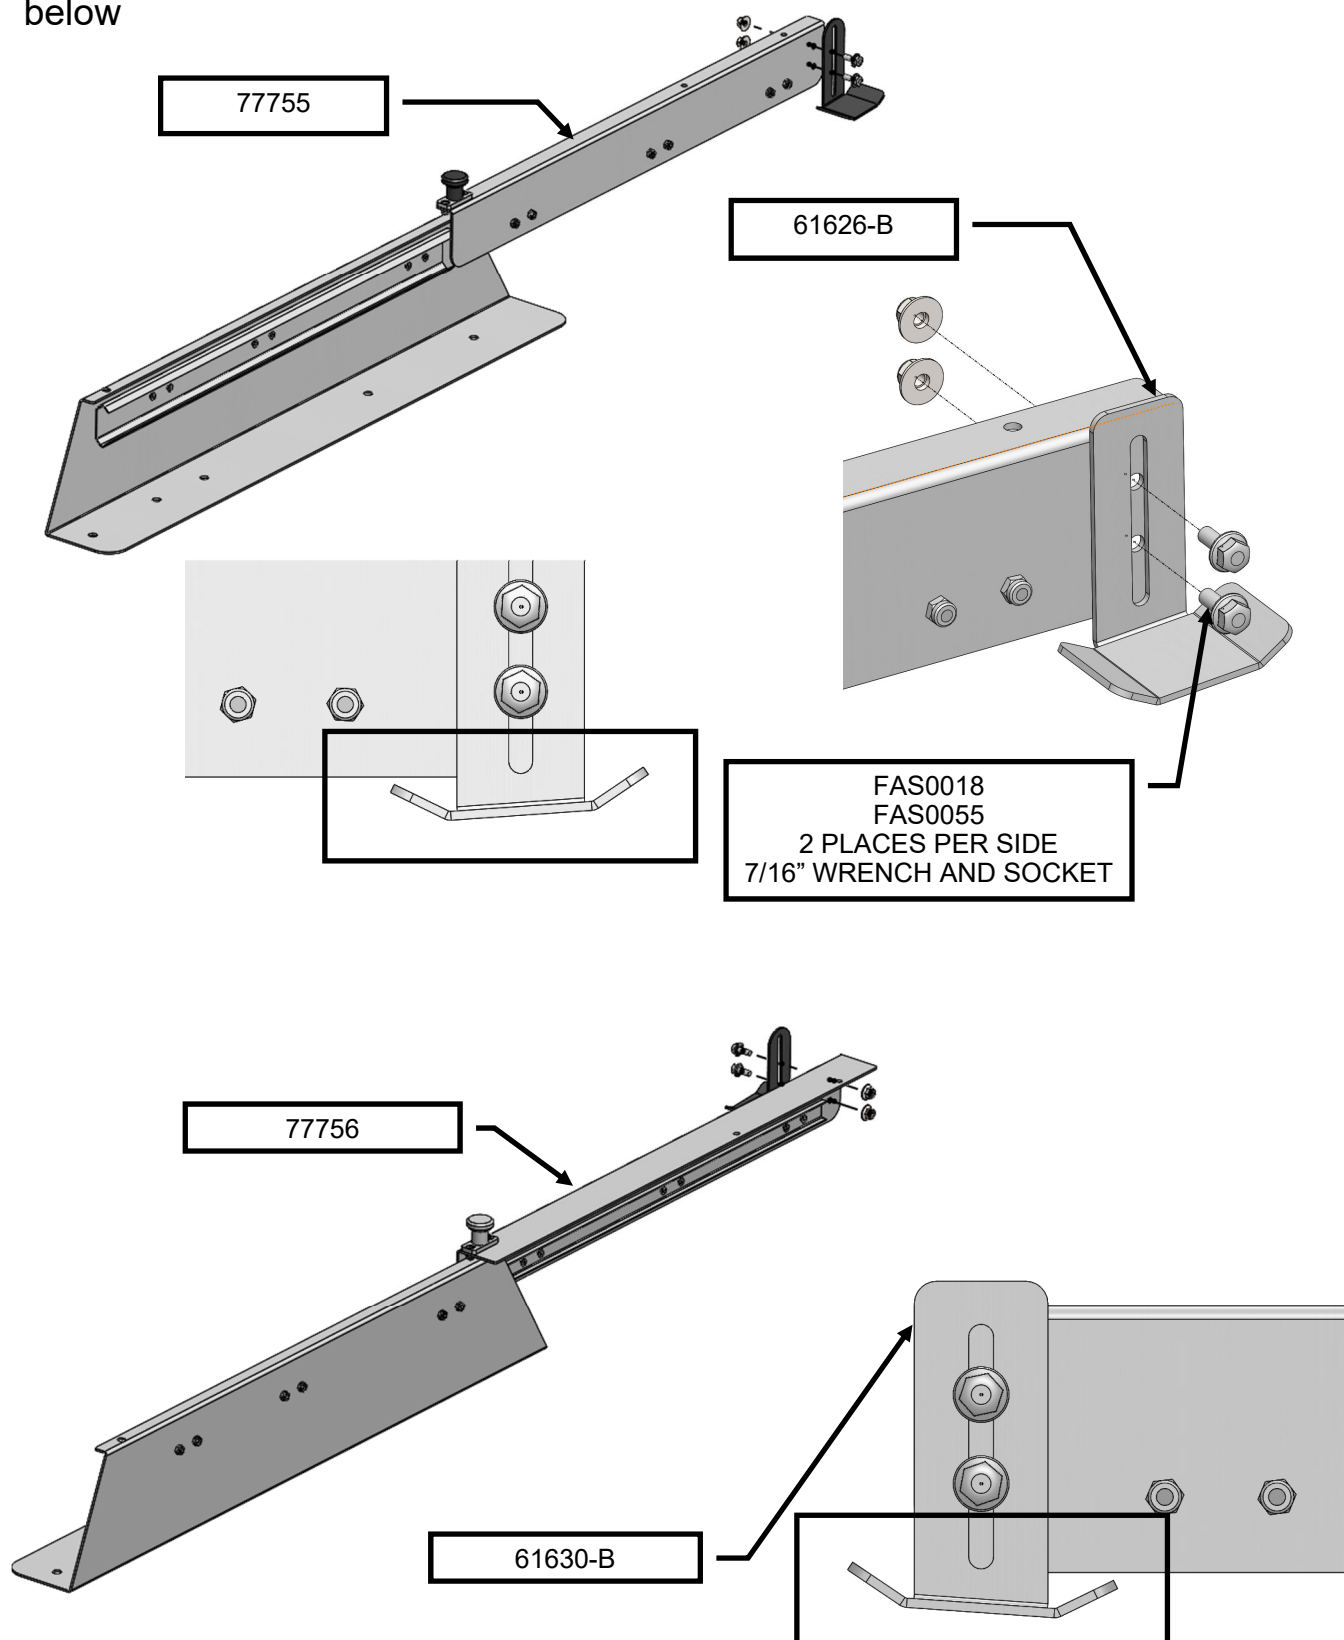



STEP 2 - Fasten the partition screen to the slide assemblies. Snug fasteners but do not fully tighten for adjustment later.

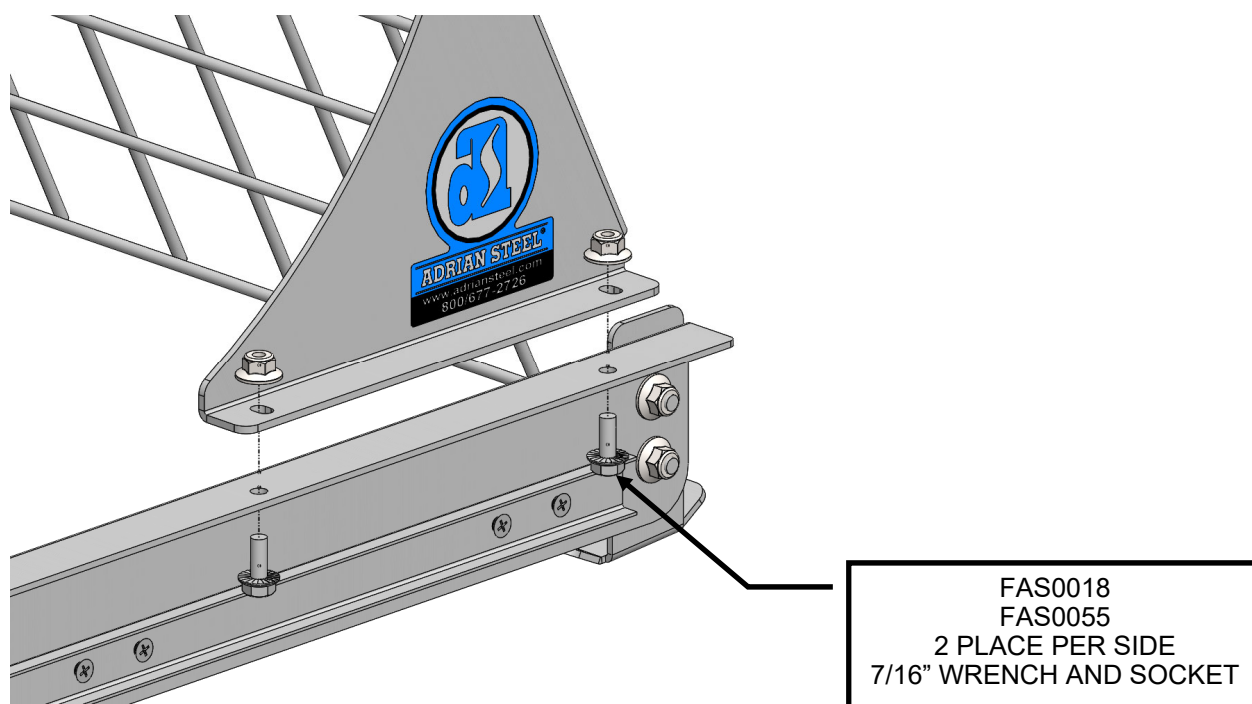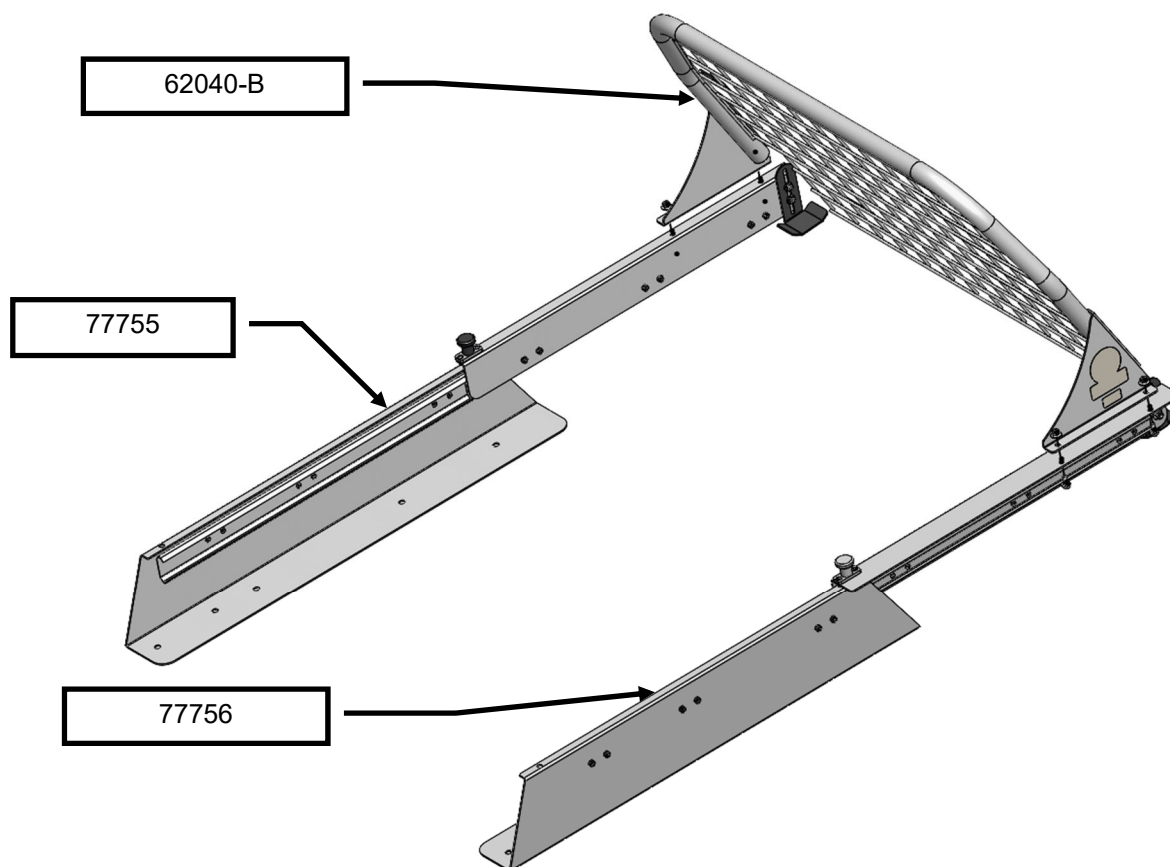


STEP 3 - Fasten the mounting legs to the slide assemblies. Before fully tightening, attach the cross mount to the legs in next step.

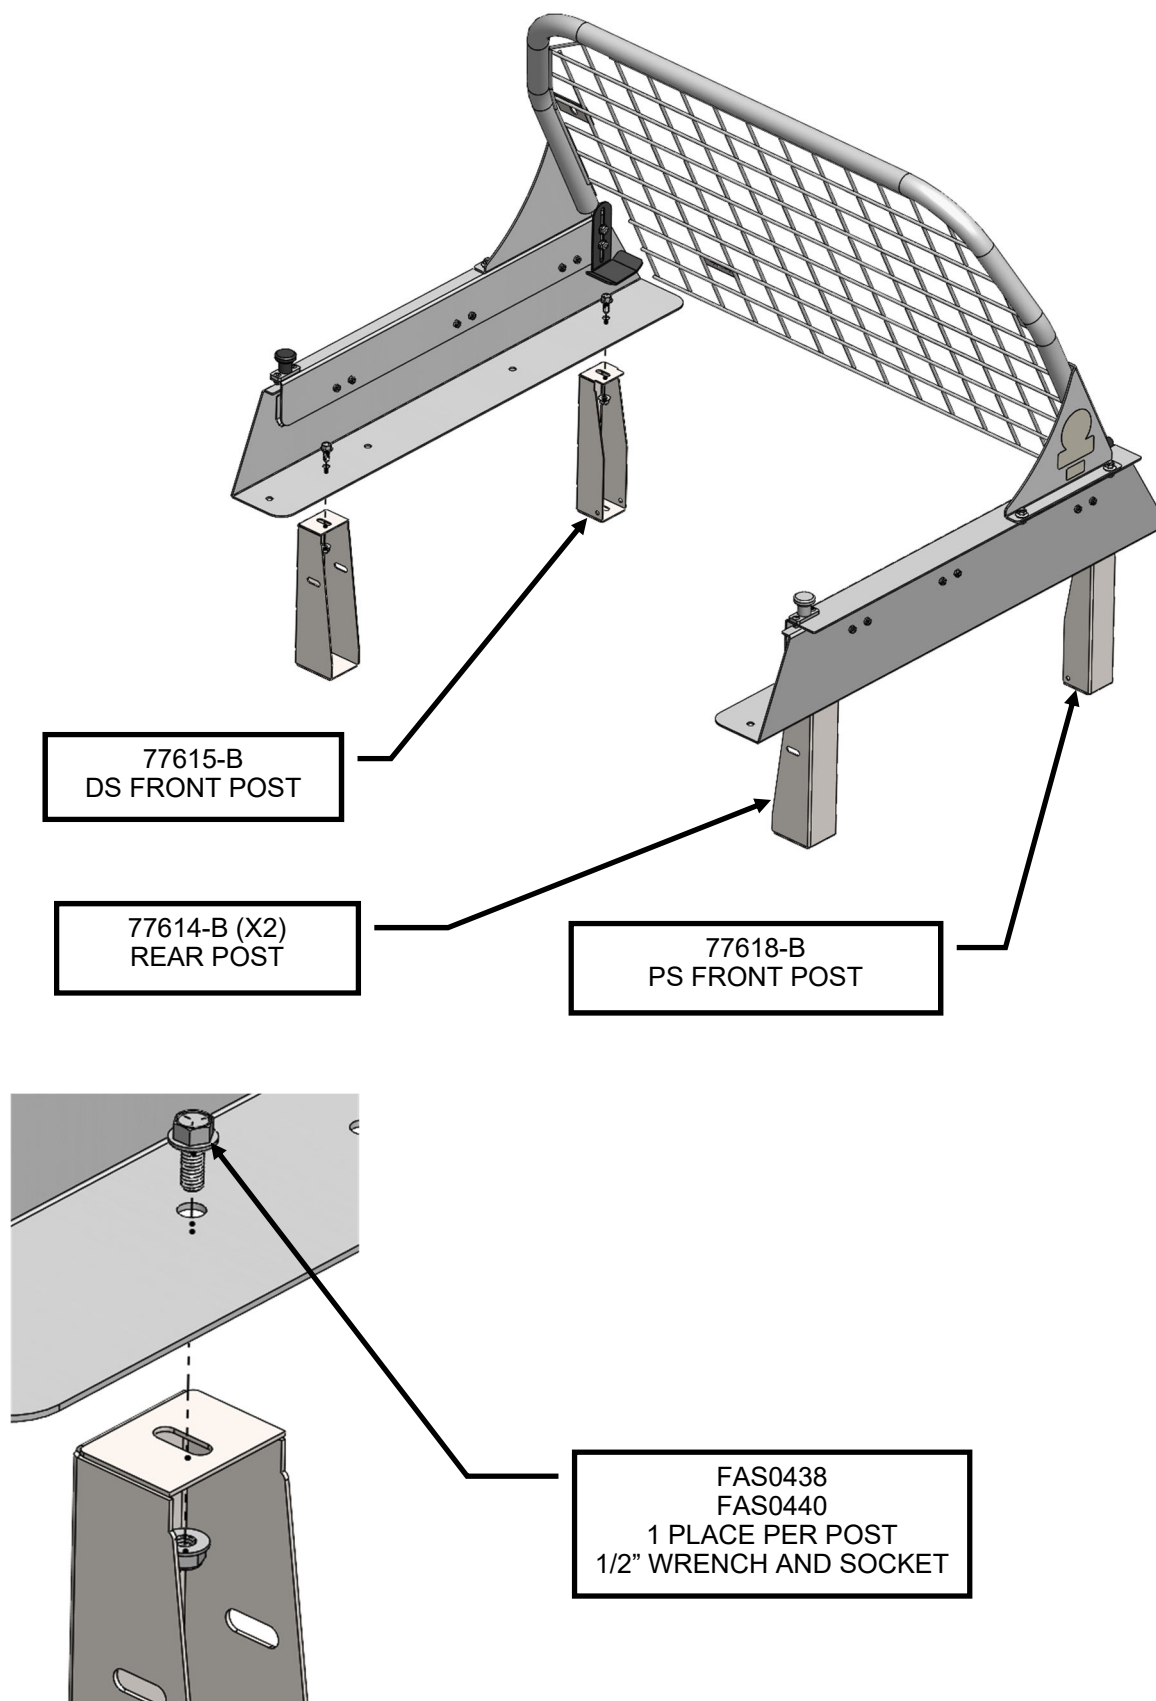


STEP 4 - Attach the cross mount to the legs. Then, fully tighten the fasteners. Extend the partition to access the front fasteners.

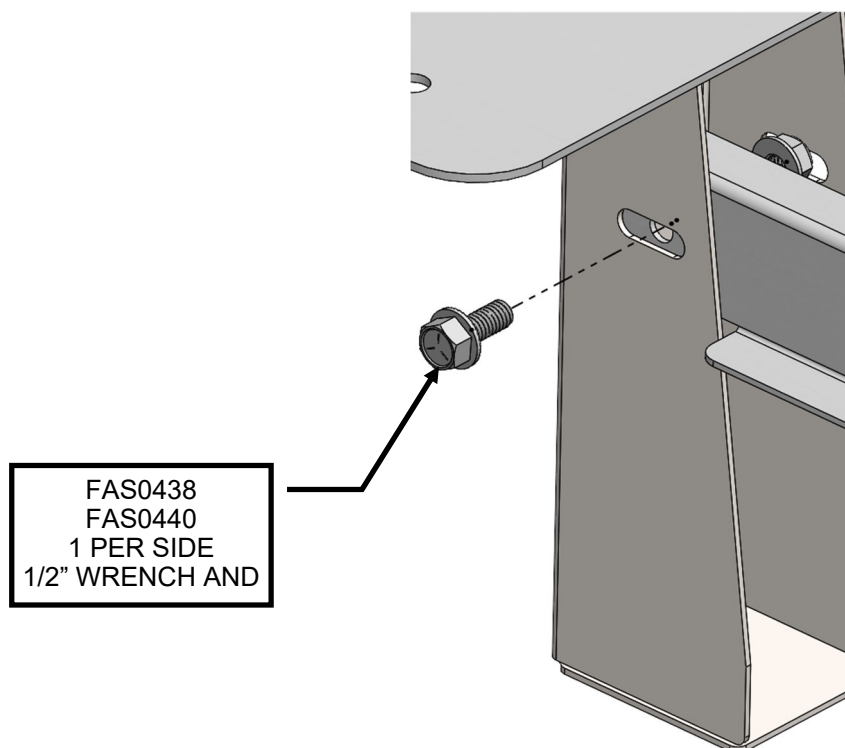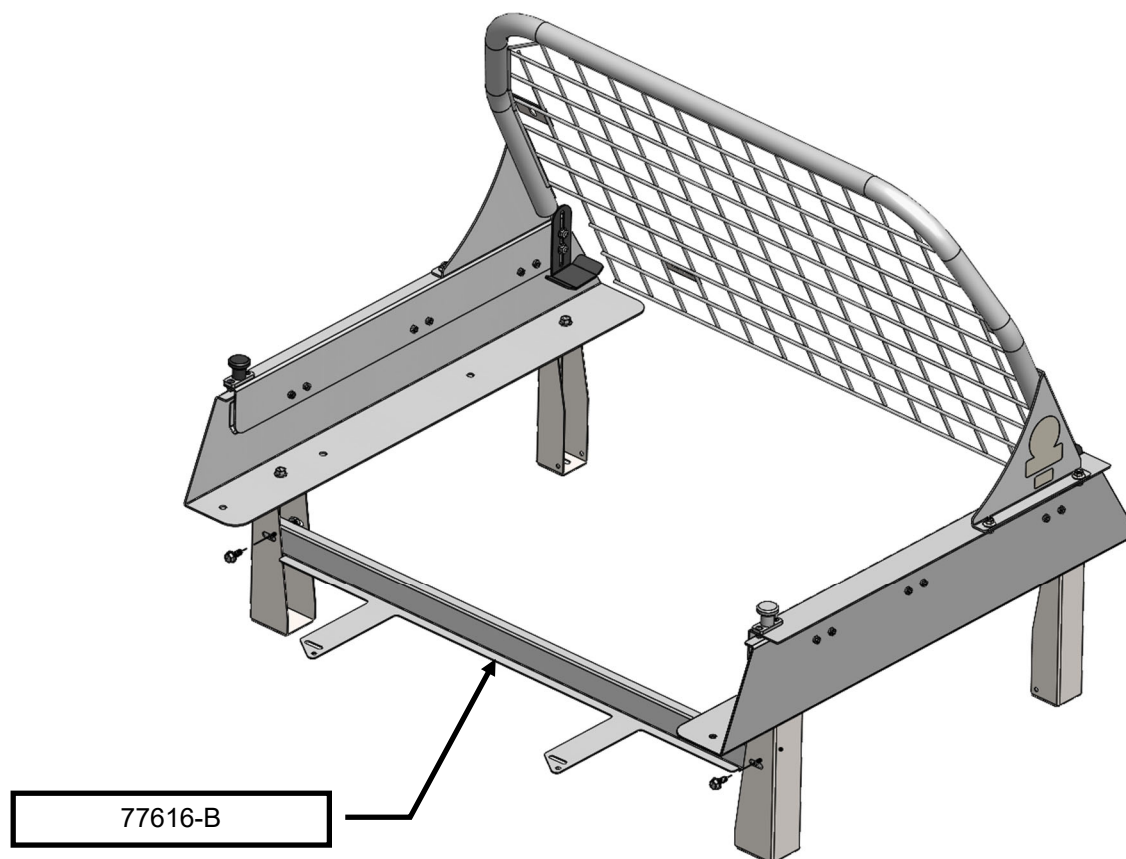


STEP 5A - Remove the floor covering over the spare tire to expose the plastic housing surrounding the tire.
It will **NOT** be reinstalled.

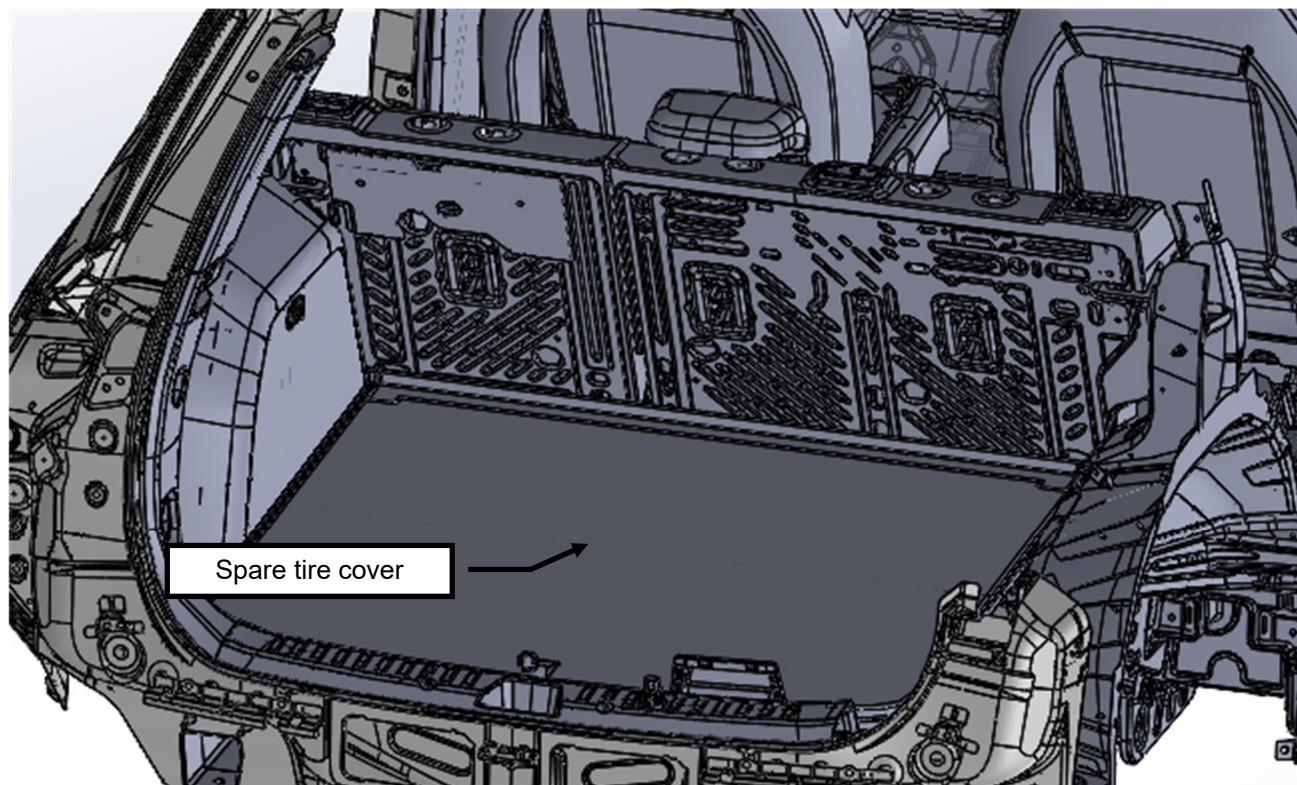


STEP 5B - Remove the plastic housing surrounding the tire.
It will **NOT** be reinstalled.

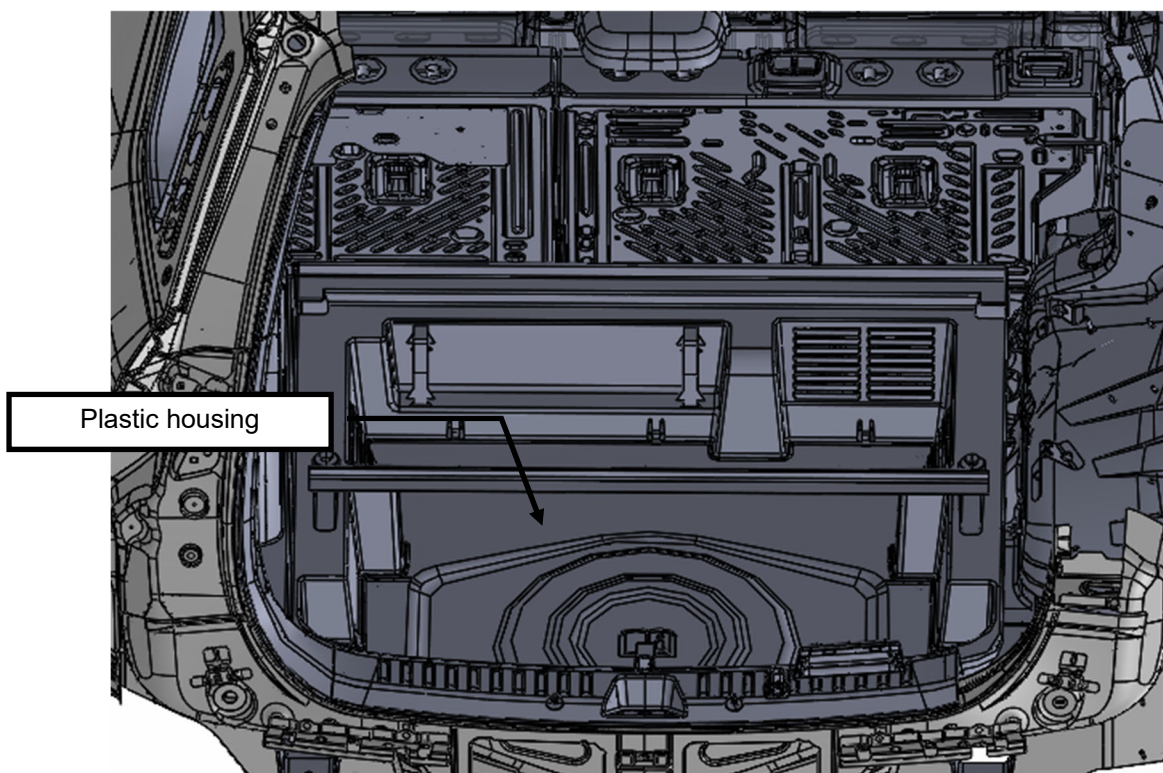


STEP 6 - Remove rear bumper trim and latch cover.
It **WILL** be reinstalled.

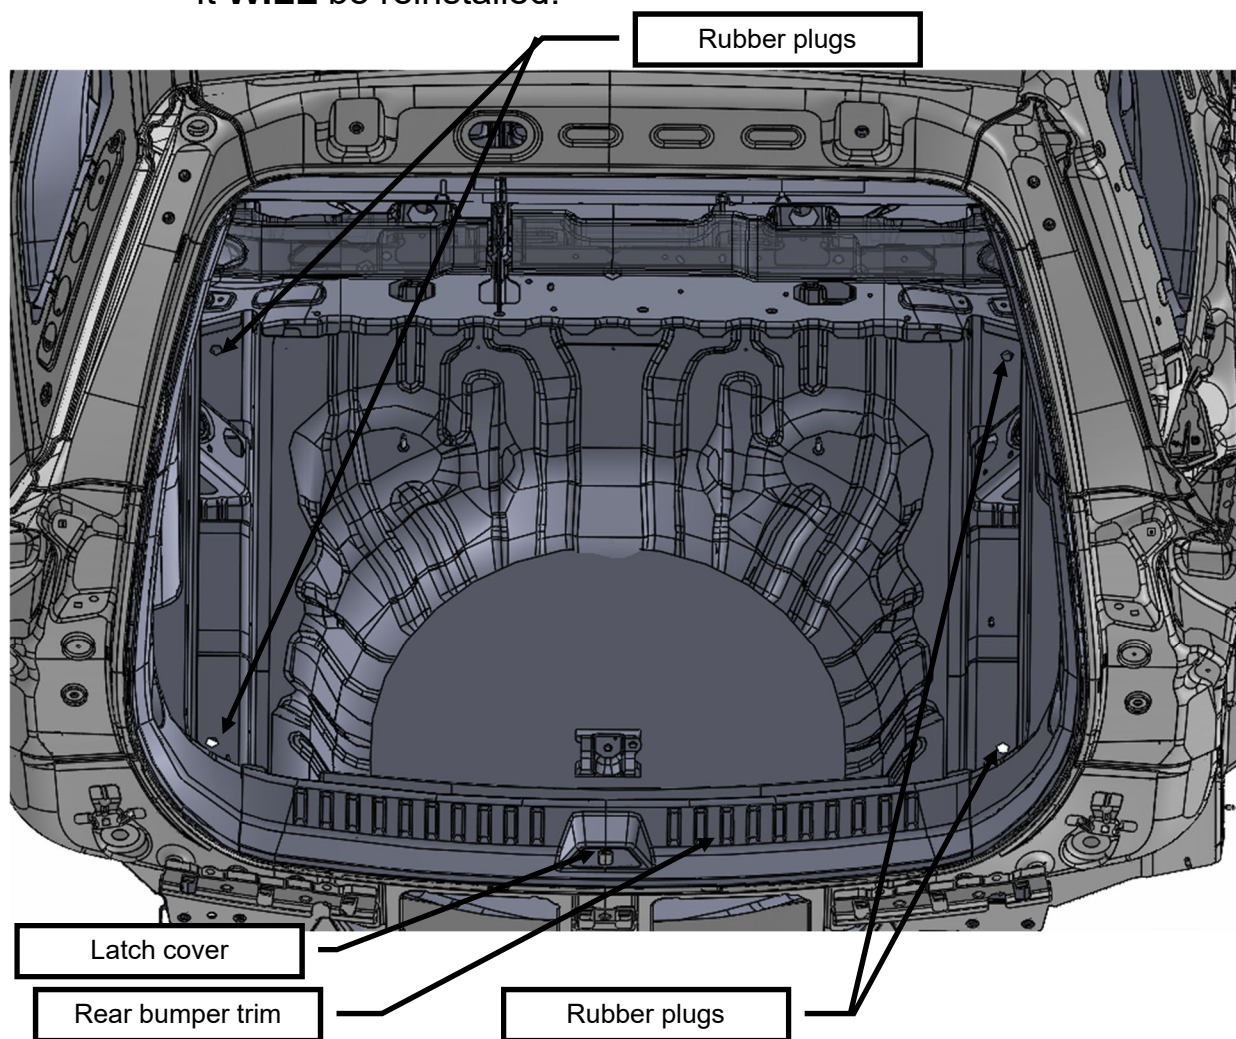



STEP 7 - Remove rubber plugs from floor. Install PLUSNUT FAS0091 into all 4 holes.

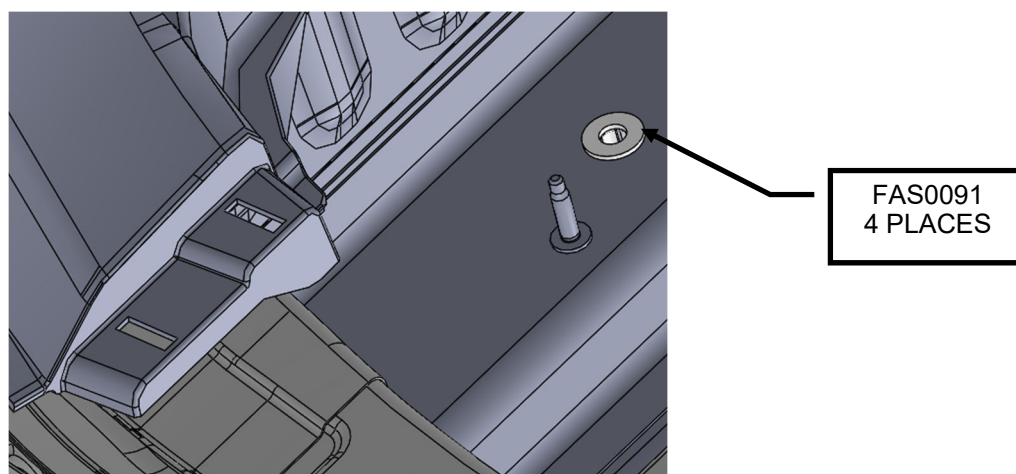

STEP 8 - Remove wire harness retainer clips shown in 2 places. These will be re-installed into the partition mounting feet.

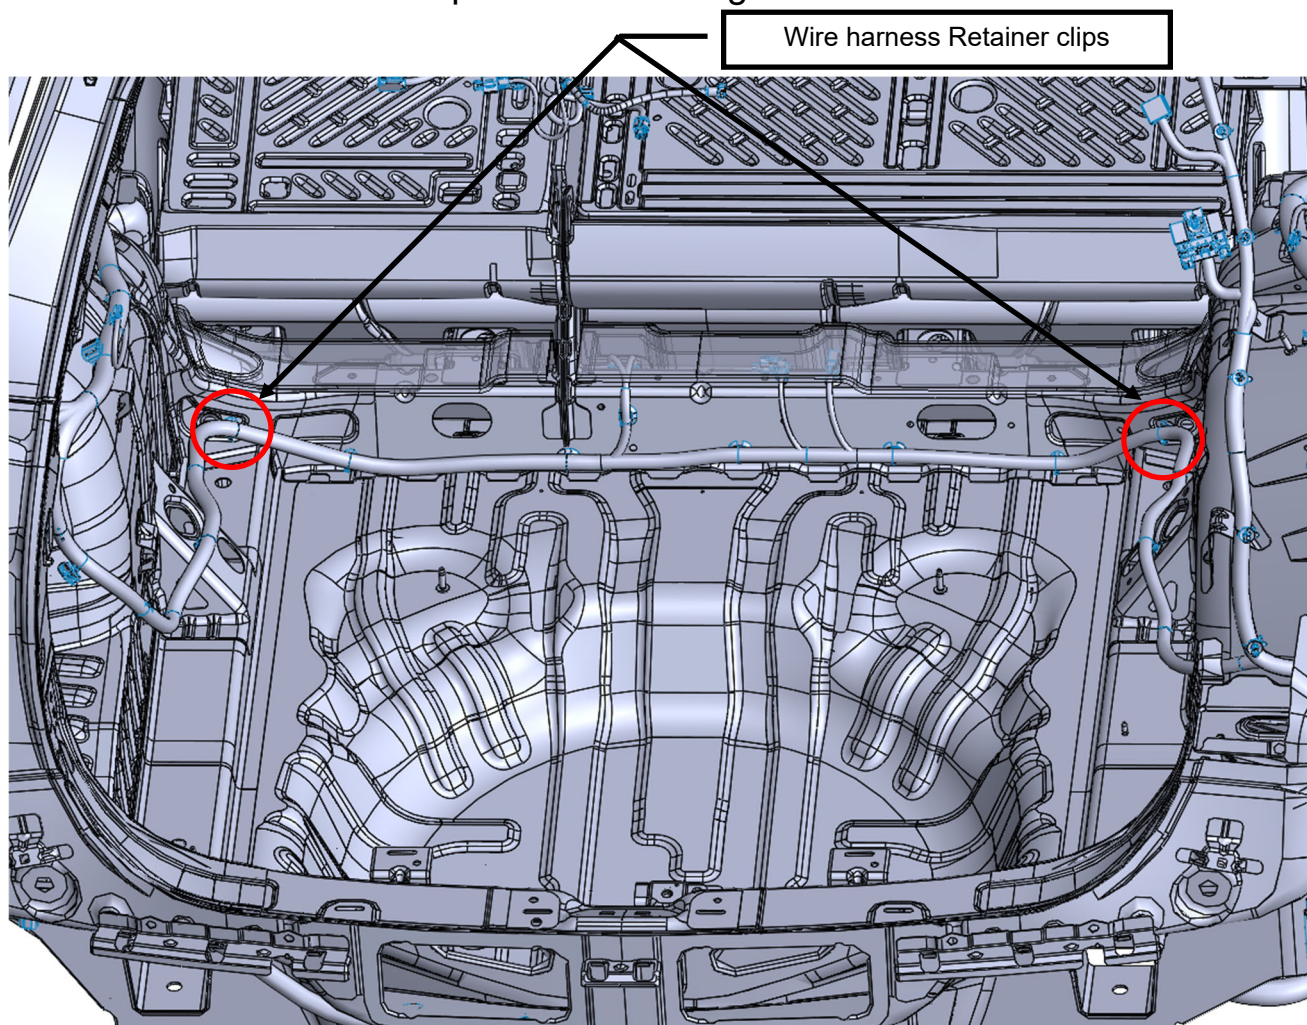


STEP 9 - Place the partition in the vehicle. The partition mounts in six locations. Position with the crossmount tabs **UNDER** the vehicles trim brackets on the rear bumper. The holes will line up with the holes in bracket. Insert FAS0018 bolts thru each crossmount hole to help with alignment. Loosely install the FAS0055 nuts.

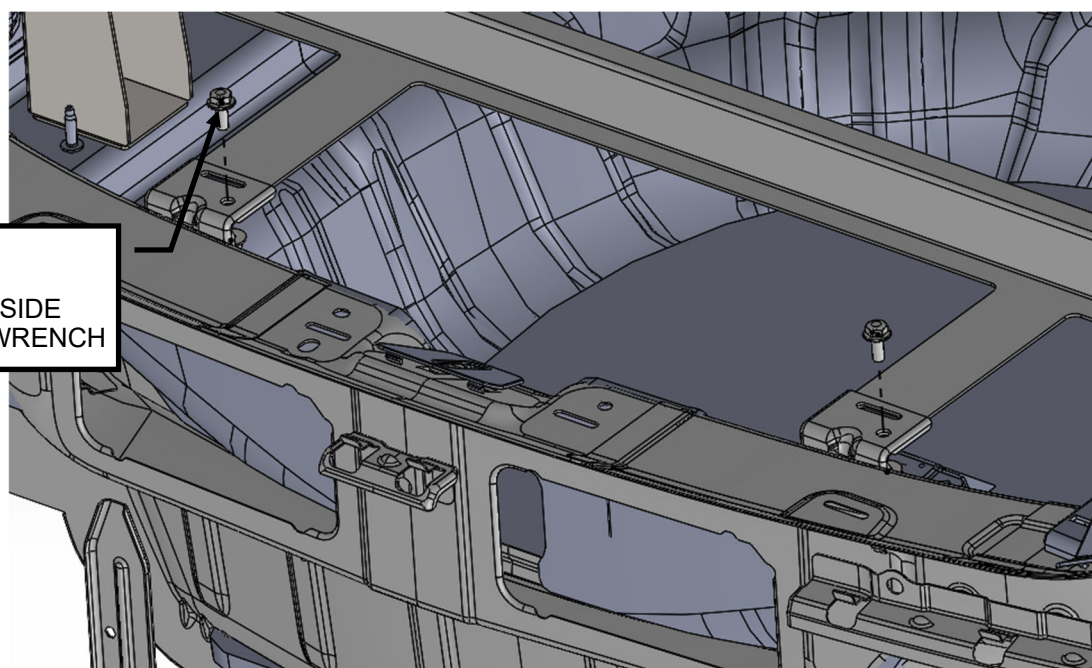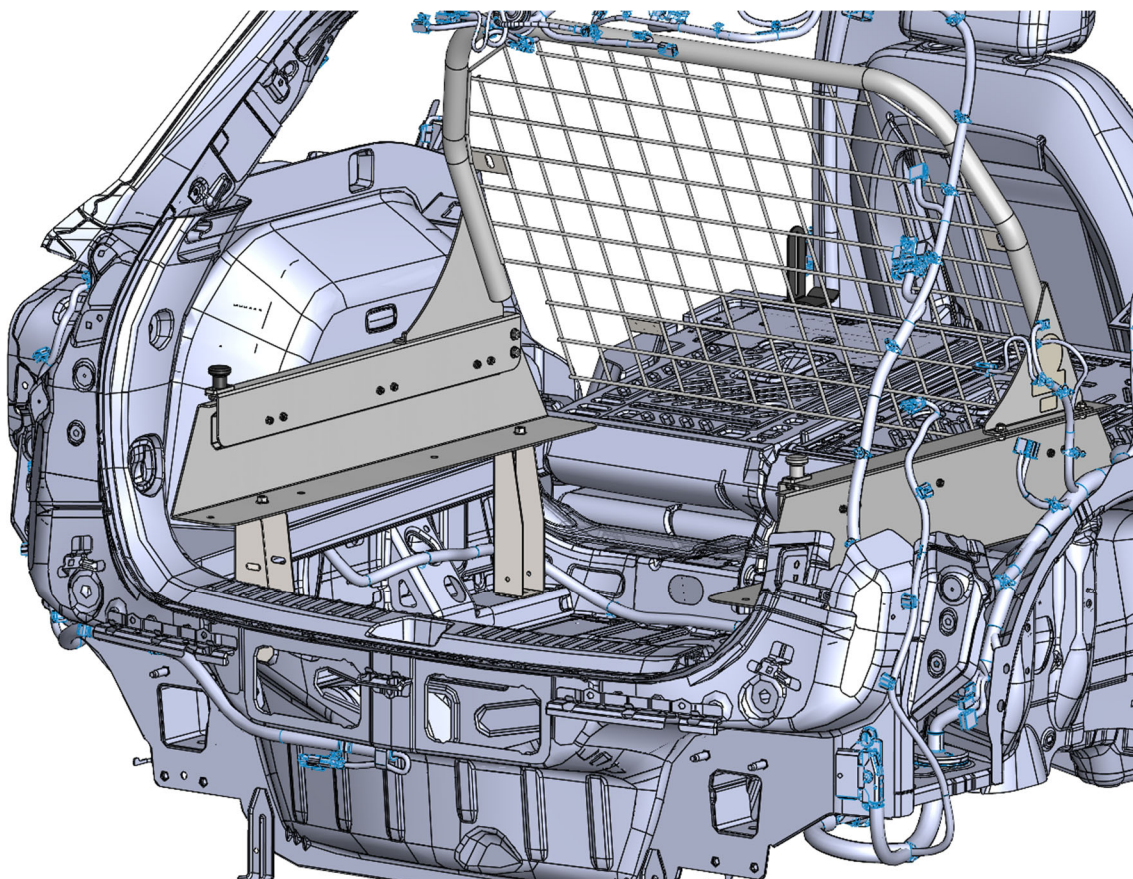

FAS0018
FAS0055
1 PLACE PER SIDE
7/16" SOCKET & WRENCH


STEP 10 - Fasten the legs and crossmount to the vehicle using the fasteners below. **Reinstall the bumper trim.**

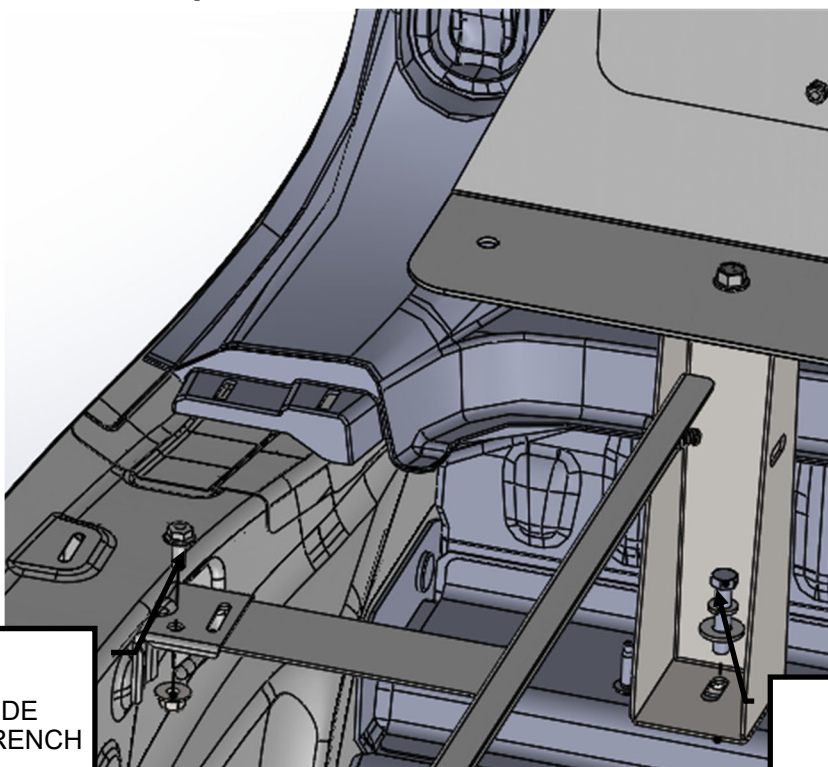



FAS0018
 FAS0055
 1 PLACE PER SIDE
 7/16" SOCKET & WRENCH

FAS0092
 FAS0098
 FAS0086
 1 PLACE PER POST
 1/2" SOCKET


STEP 11 - Extend the partition over the second row seating. Adjust the slide feet until they contact the seats and fully tighten.

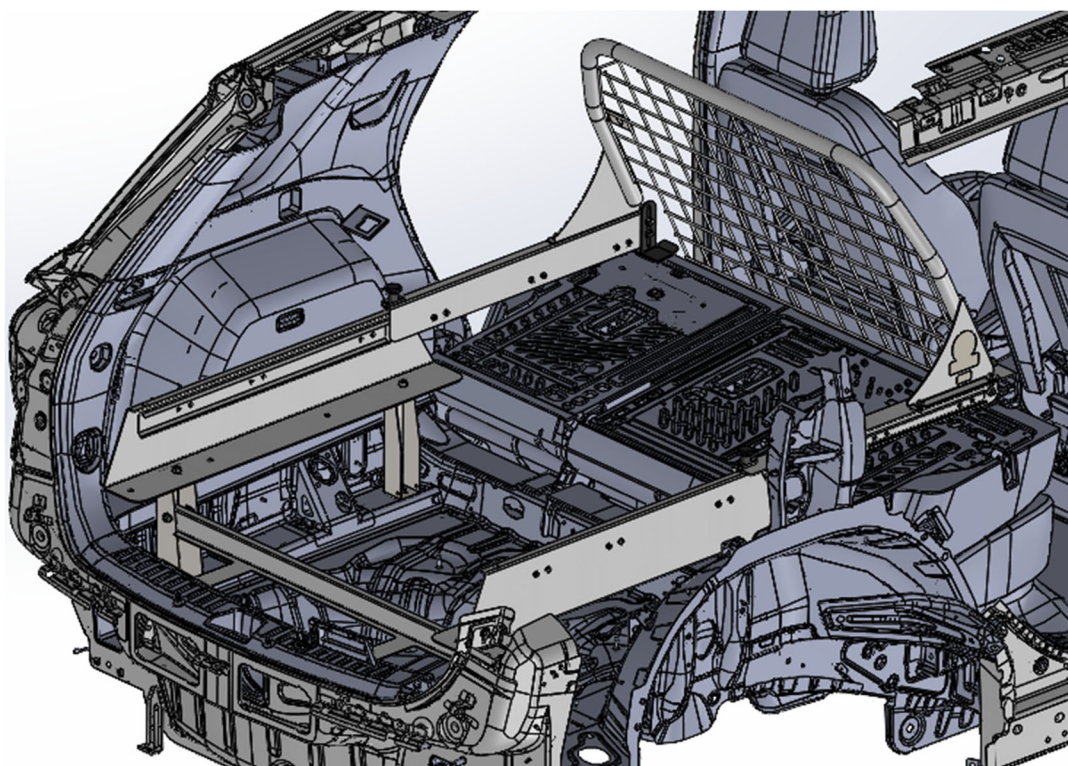

STEP 10 - Rotate the wire retainer clip to install into the forward facing surface of the partition mounting feet 2 places. Push into the hole as the arrow shows below.

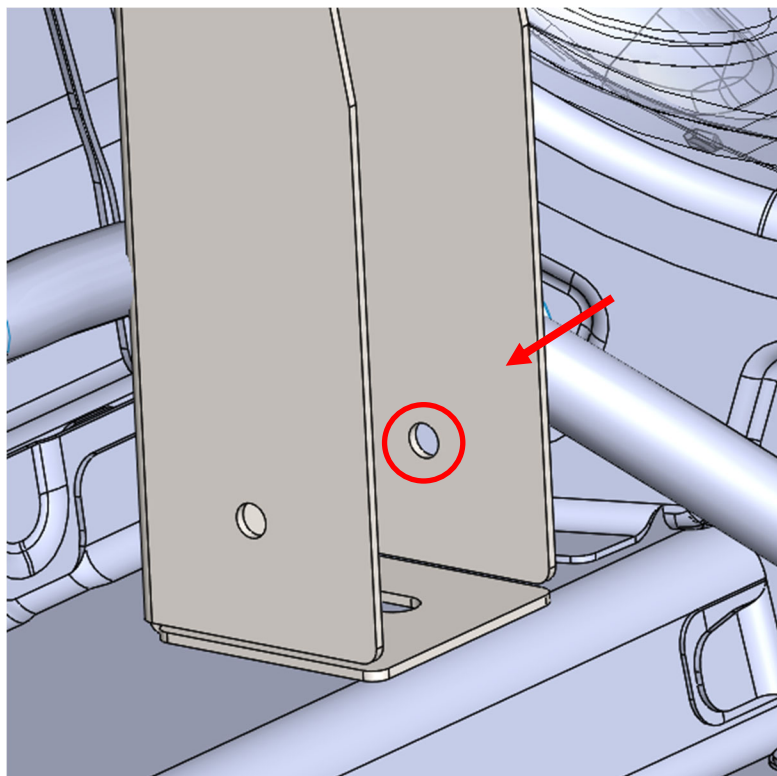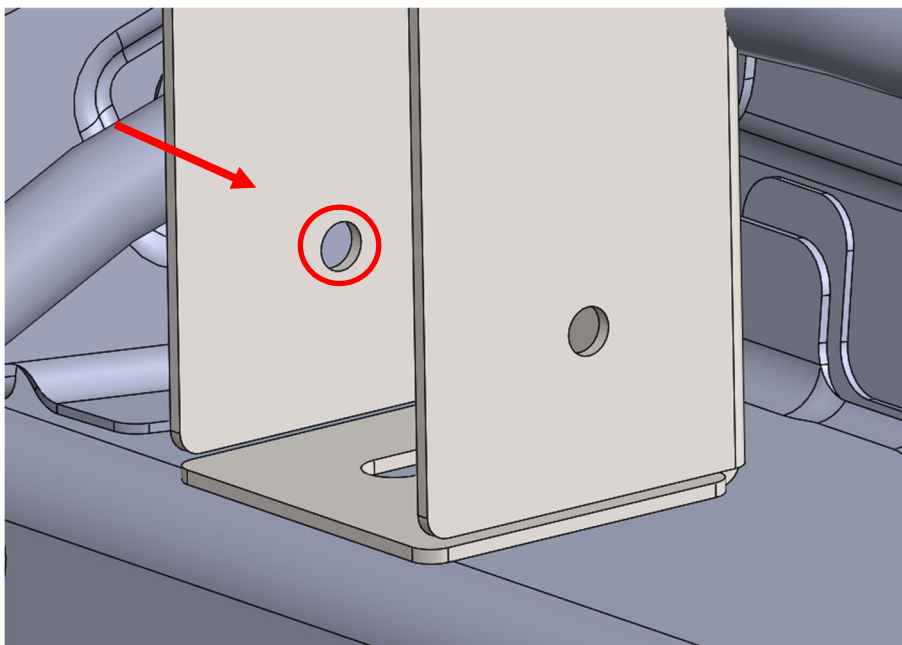**DS VIEW****PS VIEW**

**YOUR INSTALLATION IS NOW COMPLETE!
LOCK PARTITION IN REAR POSITION AS SHOWN
FOR DELIVERY**

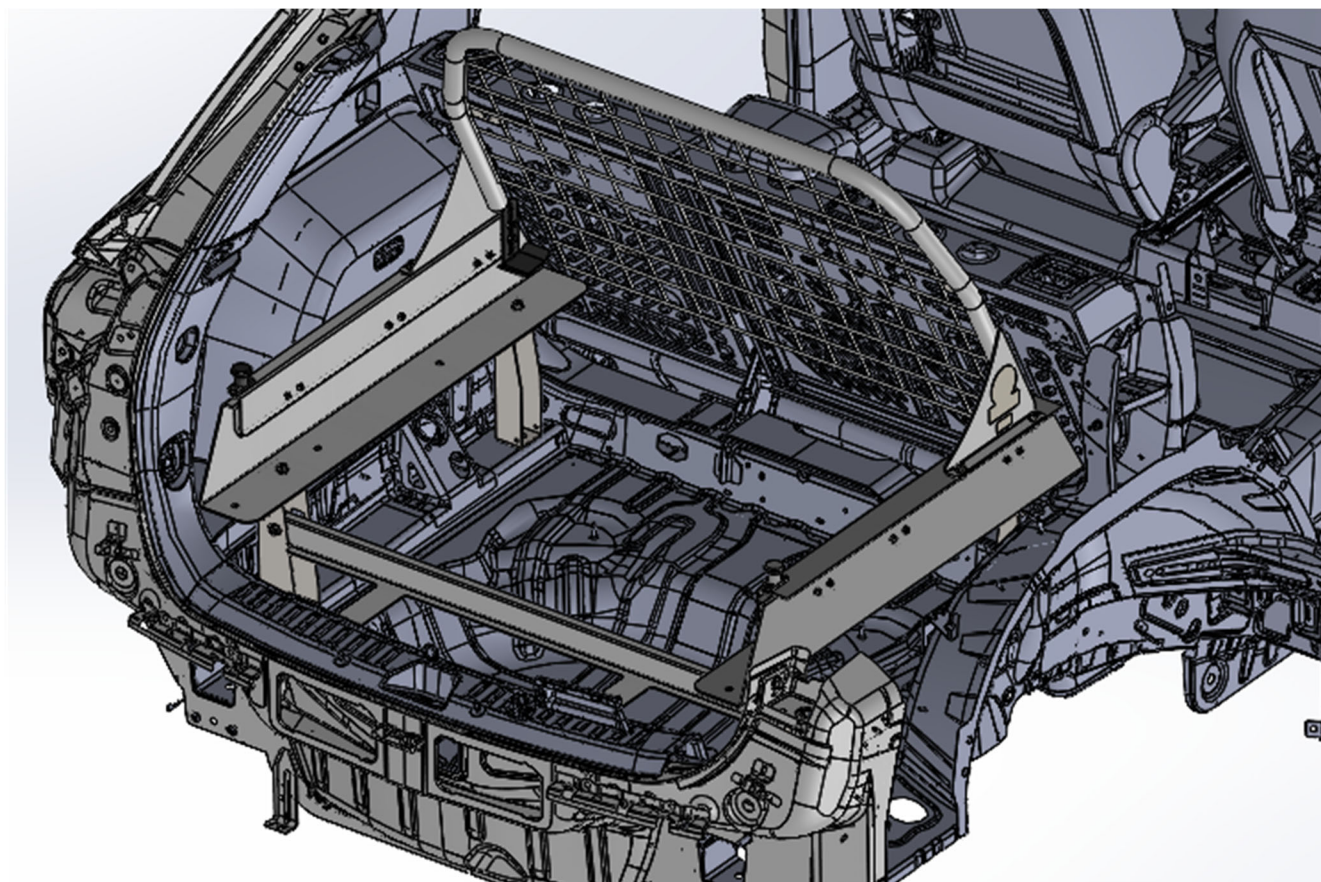

**DOUBLE CHECK ALL FASTENER LOCATIONS TO BE SURE THAT
ALL FASTENERS ARE FULLY TIGHTENED.
YOUR INSTALLATIONS IS NOW COMPLETE!
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!**