


<i>INSTR. NUMBER</i> :INS78260		<i>PG:</i> 1	<i>REV:</i> A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
<i>PART NUMBER</i> :P22PEQNXEV25				1	77755	SLIDE ASM, EQUINOX25, DS	1
				2	77756	SLIDE ASM, EQUINOX25, PS	1
				3	78254-B	SLIDING PAR, P22EQNXEV25, BLK	1
				4	HDW78260	HDW KIT FOR P22PEQNXEV25	1
<i>PART DESC.</i> : PAR, ADJ, EQUINOX EV 25							

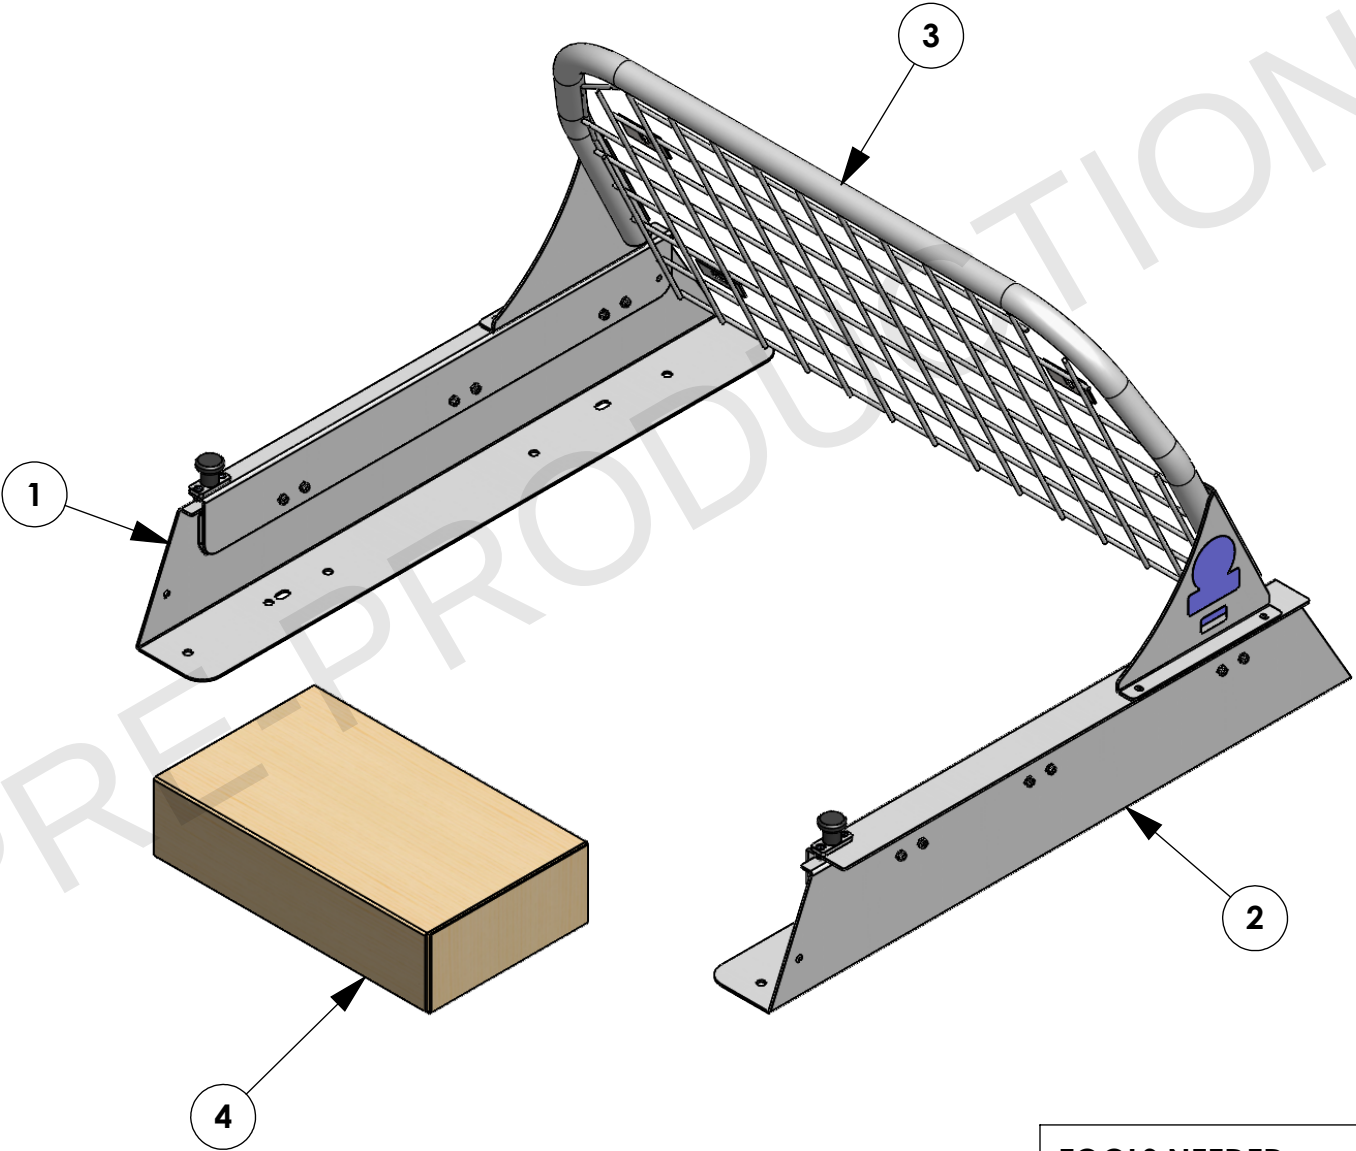

- TOOLS NEEDED:**
- 3/8 SOCKET
 - 1/2 WRENCH
 - 1/2 SOCKET
 - 7/16 WRENCH
 - 7/16 SOCKET
 - PHILIPS HEAD SCREWDRIVER
 - DRILL

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED


BAG REFERENCE: BAG78260

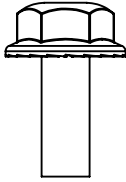


FAS0018
SCREW, HH SFLNG,
1/4-20X.62, ZP
QTY: 8

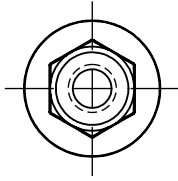

FAS0055
NUT, HEX NLK
FLG, 1/4-20, ZP
QTY: 8

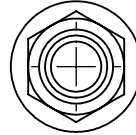


FAS0440
NUT, HEX NLK
FLG, 5/16-18, ZP
QTY: 8

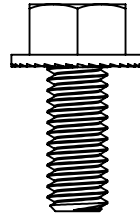

FAS0438
SCREW, HFLNG,
5/16-18X.75, ZP
QTY: 8



FAS0090
NUT, HEX NLK,
5/16-18, ZP
QTY: 2

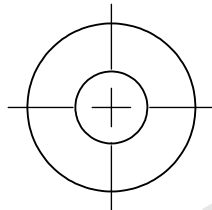

FAS0086
WASHER, FLAT
USS, 5/16, ZP
QTY: 2

INTENTIONALLY LEFT BLANK


PAGE:

5

HARDWARE USED

HDW KIT REFERENCE: HDW78260

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	78225-B	FRONT FOOT, 89-EQUINEV25, BLACK	2
2	78226-B	REAR FOOT, 89-EQUINEV25, BLACK	2
3	78228-B	SUPPORT BRKT, P2EQUINEV25, BLACK	2
4	78230-B	L-BRACKET 2.5 X 2.5, BLACK	2
5	61626-B	PAR FOOT, ESC20, SS, BLACK	1
6	61630-B	PAR SLIDE FOOT, ESC20, CS	1
7	INS78260	ASSM INS FOR P22PEQNXEV25	1
8	BAG78260	BAG FOR P22PEQNXEV25	1

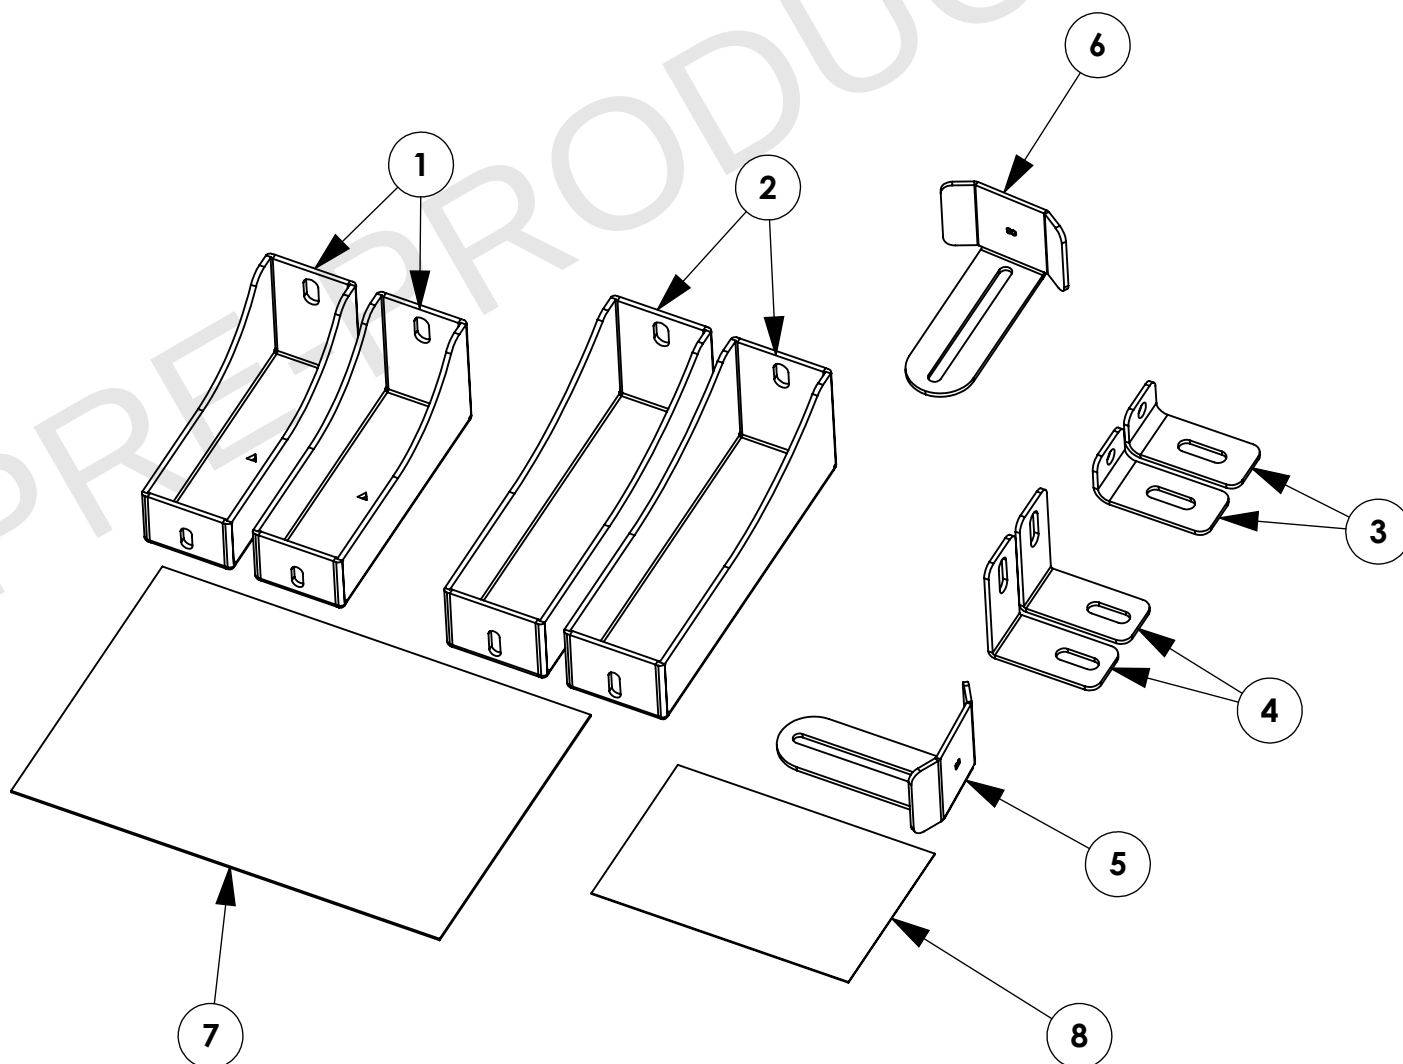

INTENTIONALLY LEFT BLANK

**STEP 1 - MOUNTING 61626-B & 61630-B TO
77755 & 77756**

Step 1.1
MOUNT 61626
TO 71077-B,
LOOSELY
TIGHTEN
(2)FAS0018, &
(2)FAS0055

7/16 WRENCH
7/16 SOCKET
DRILL

77755


Step 1.1

61626-B

NOTE:
REPEAT Step 1.1
FOR 77756

NOTE:
LEAVE FASTENERS LOOSE FOR
ADJUSTMENT WHEN INSTALLING
INTO VEHICLE


NOTE:
PAY ATTENTION TO THE
ORIENTATION OF THE FEET
ANGLE SHOWN

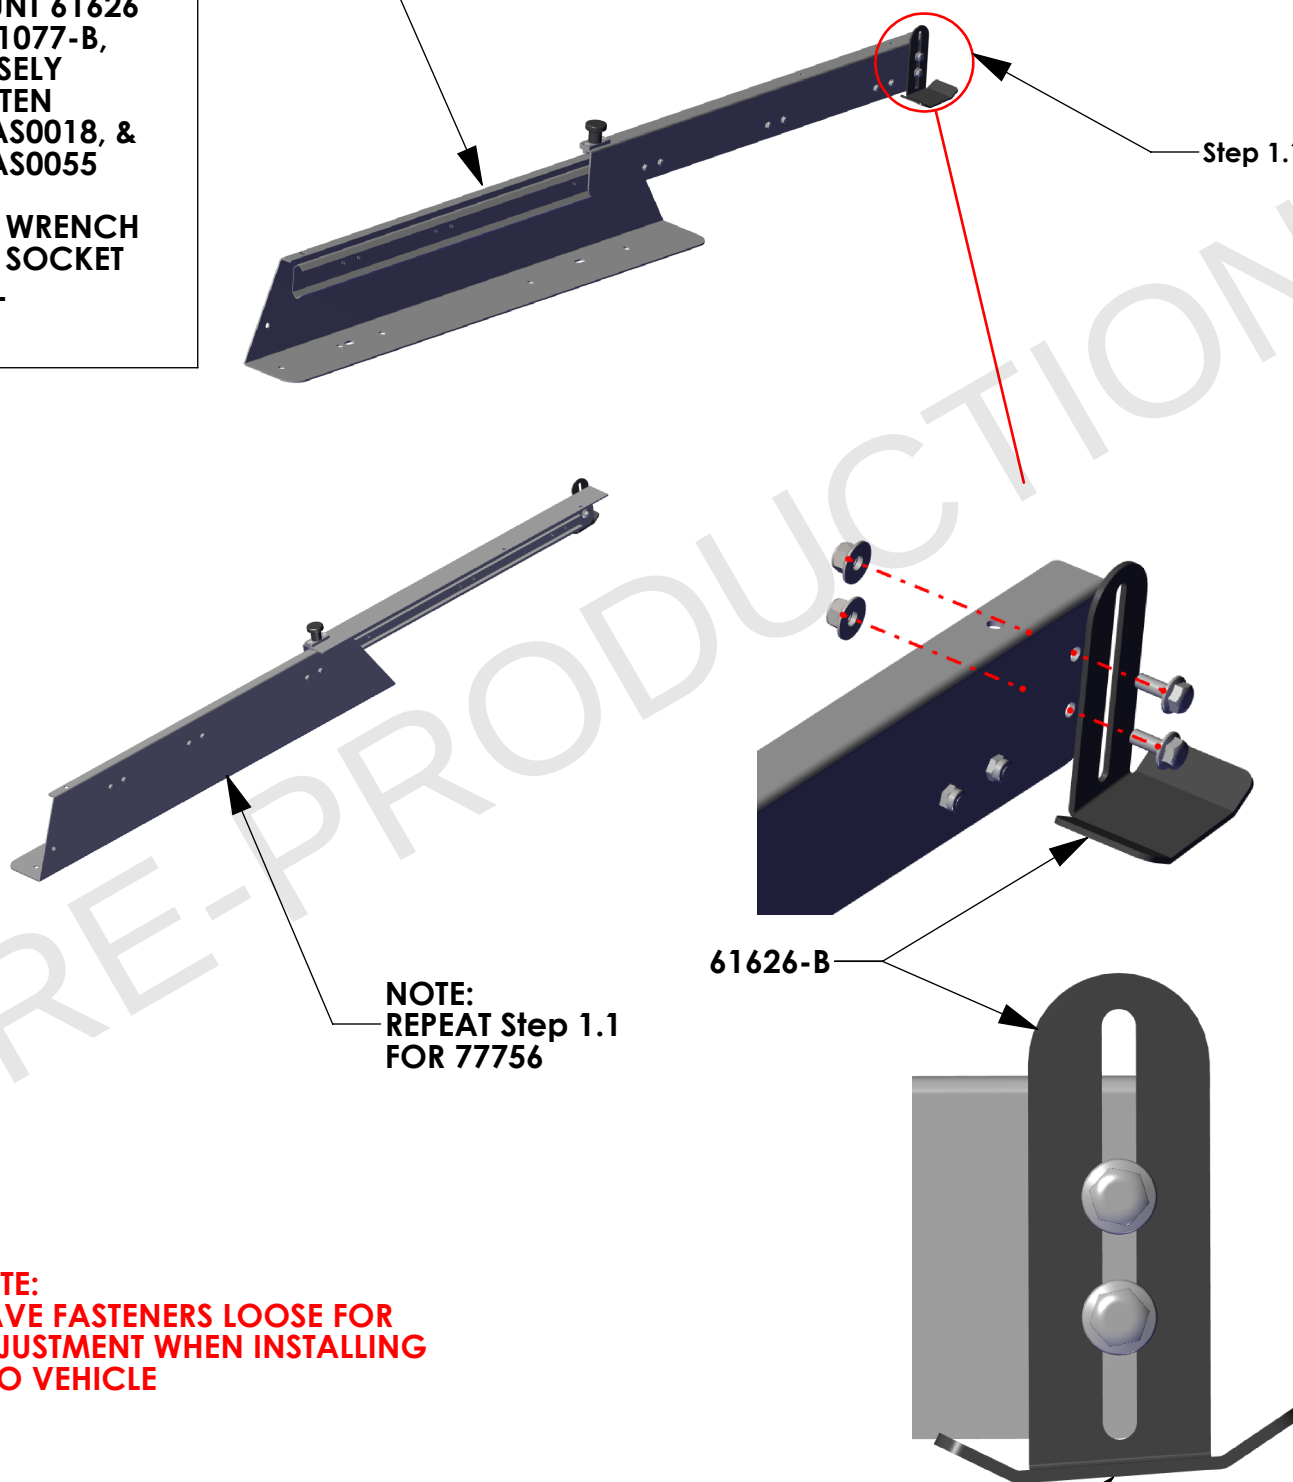

STEP 2 - MOUNTING PARTITION SCREEN TO 77756 & 77755

Step 2.1
MOUNT 78254
TO 77755 &
77756, LOOSELY
TIGHTEN
(4)FAS0018, &
(4)FAS0055

7/16 WRENCH
7/16 SOCKET
DRILL

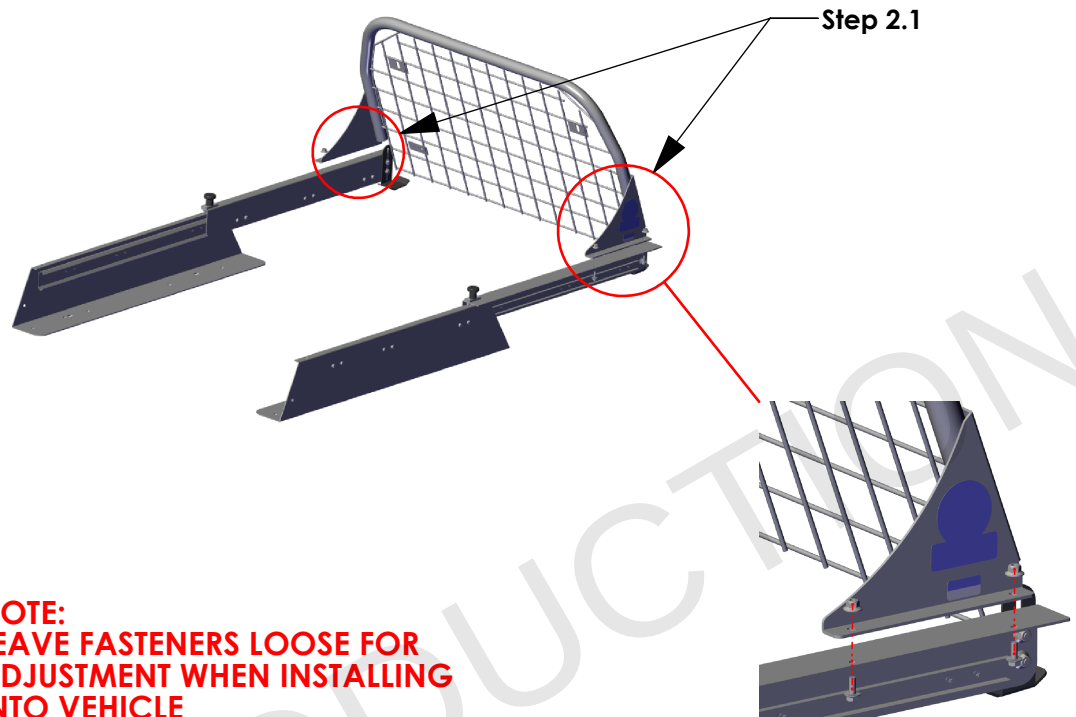


STEP 3 - REMOVING COVER AND PLASTIC HOUSING

Step 3.1
REMOVED
FLOOR
COVERING TO
EXPOSE PLASTIC
HOUSING.


IT WILL NOT BE
REINSTALLED

Step 3.2
REMOVED OEM
FASTENERS (REUSE
IN STEP 4.1) FROM
STUDS TO REMOVE
THE PLASTIC
HOUSING AND
COMPONENTS,
PLASTIC HOUSING
WILL NOT BE
REINSTALL.

CRITICAL
COMPONENTS
FROM PLASTIC
HOUSING SHOULD
BE STOWED IN
FRONT
PASSENGER SEAT

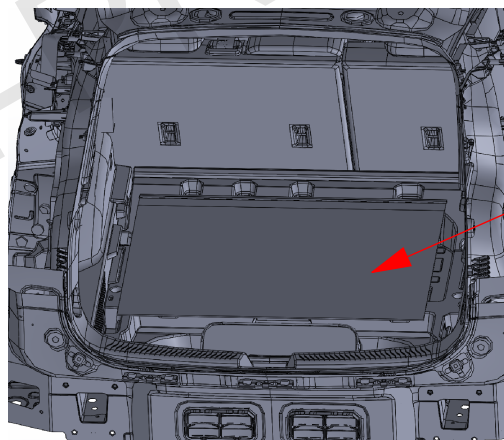



Step 3.1

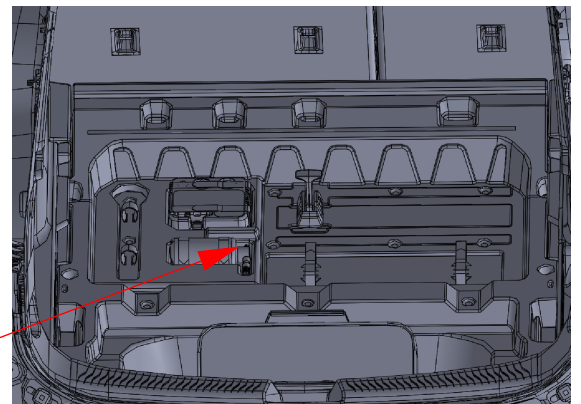

Step 3.2

STEP 4 - MOUNTING LEGS TO VEHICLE



Step 4.1
LOCATE OEM
STUDS AND
PLACE
(2)78225-B, &
(2)78226-B OVER
OEM STUBS. FULLY
TIGHTEN WITH
REMOVED OEM
FASTENER TO
LEGS

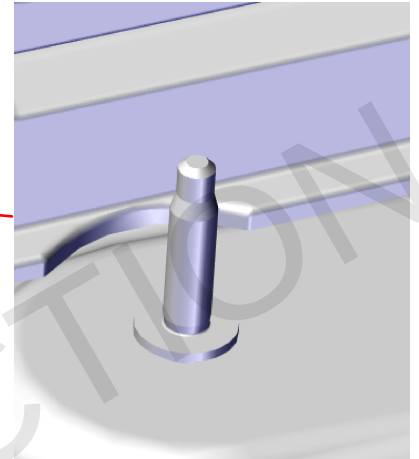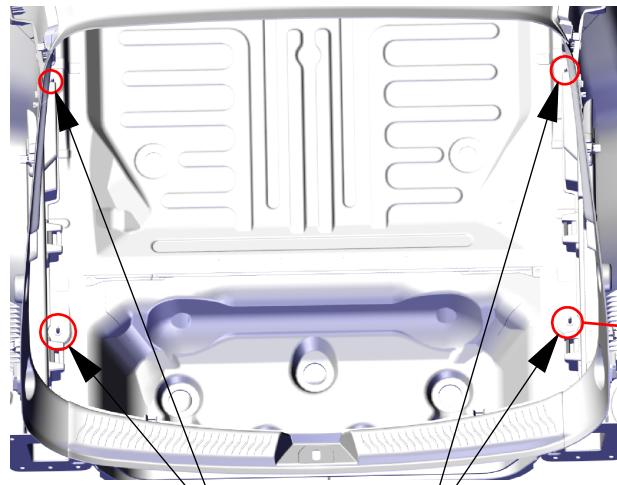

NOTE:
TURN ALL LEGS SO OPENS
ENDS FACE INWARD AS
SHOWN

78225-B
HAS A TRIANGLE
IDENTIFIER


78226-B

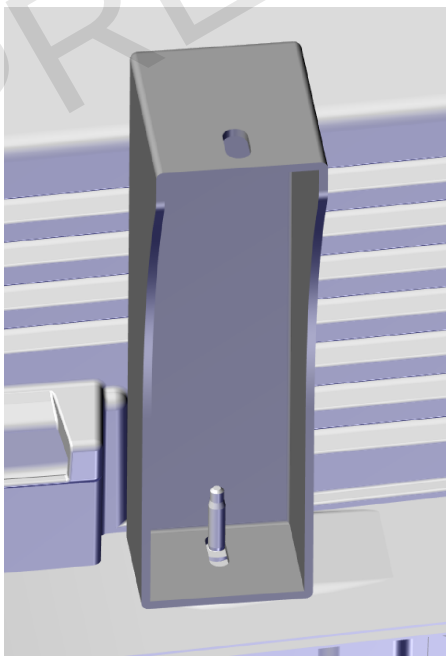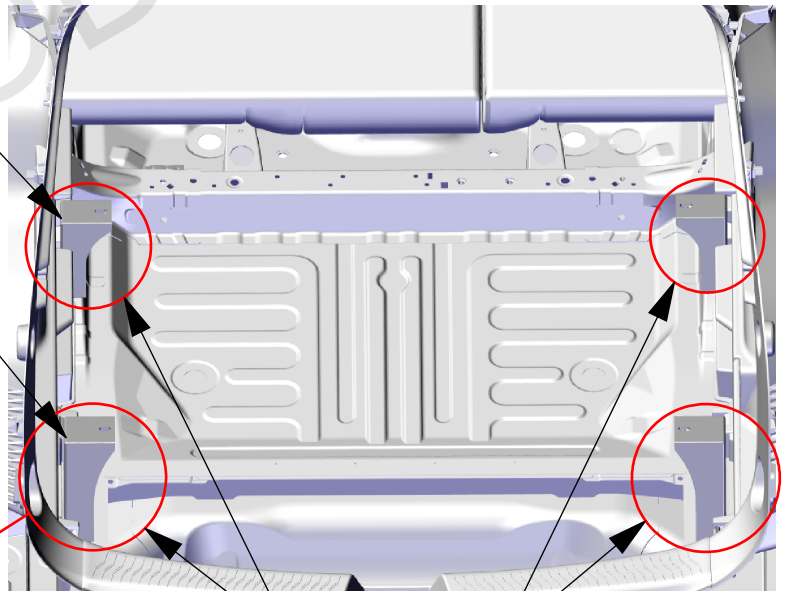

STEP 5 - PLACING PARTITION INTO VEHICLE

Step 5.1
PLACE PARTITION
OVER LEGS (4
PLACES), ALIGN
SLOTS TO HOLES
IN LEGS.
LOOSELY TIGHEN
FAS0440 &
FAS0438

1/2 SOCKET
1/2 WRENCH
DRILL

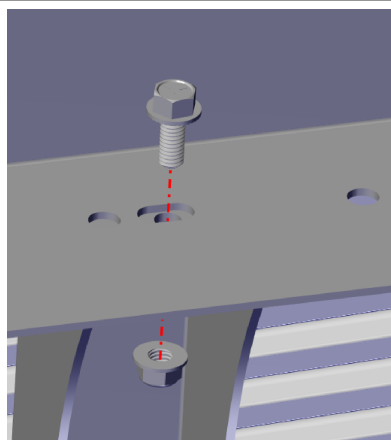


Step 5.2
MOUNT 78230-B
TO SHOWN
LOCATIONS,
LOOSELY TIGHTEN
FAS0438 &
FAS0440

1/2 WRENCH
1/2 SOCKET
DRILL

Step 5.3
REMOVED OEM
D-RING (WILL
NOT BE
REINSTALLED) &
OEM FASTENER
FROM D-PILLAR,
AND ALIGN
78228-B TO OEM
HOLE AND
78230-B. RETURN
OEM FASTENER
TO HOLE. FULLY
TIGHTEN FAS0438
& FAS0440 AND
OEM FASTENER.

1/2 WRENCH
1/2 SOCKET
DRILL


FULLY
TIGHTEN ALL
FASTENERS

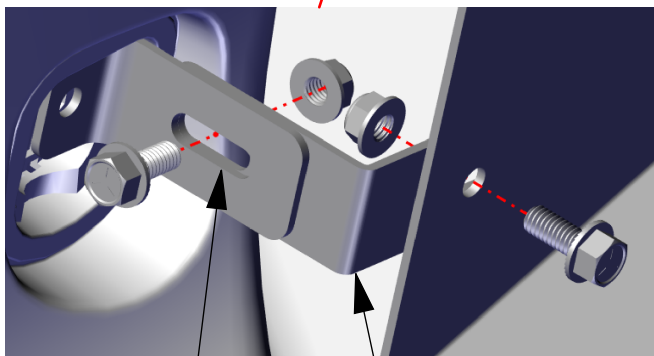

78228-B

78230-B

Step 5.1

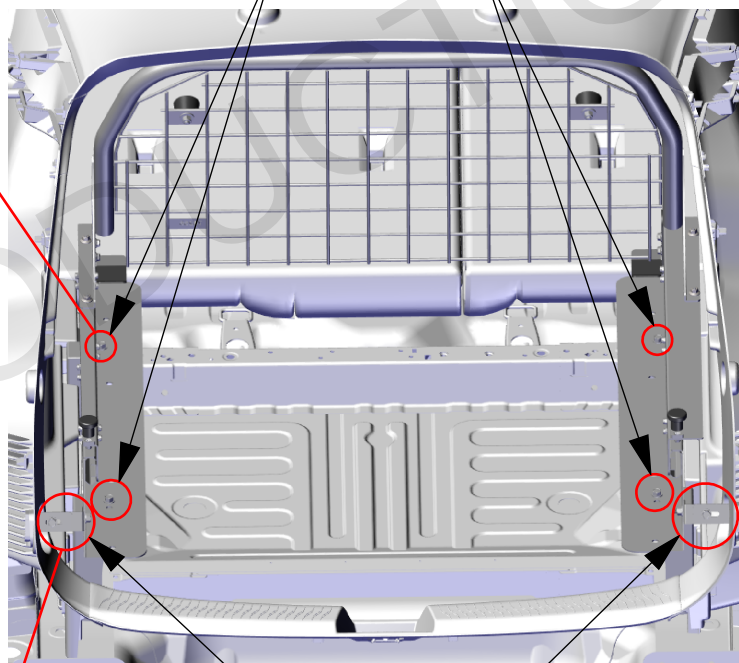Step 5.2 /
Step 5.3

NOTE
WITH PARTITION IN PLACE
FULLY TIGHTEN ALL FASTENERS