


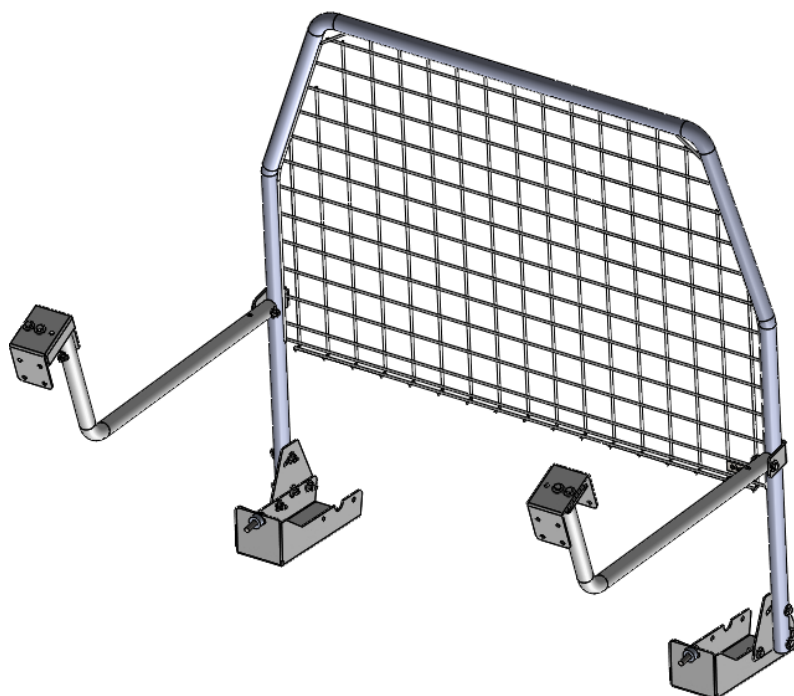

PRODUCT WEIGHT
41 LBS

COLOR
BLACK

CATALOG NUMBER
P2EQUIN20

PRODUCT FEATURES

This fixed partition is design to fit in model year 2018 thru 2024 Chevy Equinox. It mounts to the vehicle using OEM places. The fixed partition disables the second row seating creating space for extra cargo. Use this partition with the floor kit, 89-EQUIN20, to create a flat cargo floor.

SEE PAGE 2 FOR APPLICATION NOTES AND ACCESSORIES, OTHER PRODUCTS THAT WORK WITH THIS UNIT.



CATALOG NUMBER P2EQUIN20

PRODUCT APPLICATION


This product is designed to be in model year 2018 thru 2024 Chevy Equinox

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION</i>
------------------------------	---------------------------

89-EQUIN20	FIXED FLOOR,P2EQUIN20
-------------------	------------------------------

SPECIAL APPLICATION NOTES

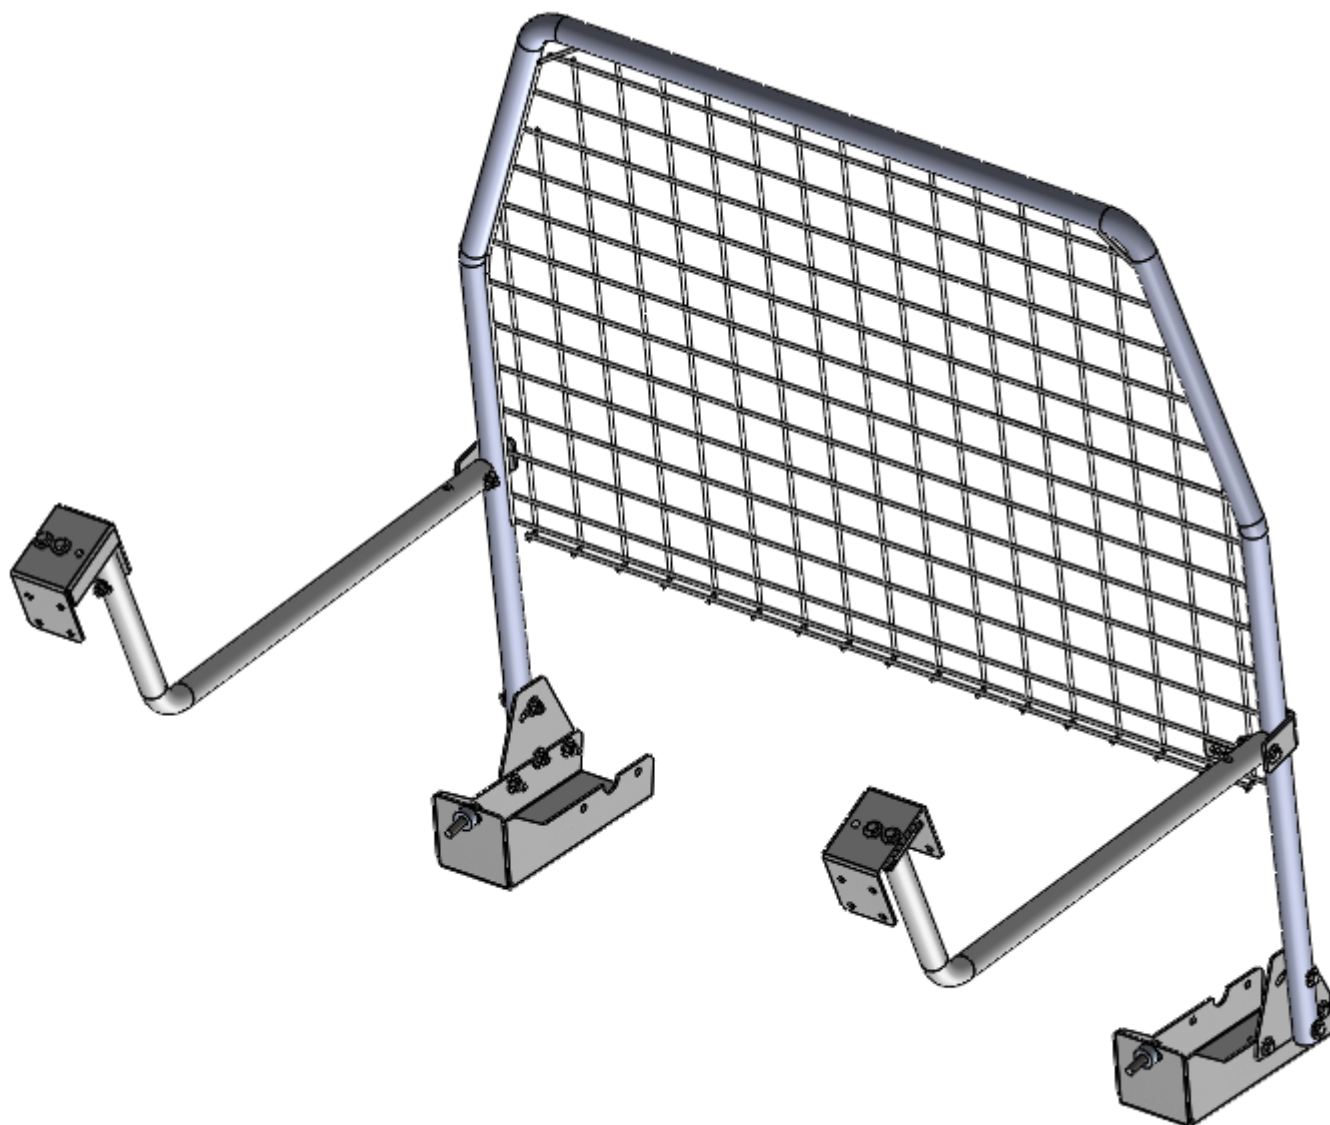


P2EQUIN20
PARTITION, FIXED, EQUINOX

- PRECAUTIONS -



CAUTION

THE USE AIR IMPACT TOOLS CAN OVER-TORQUE FASTENERS AND CAUSE FASTENER FAILURE!

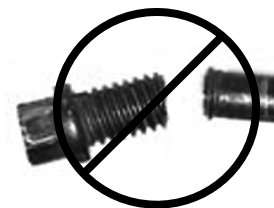

CAUTION

ALL INSTALLATION HOLES SHOULD BE SEALED WITH SILICON OR BUTYL SEALANT TO PREVENT EXHAUST FUMES FROM ENTERING THE VEHICLE!



DANGER

INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!



CAUTION

TO AVOID DAMAGING THE VEHICLE ALWAYS USE DRILL STOPS WHEN DRILLING ANY INSTALLATION HOLES!



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH STOP



RATCHET, SOCKETS AND/OR WRENCHES



SCREWDRIVERS



MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.



ADRIAN STEEL®




Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual P2EQUIN20 - PARTITION, FIXED, EQUINOX




WHEN INSTALLING PLUSNUTS MAKE SURE YOU USE THE CORRECT DRILL BIT WITH A STOP!

PLUSNUT SIZE	DRILL BIT SIZE
1/4-20 PLUSNUT, FAS0052	USE A 3/8" DIAMETER DRILL BIT WITH A STOP.
5/16-18 PLUSNUT, FAS0091	USE A 1/2" DIAMETER DRILL BIT WITH A STOP.
 OR  NOTE: A PLUSNUT SETTING TOOL IS REQUIRED FOR PLUSNUT INSTALLATION AND IS NOT SUPPLIED WITH THIS KIT. ORDER PLUSNUT TOOLS FROM ADRIAN STEEL (P.N. 22200-0) OR USE AN AIR POWERED PLUSNUT SETTING GUN.	
NOTE: If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting locations using a 1-3/16" carpet cutter.	
1-3/16" DIAMETER CARPET CUTTER P.N. 31183-0. 	

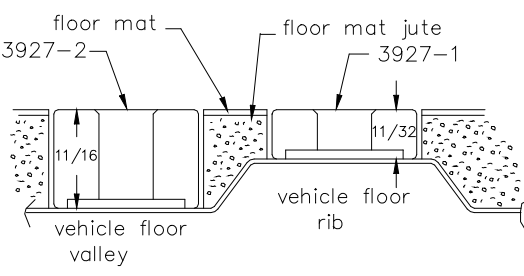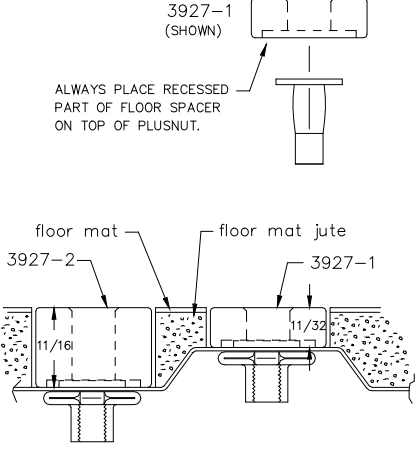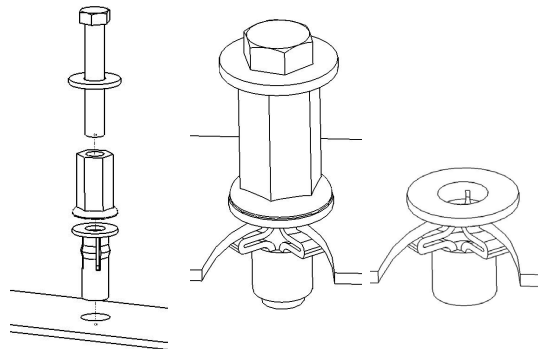
	Step 01 Optional Based on Vehicle	If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting locations. (if not, skip to STEP 02) Position the product to be installed into the vehicle and once you are satisfied with the mounting locations, mark the mounting locations. Using a 1-3/16" diameter carpet cutter. Select the appropriate floor spacers as shown in the illustration to the left. Set those aside for use later into the installation process. Once you have prepared the carpet/floor mat for mounting, proceed to STEP 02.
	Step 02 Prepare Mounting Locations	Using a drill and drill bit (<i>see table at top of page for correct size</i>) drill the mounting holes in the vehicle sheet metal to prepare for installing the plusnuts. If you are thru-bolting at any of the locations simply drill a hole that is 1/16" larger than the bolt size(s) for those locations. Once you have drilled the holes into the vehicle, the raw metal edges should be sealed using a self-etching primer to resist corrosion and potential fastener point failure.
	Step 03 Setting Plusnuts	Use a Air Powered Plusnut Setting Gun to "set the plusnut" or if installing manually with hand tools, assembly the following. <u>1/4-20UNC Plusnut (FAS0052)</u> FAS0080 SCREW, HXHD, 1/4-20UNCx2.00", G8 FAS0067 WASHER, FLAT, 1/4"ID 22200-0 PLUSNUT TOOL <u>5/16-18UNC Plusnut (FAS0091)</u> FAS0095 SCREW, HXHD, 5/16-18UNCx2.00", G8 FAS0086 WASHER, FLAT, 5/16"ID 22200-0 PLUSNUT TOOL Place barrel of the plusnut body in sheet metal thru hole until flange is flush with sheet metal. Using a 9/16" combination wrench of plusnut tool body and a second hand wrench, ratchet, or air tool, rotate the hex bolt head CW to draw plus nut flanges up (set the plusnut). Remove hex bolt, washer, and plusnut. Inspect installation.

BAG FOR P2EQUIN20, BAG72113


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	5" x 7" 3MIL AUTOBAG	1
2	FAS0086	WASHER,FLAT USS 5/16 ZP	32
3	FAS0400	WASHER, LCK SPLIT 10mm ZN	2
4	FAS0095	Screw, Hex Hd, 5/16-18x2.00 , Grade 8	10
5	FAS0090	NUT,HEX NLK 5/16-18 ZP	18
6	FAS0082	SCREW,HH 5/16-18X1 G8 ZNY	4
7	FAS0093	Screw, Hex Hd, 5/16-18x1.25	4
8	FAS0788	SCREW,HEX HEAD, M10 x 1.5 X 50mm LONG	2
9	FAS0104	Washer, Flat, 3/8, NI ZN	2
10	59083	SPACER,RND,AL,0.531	2

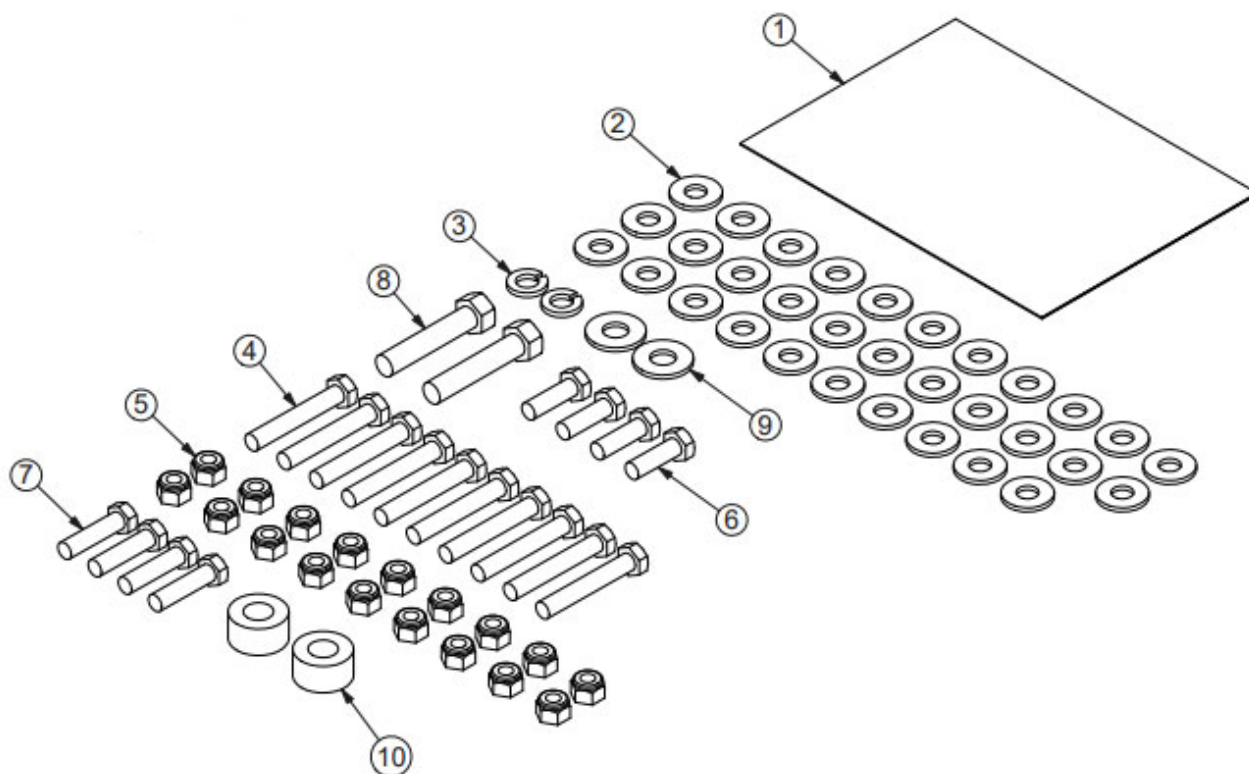


STEP 1 - Remove the trim from the seat mount on each side (outer mounts only!). Use a flat head screwdriver to pry off the inner cap, then unclip the trim. Not to be reused.

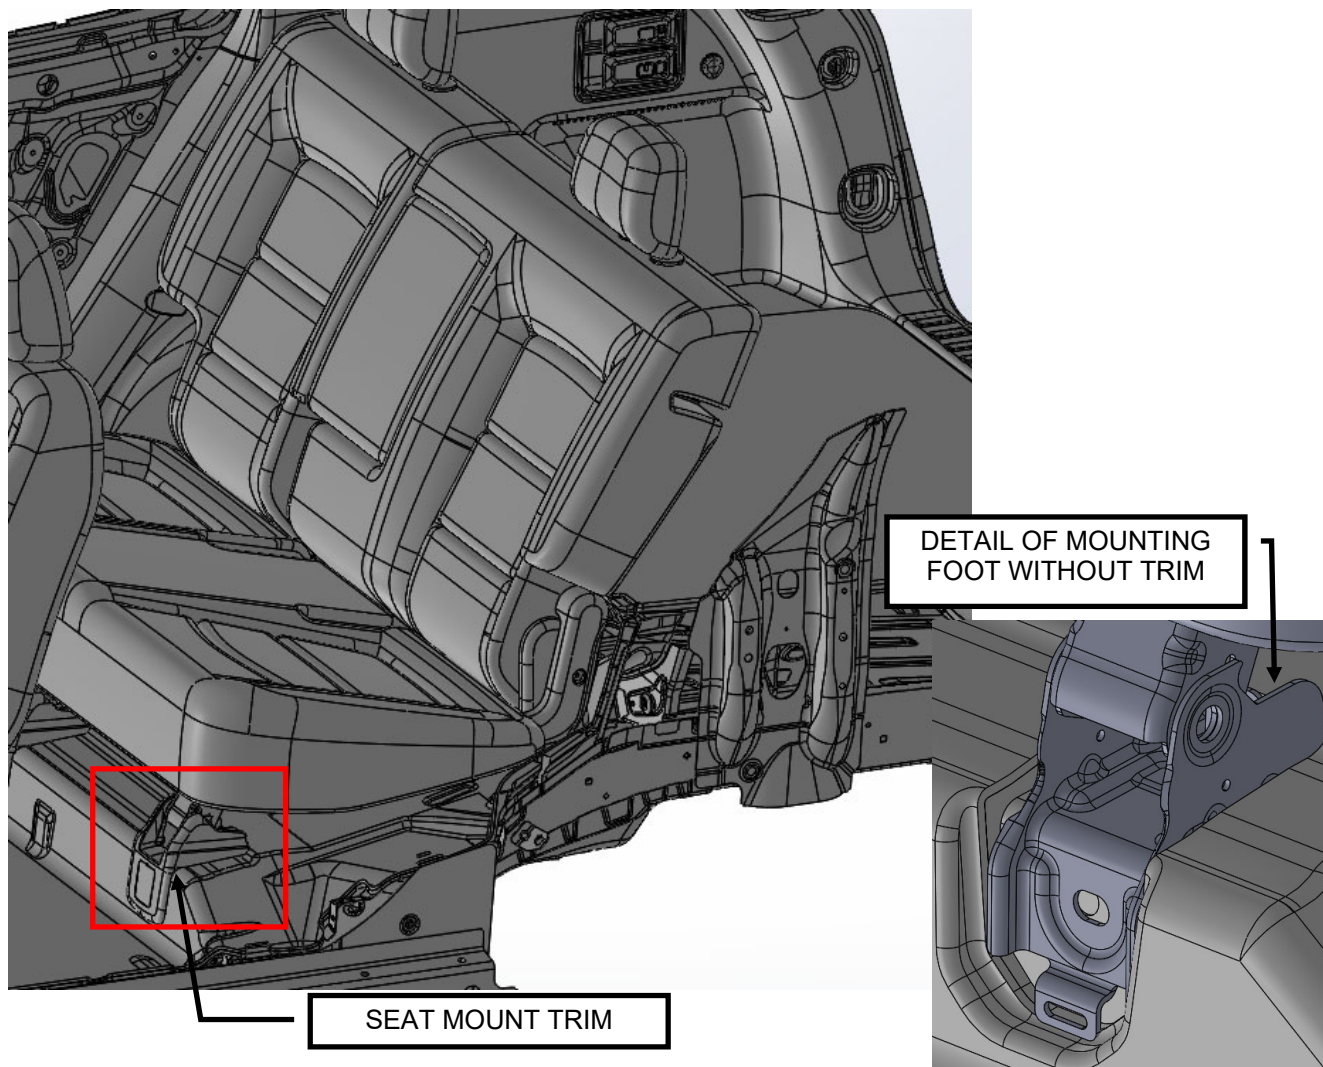


STEP 2 - Fold down rear seats and collapse headrests down as far as possible. Remove the OEM seat bolts from each side using a 15mm socket (outer mounts only!). Not to be reused.

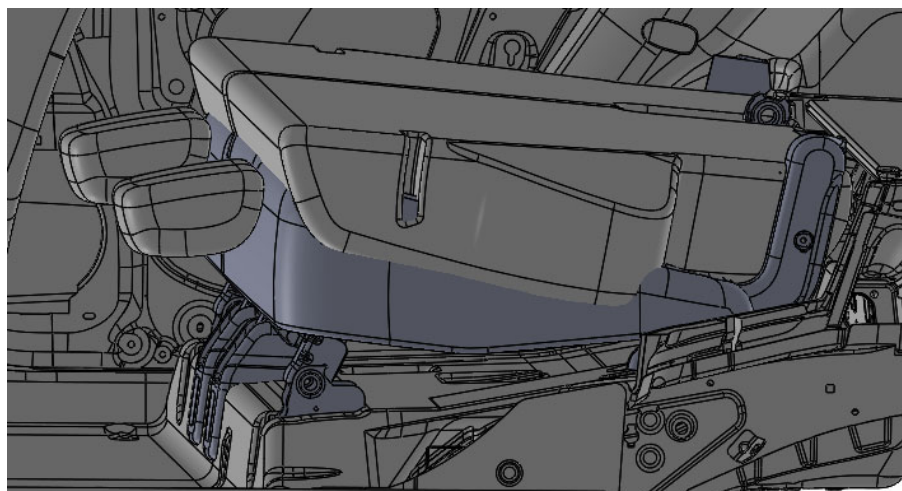



STEP 3 - Attach the mounting plate to the mounting foot on outside edge with slot in orientation shown and set in vehicle, each side.

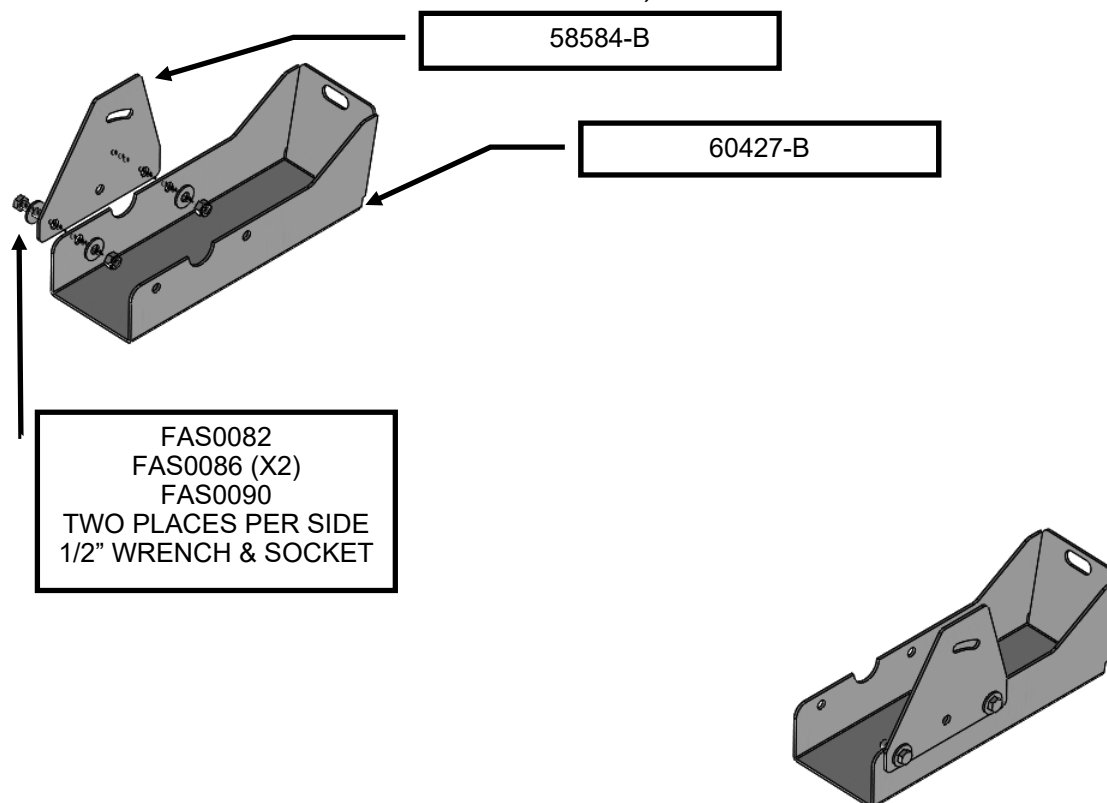



STEP 4 - Attach partition screen to the mounting feet while inside of vehicle.

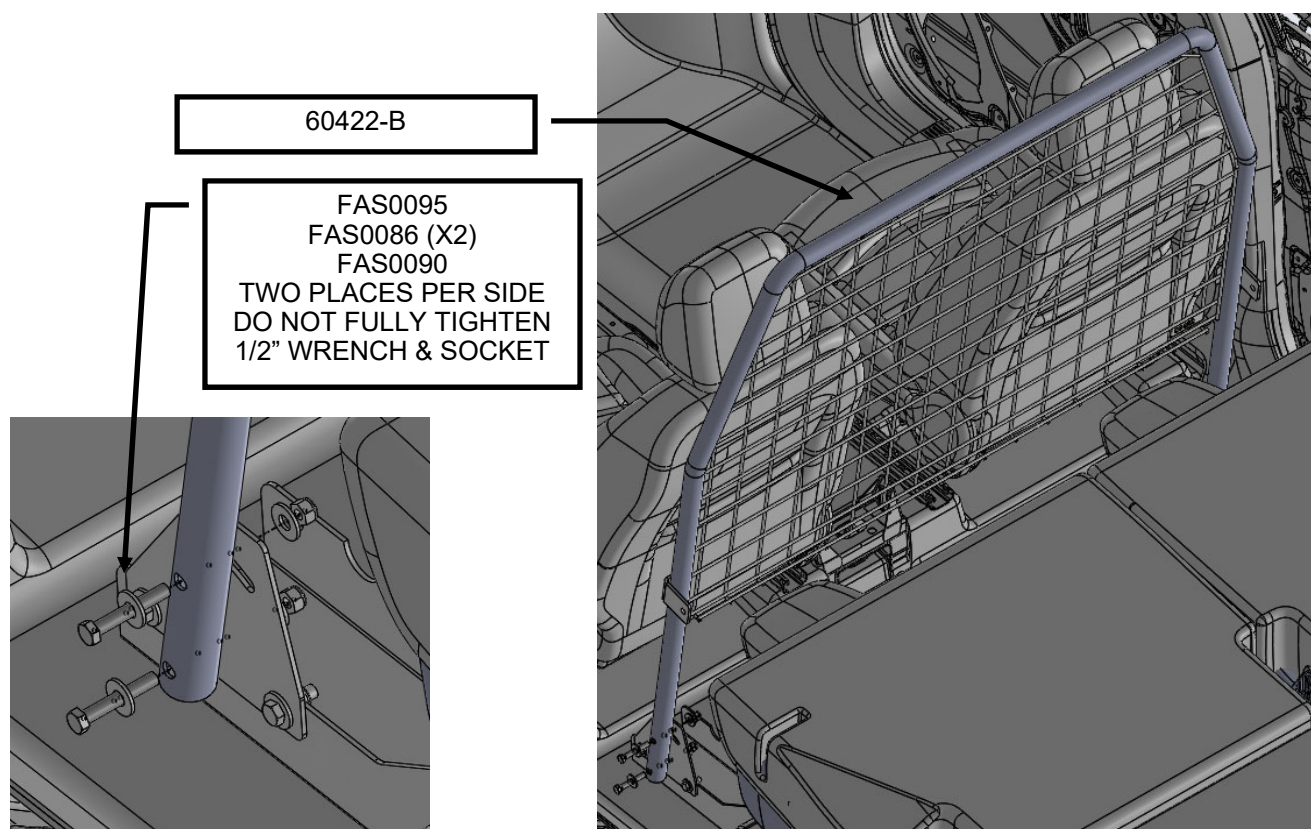

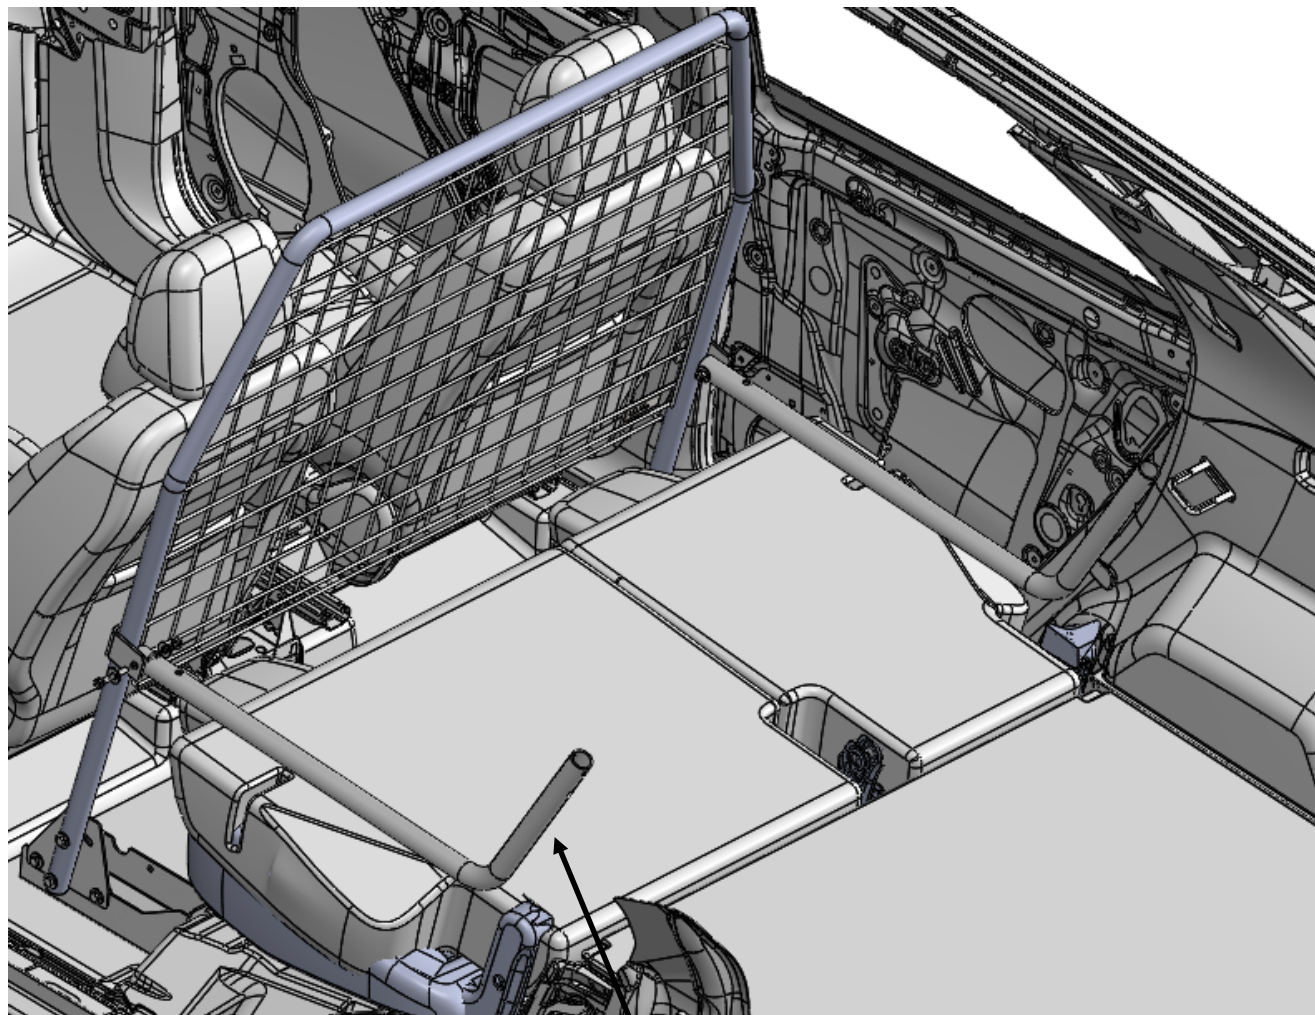STEP 5 - Attach support arms to each side of partition screen.

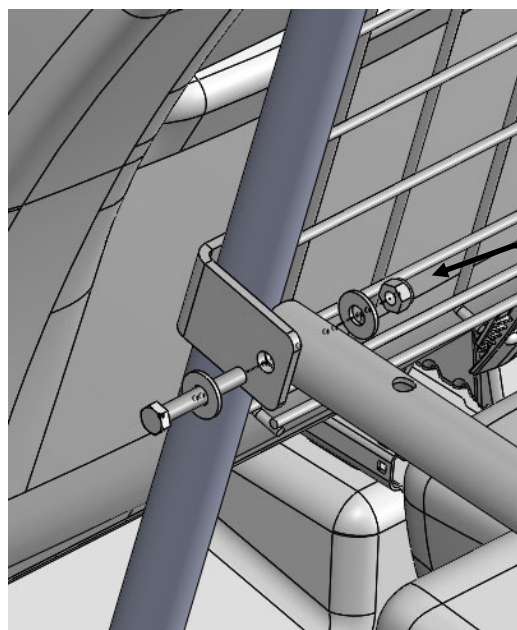
 60601-B


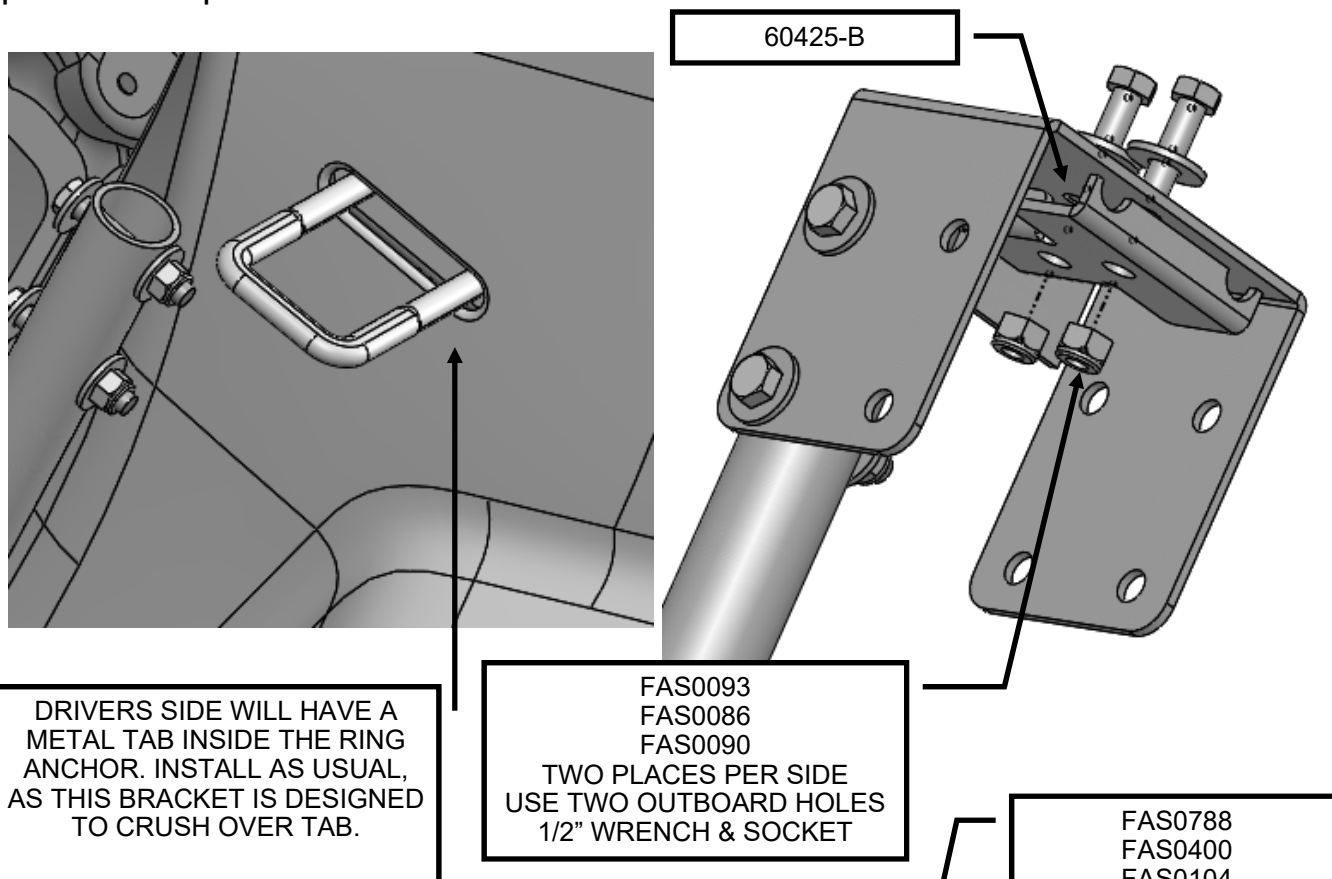
 FAS0095
 FAS0086 (X2)
 FAS0090
 ONE PLACE PER SIDE
 1/2" WRENCH & SOCKET

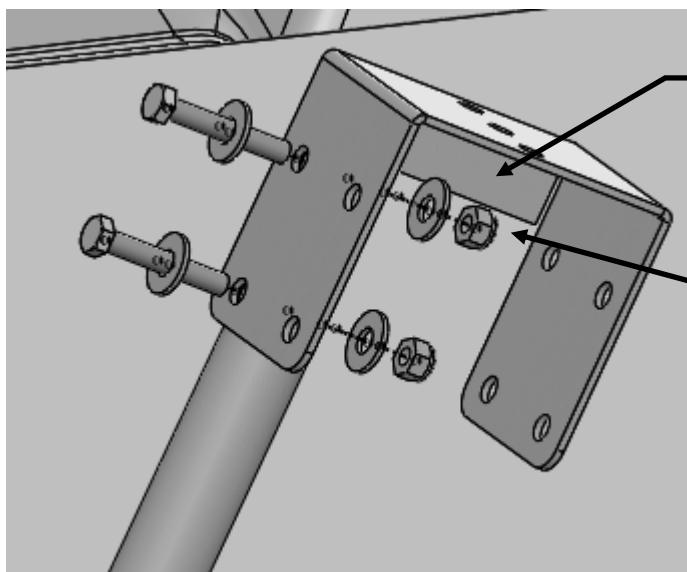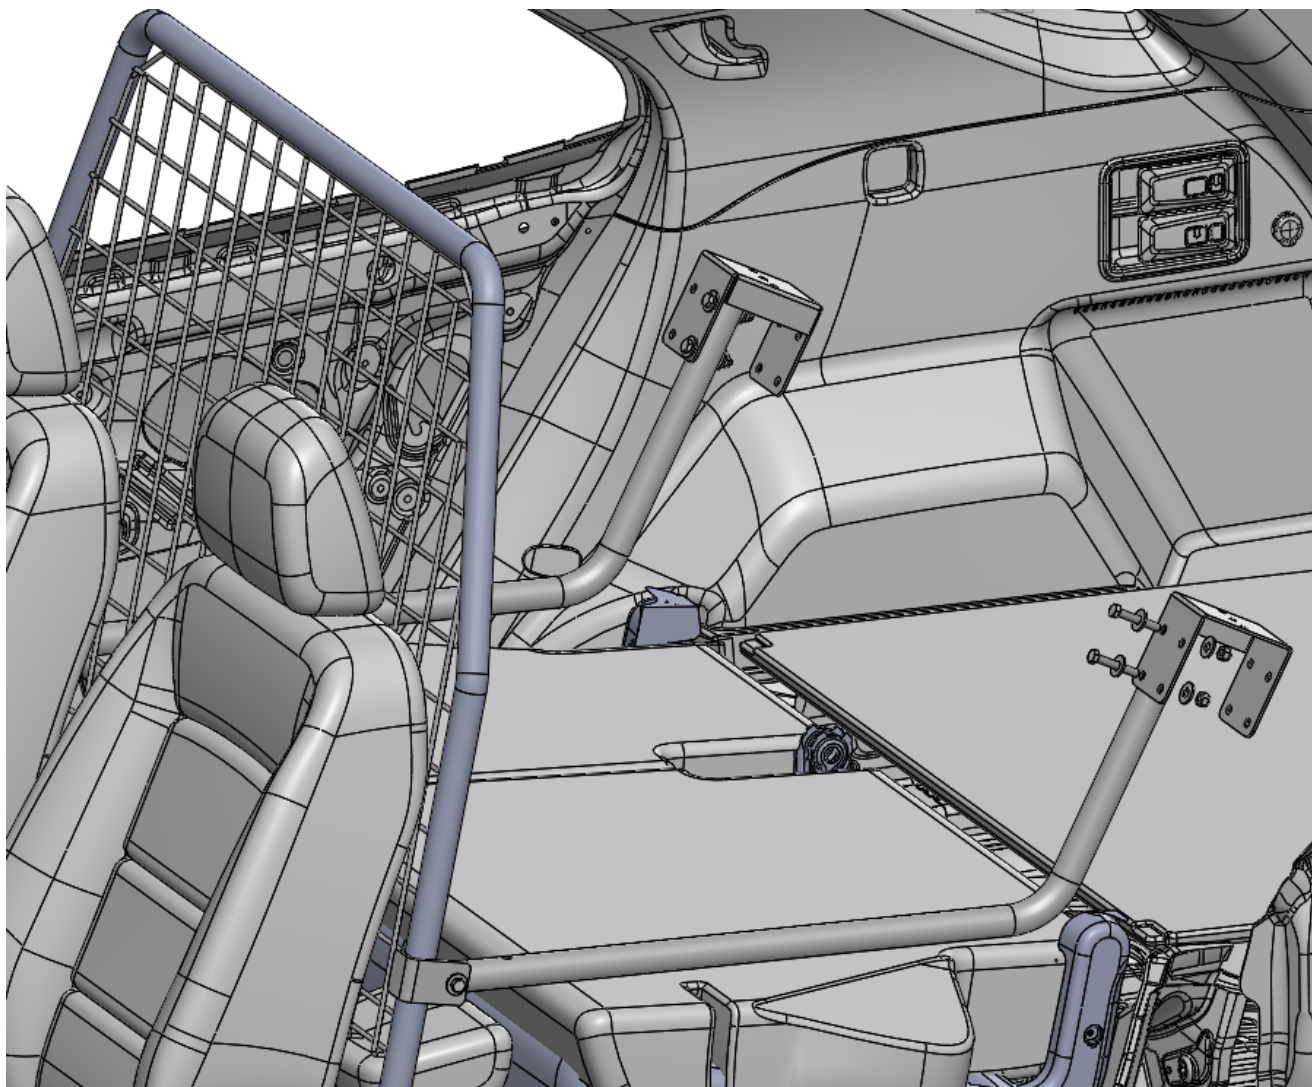STEP 6 - Attach clamp brackets to each support arm.


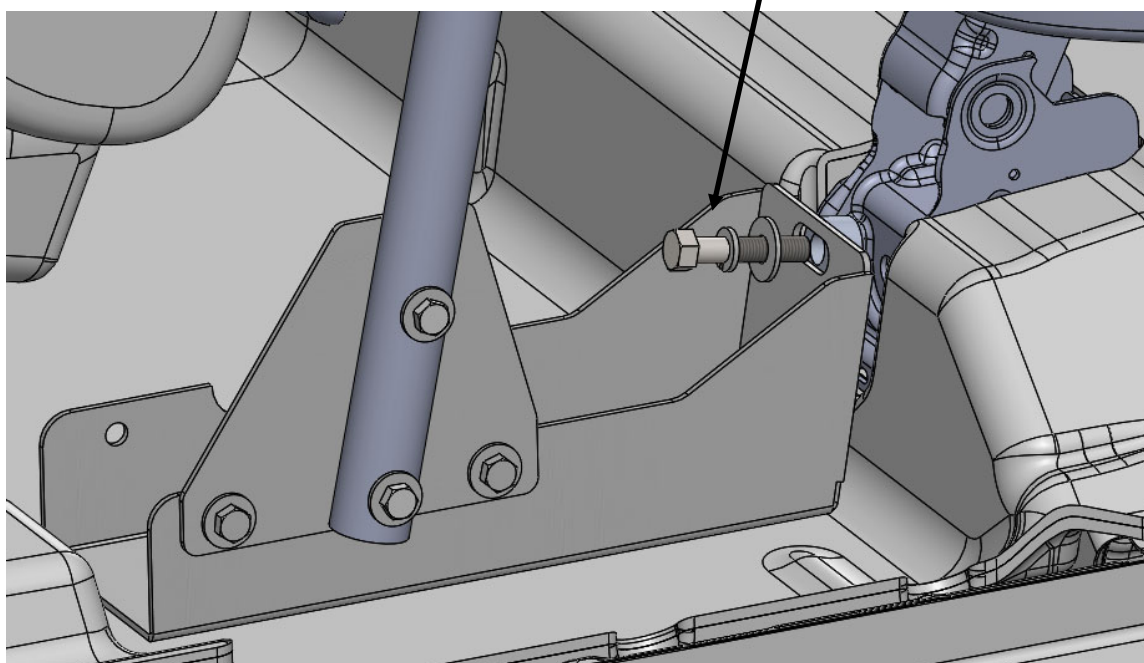
60424-B
FLANGE INBOARD

FAS0095
FAS0086 (X2)
FAS0090
TWO PLACES PER SIDE
USE TWO INBOARD HOLES
1/2" WRENCH & SOCKET

STEP 7 - Locate the rear seat back upper anchor under the mount bracket from previous step. Attach crush bracket under anchor.




STEP 8 - Fasten feet to seat anchor. Will need to move seat back up and down slightly to move seat foot into alignment. This can be tricky.




STEP 9 - Tighten fasteners from step 4.

TWO PLACES PER SIDE
1/2" WRENCH & SOCKET

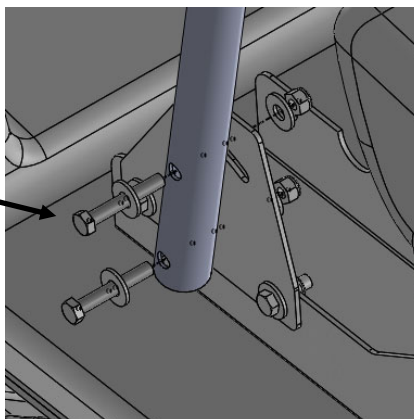

YOUR INSTALLATION IS NOW COMPLETE!

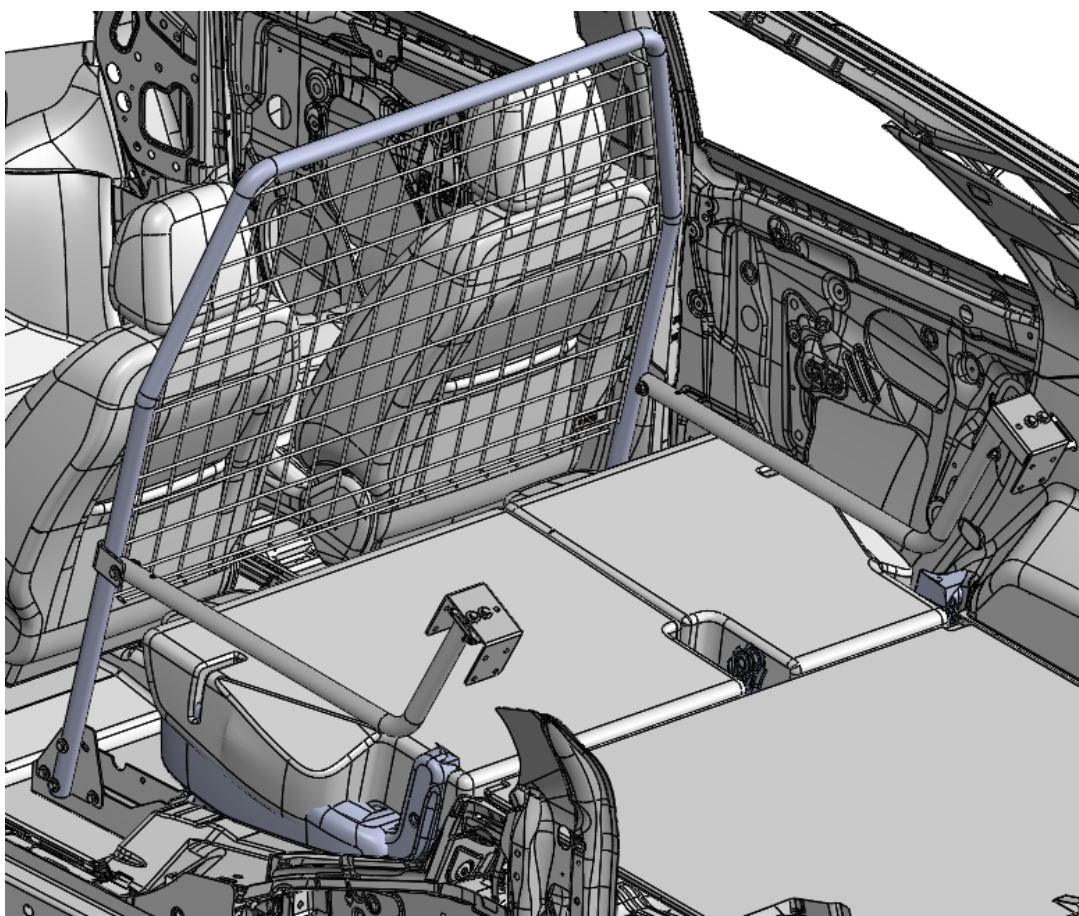

**DOUBLE CHECK ALL FASTENER LOCATIONS TO BE SURE THAT
ALL FASTENERS ARE TIGHTENED TO SPECIFICATIONS.
YOUR INSTALLATIONS IS NOW COMPLETE!
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!**