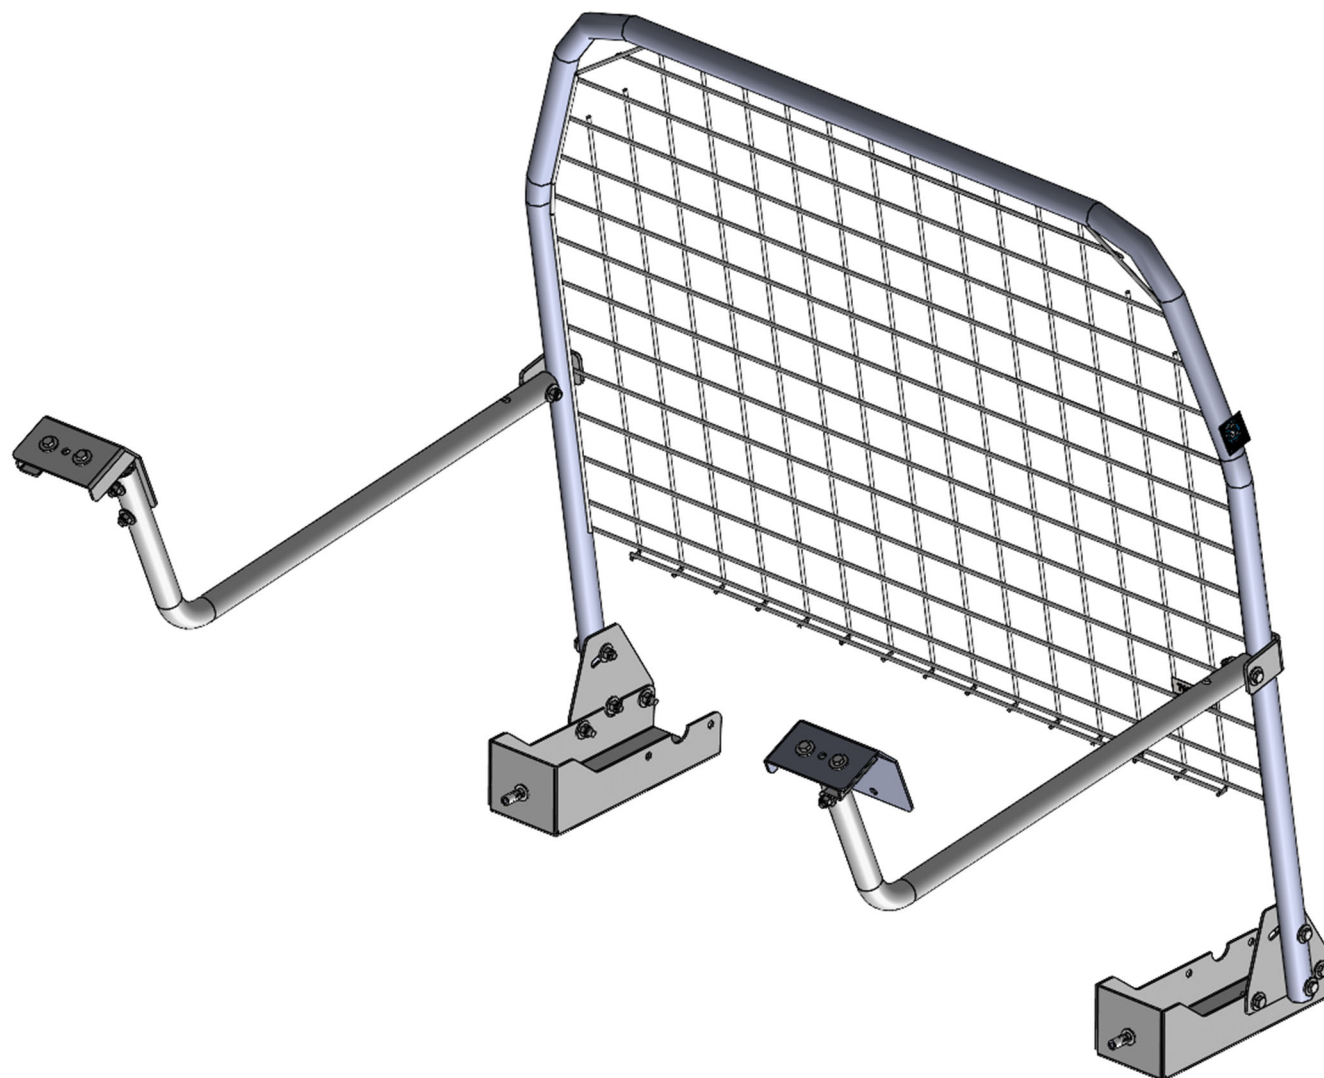




P2EQUIN25

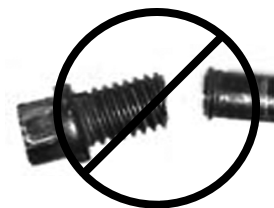
PARTITION, FIXED, EQUINOX

- PRECAUTIONS -



CAUTION

**THE USE AIR IMPACT TOOLS CAN
OVER-TORQUE FASTENERS AND
CAUSE FASTENER FAILURE!**



CAUTION

**ALL INSTALLATION HOLES SHOULD BE SEALED
WITH SILICON OR BUTYL SEALANT TO PREVENT
EXHAUST FUMES FROM ENTERING THE VEHICLE!**



DANGER

**INSPECT FOR FUEL TANK, FUEL LINES, BRAKE LINES, HIGH
VOLTAGE BATTERIES AND ELECTRICAL LINES PRIOR TO
DRILLING TO AVOID DAMAGING CRITICAL VEHICLE SYSTEMS
OR INJURY TO INSTALLER DURING INSTALLATION PROCESS!**



CAUTION

**TO AVOID DAMAGING THE VEHICLE ALWAYS
USE DRILL STOPS WHEN DRILLING ANY IN-
STALLATION HOLES!**



- IMPORTANT WARRANTY REQUIREMENTS -

1. SUBSTITUTING ADRIAN STEEL SPECIFIED FASTENERS FOR ASSEMBLY AND/OR INSTALLATION WILL VOID YOUR PRODUCT WARRANTY.
2. ALL HOLES DRILLED INTO VEHICLE SHOULD HAVE THE RAW METAL EDGES SEALED WITH A SELF-ETCHING PRIMER TO RESIST CORROSION AND POTENTIAL FASTENER POINT FAILURE.
3. ALL FASTENERS USED IN THE INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE TORQUE(S) SPECIFIED IN THESE INSTRUCTIONS.
4. THESE INSTRUCTIONS SHOULD BE KEPT WITH THE VEHICLE.

THE BASIC TOOLS NEEDED FOR MOST INSTALLATIONS



DRILL



DRILL BIT WITH
STOP



RATCHET, SOCKETS
AND/OR WRENCHES



SCREWDRIVERS



MEASURING TAPE

ADDITIONAL TOOLS MAY BE NEEDED FOR THIS INSTALLATION AND THEY WILL BE IDENTIFIED IN THE STEPS THAT FOLLOW.



ADRIAN STEEL®

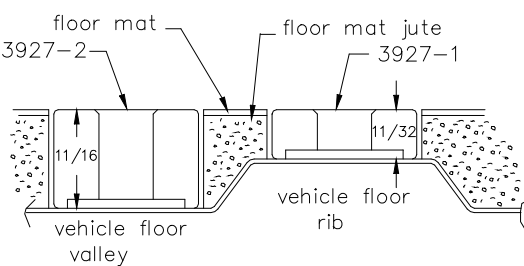
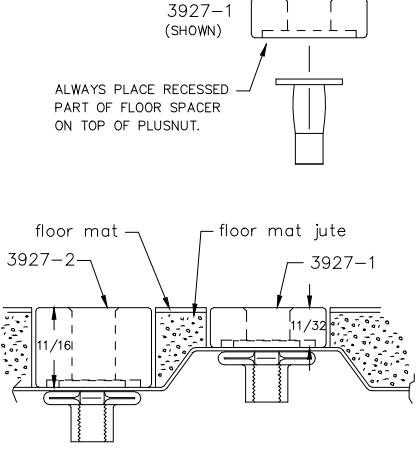
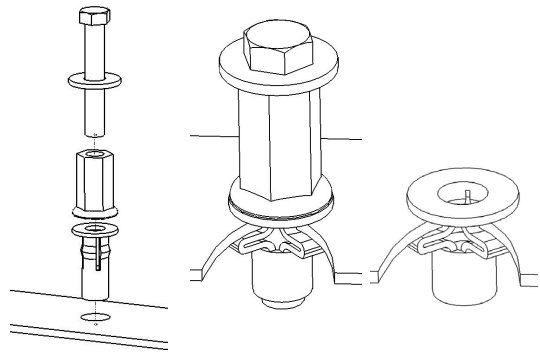
Cargo Management Solutions for Commercial Vehicles

Assembly/Installation Instructions and Owners Manual P2EQUIN25 - PARTITION, FIXED, EQUINOX



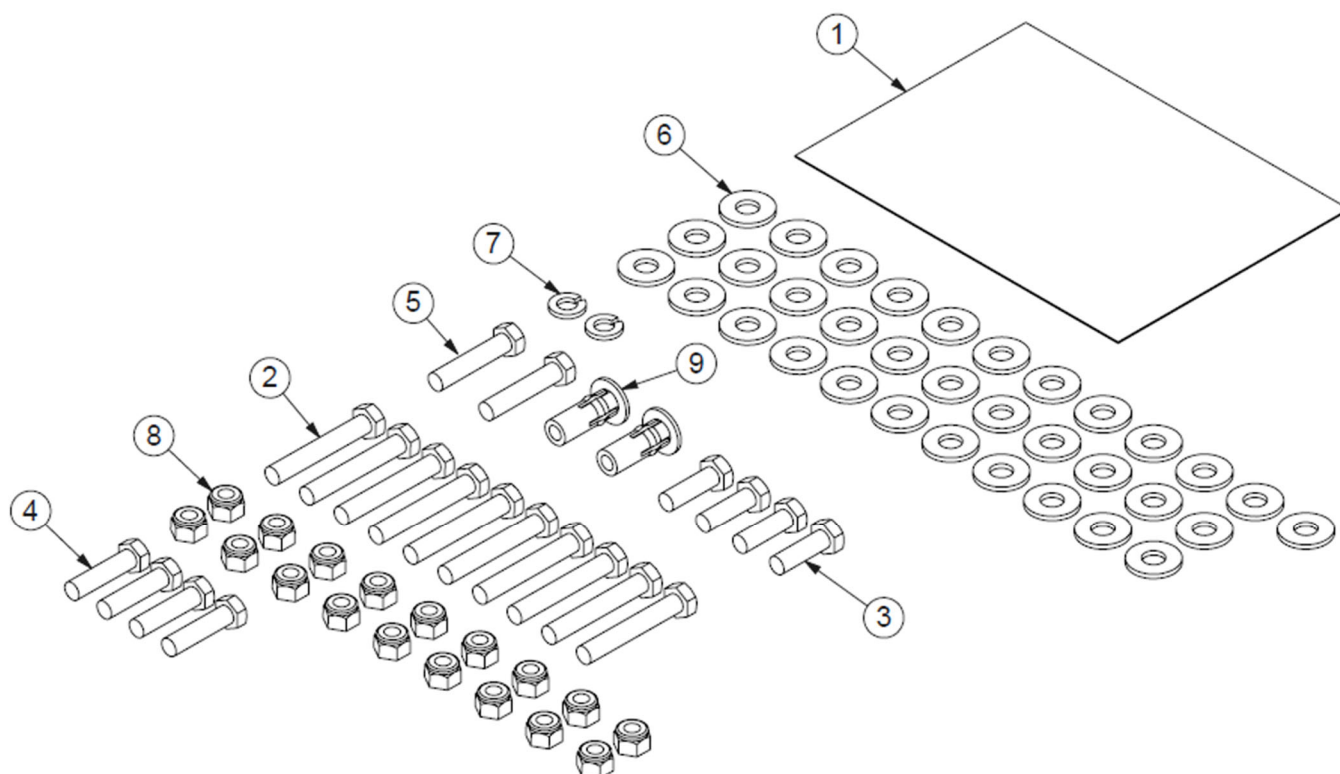
WHEN INSTALLING PLUSNUTS MAKE SURE YOU USE THE CORRECT DRILL BIT WITH A STOP!

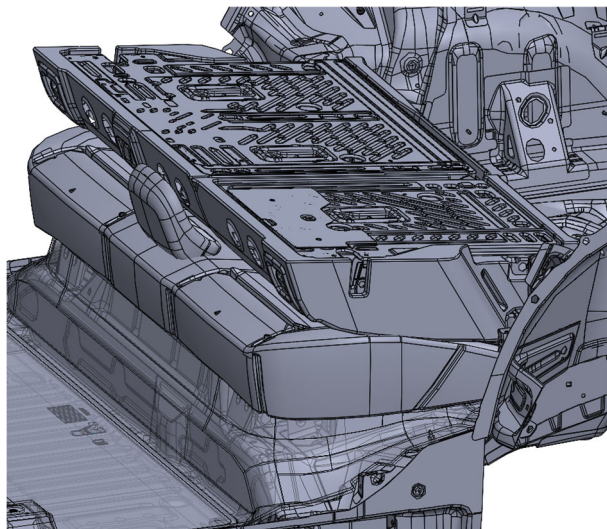
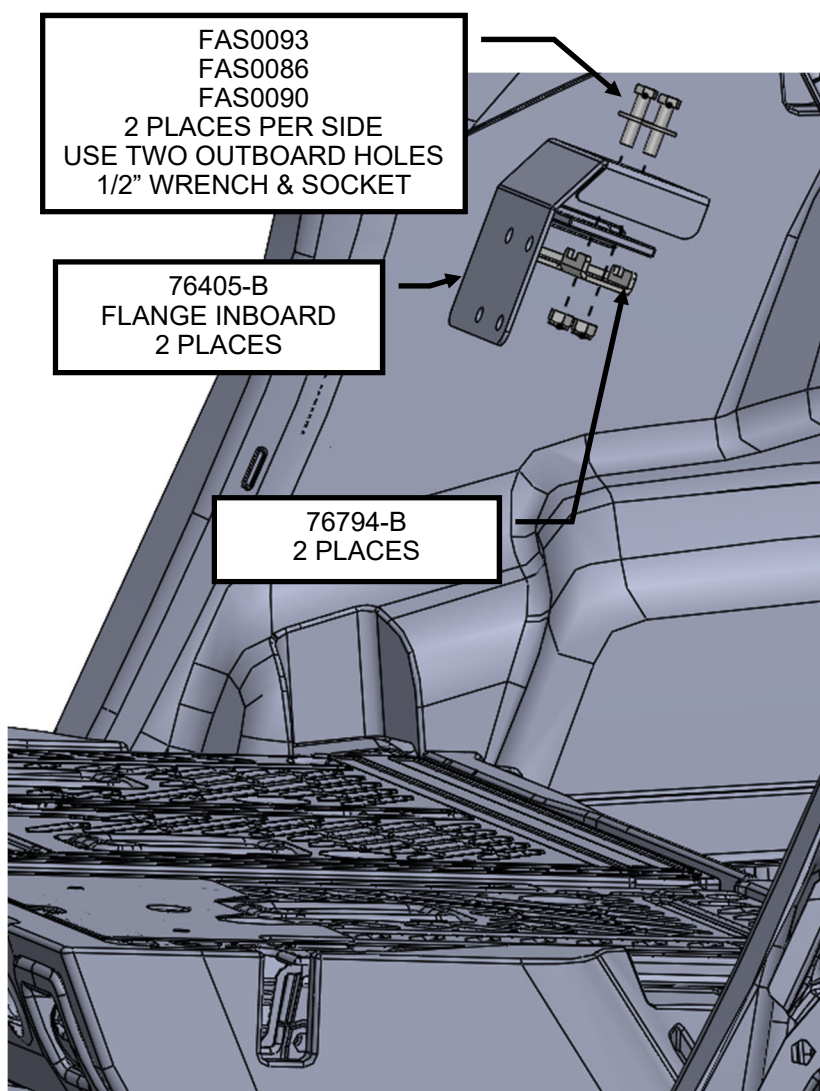
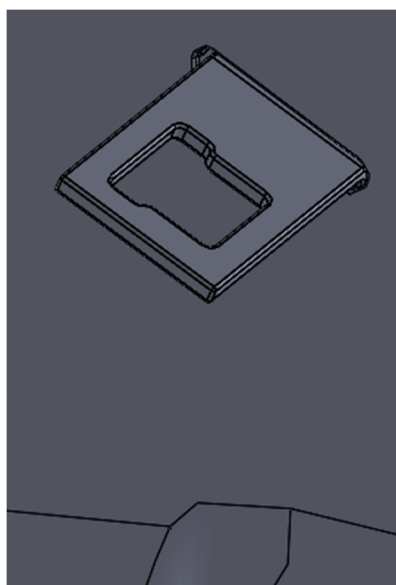
PLUSNUT SIZE	DRILL BIT SIZE
1/4-20 PLUSNUT, FAS0052	USE A 3/8" DIAMETER DRILL BIT WITH A STOP.
5/16-18 PLUSNUT, FAS0091	USE A 1/2" DIAMETER DRILL BIT WITH A STOP.
 OR  NOTE: A PLUSNUT SETTING TOOL IS REQUIRED FOR PLUSNUT INSTALLATION AND IS NOT SUPPLIED WITH THIS KIT. ORDER PLUSNUT TOOLS FROM ADRIAN STEEL (P.N. 22200-0) OR USE AN AIR POWERED PLUSNUT SETTING GUN.	
NOTE: If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting locations using a 1-3/16" carpet cutter.	
1-3/16" DIAMETER CARPET CUTTER P.N. 31183-0. 	

	Step 01 Optional Based on Vehicle	If your vehicle contains carpet or a rubber floor mat you will need to prepare the mounting locations. (if not, skip to STEP 02) Position the product to be installed into the vehicle and once you are satisfied with the mounting locations, mark the mounting locations. Using a 1-3/16" diameter carpet cutter. Select the appropriate floor spacers as shown in the illustration to the left. Set those aside for use later into the installation process. Once you have prepared the carpet/floor mat for mounting, proceed to STEP 02.
	Step 02 Prepare Mounting Locations	Using a drill and drill bit (<i>see table at top of page for correct size</i>) drill the mounting holes in the vehicle sheet metal to prepare for installing the plusnuts. If you are thru-bolting at any of the locations simply drill a hole that is 1/16" larger than the bolt size(s) for those locations. Once you have drilled the holes into the vehicle, the raw metal edges should be sealed using a self-etching primer to resist corrosion and potential fastener point failure.
	Step 03 Setting Plusnuts	Use a Air Powered Plusnut Setting Gun to "set the plusnut" or if installing manually with hand tools, assembly the following. 1/4-20UNC Plusnut (FAS0052) FAS0080 SCREW, HXHD, 1/4-20UNCx2.00", G8 FAS0067 WASHER, FLAT, 1/4"ID 22200-0 PLUSNUT TOOL 5/16-18UNC Plusnut (FAS0091) FAS0095 SCREW, HXHD, 5/16-18UNCx2.00", G8 FAS0086 WASHER, FLAT, 5/16"ID 22200-0 PLUSNUT TOOL Place barrel of the plusnut body in sheet metal thru hole until flange is flush with sheet metal. Using a 9/16" combination wrench of plusnut tool body and a second hand wrench, ratchet, or air tool, rotate the hex bolt head CW to draw plus nut flanges up (set the plusnut). Remove hex bolt, washer, and plusnut. Inspect installation.

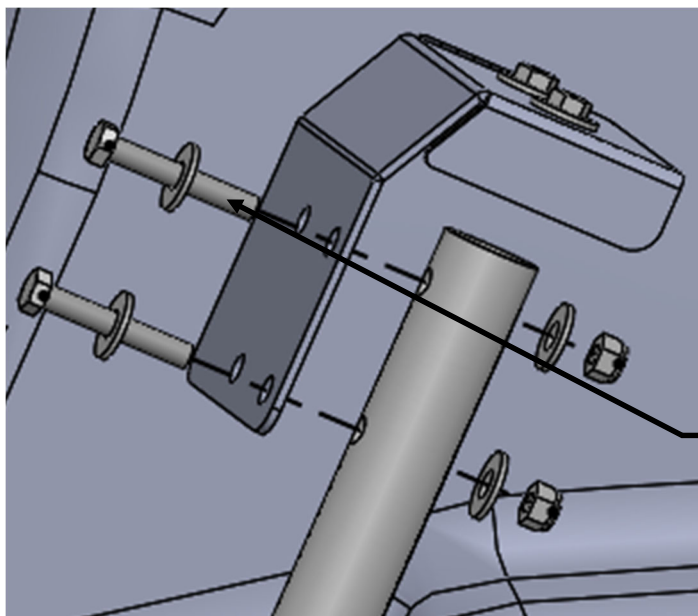
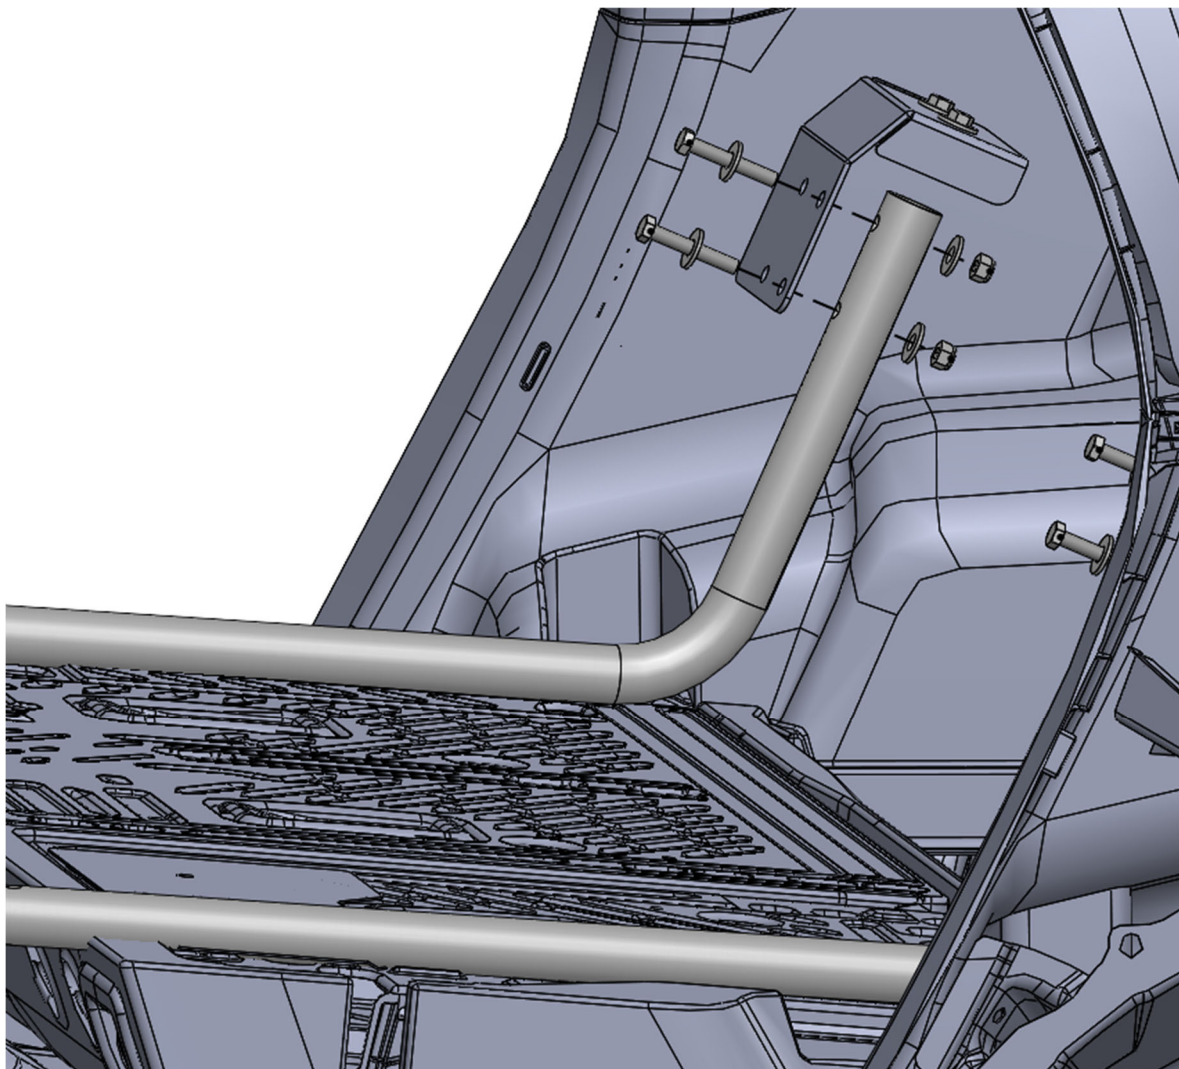
BAG FOR P2EQUIN25, BAGP2EQUIN25

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BAG0507-A	5" X 7" 3MIL AUTOBAG	1
2	FAS0095	SCREW, HEX HD, 5/16-18X2.00 , GRADE 8	10
3	FAS0082	SCREW,HH 5/16-18X1 G8 ZNY	4
4	FAS0093	SCREW, HEX HD, 5/16-18X1.25	4
5	FAS0092	SCREW, HEX HD, 5/16-18X1.50 ZN PLATE, G8	2
6	FAS0086	WASHER,FLAT USS 5/16 ZP	34
7	FAS0098	WASHER, LOCK, SPLIT, 5/16, ZINC PLATE	2
8	FAS0090	NUT,HEX NLK 5/16-18 ZP	18
9	FAS0091	PLUSNUT, 5/16	2



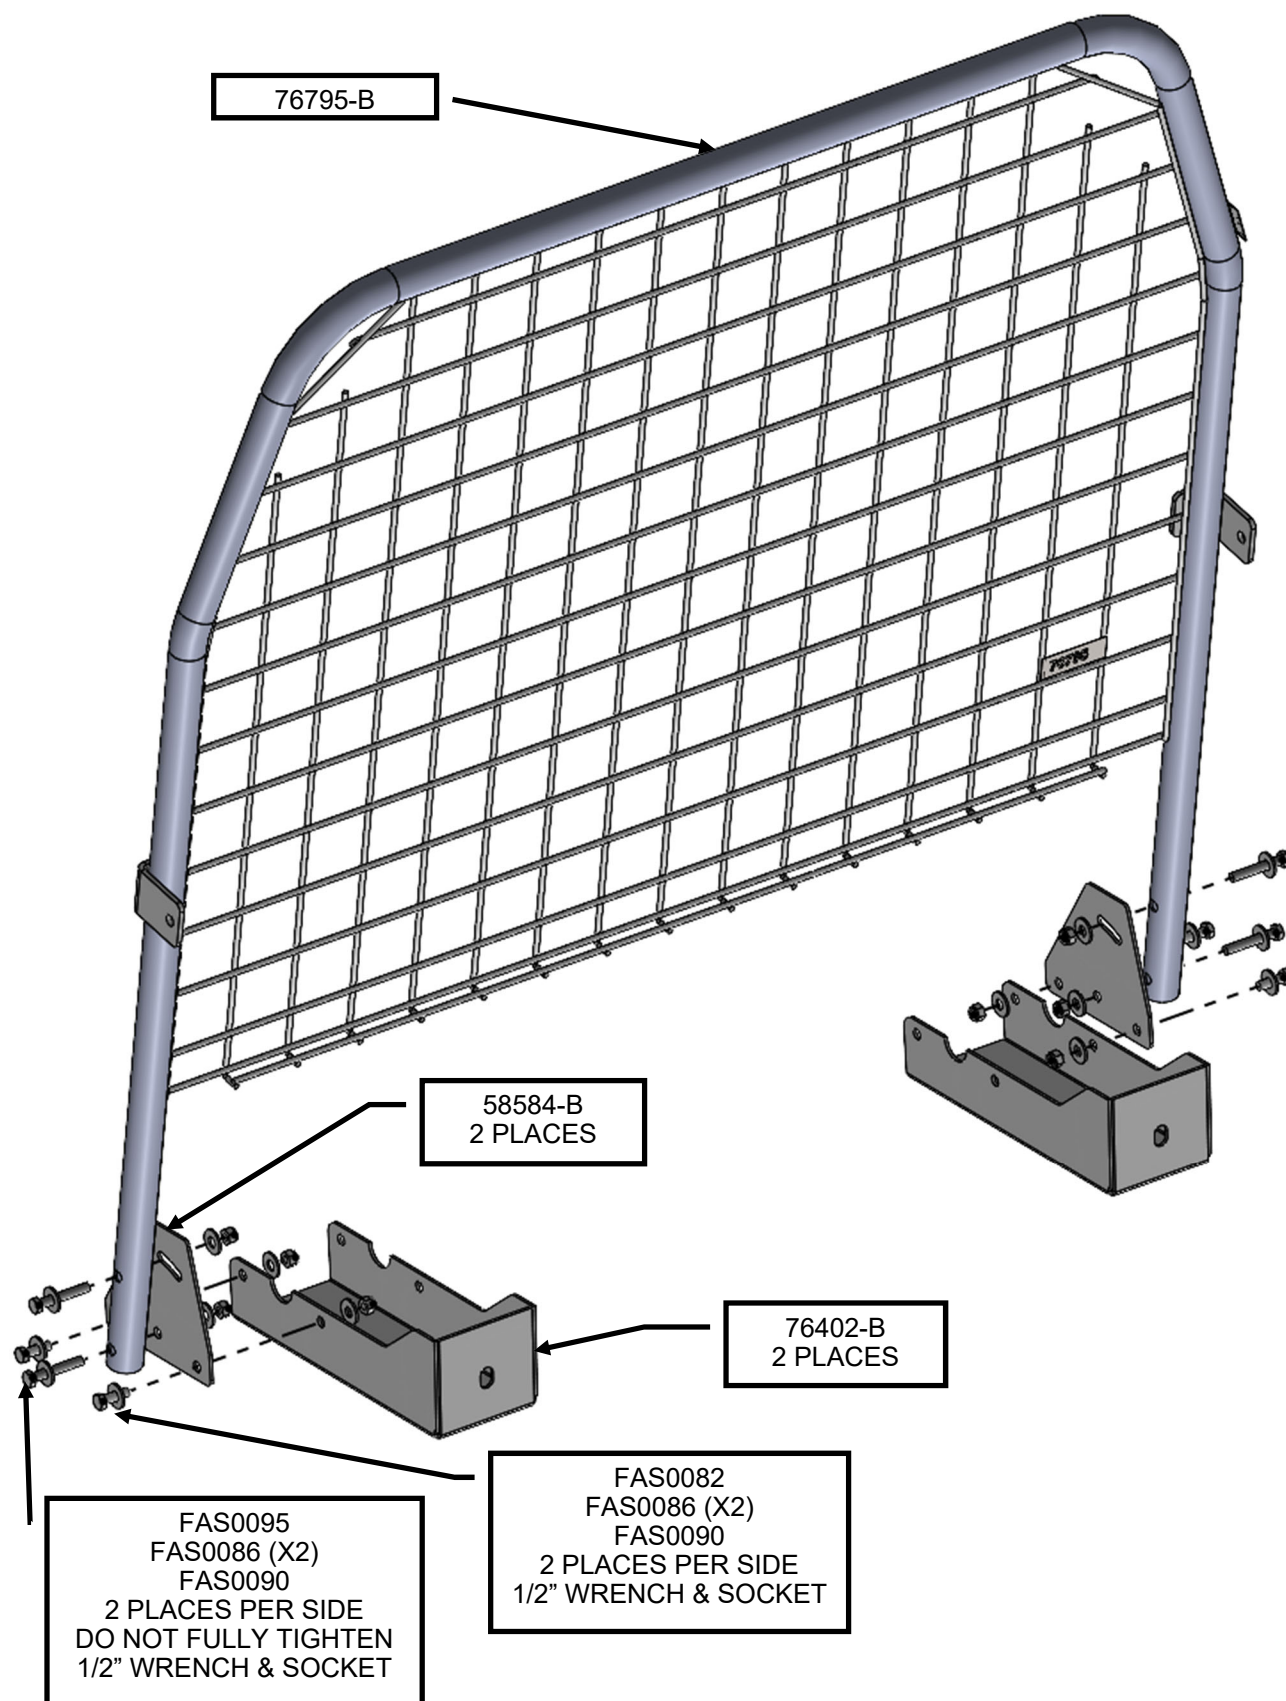
STEP 1 - Fold down the back of rear seat.

STEP 2 - Locate the rear upper seat anchors, loosely install seat clamp anchor brackets on both DS and PS.


STEP 3— Loosely install each support arm to seat clamp anchor bracket for both DS and PS.

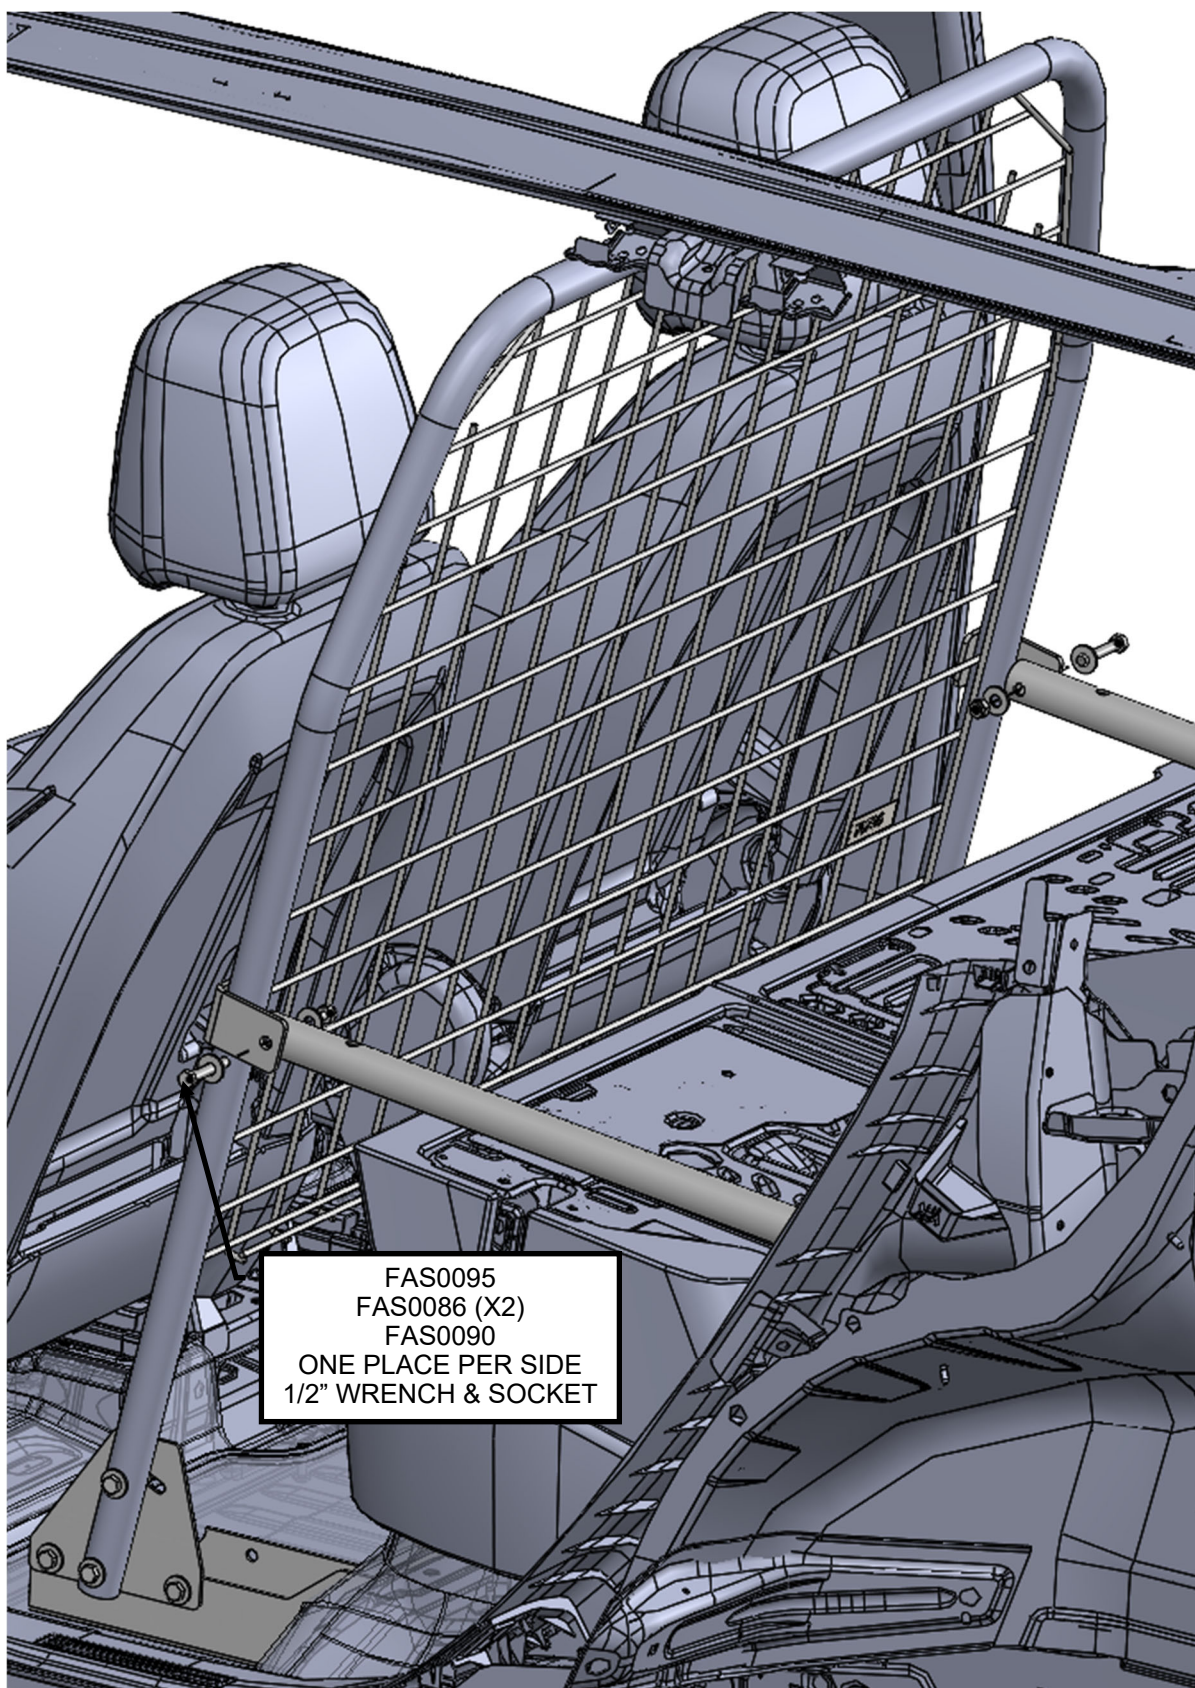


FAS0095
FAS0086 (X2)
FAS0090
2 PLACES PER SIDE
USE TWO INBOARD HOLES
1/2" WRENCH & SOCKET

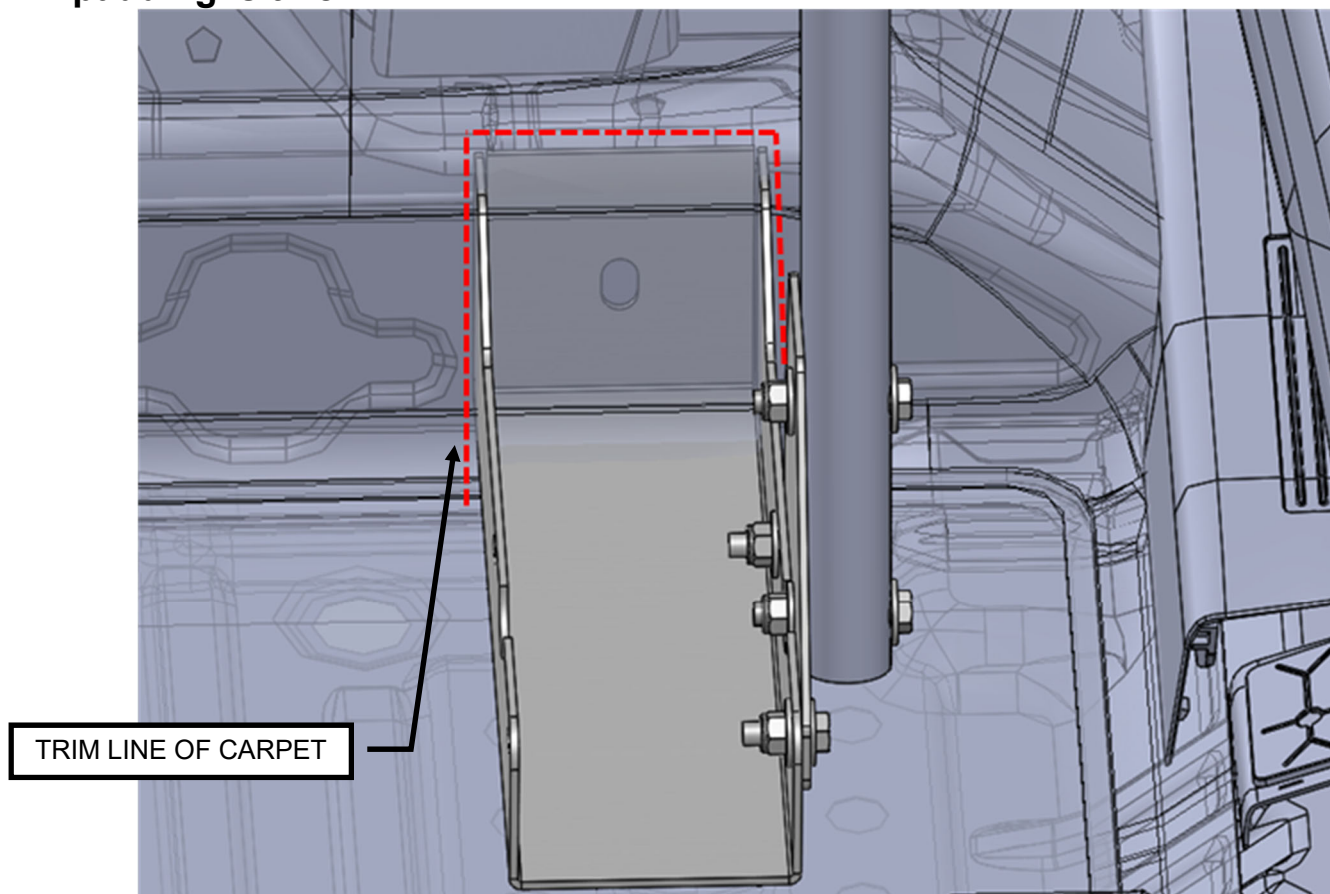
STEP 4 - Assemble partition screen to the mounting feet while outside of the vehicle. Leave all fasteners slightly loose to align to support arms.



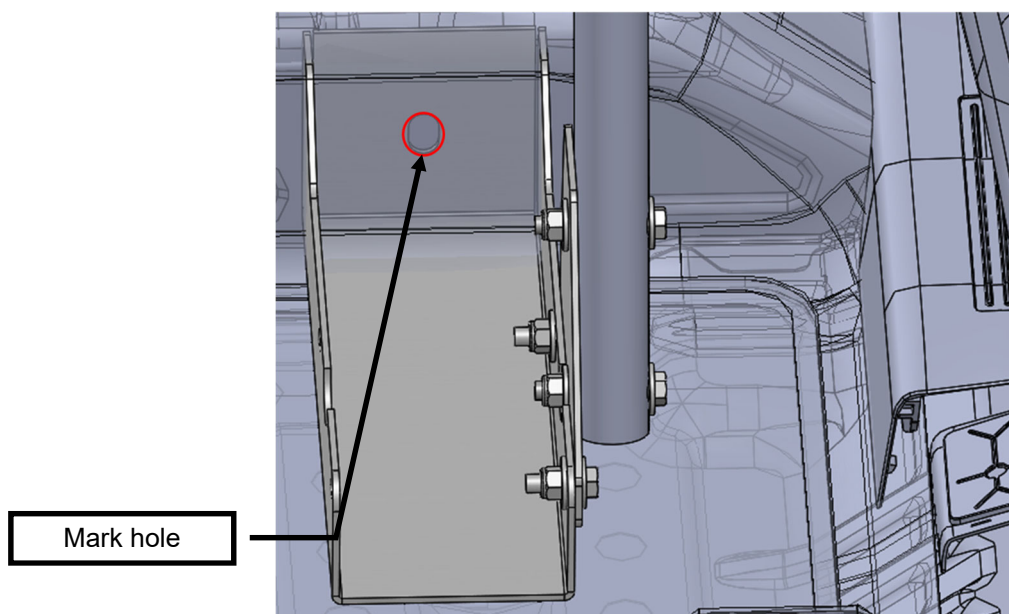
STEP 5 - Assemble the partition screen inside the vehicle, attach to the support arms. Loosely tighten fasteners.



STEP 6 - Using the mounting feet as a guide trim carpet as shown both DS and PS. **Note: A long sharp knife/razor blade is recommended carpet/padding is thick.**

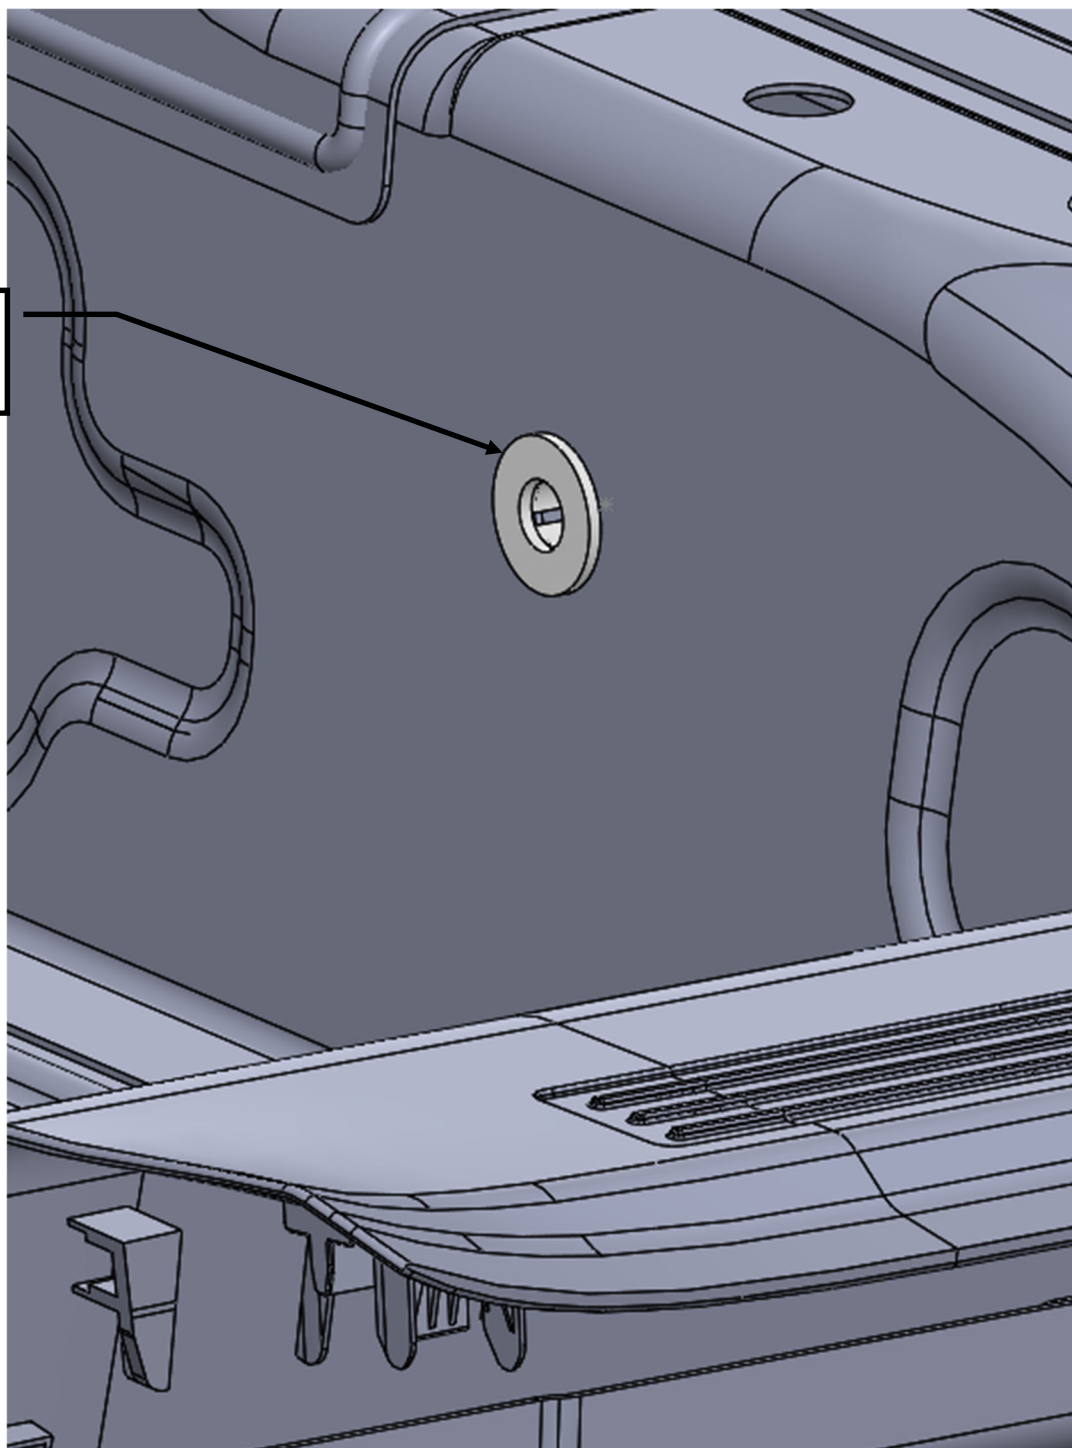


STEP 7 - Slide the mounting foot to come in contact with the seat crossmember. Mark the location of the PLUS NUT using the hole in the mounting foot as shown both DS and PS.

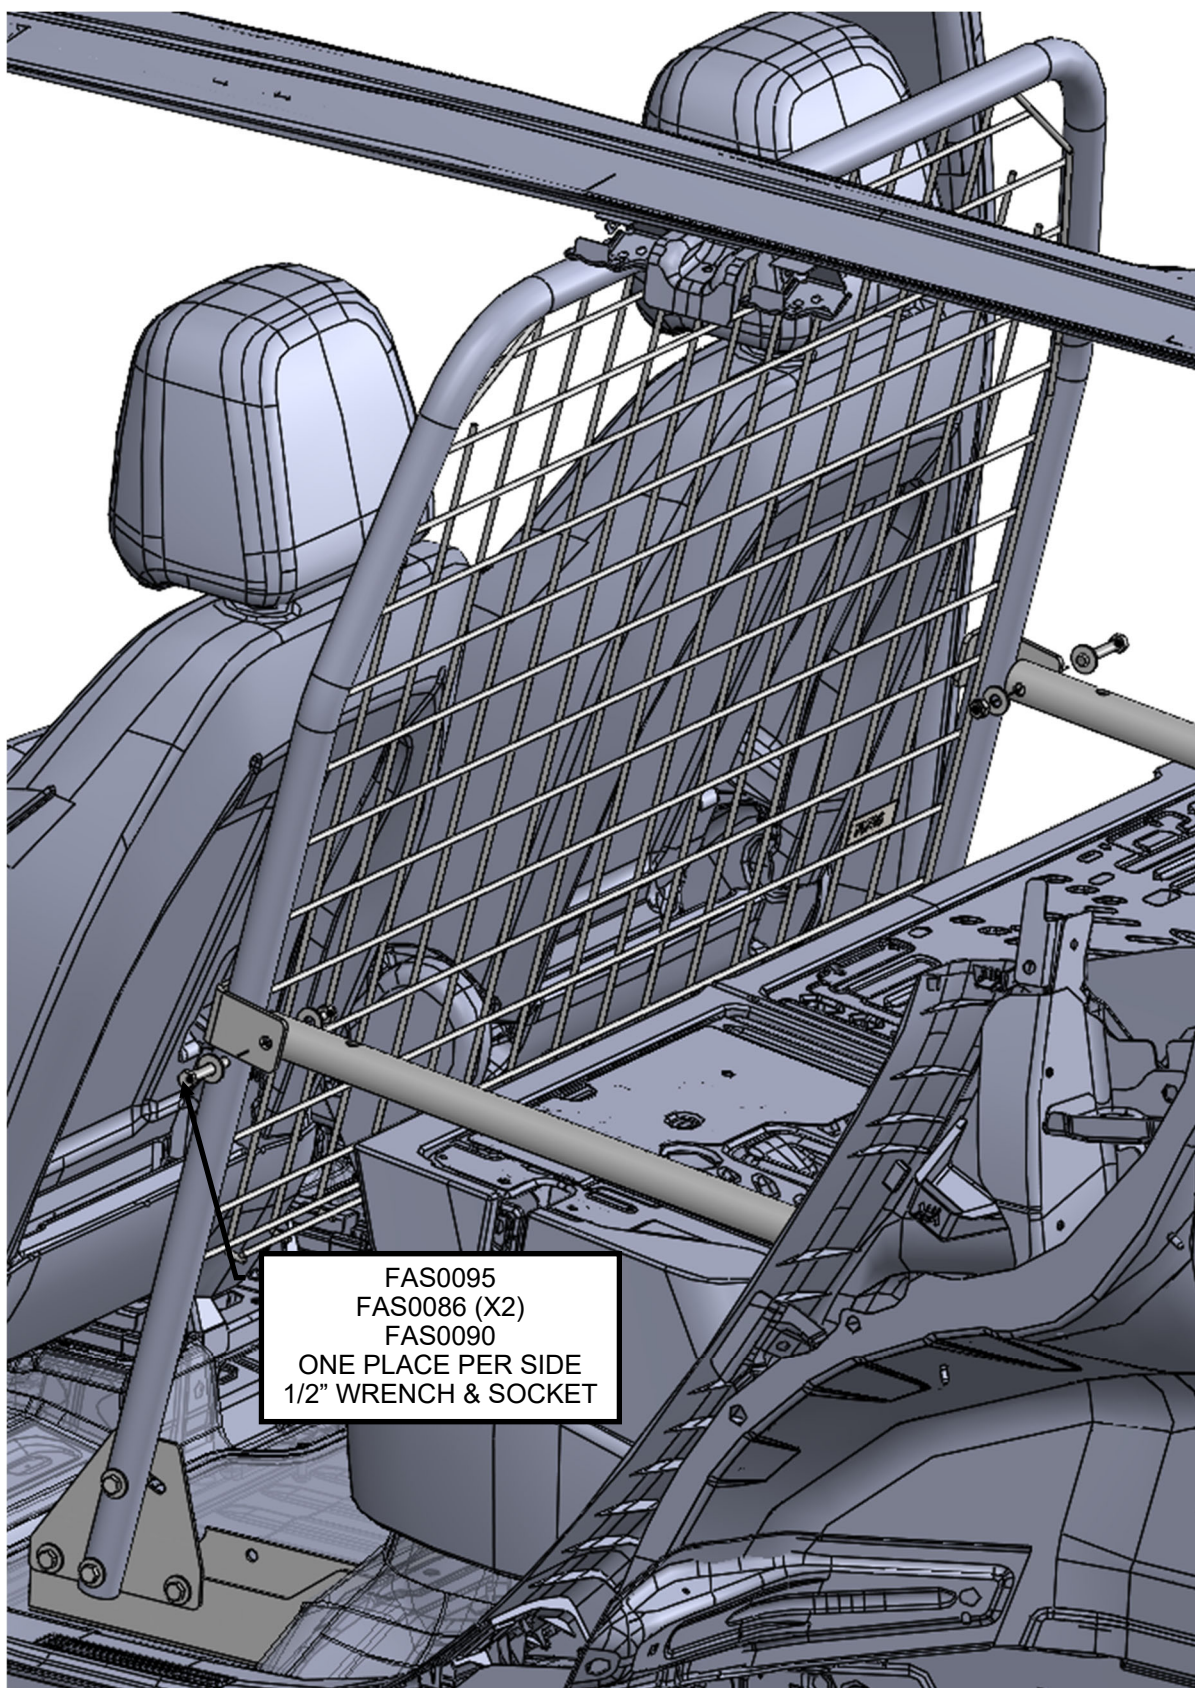


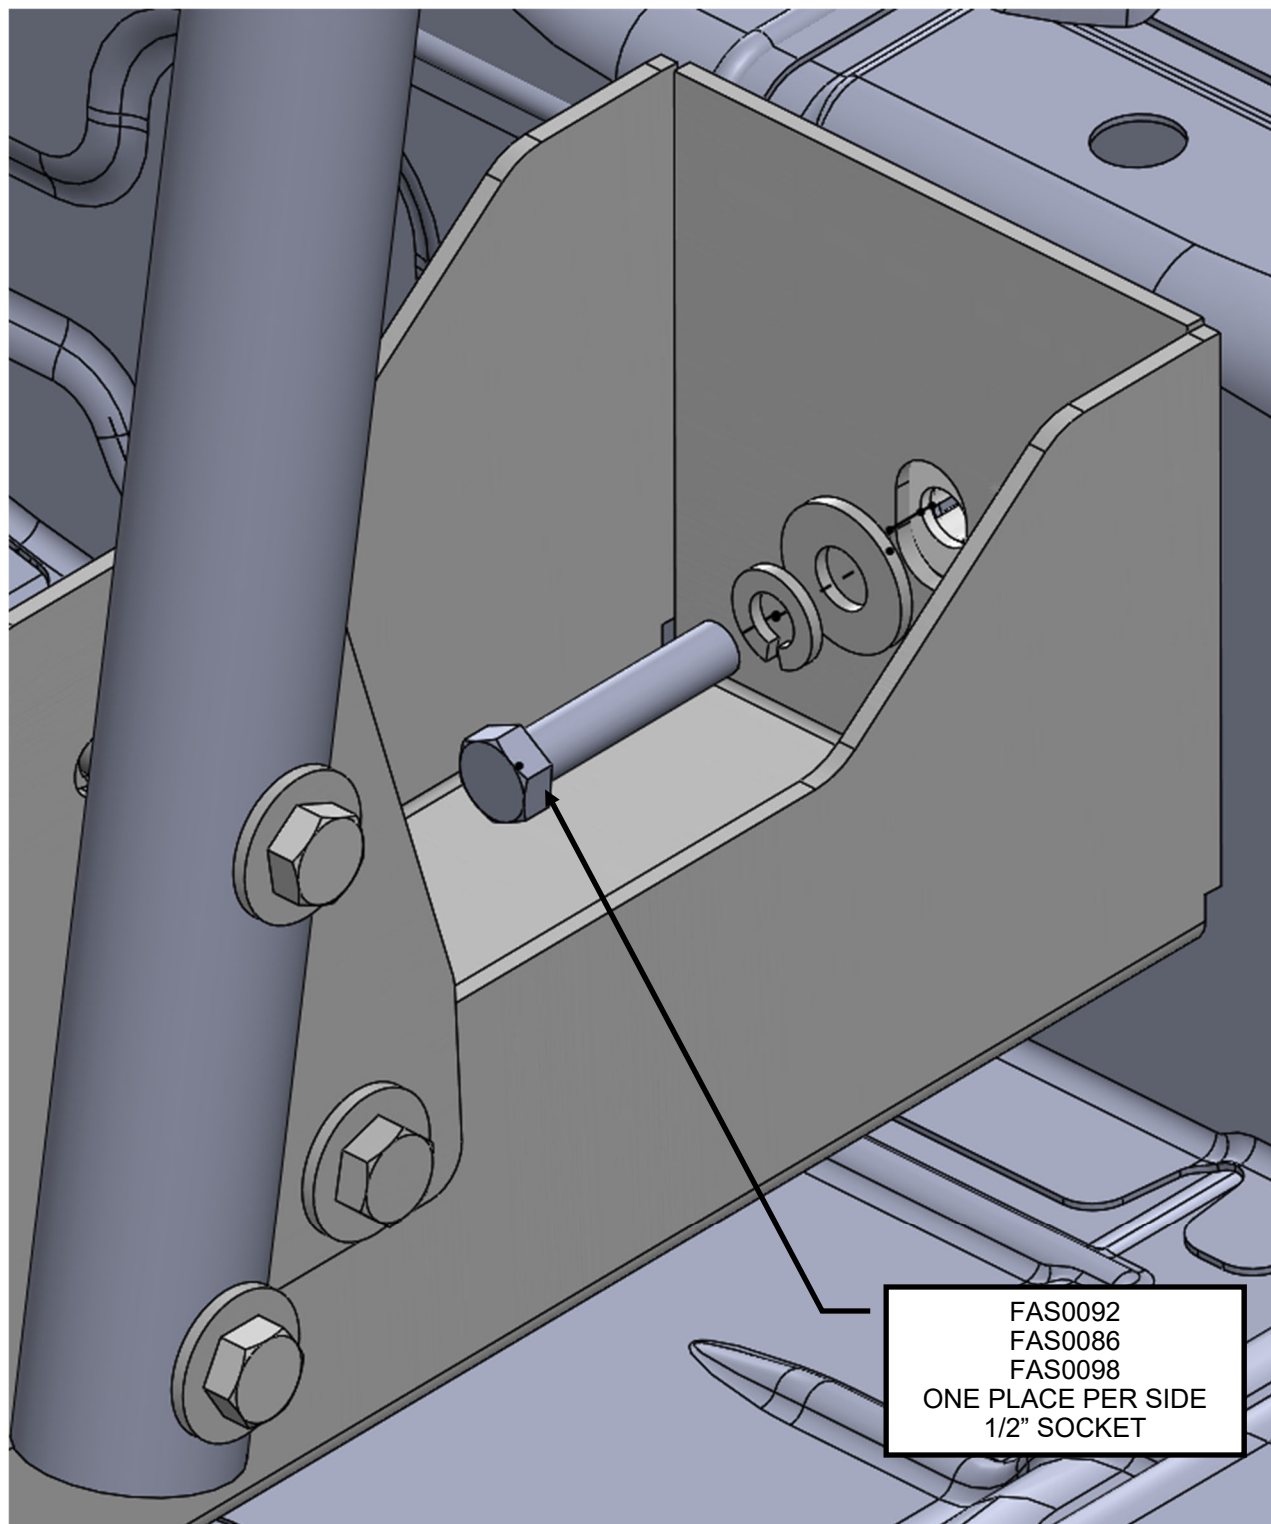
STEP 8 - Remove the partition assembly from the support arms to provide room to drill hole for plus nut. Install plus nut on both DS and PS.

FAS0091
BOTH SIDES
2 PLACES



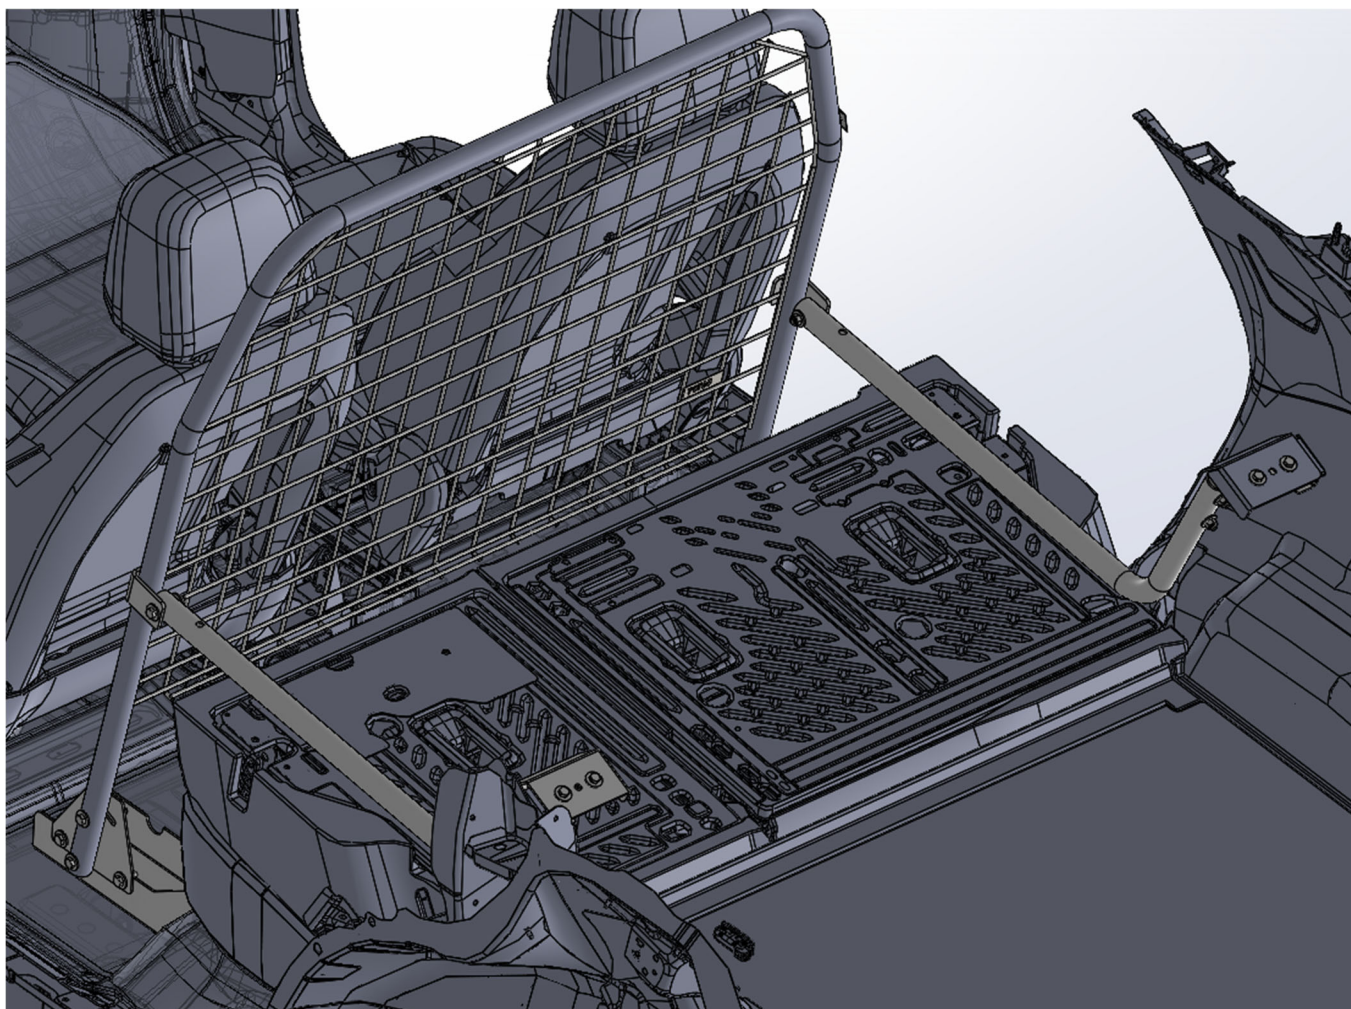
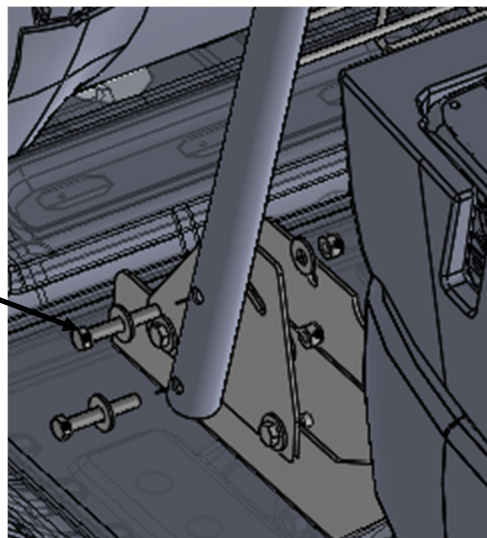
STEP 9 - Re-install the assembled partition, attach to the support arms.
Loosely tighten fasteners.



STEP 10 - Install fastener thru the partition mounting foot.

STEP 11 - Tighten fasteners from step 4.

TWO PLACES PER SIDE
1/2" WRENCH & SOCKET



**DOUBLE CHECK ALL FASTENER LOCATIONS TO BE SURE THAT
ALL FASTENERS ARE FULLY TIGHTENED.
YOUR INSTALLTIONS IS NOW COMPLETE!
STOW THIS COPY IN THE VEHICLE FOR FUTURE REFERENCES!**