



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

P2 LIGHTNING/F150, SHELF ONLY

PRODUCT WEIGHT

18.96 LBS

WIDTH X DEPTH X HEIGHT


41.75" W X 17" D

CAPACITY

N/A

COLOR

BLACK

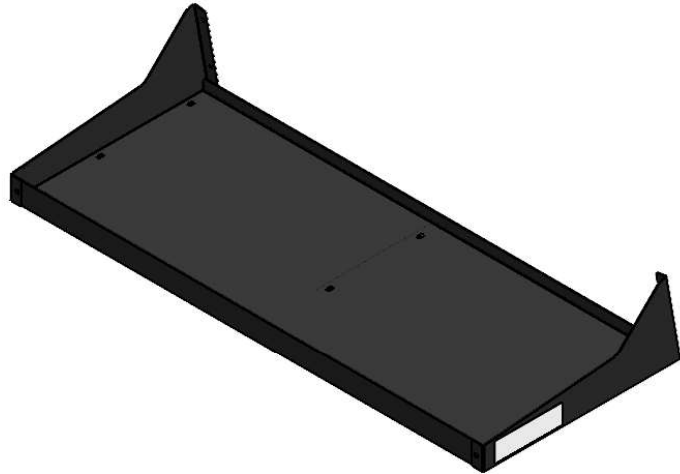

CATALOG NUMBER


P2F150SHELF

PRODUCT FEATURES

This shelf is designed to mount to the P2LIGHTNING22 and P2F150CREW22 partitions, to maximize space and organization in the Ford Lightning. Keeping tools and gear within arms reach. Helping to reduce clutter on the floor and securing loose items.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.

INSTR. NUMBER : 74838 PART NUMBER : 74836 PART DESC. : P2LIGHTNING22,SHELF KIT	PG: 1	REV: A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
			1	74837-B	P2LIGHTNING22,SHELF, BLACK	1
			2	68122-B	P2MAV22, DS SHELF ARM, BLK	1
			3	68123-B	P2MAV22, PS SHELF ARM, BLK	1
			4	68124-B	P2MAV22, SHELF SUPPORT, BLACK	1
			5	BAG73668	BAG FOR TOPPER TBOX ACC.	1
			6	74838	ASM INS FOR 74836	1

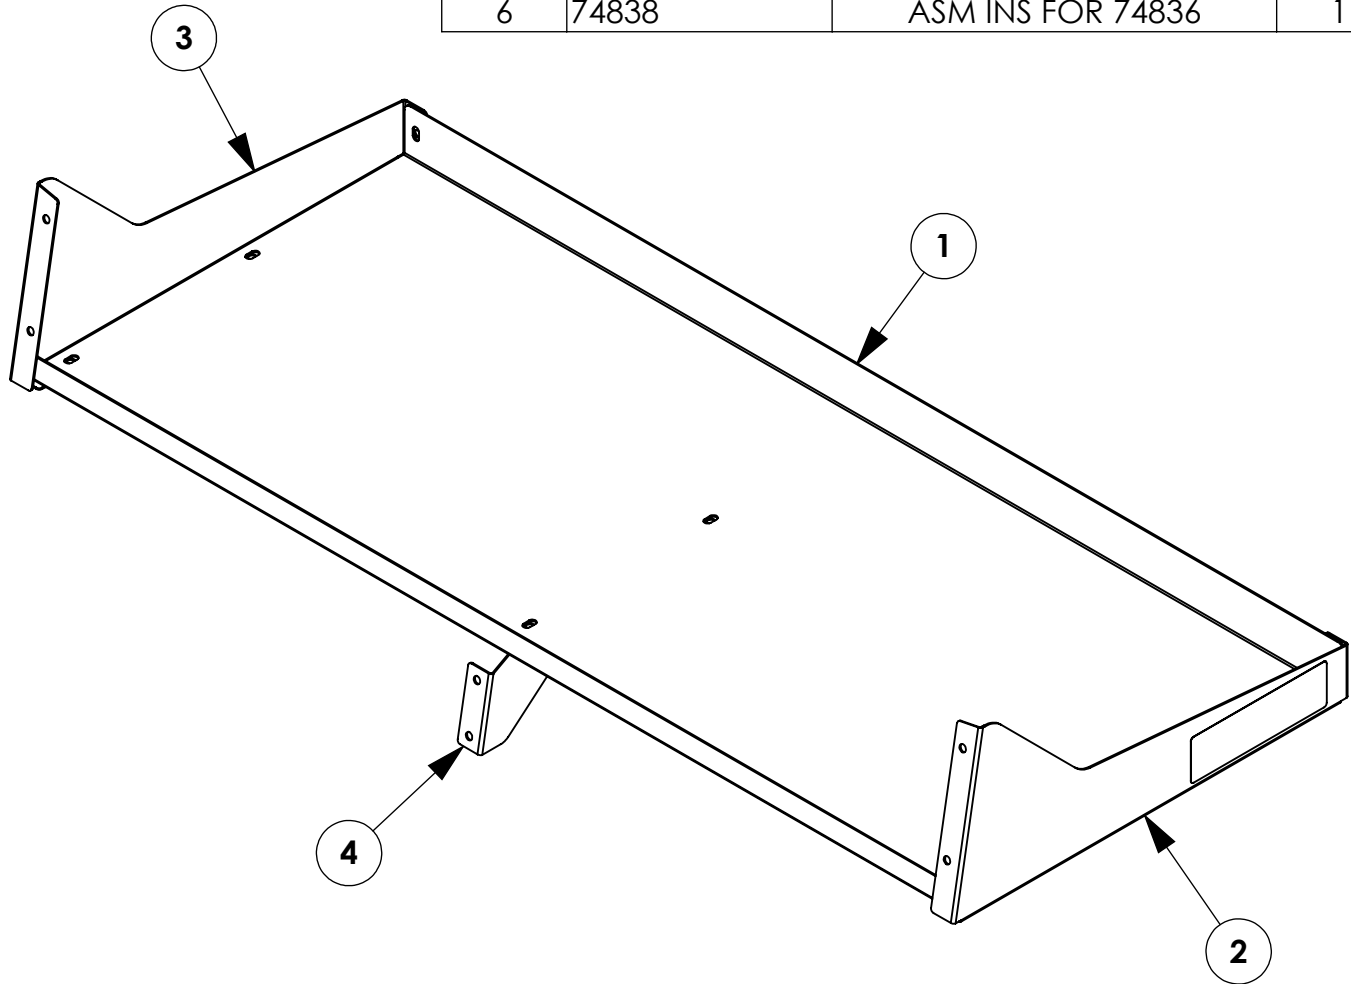

TOOLS NEEDED:

- PHILLIPS #3 BIT
- 7/16" WRENCH
- IMPACT DRIVER

ITEM #5 AND #6 ARE HIDDEN

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

BAG REFERENCE: BAG73668



FAS0062
SCREW,THP
1/4-20X.75 G5ZP
QTY: 14




FAS0055
NUT,HEX NLK FLG
1/4-20 ZP
QTY: 14

INTENTIONALLY LEFT BLANK


STEP 1 - ASSEMBLE SHELF UNIT

Step 1.1
FULLY TIGHTEN
FAS0062 AND
FAS0055
(08 PLACES)
PHILLIPS BIT
7/16" WRENCH

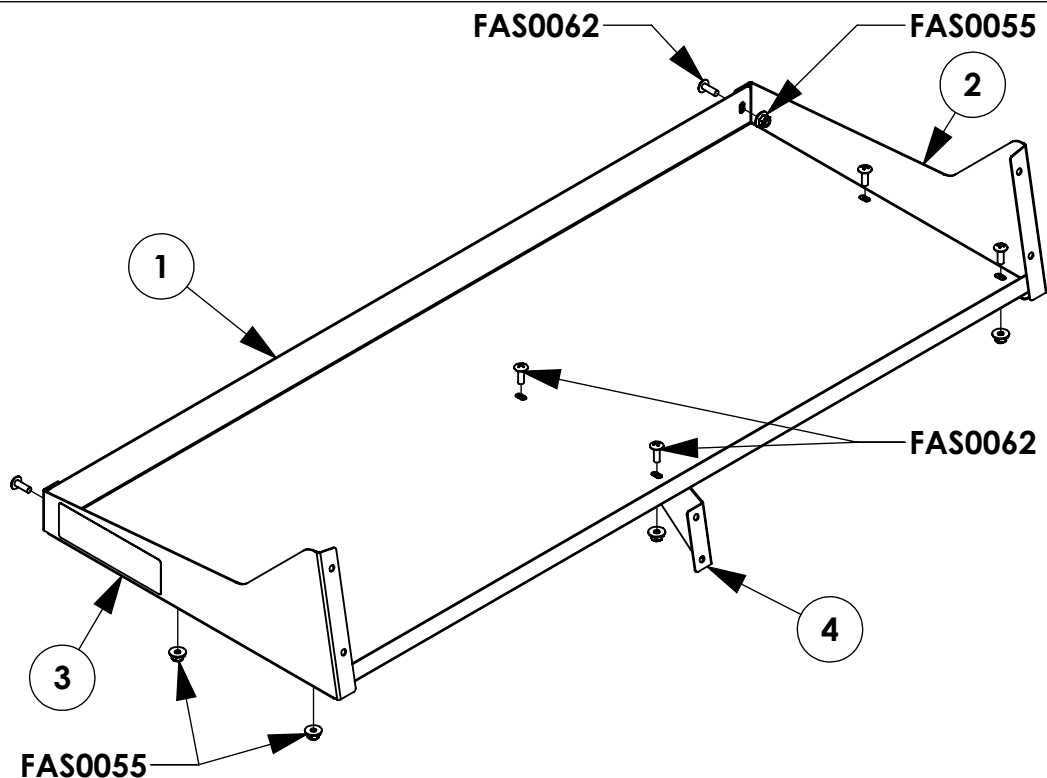
**STEP 2 - INSTALL TO PARTITION**

Step 2.1
FULLY TIGHTEN
FAS0062 AND
FAS0055
(06 PLACES)
PHILLIPS BIT
7/16" WRENCH

SHOWN WITHOUT PARTITION FOR
 FASTENER CLARITY. SEE NEXT
 PAGE FOR VIEW WITH PARTITION.

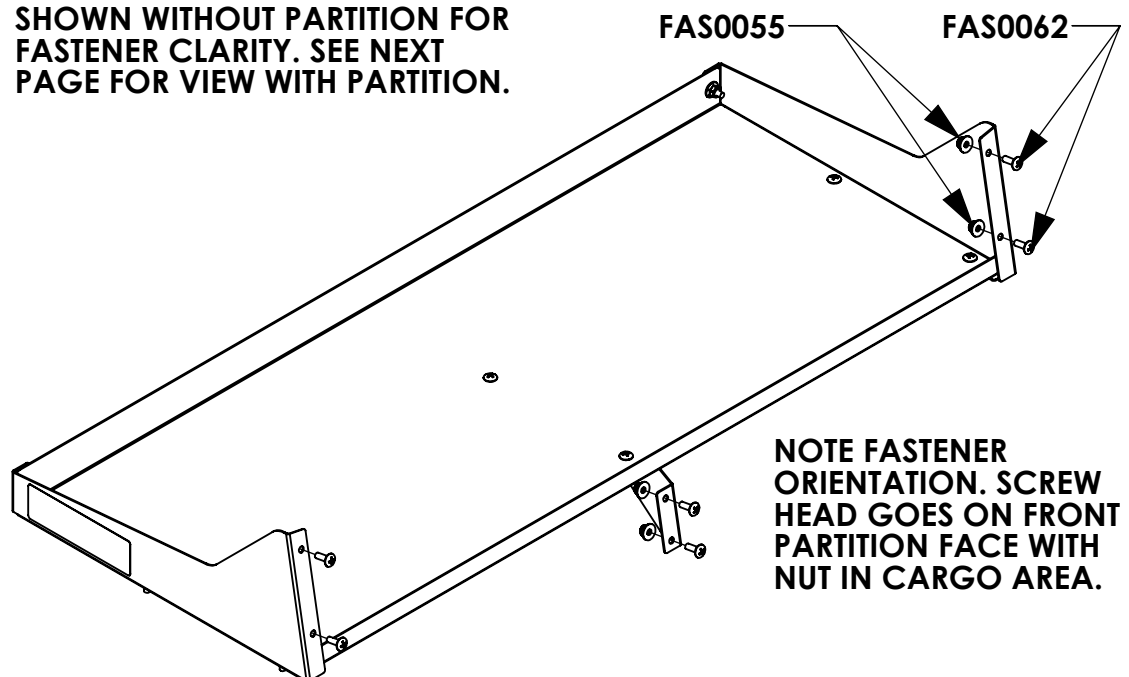

COMPLETED SHELF INSTALLATION VIEW

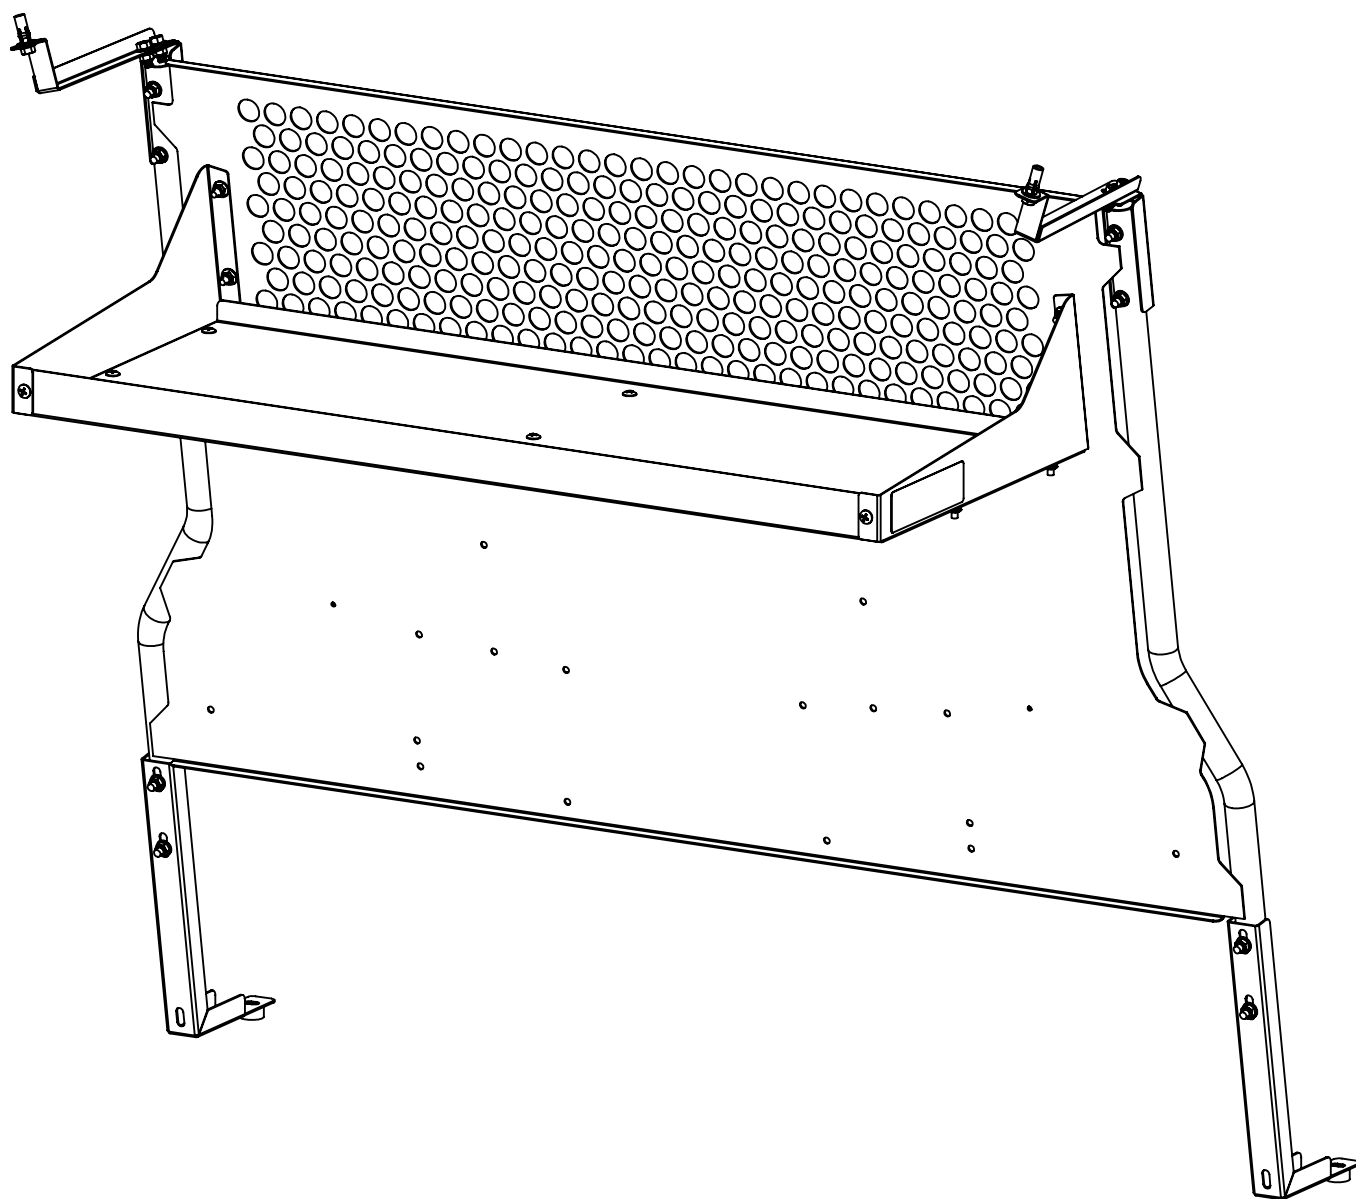

INSTALLATION IS COMPLETE