



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

FIXED STEEL PARTITION, BLACK, MAVERICK

PRODUCT WEIGHT

50.39 LBS

WIDTH X DEPTH X HEIGHT

44.0" X 25.0" X 47.5

CAPACITY


N/A

COLOR

BLACK

CATALOG NUMBER

assembled

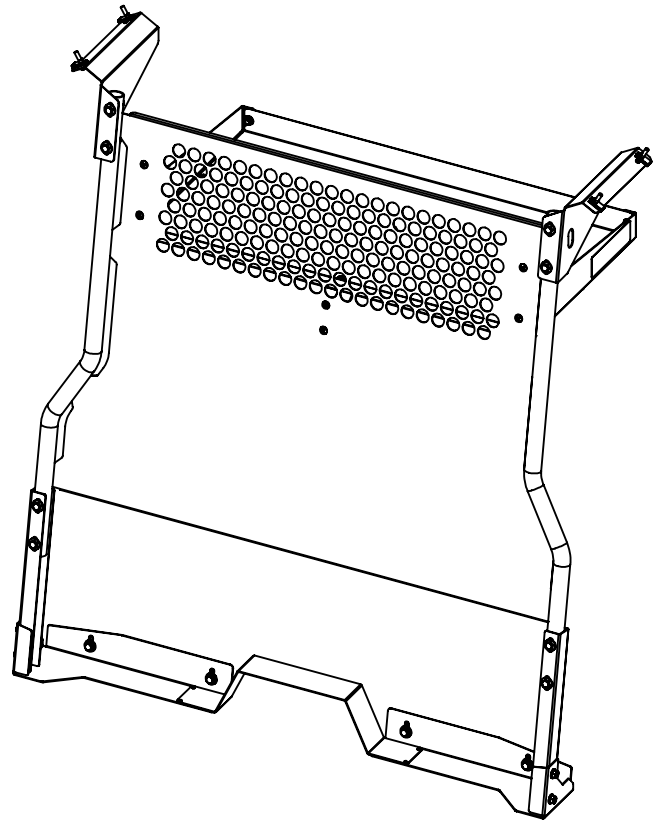

PRODUCT FEATURES

ENTER PRODUCT FEATURE TEXT HERE:

THIS IS A PARTITION TO SEPARATE THE FRONT AND REAR ROWS OF SEATING IN THE FORD MAVERICK. THERE IS A SHELF ON THE REAR SIDE OF THIS PARTITION WHERE, ONCE INSTALLED, THE REAR SEATS OF THE VEHICLE ARE NOT INTENDED TO BE USED.

THE PARTITION MOUNTS TO THE REAR SEAT PEDISTAL AS WELL AS THE REAR OEM GRAB HANDLE LOCATIONS.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.

**FIXED STEEL PARTITION, BLACK, MAVERICK****CATALOG NUMBER P2MAV22****PRODUCT APPLICATION**


FIXED STEEL PARTITION SEPARATING THE FRONT AND REAR SEATING IN THE FORD MAVERICK, WITH A SHELF ON THE REAR OF PARTITION.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

INSTR. NUMBER : 68127		PG: 1	REV: B	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART NUMBER : P2MAV22				1	68111-B	P2MAV22, PANEL WLDMNT, BLK	1
				2	68114-B	P2MAV22, FOOTER WLDMNT, BLK	1
PART DESC. : MAVERICK, FIXED PAR				3	68118-B	P2MAV22, LEG BRACKETS, BLACK	2
				4	68119-B	P2MAV22, HEADER BRKT, DS, BLACK	1
				5	68120-B	P2MAV22, HEADER BRKT,PS, BLACK	1
				6	68121-B	P2MAV22, SHELF, BLACK	1
				7	68122-B	P2MAV22, DS SHELF ARM, BLK	1
				8	68123-B	P2MAV22, PS SHELF ARM, BLK	1
				9	68124-B	P2MAV22, SHELF SUPPORT, BLACK	1

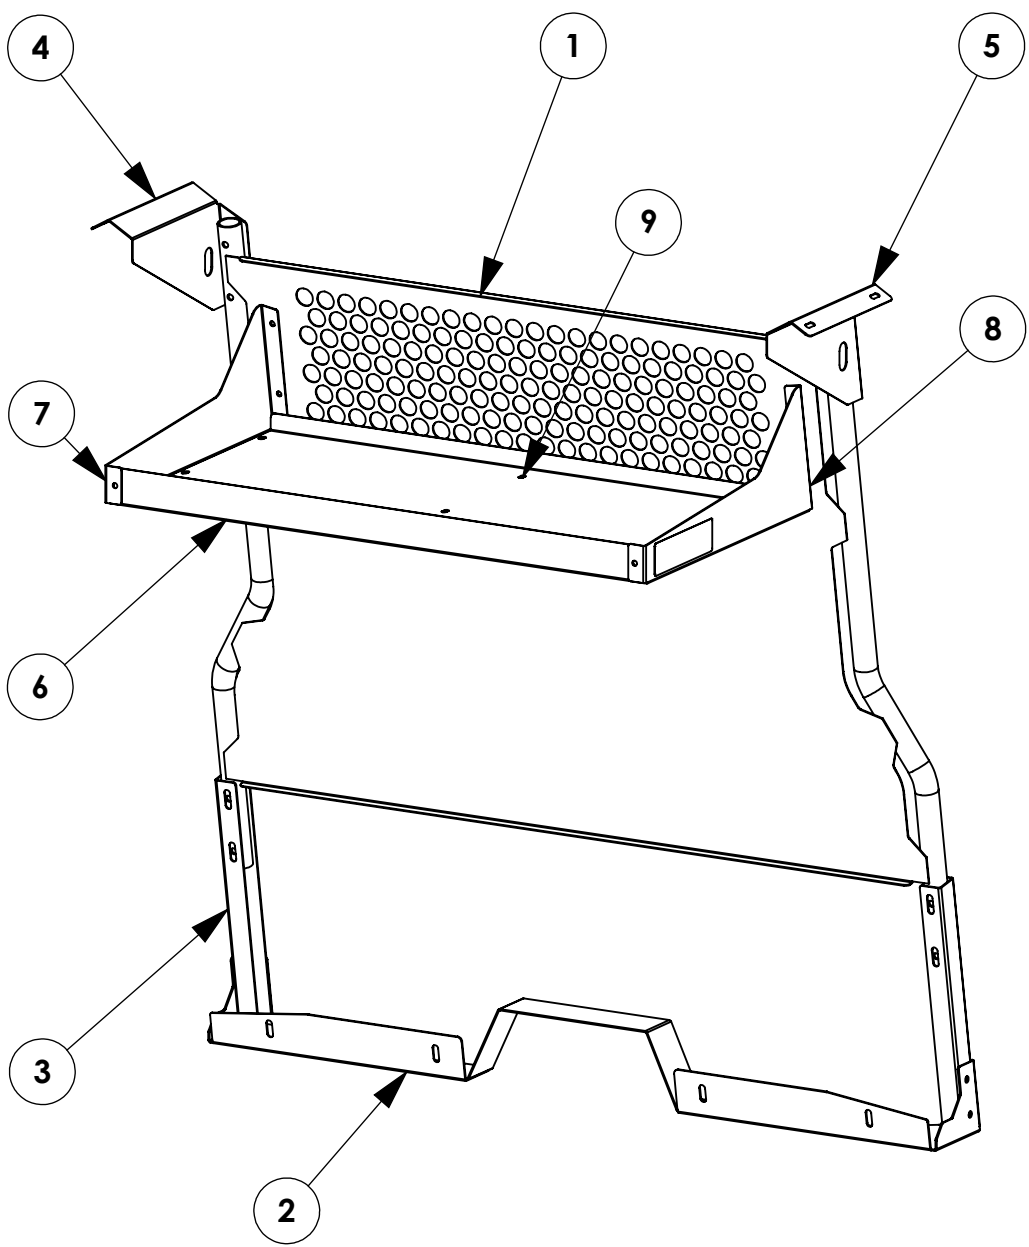

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.


MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

FAS0055
1/4-20 ZP
NLK FLNG NUT
QTY: 14




FAS0060
1/4 ZP
SPL LCK WASHER
QTY: 4



FAS0062
1/4-20 X .74 ZP
THP SCREW
QTY: 14




FAS0067
1/4 ZP
FLAT WASHER
QTY: 4




FAS0073
1/4-20 X 1.25 ZP
HH SCREW
QTY: 4



FAS0086
5/16 ZP
FLAT WASHER
QTY: 12

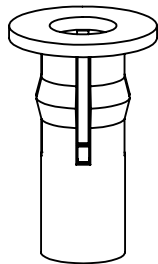


FAS0091
5/16-18 ZP
PLUSNUT
QTY: 4




FAS0095
5/16-18 ZP
HH SCREW
QTY: 12



FAS0098
5/16 ZP
SPL LCK WASHER
QTY: 4




FAS0274
1/4-20
U-NUT
QTY: 4

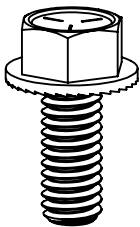

FAS0438
5/16-18 X .75 ZP
HFLNG SCREW
QTY: 4



FAS0440
5/16-18 ZP
NLK HEX NUT
QTY: 12



03927-1
11/32 ZP
ALUM FLR SPACER
QTY: 4

STEP 1 - INSTALL U-NUTS IN GRAB HANDLE LOCATIONS

THIS ACTION IS REPEATED ON BOTH THE DRIVER AND PASSENGER'S SIDE




REMOVE OEM BULB TRIM



**REACH UNDER THE HEADLINER AND
SECURE (1) FAS0274 TO EACH GRAB
HANDLE MOUNTING HOLE**

**BEWARE OF DAMAGING THE
CURTAIN AIRBAG!**

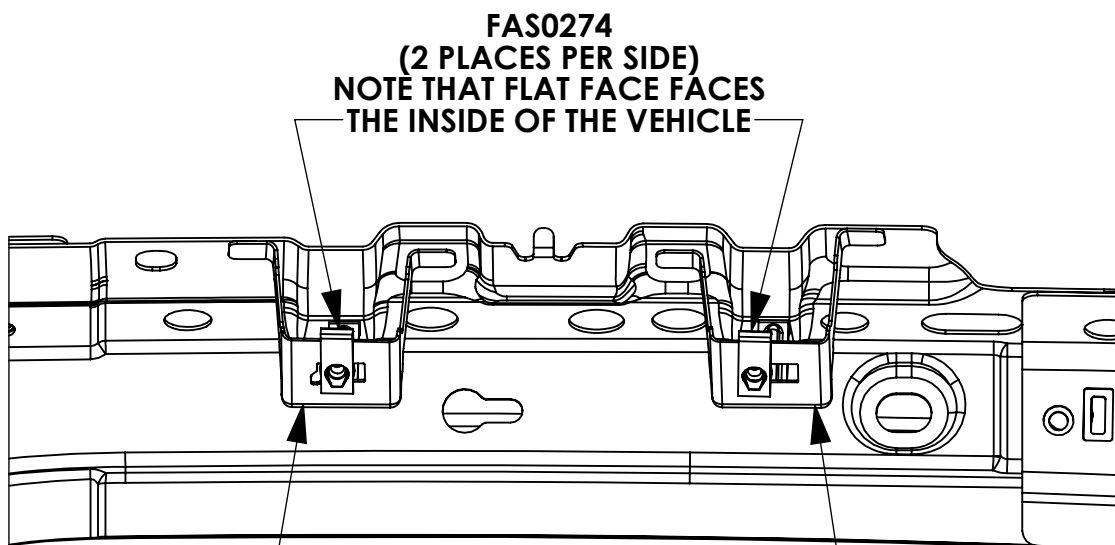


**FAS0274
(2 PLACES PER SIDE)
NOTE THAT FLAT FACE FACES
THE INSIDE OF THE VEHICLE**

**OEM GRAB HANDLE MOUNTING
LOCATIONS (FOUND
UNDERNEATH HEADLINER)**


**VIEW IS FROM INSIDE OF THE
VEHICLE, LOOKING OUTWARD**

STEP 2 - CUT HOLES FOR FOOTER

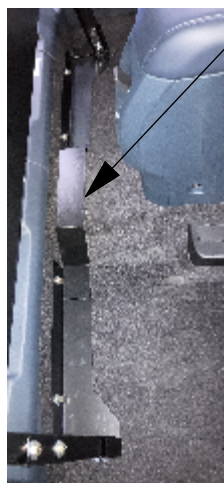


PLACE FOOTER INTO REAR
FOOTWELL AND MARK 4
SLOT LOCATIONS


USE 1" HOLE SAW TO
EXPOSE SHEET METAL
TO MOUNT FAS0091
(PLUSNUT)

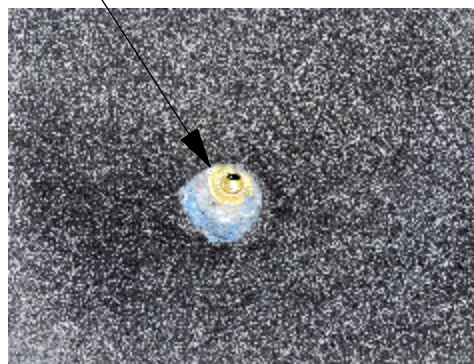

STEP 3 - ASSEMBLE FOOTER


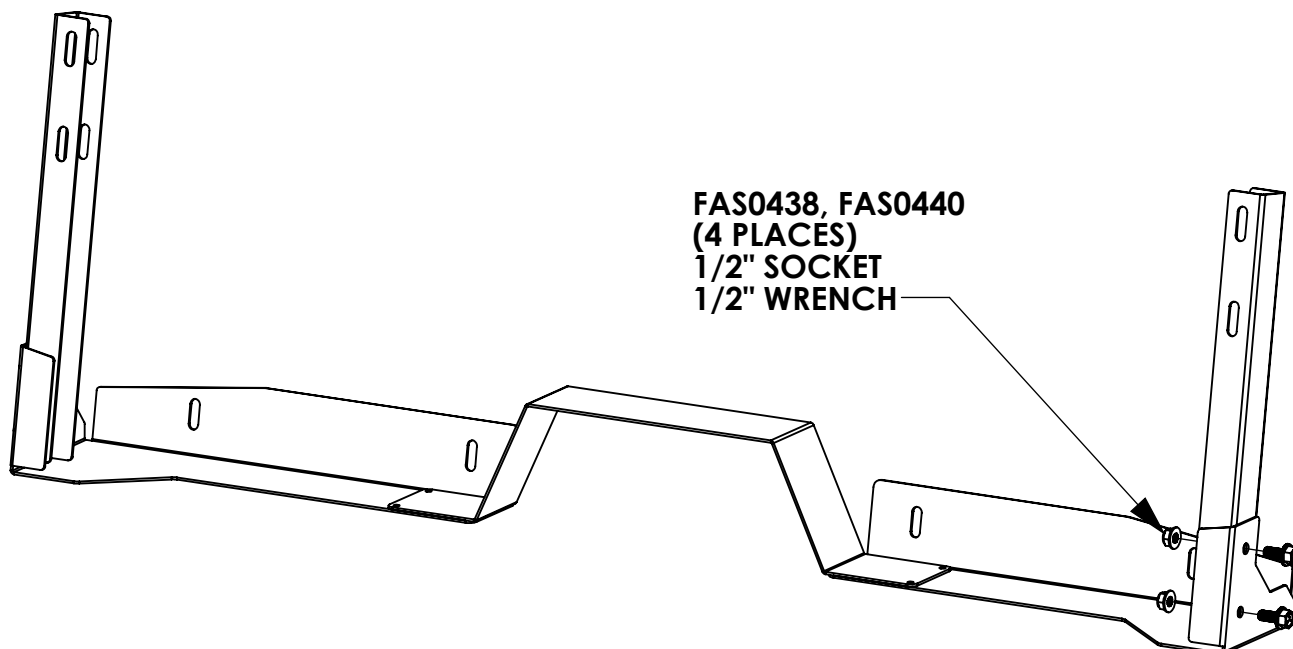


FAS0438, FAS0440
(4 PLACES)
1/2" SOCKET
1/2" WRENCH

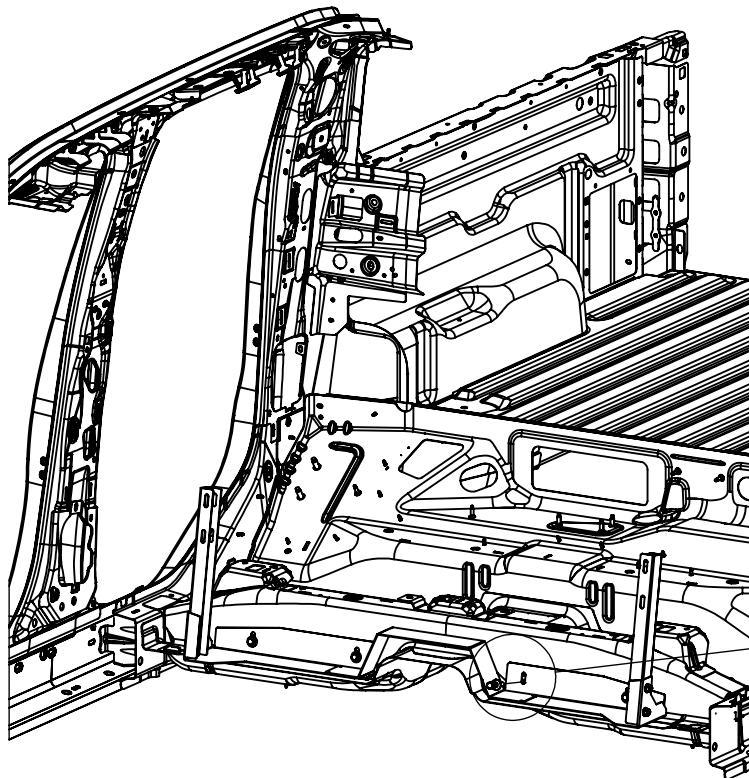STEP 4 - INSTALL FOOTER

NOTE: SPACER GOES INTO THE CARPET HOLE CREATED DURING STEP 2

FAS0095, FAS0098,
FAS0086, 03927-1,
(4 PLACES)
1/2" SOCKET

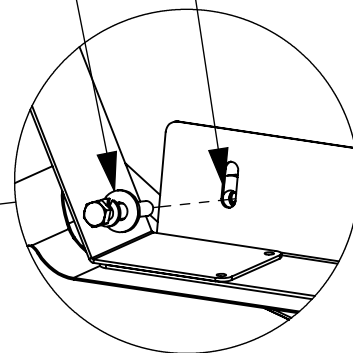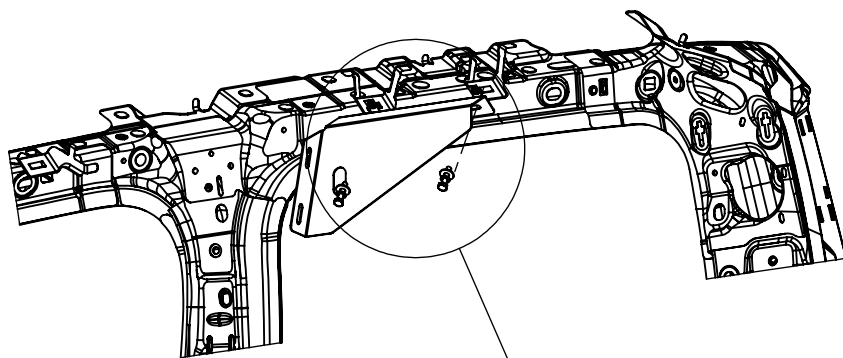**STEP 5 - INSTALL HEADER BRACKETS**


NOTE: THIS VIEW IS OF THE PASSENGER'S SIDE REAR GRAB HANDLE.

REPEAT FOR THE DRIVER'S SIDE LOCATION WITH THE MIRRORED HEADER BRACKET.


FAS0073, FAS0060,
FAS0067
(2 PLACES PER SIDE)
7/16" SOCKET, WITH
EXTENSION

NOTE: U-NUTS WERE
INSTALLED IN STEP 1


NOTE: THIS FEATURE IS
AN ACCESS HOLE
FOR THE TOOL PATH

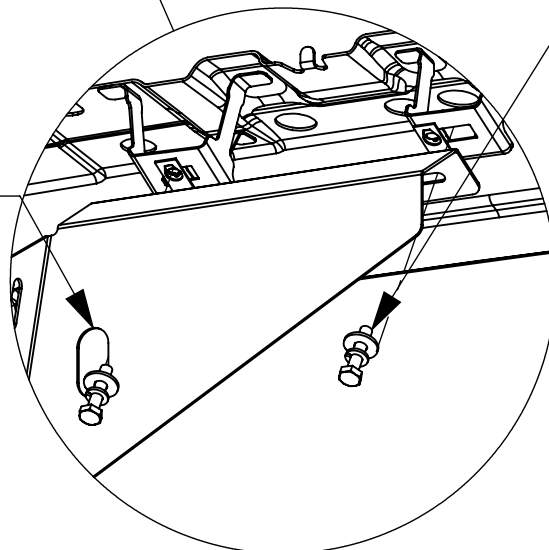

STEP 6 - INSTALL PARTITION BODY


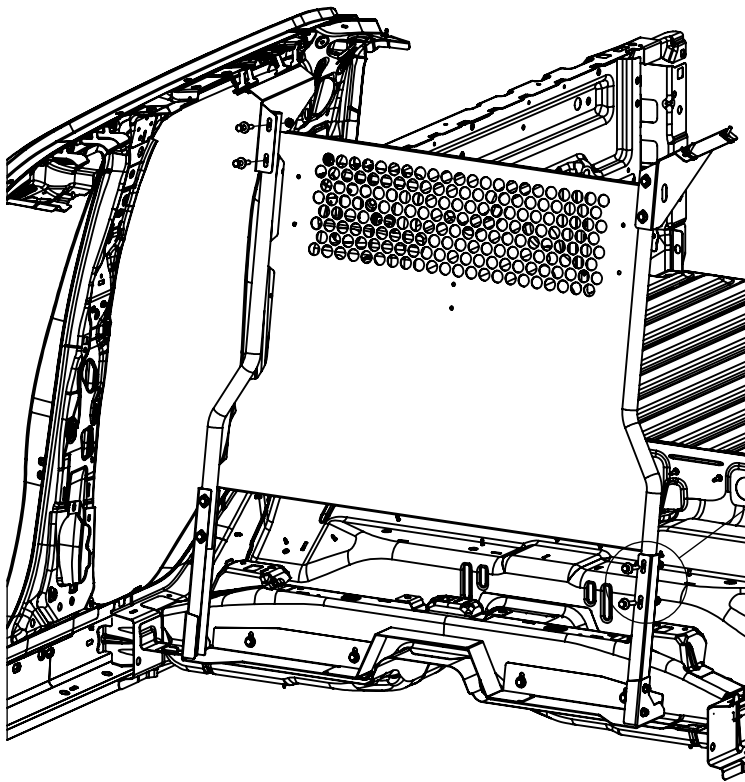


NOTE: BE SURE THAT
BODY FLANGES FACE
THE REAR OF THE
VEHICLE

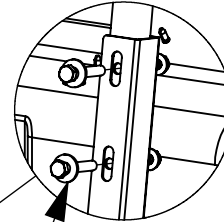



FAS0095, FAS0086, FAS0440
(8 PLACES, 2 EACH CORNER)
1/2" SOCKET
1/2" WRENCH

STEP 7 - INSTALL SHELF BRACKETS

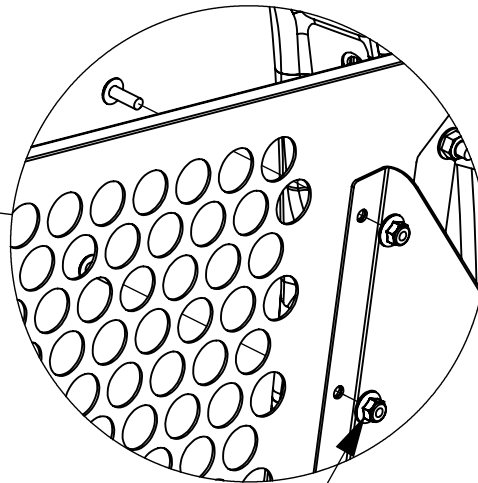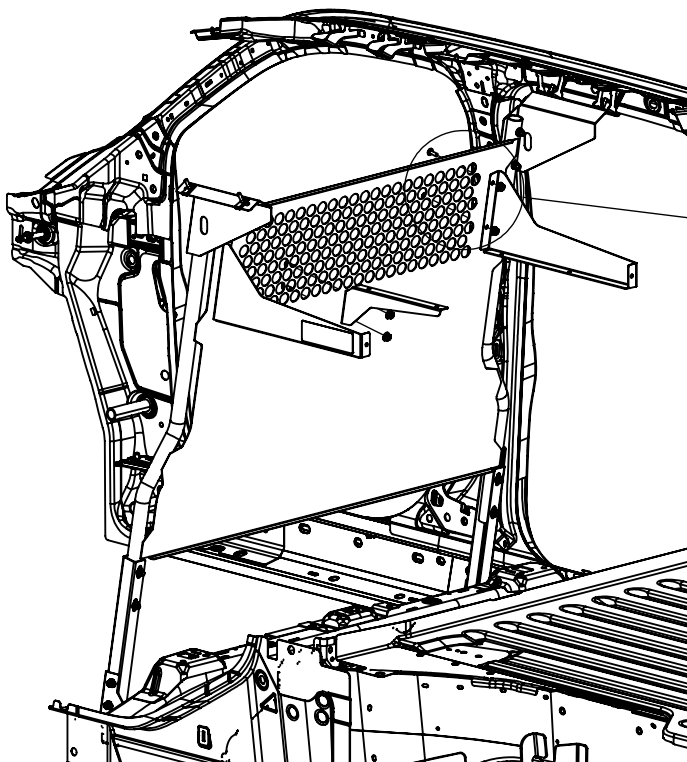

FAS0062, FAS0055
(6 PLACES,
2 PER BRACKET)
7/16" SOCKET
7/16" WRENCH

STEP 8 - INSTALL SHELF

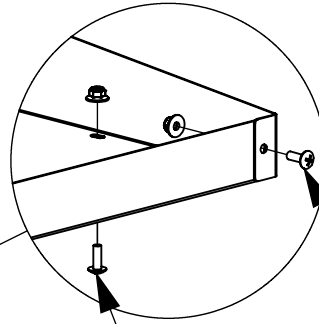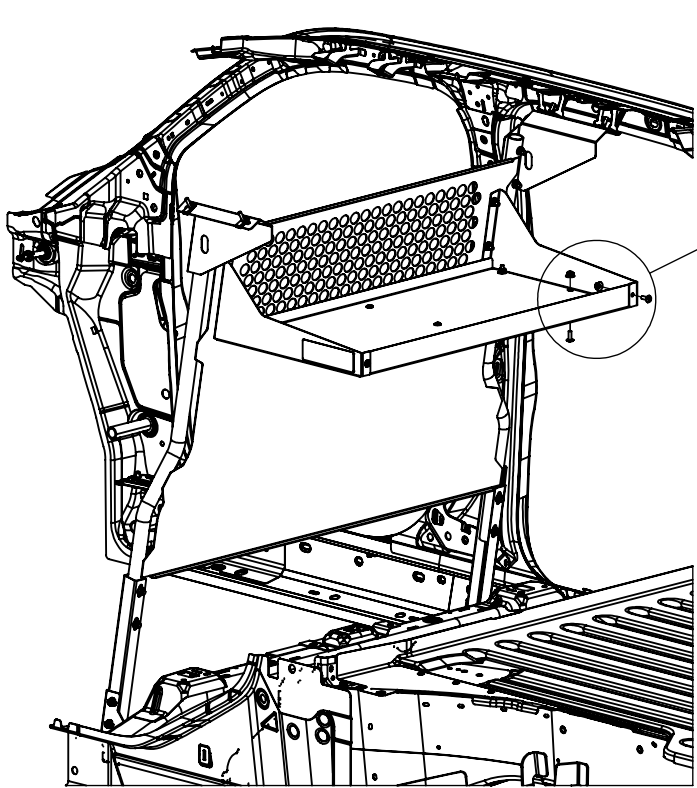

FAS0062, FAS0055
(8 PLACES)
#3 PHILLIPS
7/16" SOCKET

NOTE:
FAS0062 SHOULD GO UP THRU
68121-B AS SHOWN