



**ADRIAN STEEL®**

Cargo Management Solutions for Commercial Vehicles

## ***FIXED STEEL PARTITION, BLACK, MAVERICK***

***PRODUCT WEIGHT***

**50.39 LBS**

***WIDTH X DEPTH X HEIGHT***

**44.0" X 25.0" X 47.5**

***CAPACITY***


**N/A**

***COLOR***

**BLACK**

***CATALOG NUMBER***

**assembled**

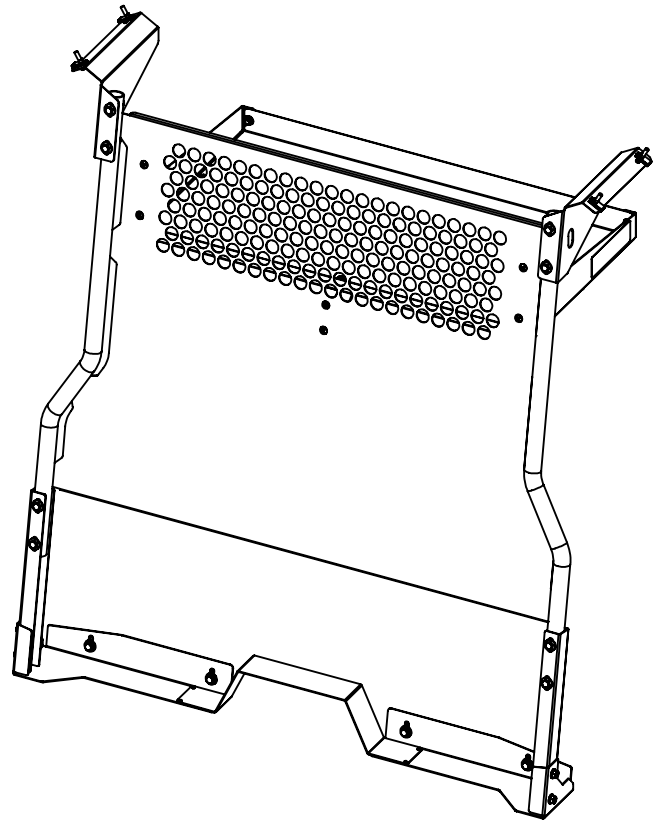

### **PRODUCT FEATURES**

**ENTER PRODUCT FEATURE TEXT HERE:**

***THIS IS A PARTITION TO SEPARATE THE FRONT AND REAR ROWS OF SEATING IN THE FORD MAVERICK. THERE IS A SHELF ON THE REAR SIDE OF THIS PARTITION WHERE, ONCE INSTALLED, THE REAR SEATS OF THE VEHICLE ARE NOT INTENDED TO BE USED.***

***THE PARTITION MOUNTS TO THE REAR SEAT PEDISTAL AS WELL AS THE REAR OEM GRAB HANDLE LOCATIONS.***

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.


**FIXED STEEL PARTITION, BLACK, MAVERICK****CATALOG NUMBER      P2MAV22****PRODUCT APPLICATION**

**FIXED STEEL PARTITION SEPARATING THE FRONT AND REAR SEATING IN THE FORD MAVERICK, WITH A SHELF ON THE REAR OF PARTITION.**

**ACCESSORIES THAT WILL WORK WITH THIS PRODUCT**

<b>CATALOG NUMBER</b>	<b>DESCRIPTION (smart)</b>

INSTR. : 68127 NUMBER		PG: 1	REV: A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART : P2MAV22 NUMBER				1	68111-B	P2MAV22, PANEL WLDMNT, BLK	1
				2	68114-B	P2MAV22, FOOTER WLDMNT, BLK	1
PART : MAVERICK, FIXED PAR DESC.				3	68118-B	P2MAV22, LEG BRACKETS, BLACK	2
				4	68119-B	P2MAV22, HEADER BRKT, DS, BLACK	1
				5	68120-B	P2MAV22, HEADER BRKT,PS, BLACK	1
				6	68121-B	P2MAV22, SHELF, BLACK	1
				7	68122-B	P2MAV22, DS SHELF ARM, BLK	1
				8	68123-B	P2MAV22, PS SHELF ARM, BLK	1
				9	68124-B	P2MAV22, SHELF SUPPORT, BLACK	1

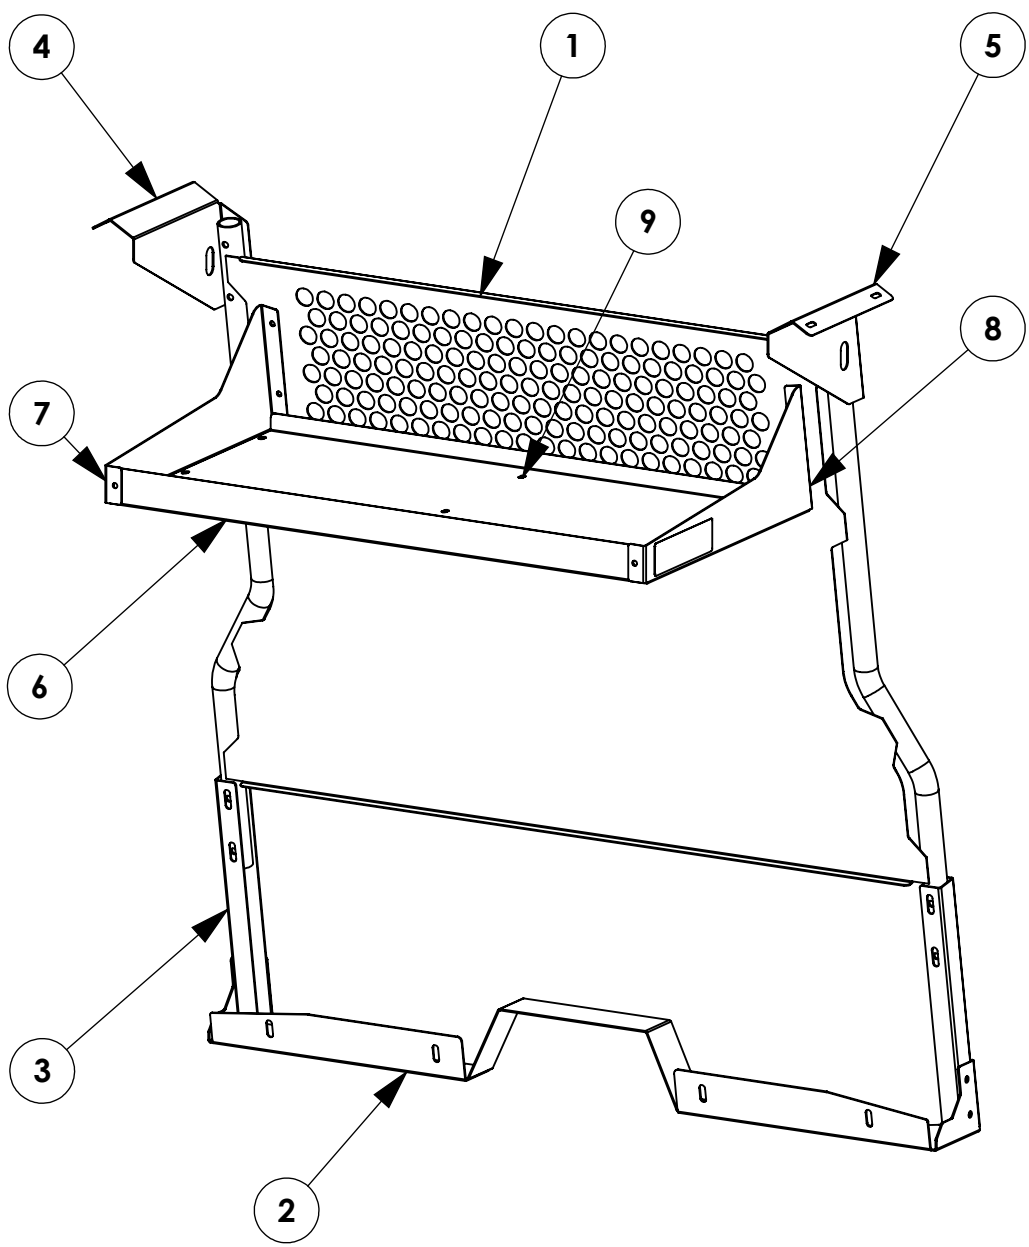

**GET TO KNOW THE VEHICLE** - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

**SEAL ALL EXTERIOR HOLES** - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

**CONTROL DRILL DEPTH** - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

**ALWAYS ADD PRIMER** - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.


**MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT** - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

**PROVIDE CLEARANCE FOR SPACERS** - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

**CHECK SPACER ORIENTATION** - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

**PLUSNUT INSTALLATION** - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


**THRU-BOLT CLEARANCE** - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

**FASTENERS USED**

**FAS0055**  
1/4-20 ZP  
NLK FLNG NUT  
QTY: 14




**FAS0060**  
1/4 ZP  
SPL LCK WASHER  
QTY: 4



**FAS0062**  
1/4-20 X .74 ZP  
THP SCREW  
QTY: 14




**FAS0067**  
1/4 ZP  
FLAT WASHER  
QTY: 4




**FAS0073**  
1/4-20 X 1.25 ZP  
HH SCREW  
QTY: 4



**FAS0086**  
5/16 ZP  
FLAT WASHER  
QTY: 12

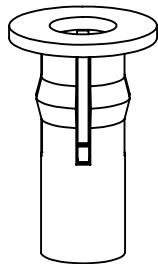


**FAS0091**  
5/16-18 ZP  
PLUSNUT  
QTY: 4




**FAS0095**  
5/16-18 ZP  
HH SCREW  
QTY: 12




**FAS0098**  
5/16 ZP  
SPL LCK WASHER  
QTY: 4




**FAS0274**  
1/4-20  
U-NUT  
QTY: 4

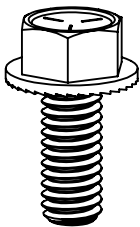

**FAS0438**  
5/16-18 X .75 ZP  
HFLNG SCREW  
QTY: 4



**FAS0440**  
5/16-18 ZP  
NLK HEX NUT  
QTY: 12



**03927-1**  
11/32 ZP  
ALUM FLR SPACER  
QTY: 4

## **STEP 1 - INSTALL U-NUTS IN GRAB HANDLE LOCATIONS**

**THIS ACTION IS REPEATED ON BOTH THE DRIVER AND PASSENGER'S SIDE**




**REMOVE OEM BULB TRIM**




**REACH UNDER THE HEADLINER AND  
SECURE (1) FAS0274 TO EACH GRAB  
HANDLE MOUNTING HOLE**

**BEWARE OF DAMAGING THE  
CURTAIN AIRBAG!**

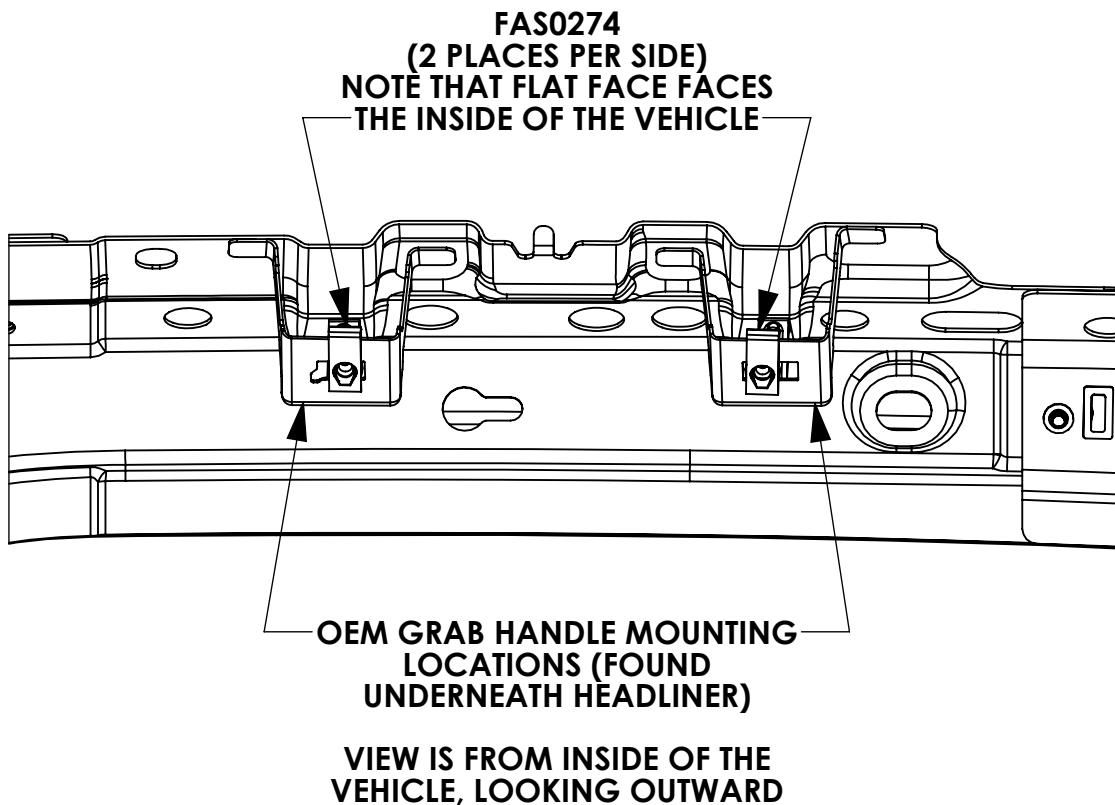


## STEP 2 - CUT HOLES FOR FOOTER

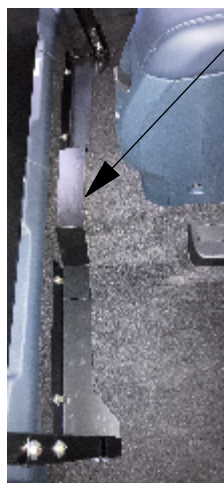


PLACE FOOTER INTO REAR  
FOOTWELL AND MARK 4  
SLOT LOCATIONS


USE 1" HOLE SAW TO  
EXPOSE SHEET METAL  
TO MOUNT FAS0091  
(PLUSNUT)

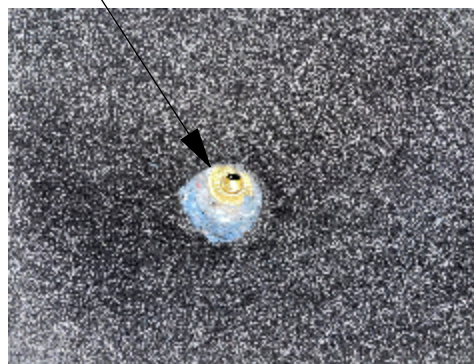

## STEP 3 - ASSEMBLE FOOTER


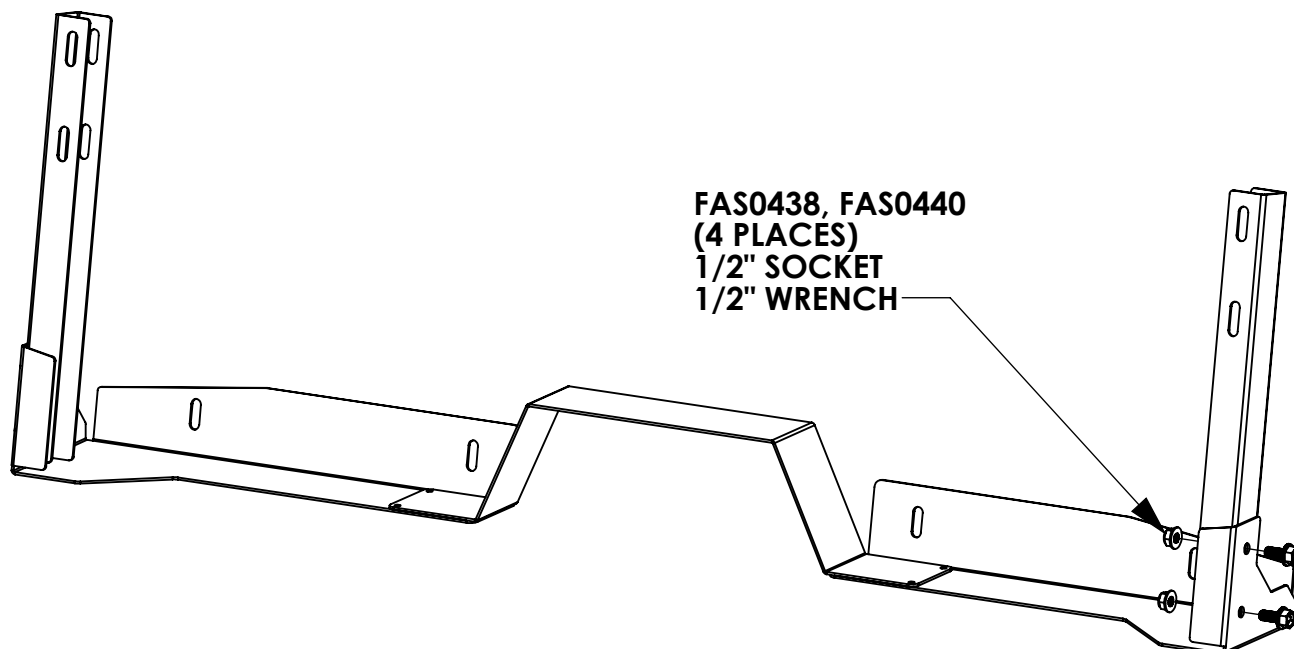


FAS0438, FAS0440  
(4 PLACES)  
1/2" SOCKET  
1/2" WRENCH

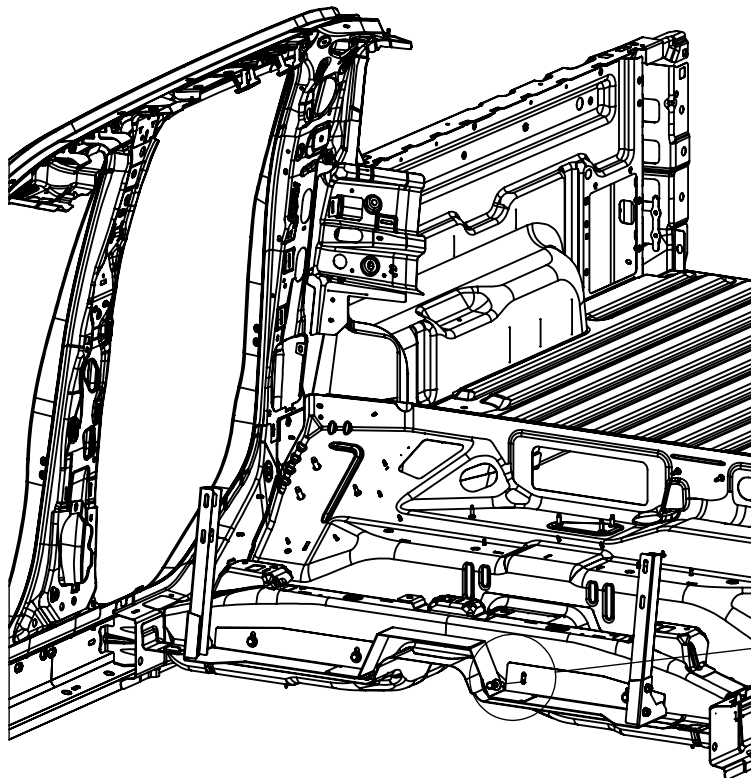**STEP 4 - INSTALL FOOTER**

**NOTE: SPACER GOES INTO THE CARPET HOLE CREATED DURING STEP 2**

**FAS0095, FAS0098,  
FAS0086, 03927-1,  
(4 PLACES)  
1/2" SOCKET**

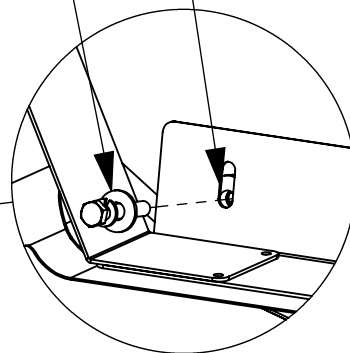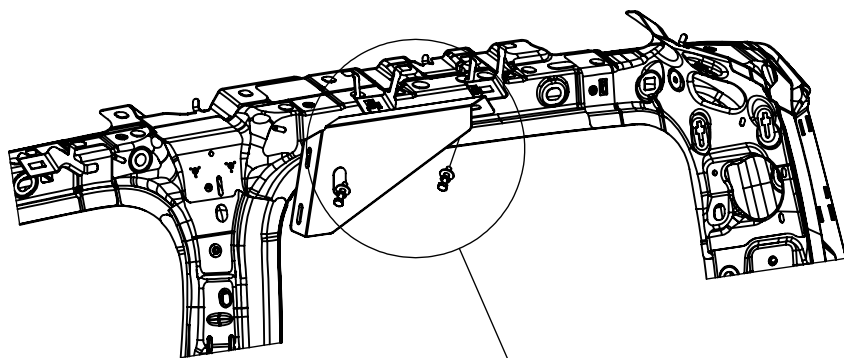**STEP 5 - INSTALL HEADER BRACKETS**


**NOTE: THIS VIEW IS OF THE PASSENGER'S SIDE REAR GRAB HANDLE.**

**REPEAT FOR THE DRIVER'S SIDE LOCATION WITH THE MIRRORRED HEADER BRACKET.**

**FAS0073, FAS0060,  
FAS0067  
(2 PLACES PER SIDE)  
7/16" SOCKET, WITH  
EXTENSION**


**NOTE: U-NUTS WERE  
INSTALLED IN STEP 1**

**NOTE: THIS FEATURE IS  
AN ACCESS HOLE  
FOR THE TOOL PATH**

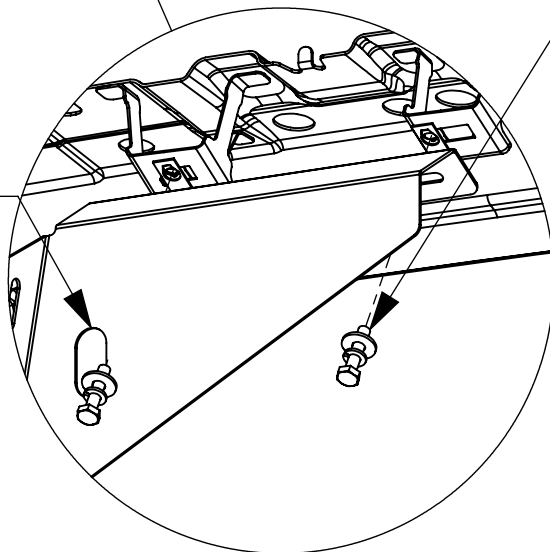




## STEP 6 - INSTALL PARTITION BODY


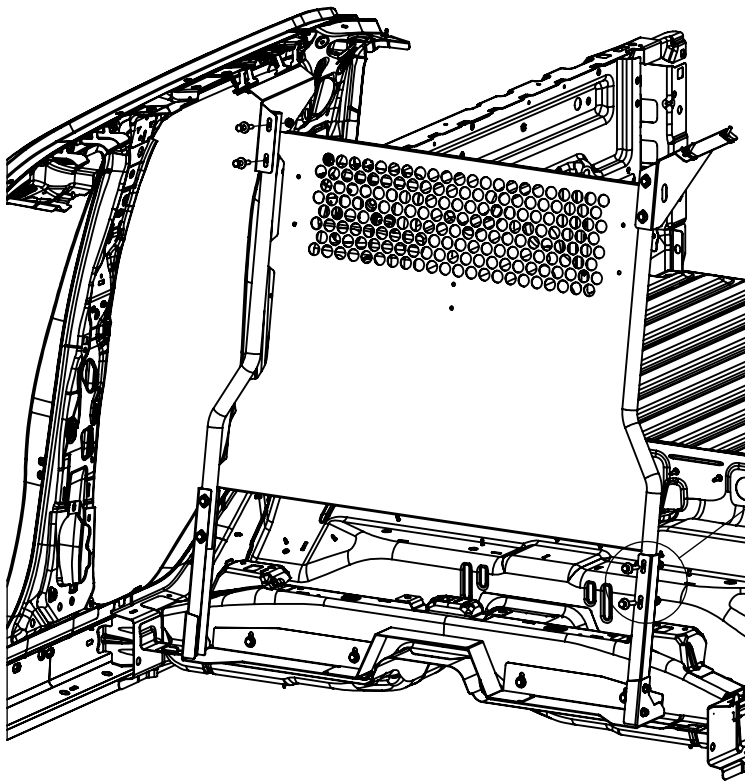


NOTE: BE SURE THAT  
BODY FLANGES FACE  
THE REAR OF THE  
VEHICLE

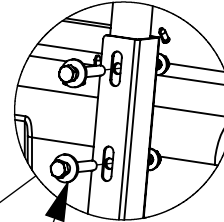



FAS0095, FAS0086, FAS0440  
(8 PLACES, 2 EACH CORNER)  
1/2" SOCKET  
1/2" WRENCH

## STEP 7 - INSTALL SHELF BRACKETS

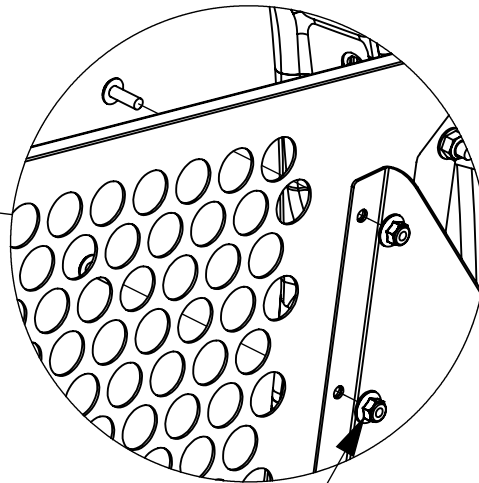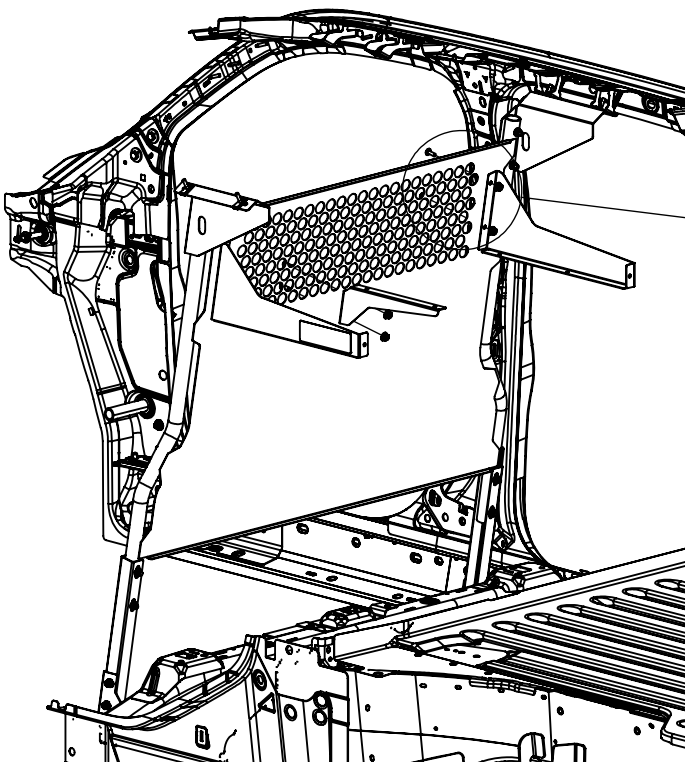

FAS0062, FAS0055  
(6 PLACES,  
2 PER BRACKET)  
7/16" SOCKET  
7/16" WRENCH

**STEP 8 - INSTALL SHELF**

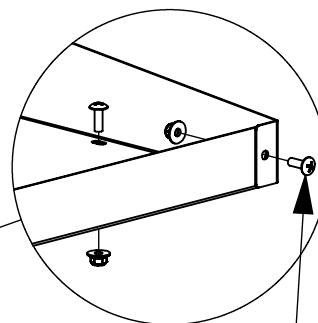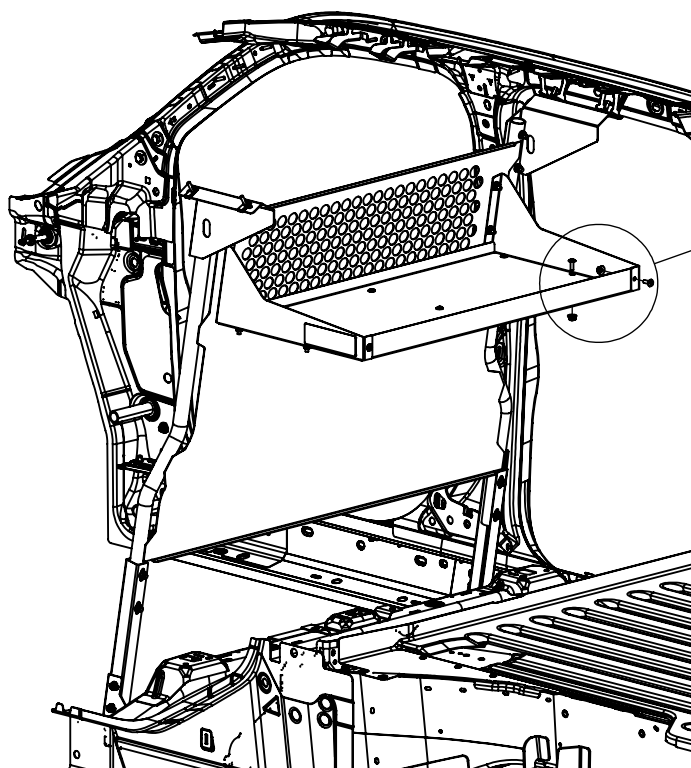

FAS0062, FAS0055  
(8 PLACES)  
#3 PHILLIPS  
7/16" SOCKET