


INSTR. NUMBER : INSP2RAV4-B	PG: 1	REV: B	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
	PART NUMBER : P2RAV4-B PART • PARTITION FOR RAV4, NO DESC. • TOOLBOX		1	62040-B	PAR WLDMNT, ESC20, BLACK	1
2			63499-B	PARTITION MOUNTING, SS, RAV4, BLACK	1	
3			63500-B	PARTITION MOUNTING, CS, RAV4, BLACK	1	
4			63511-B	VEHICLE MOUNTING, CS, RAV4, BLACK	1	
5			63510-B	VEHICLE MOUNTING, SS, RAV4, BLACK	1	
6			77863-B	SUPPORT BRACKET, RAV4 PARTITION, BLACK	1	
7			HDWP2RAV4-B	HDW KIT, P2RAV4	1	

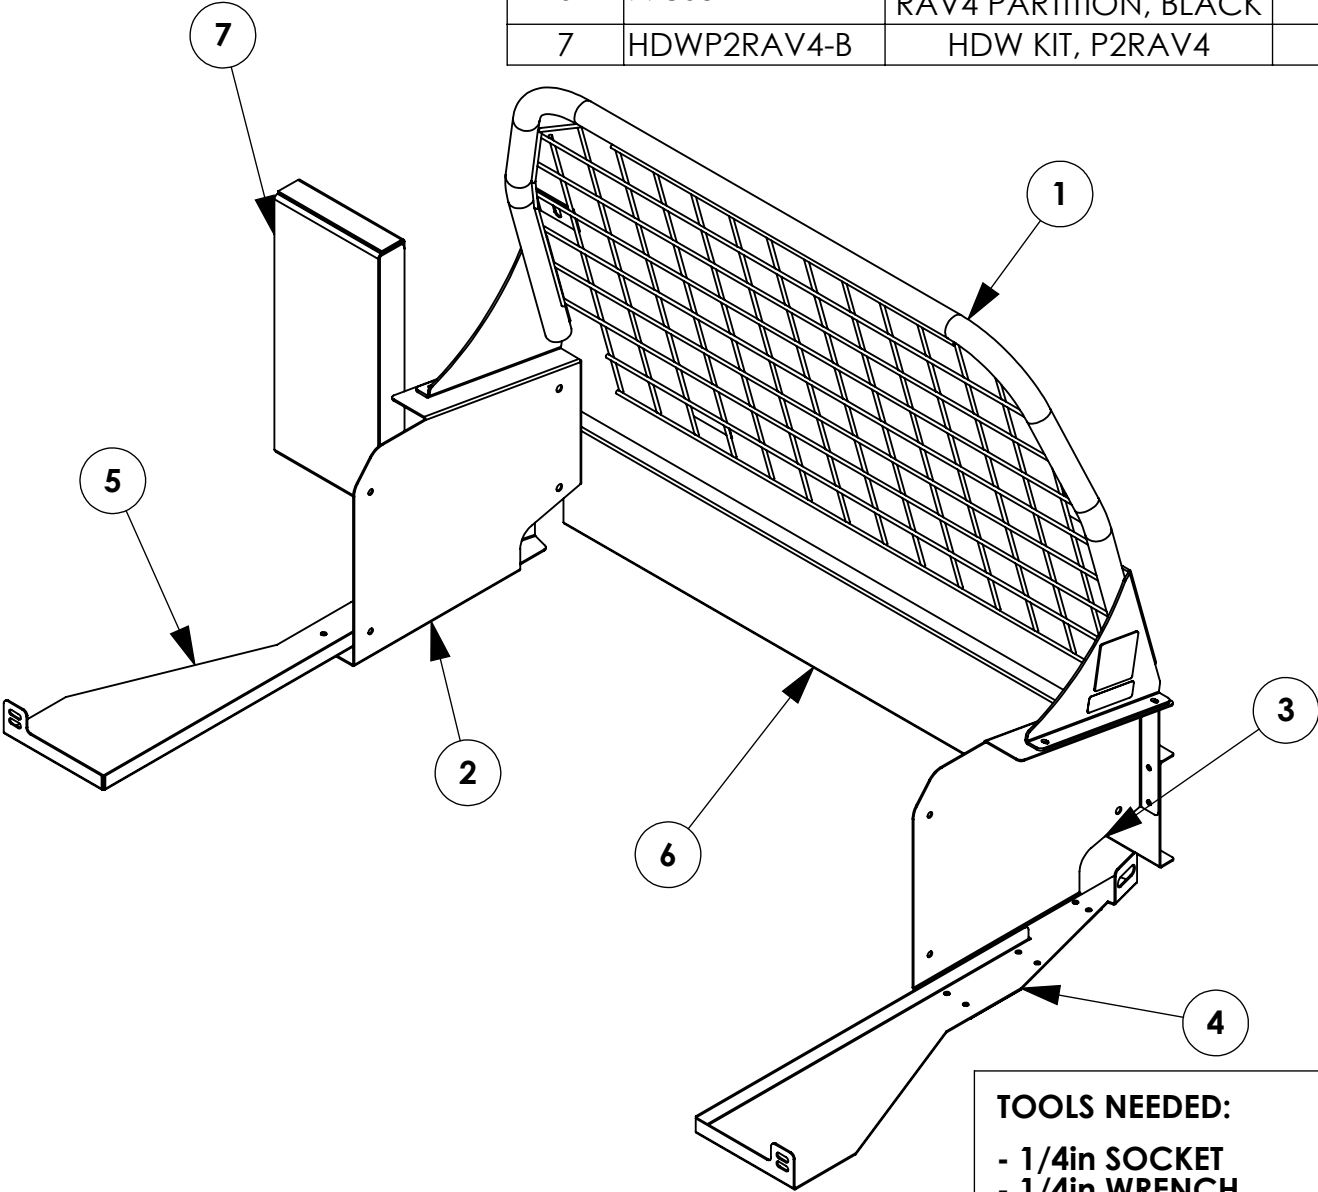

- TOOLS NEEDED:**
- 1/4in SOCKET
 - 1/4in WRENCH
 - 7/16in SOCKET
 - 6mm SOCKET
 - PHILIPS SCREWDRIVER

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED


BAG REFERENCE: BAGP2RAV4-B

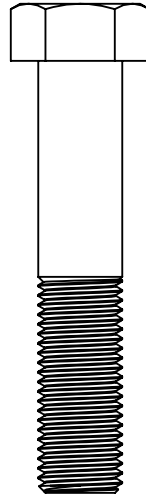


FAS0472
HEX 7/16 X 2.25in
QTY: 2




FAS0824
HEX M6 X 40mm
QTY: 2




FAS0273
HEX M6-1.0X50 G8
QTY: 2




FAS0431
HEX M6 X 35mm
QTY: 2




FAS0062
PHILIPS 0.75in
QTY: 12

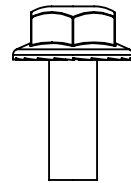


FAS0018
HEX 1/4 X 0.62in
QTY: 8

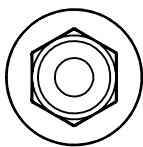


FAS0055
HEX 1/4 NUT
QTY: 20

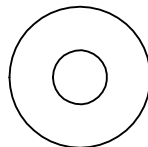


FAS0067
WASHER 1/4
QTY: 4

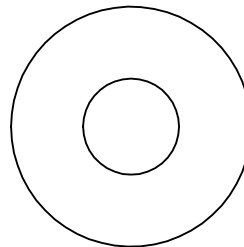

FAS0482
WASHER 7/16
QTY: 2

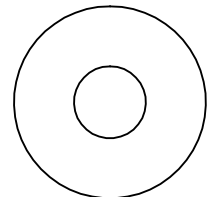


03927-2
1010 SPCR 11/16
QTY: 2

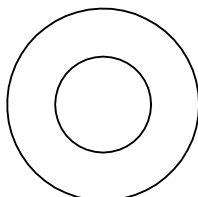


59083
SPACER 0.531
QTY: 4



FAS0060
SPLIT WASHER 1/4
QTY: 6

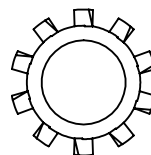

FAS0278
LCK WASHER 7/16
QTY: 2

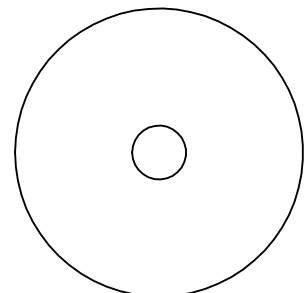

FAS0068
WASHER 1/4 X 1.5in
QTY: 2

INTENTIONALLY LEFT BLANK

BEST PRACTICE: ORGANIZE ALL HARDWARE PCS. & VERIFY THAT ALL ARE ACCOUNTED FOR


PAGE:

5

HARDWARE USED

HDW KIT REFERENCE: HDWP2RAV4-B

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CRT06987-A	CARTON HARDWARE FOR KD	1
2	INSP2RAV4-B	INSTALL INSTRUCTIONS, P2RAV4	1
3	BAGP2RAV4-B	RAV4 NTB PARTITION FASTENER BAG	1

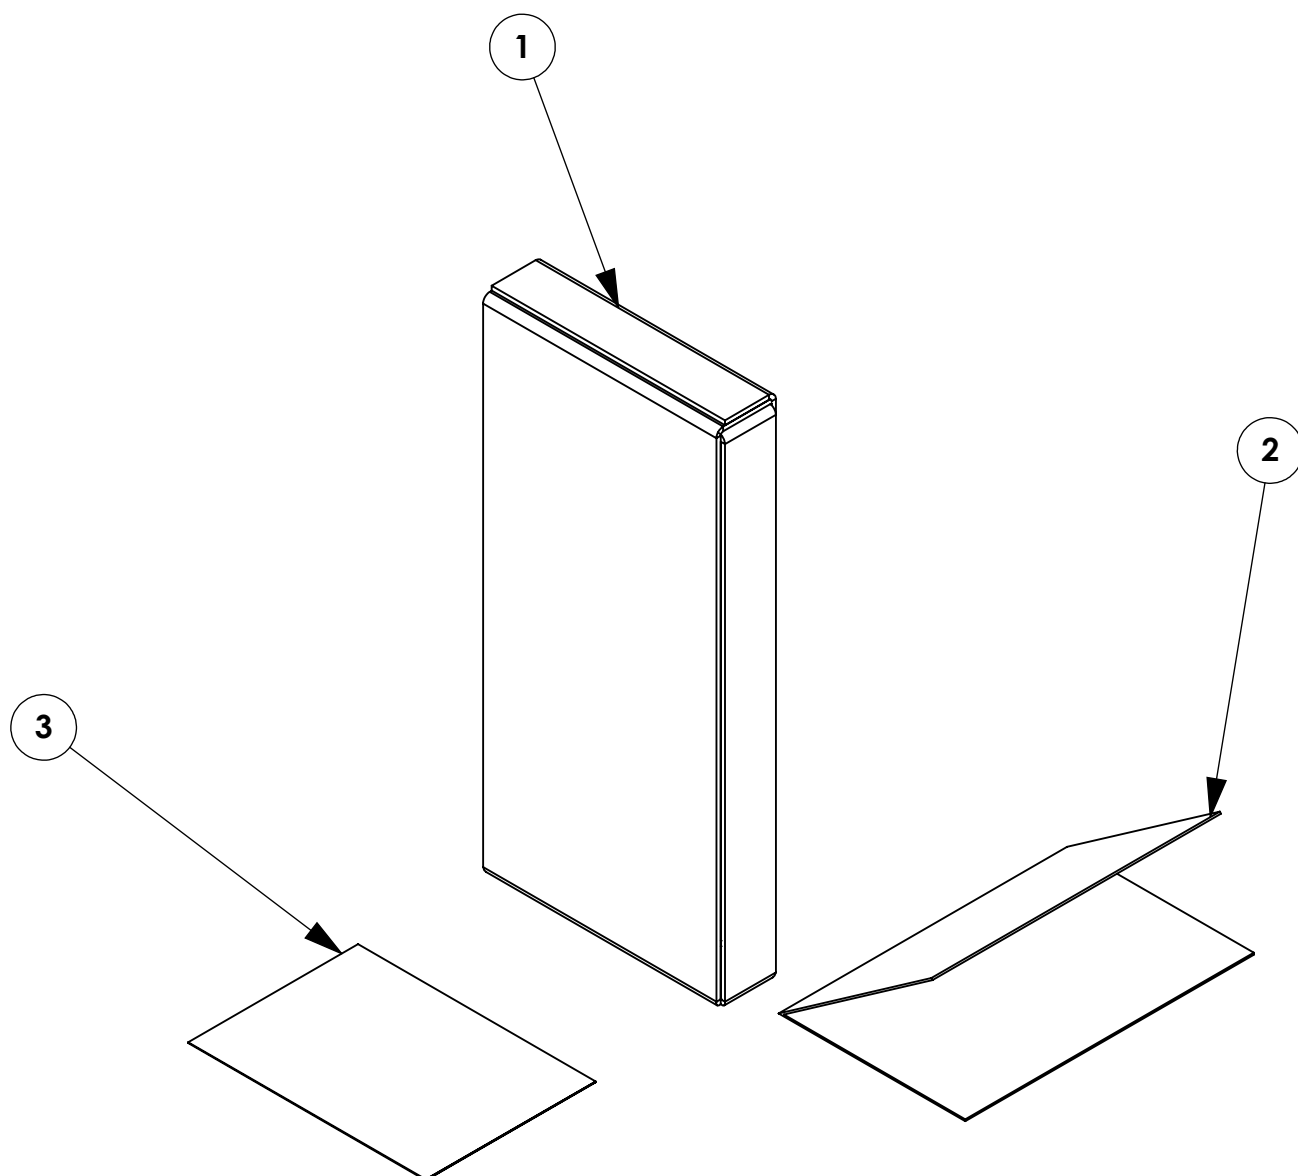

INTENTIONALLY LEFT BLANK

BEFORE THE BUILD - VEHICLE PREPERATION

MY 2025 SHOWN - SAME STEPS FOR MY 2026



REMOVE FLOOR MAT
FOR INSTALLATION
OF PRODUCT

STORE IN THE
VEHICLE FOR
FUTURE USE



REMOVE BOTH
INTERIOR D RINGS ON
EACH SIDE OF THE
VEHICLE BEFORE
STARTING




WE RECOMMEND PUTTING
BOTH REAR SEATS DOWN FOR
AN EASIER INSTALL

STEP 1 - ASSEMBLE AND SET THE FLOOR BRACKETS IN THE VEHICLE

- REPEAT FOR BOTH SIDES -

MODEL YEAR 2026+ SHOWN - SEE NOTES FOR MY 2025 AND EARLIER


STEP 1.1
FULLY TIGHTEN
63499-B,
63510-B,
FAS0062 AND
FAS0055
(6 PLACES)
1/4 WRENCH
PHILIPS
SCREWDRIVER

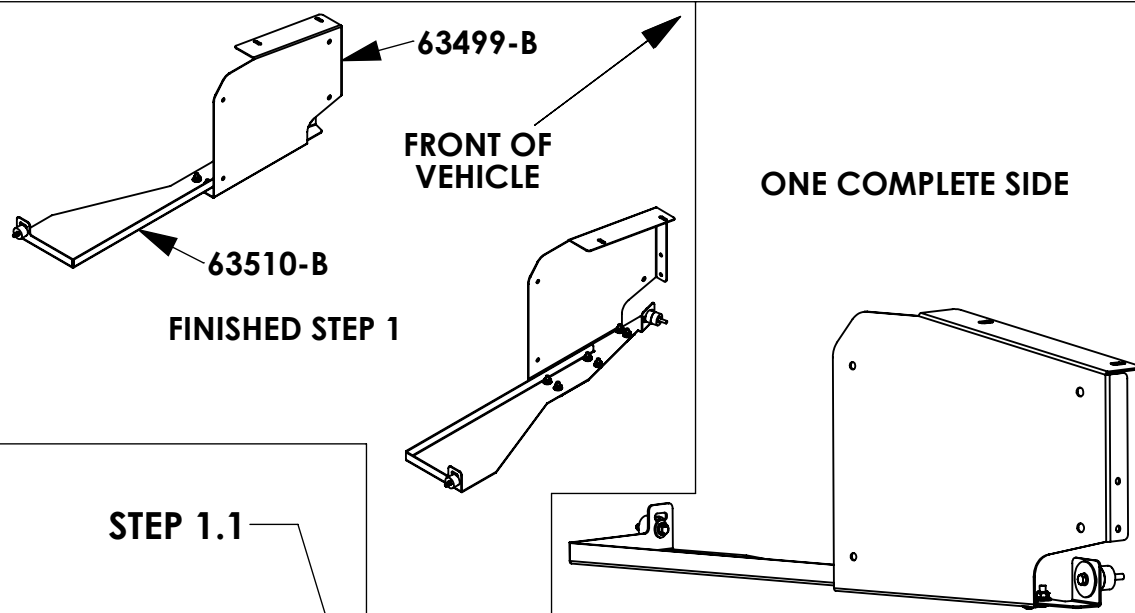

STEP 1.2
LOOSELY MOUNT
TO VEHICLE
63510-B,
FAS0067,
FAS0060,
FAS0431,
03927-2
(1 PLACE)
1/4in SOCKET

STEP 1.3
LOOSELY MOUNT
TO VEHICLE
63510-B,
FAS0273,
FAS0060,
FAS0067,
(2) 59083
(1 PLACE)
6mm SOCKET

STEP 1.1

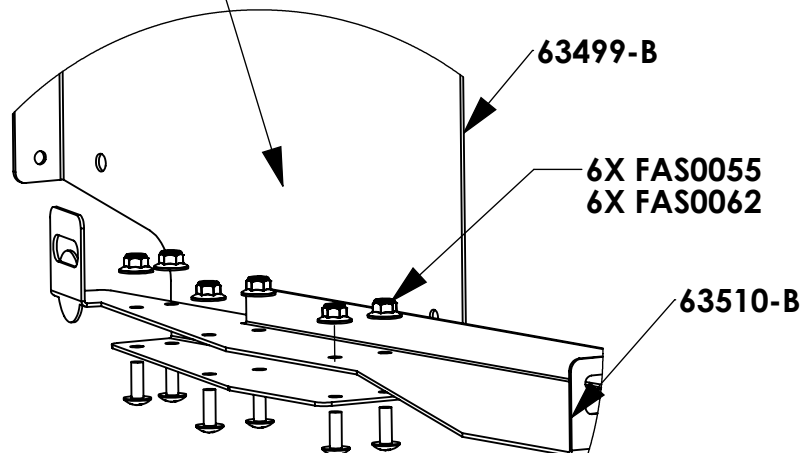


STEP 1.2

REAR D-RING LOCATION

MY2026+
1X FAS0431
1X FAS0060
1X FAS0067
1X 03927-2


MY2026+
1X FAS0273
1X FAS0060
1X FAS0067
2X 59083

MY2025
1X FAS0472
1X FAS0278
1X FAS0482
2X 59083

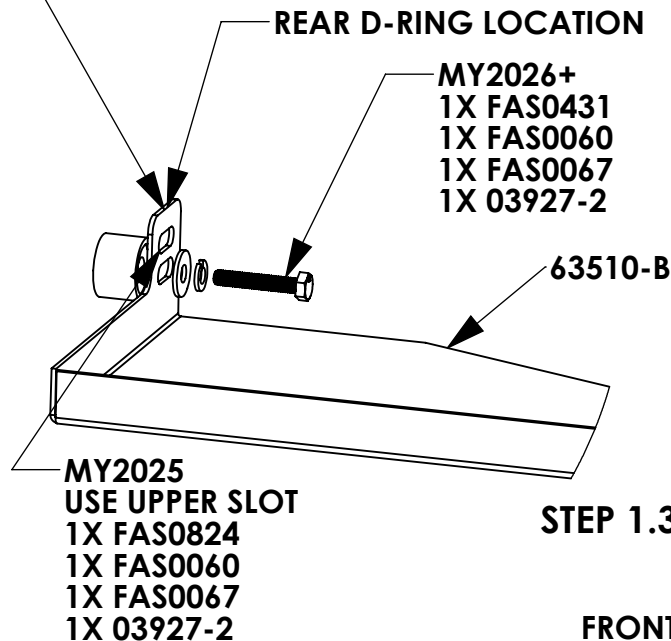


STEP 1.3

FRONT D-RING LOCATION

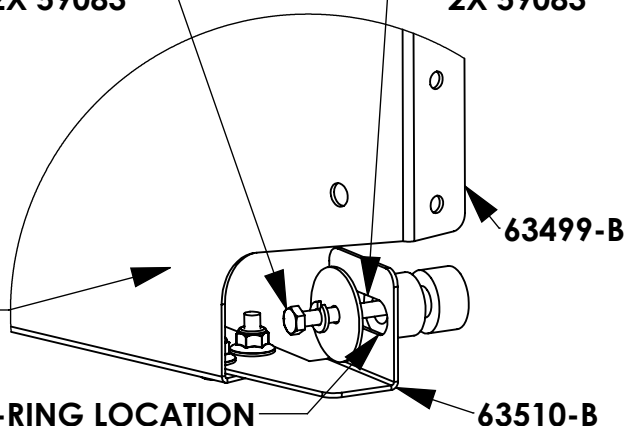


STEP 2 - ADD REINFORCEMENT**BRACKET****SAME FOR BOTH MY2026 AND MY2025**

Step 2.1
LOOSELY
ASSEMBLE
 63500-B,
 77863-B,
 FAS0018 AND
 FAS0055
 (4 PLACES)
 1/4in WRENCH
 1/4in SOCKET

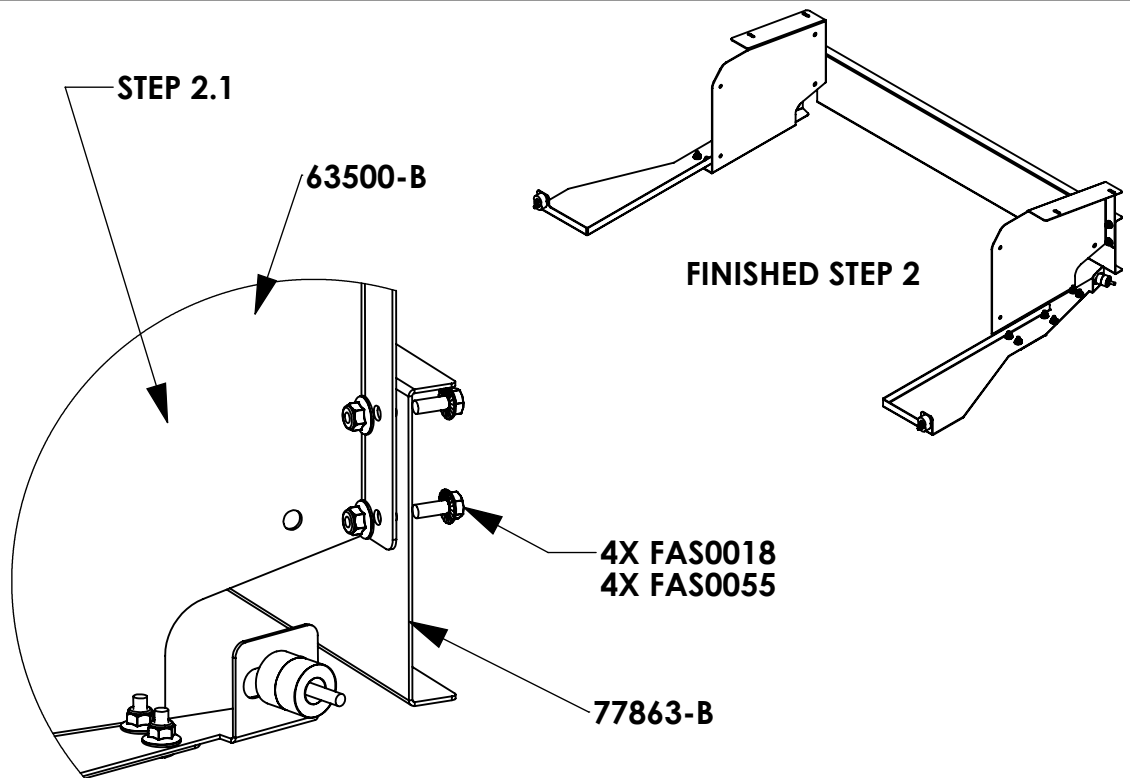**STEP 3 - INSTALL PARTITION TOP****SAME FOR MY2026 AND 2025**

Step 3.1
LOOSELY
ASSEMBLE
 62041,
 63500-B,
 FAS0018 AND
 FAS0055
 (4 PLACES)
 1/4in WRENCH
 1/4in SOCKET

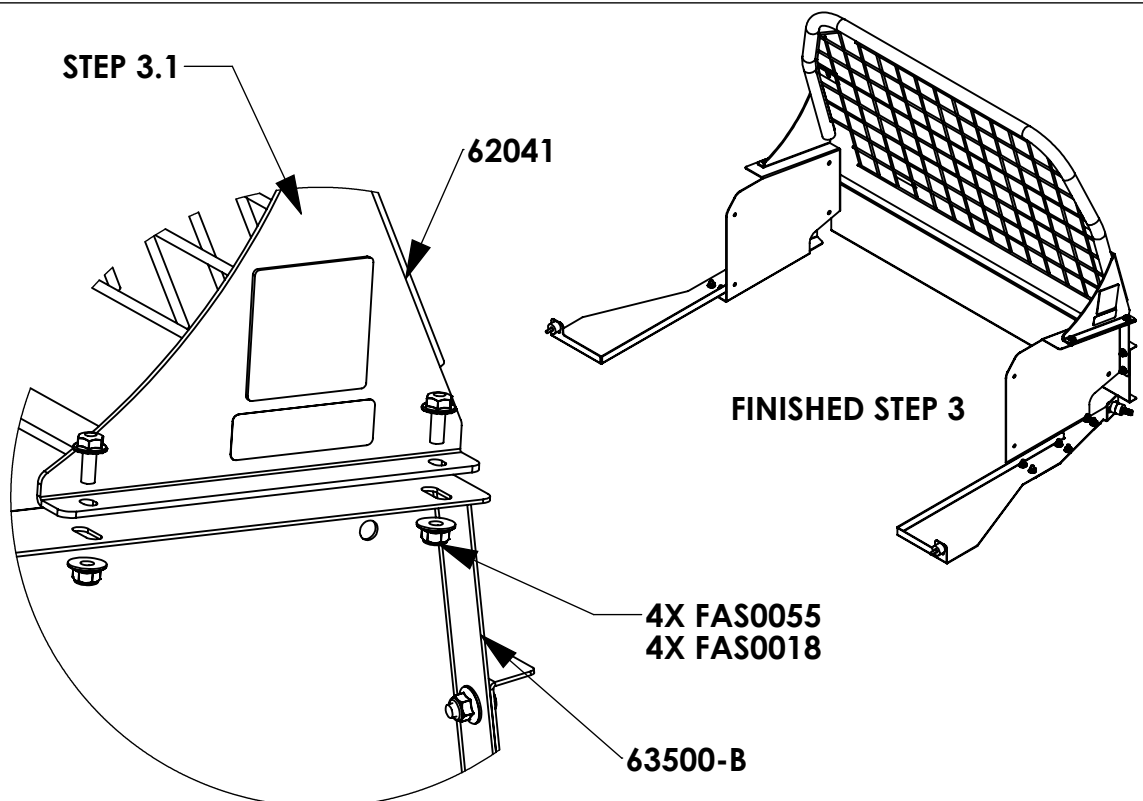

Step 3.2
FULLY TIGHTEN
ALL FASTENERS
IN ASSEMBLY
 1/4in WRENCH
 1/4in SOCKET
 7/16in SOCKET
 6mm SOCKET