



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

PAR, FIXED, CHEVY TRAX, 26

PRODUCT WEIGHT

41 LBS

WIDTH X DEPTH X HEIGHT

43" X 33" X 42"

CAPACITY


N/A

COLOR

BLACK

CATALOG NUMBER

P2TRAX26

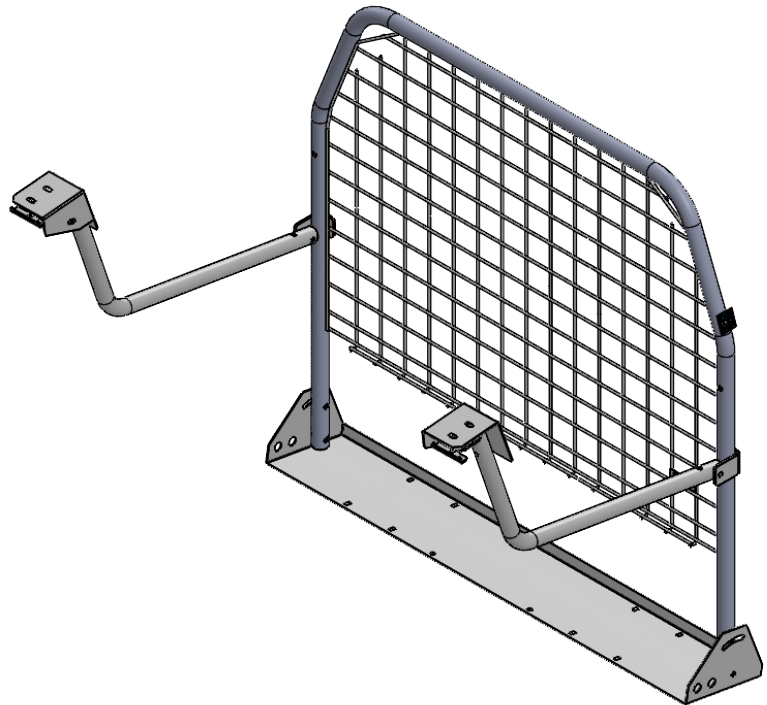

PRODUCT FEATURES

This fixed partition is designed to fit in model year 2026 to current Chevy Trax. It mounts to the vehicle using OEM places. The Fixed partition disables the second row seating creating space for extra cargo. Use this partition with floor kit 89-TRAX26 to create a flat cargo floor.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.

***PAR, FIXED, CHEVY TRAX, 26*****CATALOG NUMBER P2TRAX26*****PRODUCT APPLICATION***

This product is designed to fit in model year 2026 to current Chevy Trax. Use 80066-B to mount PA8 & PA9 to partition.


ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

CATALOG NUMBER	DESCRIPTION (smart)
89-TRAX26	FLOOR KIT, CHEVY TRAX
PA8	FIRE EXT.1A:10BC 2.5#
PA9	FIRST AID TRAY - GRAY
79578	KIT .4KW INV TS TRAX
80066-B	FIRE EXT AND FIRST AID MOUNT, BLACK

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

INSTR. : INS79724 NUMBER		PG: 1	REV: A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
PART : P2TRAX26 NUMBER				1	76795-B	FIXED PARTITION, EQUIN25, BLK	1
PART : DESC. : PAR, FIXED, CHEVY TRAX,26				2	79712-B	PARTITION FOOTER, TRAX, BLACK	1
				3	79713	PAR BRACE TUBE, TRAX, BLK	2
				4	79723-B	PAR, SEAT LATCH, TRAX, BLACK	2
				5	79714-B	PAR, SEAT BRKT, DS, TRAX, BLACK	1
				6	79715-B	PAR, SEAT BRACKET, PS, TRAX, BLACK	1
				7	BAG79724	BAG FOR TRAX PARTITION	1
				8	INS79724	INS FOR P2TRAX	1

**NOTE: THIS INSTRUCTION IS
VALID FOR THE FOLLOWING
KITS:
- P2TRAX26**

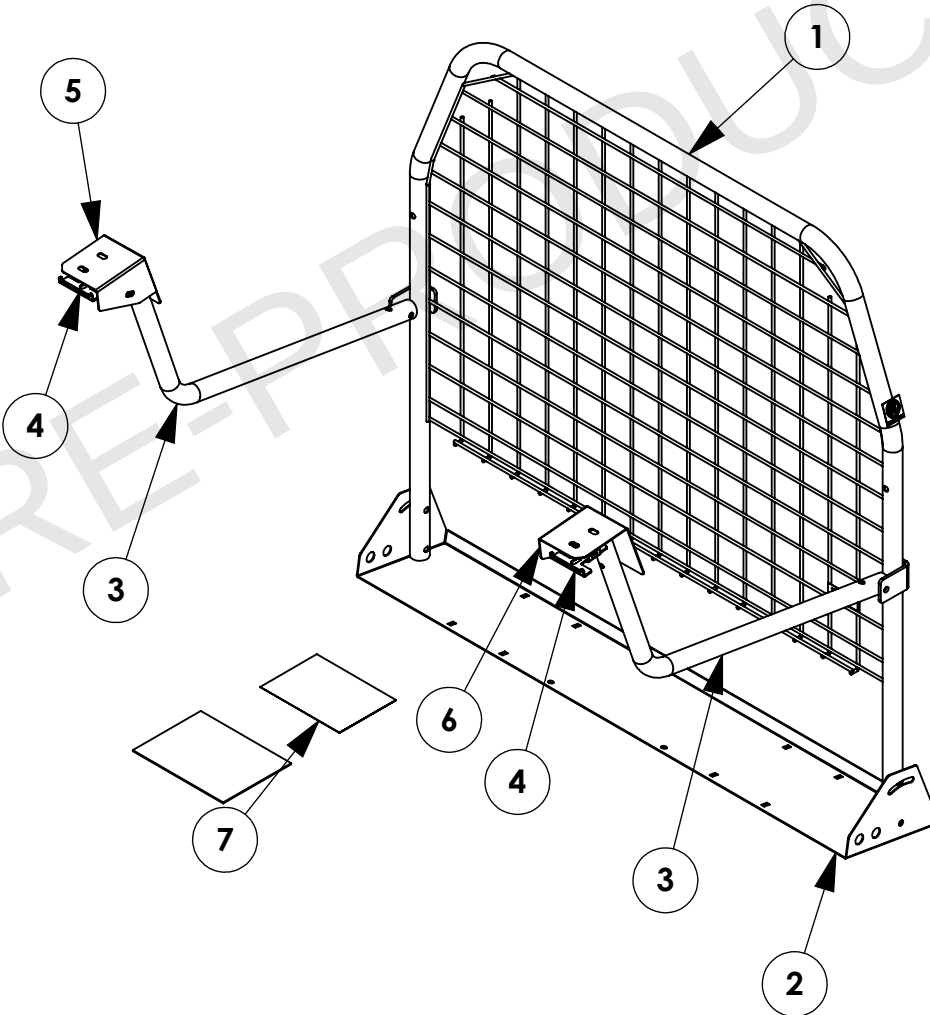

TOOLS NEEDED:

- 1/2 SOCKET
- 1/2 WRENCH
- PLUSNUT GUN
- DRILL
-
-

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

BAG REFERENCE: BAG79724




FAS0093
SCREW,HH
5/16-18X1.25 PF
QTY:4

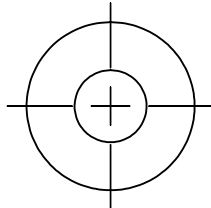


FAS0086
WASHER, FLAT USS
5/16 ZP
QTY: 30




FAS0090
NUT, HEX NLK
5/16-18 ZP
QTY:14

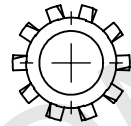


FAS0085
WASHER,LCK EXT
5/16 ZP
QTY: 2



FAS0095
SCREWHH
5/16-18X2 G8 ZDY
QTY: 12

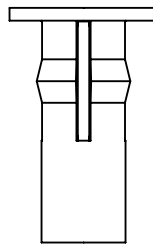

FAS0091
PLUSNUT
5/16-18 PB DC
QTY: 2




FAS0832
SPACER TALL
3/4 ZP
QTY: 2

INTENTIONALLY LEFT BLANK

STEP 1 - INSTALL PRATITION FOOTER BRACKET

Step 1.1
PREP VEHICLE
REMOVE ANY
DEBRIS AND
FLOOR MATS IN
THE REAR SEAT
FOOTWELL AND
PUT REAR SEATS
DOWN

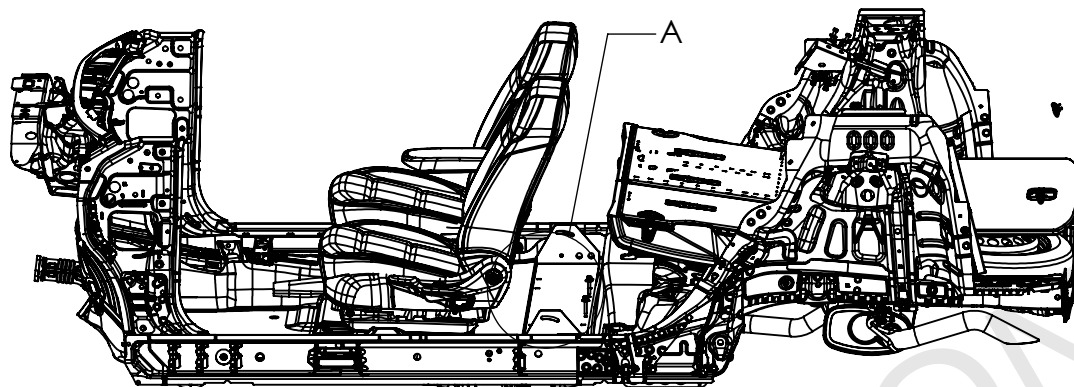


**NOTE: FASTENERS TO MOUNT INVERTER MUST BE PLACED INSIDE
RECTANGLE SLOTS AFTER STEP 1.2**

Step 1.2
CENTER 79712-B
IN 2ND ROW
FOOTWELL
FOOTER SHOULD
BE BETWEEN
0.25" AND 0.5"
FORM THE REAR
SEATS.
MARK AND
DRILL AND SET
(4) PLUSNUTS

FAS0091
(4 PLACES)

PLUSNUT GUN

Step 1.3
ATTACH PAR
FOOTER TO
VEHICLE
LOOSELY
ASSEMBLE UNTIL
AFTER STEP 3
FAS0095,
FAS0085,FAS0086
(4 PLACES)
1/2 WRENCH
1/2 SOCKET

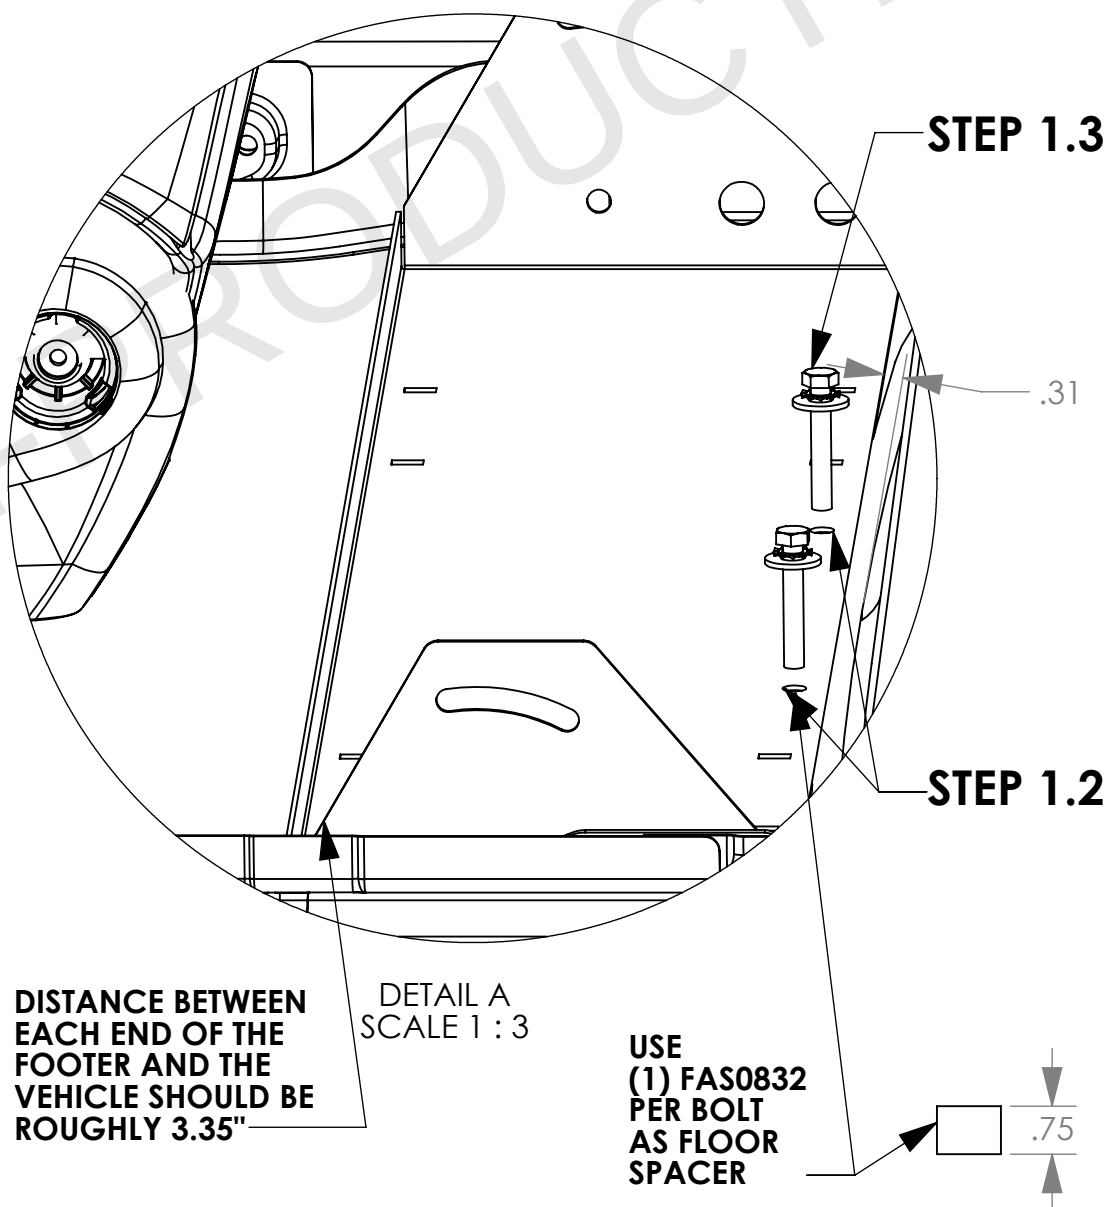

STEP 2 - INSTALL SEAT LATCH BRACKETS

Step 2.1
INSTALL
PASSENGER SIDE
SEAT LATCH
BRACKET 79715-B
LOOSELY TIGHTEN
UNTIL AFTER STEP


3

FAS0093,
FAS0086, AND
FAS0090


(2) PLACES
1/2 SOCKET
1/2 WRENCH

Step 2.2
INSTALL DRIVERS
SIDE SEAT LATCH
BRACKET 79714-B
REPEAT STEP 2.1
LOOSELY TIGHTEN
FAS0093,
FAS0086 AND
FAS0090
(2 PLACES)

1/2 WRENCH
1/2 SOCKET

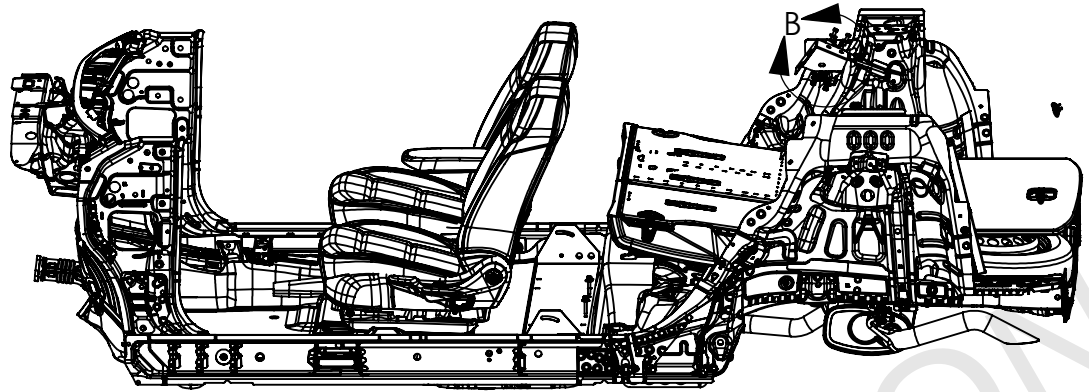


NOTE:
PASSENGER SIDE INSTALLATION SHOWN
DRIVERS SIDE IS A MIRROR OF PASSENGER SIDE

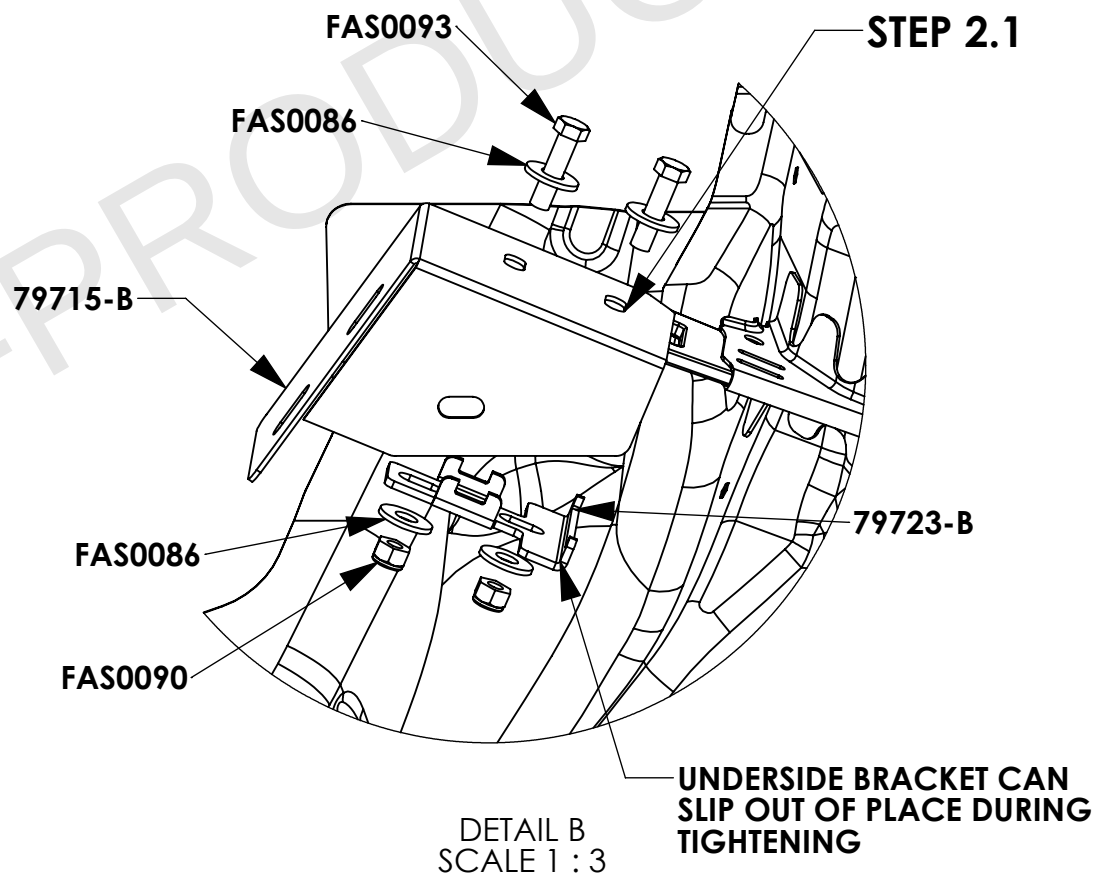

STEP 3 - INSTALL PRATITION SCREEN AND SUPPORT ARMS


Step 3.1
ATTACH SUPPORT
ARMS
LOOSELY TIGHTEN
FAS0095, FAS0086
FAS0090
(4) PLACES

1/2 SOCKET
1/2 WRENCH

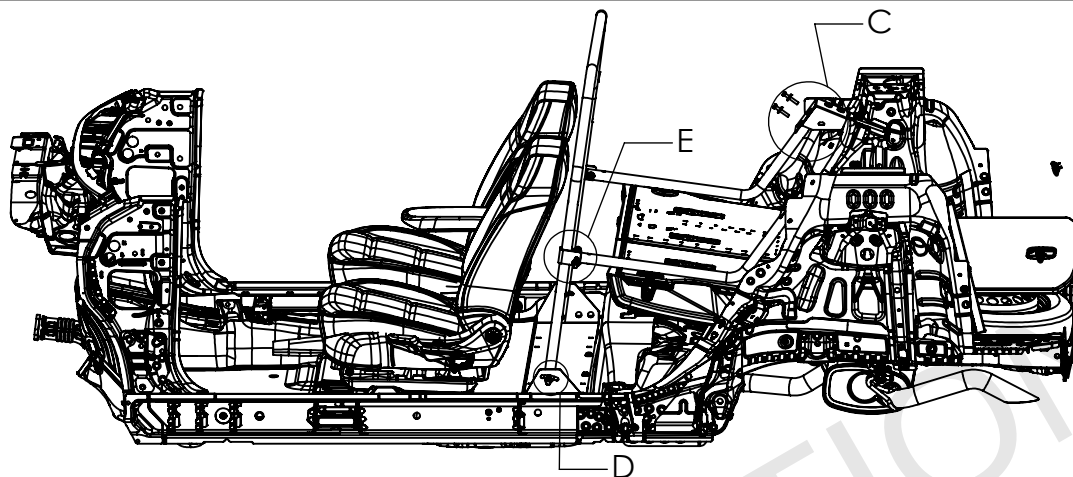

Step 3.2
ATTACH SCREEN
TO FOOTER
LOOSELY TIGHTEN
FAS0095,
FAS0086 AND
FAS0090
(4 PLACES)

1/2 WRENCH
1/2 SOCKET

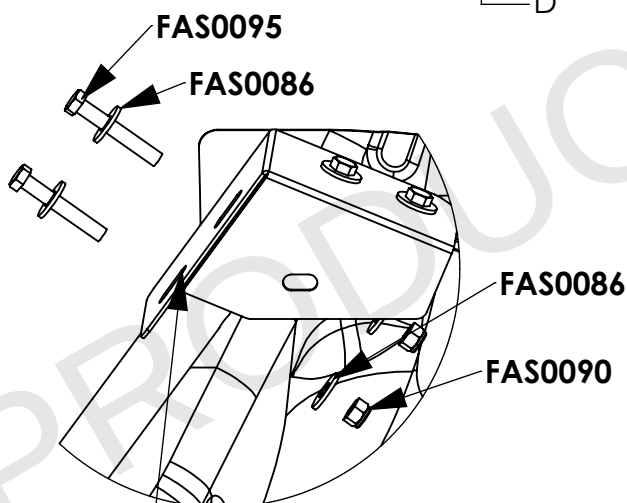


STEP 3.1

DETAIL C
SCALE 1 : 4

Step 3.3
ATTACH SCREEN
TO SUPPORT
TUBES
LOOSELY TIGHTEN
FAS0095,
FAS0086 AND
FAS0090
(4 PLACES)

1/2 WRENCH
1/2 SOCKET


STEP 3.3

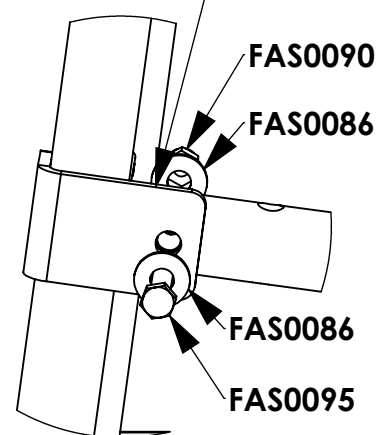

DETAIL E
SCALE 1 : 3

Step 3.4
SET ANGLE OF
PARTITION AND
FULLY TIGHTEN ALL
BOLTS

INSTALL IS NOW
COMPLETE!

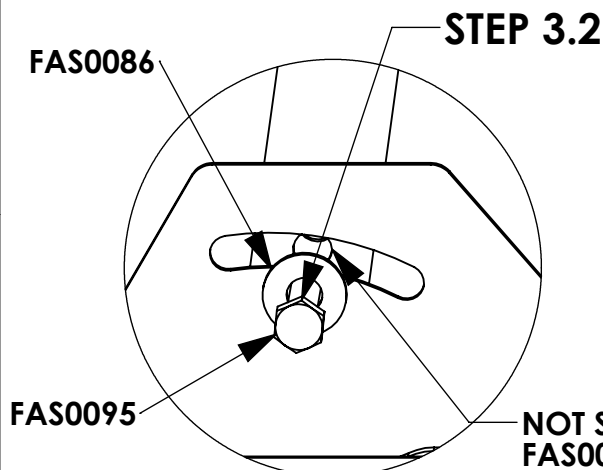

NOT SHOWN:
FAS0086 AND FAS0090

DETAIL D
SCALE 1 : 2