



ADRIAN STEEL®

Cargo Management Solutions for Commercial Vehicles

POWER STRIP MOUNTING KIT

PRODUCT WEIGHT

1.88 LBS

WIDTH X DEPTH X HEIGHT

12" X 2.5" X 1.5"

CAPACITY


N/A

COLOR

YELLOW AND GRAY

CATALOG NUMBER

PSWMB1

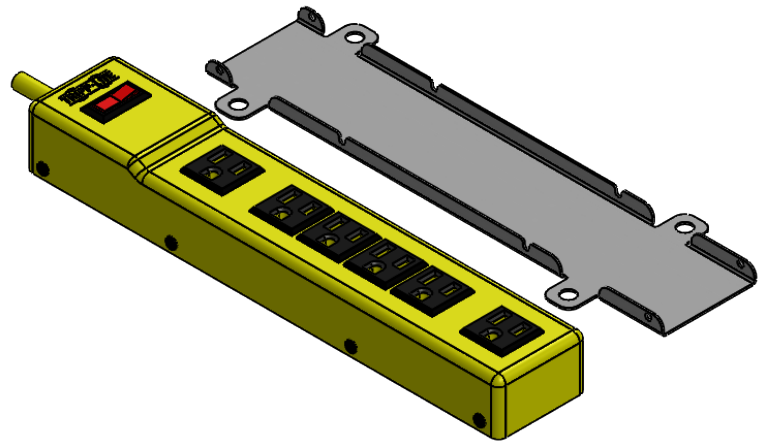

PRODUCT FEATURES

Securely attach your power strip to shelving end panels with this easy-to-install mounting kit. Designed for stability and convenience, it keeps cords organized and outlets accessible.

SEE PAGE 2 FOR APPLICATION NOTES, ACCESSORIES AND OTHER PRODUCTS THAT WORK WITH THIS UNIT.



POWER STRIP MOUNTING KIT

CATALOG NUMBER **PSWMB1**

PRODUCT APPLICATION


Securely attach your power strip to shelving end panels with this easy-to-install mounting kit. Designed for stability and convenience, it keeps cords organized and outlets accessible.

ACCESSORIES THAT WILL WORK WITH THIS PRODUCT

<i>CATALOG NUMBER</i>	<i>DESCRIPTION (smart)</i>
AEPKT1030G	END PANEL KIT, T, 10X30, G
AEPK1049G	END PANEL KIT, 10X49, G
AEPK1063G	END PANEL KIT, 10X63, G
AEPK1068G	END PANEL KIT, 10X68, G

The information contained in this document is the sole property of ADRIAN STEEL COMPANY. ADRIAN STEEL COMPANY retains the right to modify and/or change the product of its design at any time with prior notification.

INSTR. : INSPSWMB1 NUMBER	PG: 1	REV: A	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
			1	77226-G	BRKT, POWER STRIP 36210-0, GRAY	1
PART : PSWMB1 NUMBER			2	BAGPEPACCMNT4	BAG END PANEL MOUNTING, 4	1
			3	36210-0	POWER STRIP 6 OUTLET 15 A	1
PART : DESC. : POWER STRIP MOUNT KIT			4	CRT60501-1	CARTON FOR RLLR ACCESSORIES	1
			5	INSPSWMB1	INSTALL INS FOR PSWMB1	1
NOTE: THIS INSTRUCTION IS VALID FOR THE FOLLOWING KITS: - PSWMB1						

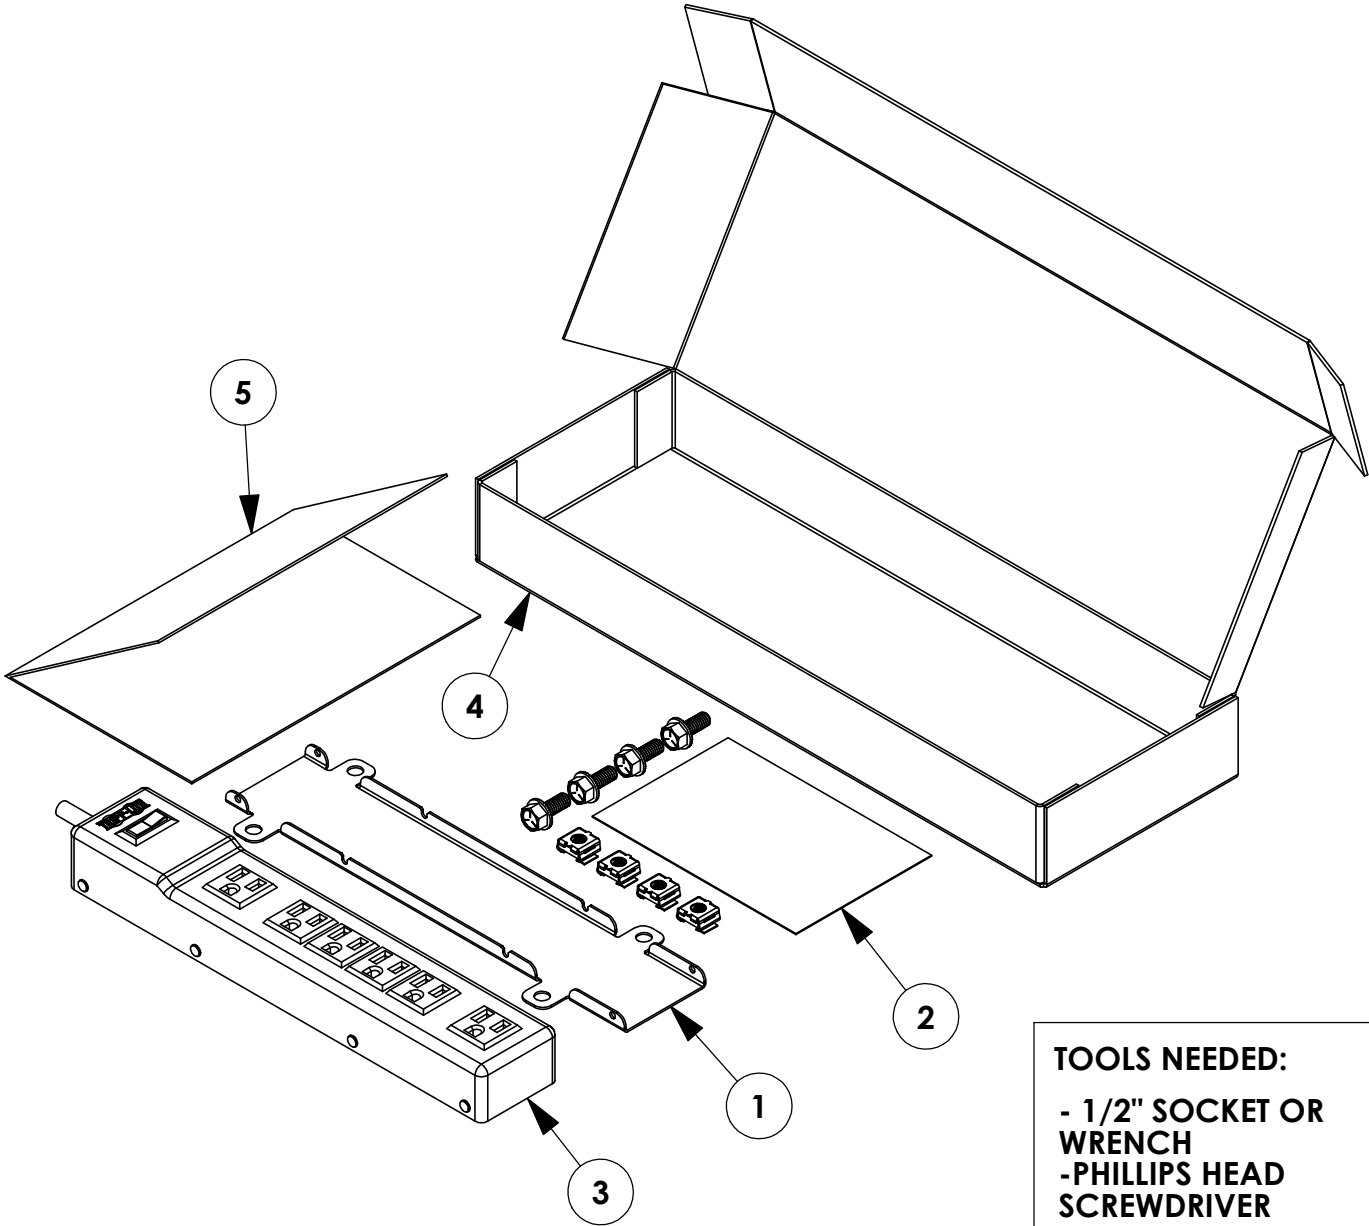

- TOOLS NEEDED:**
- 1/2" SOCKET OR WRENCH
 - PHILLIPS HEAD SCREWDRIVER
 -
 -
 -
 -

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.


CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).


THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED

BAG REFERENCE: BAGPEPACCMNT4

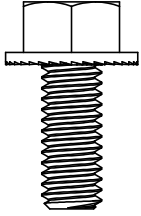

FAS0438
SCREW,HFLNG
5/16-18X.75ZP
QTY: 4

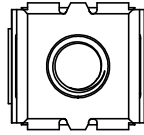


FAS0915
SNAP-IN NUT,
0.028-0.056"
QTY: 4


INTENTIONALLY LEFT BLANK

STEP 1 - SECURE POWER STRIP TO MOUNTING BRACKET

Step 1.1
REMOVE
FASTENERS
FROM SIDES OF
POWER STRIP(8
PLACES)
WITH A PHILLIPS
HEAD
SCREWDRIVER,
KEEP TO RE-
INSERT AND
SECURE
BRACKET

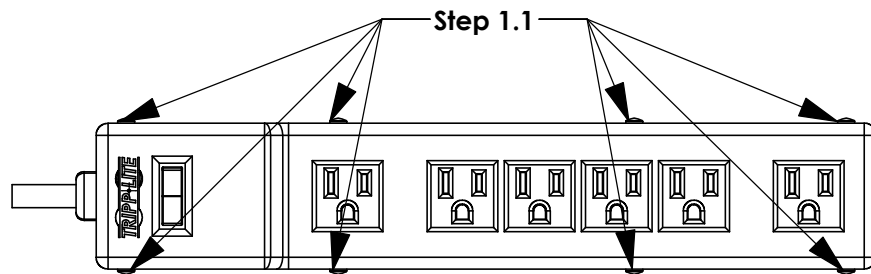

Step 1.2
PLACE
POWERSTRIP IN
MOUNTING
BRACKET, USE
SIDE HOLES TO
ENSURE
CORRECT
ALIGNMENT, RE-
INSERT
FASTENERS AND
HAND TIGHTEN

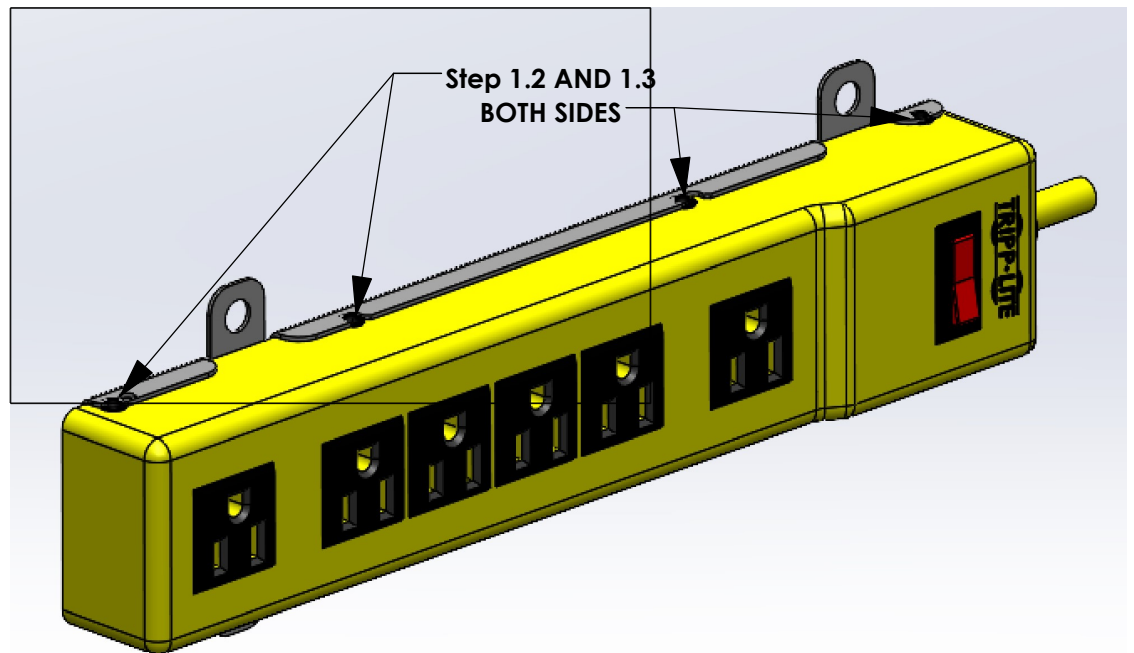


Step 1.3
FULLY TIGHTEN
THE SAME
FASTENERS
REMOVED
FROM POWER
STRIP TO
SECURE STRIP
TO BRACKET
(8 PLACES)
WITH PHILLIPS
HEAD
SCREWDRIVER

STEP 2 - FASTEN POWER STRIP BRACKET AND POWER STRIP TO END PANEL

Step 2.1
HOLD POWER
STRIP ASSEMBLY
IN DESIRED
LOCATION AND
MARK END
PANEL SQUARE
CUTOUTS

Step 2.2
INSERT FAS0915
(QTY: 4) INTO
MARKED
CUTOUTS

Step 3.1
RE-ALIGN
BRACKET
MOUNTING
HOLES WITH
SNAP IN NUTS,
SECURE USING
FAS0438 (QTY:
4) AND FULLY
TIGHTEN WITH
1/2" WRENCH
OR SOCKET

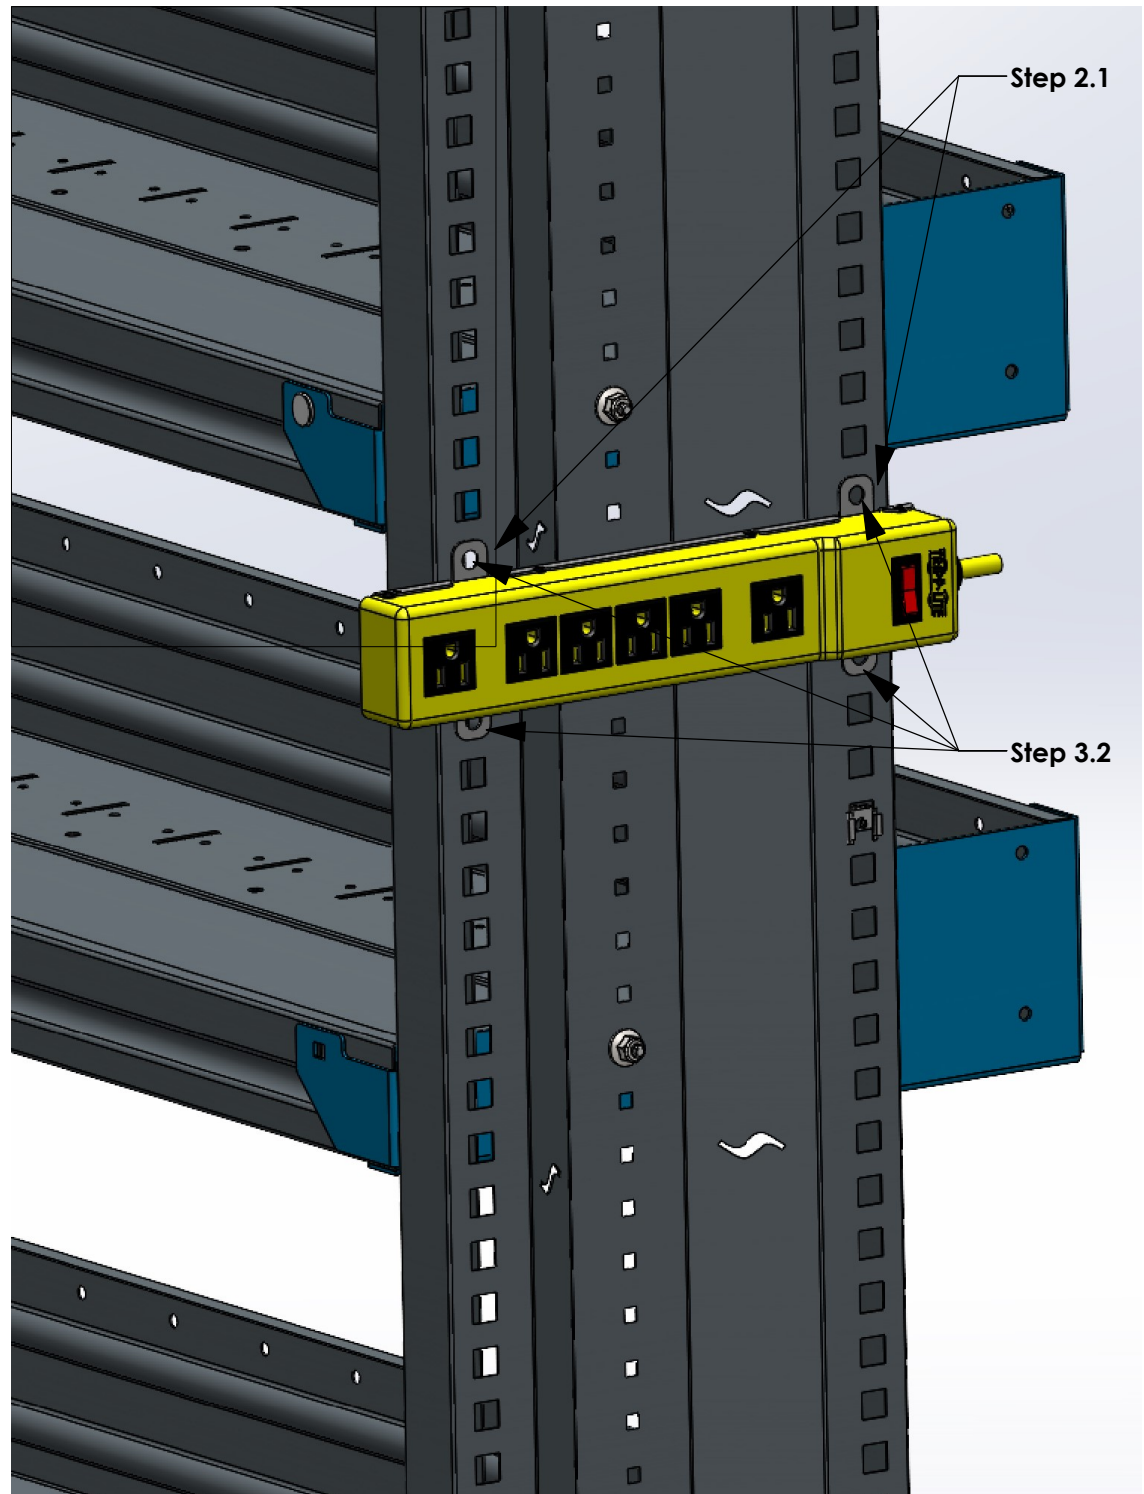

INSTALLATION IS COMPLETE