




AD Series Accessory Mounting Kit Assembly/Installation Instructions

The following page(s) cover the installation of various Rail Adapter Kits used on the new ASCO AD Series Shelving Kits.

RKFSVLHD "Rail Sys, AD Series, Left Hand Door"
RKFSVLWB "Rail Sys, AD Series, Long Wheel Base"
RKFSVXLWB "Rail Sys, AD Series, Xtra-Long Wheel Base"

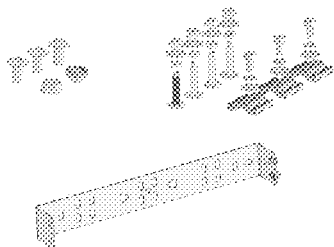

RKABRK1 "Adapter, Rail Kit, Brkt, Single"


W/U: TA5 "Water Cask Holder"
TA19 "CO2 Tank Holder"
TA20 "MAPP Gas Cabinet Asm"

BEFORE YOU START!

ALL FASTENERS USED IN THE ASSEMBLY AND INSTALLATION OF THIS PRODUCT SHOULD BE TIGHTENED TO THE SPECIFIED TORQUE. THE USE OF NON-STANDARD FASTENERS AND/OR DEVIATING FROM THE FASTENERS SPECIFIED IN THE INSTRUCTION (S) MAY VOID YOUR PRODUCT WARRANTY!

YOU WILL NEED THE FOLLOWING TOOLS IN ORDER TO COMPLETE THIS JOB.

*7/16", 1/2" & 5/8" End Wrench, Ratchet w/1/2" Socket,
Slotted & Phillips Screwdriver, Torque Wrench*

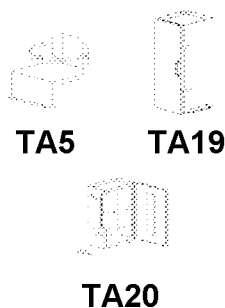

Attach one End Panel Mounting Weldment (BKABRK1) to the 17A with fasteners supplied with the kit. Note, the upper weldment will use existing holes. Then attach assembly to the AD Shelf End Panel in desired location.

Install the (4) leveler legs in each corner of the WTR rails. Reposition the WTR with the RKAWTR bracket attached and secure the bracket to the floor rail slide. Tighten the fasteners (5/16UNC x 5/8" Hex Hd Bolt) to 12 +/- 1 ft-lbs torque. Adjust the leveler legs as required.

**YOUR INSTALLATION IS NOW COMPLETE! STOW THIS COPY IN
THE VEHICLE FOR FUTURE REFERENCE!**